

## Overview of programmes

Programme/Type of laundry/Instructions	Settings
<b>Name of the program</b> : Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (* = cold) Spin speed* additional settings that can be selected
<b>Cottons</b>  Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.  <b>Note:</b> The <b>Speed</b> setting is suitable as a short programme for lightly soiled laundry.	Max. 8.0 kg/5.0* kg; * - 90 °C ----, 400- 1200* rpm Speed Eco Perfect  ,  Prewash,  Rinse Plus
<b>Cottons Eco</b>   Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen. Energy-optimised washing by reducing the temperature while achieving a comparable washing result for the <b>Cottons</b> programme.  <b>Note:</b> The washing temperature is lower than the selected temperature. If you want to achieve a higher water temperature, use the <b>Cottons</b> programme with a higher temperature as required.	Max. 8.0 kg; * - 90 °C ----, 400- 1200* rpm  Prewash,  Rinse Plus
<b>Easy-Care</b>  Textiles made of synthetic materials or blended fabrics.	Max. 4.0 kg; * - 60 °C ----, 0 - 1200 rpm Speed Eco Perfect  ,  Prewash,  Rinse Plus
<b>Wool</b>  Hand- or machine-washable fabrics that are made of wool or contain wool; Particularly gentle washing programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water)	Max. 2.0 kg; * - 40 °C ----, 0 - 800 rpm
<b>Notes</b>	
<ul style="list-style-type: none"> <li>■ Wool is of animal origin, e.g. angora, alpaca, llama, sheep.</li> <li>■ Use a detergent that is suitable for machine-washing wool.</li> </ul>	
<b>Super 15'/30'</b>	Max. 2.0/3.5 kg; * - 40 °C ----, 0 - 1200 rpm Speed Perfect 
Extra-short programme of approx. 15/30 minutes, suitable for small items of lightly soiled laundry	
<b>Note:</b> The <b>Super 15</b> programme is run for the <b>Speed</b> setting.	
* Reduced load for the <b>Speed</b> setting	
** max. spin speed, depending on the model	

Programme/Type of laundry/Instructions	Settings
<b>Quick / Mix</b> Mixed load of cottons and synthetic fabrics	Max. 4.0 kg;  - 40 °C; ----, 0 - 1200* rpm Speed Eco Perfect , ,
<b>Delicates/Silk</b> For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blends (e.g. silk blouses, silk scarves) <b>Note:</b> Use a detergent that is suitable for machine washing delicate fabrics or silk.	Max. 2.0 kg;  - 40 °C ----, 0 - 800 rpm Speed Eco Perfect , ,
<b>Rinse/ Spin/ Drain</b> Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water <b>Note:</b> The setting  Rinse Plus is activated at the factory for this programme.	- 0 - 1200** rpm Rinse Plus
<b>If you only want to spin the laundry:</b> Deactivate the  Rinse Plus setting and, if required, adjust the spin speed. <b>If you only want to drain water:</b> Deactivate the  Rinse Plus setting and select the spin speed <b>0</b> setting.	
<b>Drum clean</b> Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. The  display (memory function, drum care) flashes if you have not used any programme at a temperature of 60 °C or higher for an extended period.	0.0 kg; 90 °C; 1200 rpm -
<b>Notes</b>	
<ul style="list-style-type: none"> <li>■ Run the programme without laundry.</li> <li>■ Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.</li> </ul>	
<b>Duvet Program</b> : Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down <b>Note:</b> Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	2,5 kg;  - 60 °C ----, 0 - 1200 U/min Speed Eco Perfect ,
* Reduced load for the <b>Speed</b> setting	
** max. spin speed, depending on the model	

Programme/Type of laundry/Instructions	Settings
<b>Sportswear</b> Sportswear and leisurewear made from microfibre fabrics	Max. 2.0 kg;  - 40 °C ---, 0 - 800 U/min
<b>Notes</b>	Speed Eco Perfect = , Prewash,  Rinse Plus
■ Laundry must not be treated with fabric softener. ■ Before washing, thoroughly clean the left-hand compartment in the detergent drawer.	
<b>Dark Wash</b> Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.	3.5 kg;  - 40 °C ---, 0 - 1200 U/min
<b>Shirts/Business</b> Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics	Speed Eco Perfect = , Prewash,  Rinse Plus
<b>Notes</b>	Max. 2.0 kg;  - 60 °C ---, 0 - 800 rpm
■ Shirts/blouses are only given a short spin with the  setting. Hang them up to dry while still dripping wet. -> Self-smoothing effect ■ Use the <b>Delicates/Silk</b> programme to wash shirts/blouses made of silky/delicate fabrics.	Speed Eco Perfect = , Prewash,  Rinse Plus
<b>AllergyPlus</b> Hard-wearing fabrics made of cotton or linen	6.5 kg;  - 60 °C ---, 400 - 1200* U/min
<b>Note:</b> Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	Speed Eco Perfect = , Prewash,  Rinse Plus
<b>Curtains</b> : 3.5 kg heavy curtains or 25 - 30 m <sup>2</sup> lightweight drapes	3.5 kg; ---, 0 - 800 rpm
<b>Notes</b>	Speed Eco Perfect = , Prewash,  Rinse Plus
■ Shorter rinse and final spin cycles. ■ Use a detergent that is suitable for machine-washing curtains. ■ The <b>Prewash</b> button is set by default. If you do not require a pre-wash cycle, press the button to deactivate the function.	
* Reduced load for the <b>Speed</b> setting	
** max. spin speed, depending on the model	



## Consumption values table

### Energy and water consumption, program duration and residual moisture for the main wash program

(approximate values)

Program	Load	Energy consump-tion*	Water consumption*	Program duration*
Cottons 20 °C	8 kg	0,22 kWh	85 l	2 ¾ h
Cottons 40 °C	8 kg	1,00 kWh	85 l	3 h
Cottons Eco** <40°C	4 kg	0,37 kWh	37 l	4 ¼ h
Cottons Eco** <60°C	4 kg	0,57 kWh	37 l	4 ½ h
Cottons Eco** <60°C	8 kg	0,79 kWh	55 l	4 ½ h
Cottons 60 °C	8 kg	1,15 kWh	85 l	2 ¾ h
Cottons 90 °C	8 kg	2,04 kWh	95 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	62 l	2 h
Mix 40 °C	4 kg	0,57 kWh	45 l	1 ¼ h
Delicate/Silk 30 °C	2 kg	0,19 kWh	34 l	¾ h
Wool 30 °C	2 kg	0,21 kWh	40 l	¾ h

Program	Approximate information on the residual moisture***		
	WAT28... max. 1400 rpm	WAT24... max. 1200 rpm	WAT20... max. 1000 rpm
Cottons	48 %	53 %	62 %
Easy-Care	40 %	40 %	40 %
Delicate /Silk	30 %	30 %	30 %
Wool	45 %	45 %	45 %

\* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.

\*\* Program setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C). The specification of the program temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated program temperature for energy-saving reasons

\*\*\* Information on residual moisture based on program-dependent spin-speed limit and maximum loads.

**WAT24461IR**
**9001190002 (9612)**
