



Overview of programmes

Programme/type of laundry/information	Settings/Presettings of the programmes are highlighted in bold
Name of programme Short explanation of the programme or the fabric for which it is suitable.	Max. load; * Reduced load for Quick  function Temperature that can be selected Spin speed that can be selected; ** Max. spin speed, depending on the model Possible programme settings
 Cottons Super Clean Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen Note: The Quick  setting is suitable as a short programme for lightly soiled laundry.	Max. 7 kg/4* kg cold - 40 - 60 - 90 °C 1000** rpm  , 
 Synthetics Fabrics made from synthetic or blended fabrics	Max. 4 kg 30 °C 1000** rpm  , 
 Rinse Extra rinse with spin	- - 1000** rpm 
 Spin Extra spin	- - 1000** rpm -
* Reduced load for the  Speed setting ** Maximum spin speed depends on the program and model	

Programme/type of laundry/information	Settings/Presettings of the programmes are highlighted in bold
Super 30°/15'  Extra-short programme of approx. 30 minutes, suitable for small items of lightly soiled laundry Note: Shorter programme duration (approx. 15 minutes) for activated Quick  setting	Max. 3.5 kg/2 kg cold 1000** rpm 
Kids  Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen	Max. 7 kg/4* kg 40 °C 1000** rpm 
Daily Wash  A mixed load of fabrics made of cotton and synthetic fabrics	Max. 3.5 kg 30 °C 1000** rpm -
Delicate/Silk  For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarves) Note: Use a detergent which is suitable for machine washing delicates or silk.	Max. 2 kg 30 °C 800 rpm 
Wool  Hand or machine-washable fabrics made of wool or that contain wool; particularly gentle wash programme to prevent shrinkage of laundry, with longer programme breaks (fabrics rest in the detergent solution)	Max. 2 kg cold 800 rpm 
Notes ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent which is suitable for machine washing wool.	
Drum Clean  Programme for cleaning and caring for the drum and the outer tub, e.g. before the 1st wash cycle, if an odour has formed after a prolonged absence	- 90 °C 800 rpm -
Notes ■ Run programme without laundry. ■ Use only detergents for front loader washing machines with caution. Do not use additional cleaning agents.	
* Reduced load for the  Speed setting ** Maximum spin speed depends on the program and model	

Programme/type of laundry/information	Settings/Presettings of the programmes are highlighted in bold
Drain  Drain of the rinsing water	-
	-
	-
	-
	-
* Reduced load for the  Speed setting ** Maximum spin speed depends on the program and model	



Consumption rates

Consumption values table

Programme	Load	Energy consumption*	Water*	Programme duration*
Cottons cold	7 kg	0.15 kWh	62 l	1 3/4 h
Cottons 40 °C	7 kg	0.67 kWh	62 l	2 h
Cottons 60 °C	7 kg	1.31 kWh	66 l	2 1/4 h
Cottons 90 °C	7 kg	2.05 kWh	71 l	2 1/4 h
Synthetics 30 °C	4 kg	0.30 kWh	57 l	1 1/2 h
Delicate/Silk 30 °C	2 kg	0.17 kWh	48 l	3/4 h
Wool cold	2 kg	0.03 kWh	42 l	3/4 h

Programme	Load	Energy consumption*	Water*	Programme duration*
Super Clean 60 °C**	7 kg	1.01 kWh	47 l	3 1/4 h
Values determined according to IEC 60456.				
* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.				
** Programme setting with maximum spin speed for testing according to IEC 60456.				

WAK20060SG

9001190932 (9607)

