 


 

 



Overview of programmes

Programme/type of laundry/information	Settings
Name of the programme: Brief explanation of the programme and for which textiles it is suitable.	max. load; temperature
	spin speed*
	additional settings that can be selected
<p>Cottons: Hard-wearing textiles, heat-resistant textiles made of cotton or linen</p> <p>Note: The SpeedPerfect setting is suitable as a short programme for lightly soiled laundry.</p>	<p>8 kg/5** kg; - - (cold) - 90 °C</p> <p>- - (Rinse Stop), 0 - 1400* rpm</p> <p>≡⏺ @, Less Ironing, Water Plus/Rinse Plus</p>
<p>Cottons  Eco: Hard-wearing fabrics, heat-resistant textiles made of cotton or linen</p> <p>Energy-optimised washing by reducing the temperature while achieving a comparable washing result for the Cottons programme.</p> <p>Note: The washing temperature is lower than the selected temperature. If you want to achieve a higher water temperature, use the Cottons programme with a higher temperature as required.</p>	<p>8 kg; - - (cold) - 90 °C</p> <p>- - (Rinse Stop), 0 - 1400* rpm</p> <p>Less Ironing, Water Plus/Rinse Plus</p>
<p>Easy-Care: Textiles made of synthetic materials or blended fabrics</p>	<p>4 kg; - - (cold) - 60 °C</p> <p>- - (Rinse Stop), 0 - 1200* rpm</p> <p>≡⏺ @, Less Ironing, Water Plus/Rinse Plus</p>
<p> Wool: Hand or machine-washable wool or rich-wool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).</p> <p>Notes</p> <ul style="list-style-type: none"> ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool. 	<p>2 kg; - - (cold) - 40 °C</p> <p>- - (Rinse Stop), 0 - 800 rpm</p> <p>-</p>
<p>SuperQuick 15'/30': Extra short programme of approx. 15/30 minutes, suitable for small items of lightly soiled laundry</p> <p>Note: When selecting the SpeedPerfect setting, the programme SuperQuick 15' is run.</p>	<p>2/3.5 kg; - - (cold) - 40 °C</p> <p>- - (Rinse Stop), 0 - 1200* rpm</p> <p>≡⏺</p>
<p>Mixed Load: Mixed load of cottons and synthetic fabrics</p>	<p>4 kg; - - (cold) - 40 °C</p> <p>- - (Rinse Stop), 0 - 1400* rpm</p> <p>≡⏺ @, Less Ironing, Water Plus/Rinse Plus</p>
<p>* the maximum spin speed depends on the programme and model</p> <p>** reduced load for the Speed setting</p> <p>*** depending on the model</p>	

Programme/type of laundry/information	Settings
Name of the programme: Brief explanation of the programme and for which textiles it is suitable.	max. load; temperature spin speed*
	additional settings that can be selected
Curtains: 3.5 kg heavy curtains or 25 - 30 m ² lightweight drapes	3.5 kg; - - (cold) - 40 °C
Notes <ul style="list-style-type: none"> ■ Shorter rinse and final spin cycles. ■ Use a detergent that is suitable for machine-washing curtains. ■ The Prewash*** setting is set by default. If you do not require a pre-wash cycle, press the button to deactivate the function. 	- - - (Rinse Stop), 0 - 800 rpm =   , Water Plus/Rinse Plus
Rinse/Spin/Drain: Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water	-; - - - - (Rinse Stop), 0 - 1400* rpm
Notes <ul style="list-style-type: none"> ■ The Water Plus/Rinse Plus setting is preset by default. ■ Only to be rinsed, set the Spin speed to 0. ■ Only to be spun, deactivate Water Plus/Rinse Plus and, if required, adjust the spin speed. ■ Only to be emptied, set the Spin speed to 0 and deactivate Water Plus/Rinse Plus. 	Less Ironing, Water Plus/Rinse Plus
Drum Clean: Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. The Drum Clean indicator lamp  flashes when you have not used a programme of 60 °C or higher for a long time.	0 kg; 90 °C 1200* rpm -
Notes <ul style="list-style-type: none"> ■ Run the drum-care programme without any laundry. ■ Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates. 	
Delicates/Silk: For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf)	2 kg; - - (cold) - 40 °C - - - (Rinse Stop), 0 - 800 rpm
Note: Use a detergent suitable for machine-washing delicates or silk.	=   , Less Ironing, Water Plus/Rinse Plus
Down: Machine-washable fabrics stuffed with down, such as pillows and duvets; also suitable for items stuffed with synthetic fibres	1.5 kg; - - (cold) - 60 °C - - - (Rinse Stop), 0 - 1200* rpm
Note: Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	=   , Water Plus/Rinse Plus
* the maximum spin speed depends on the programme and model ** reduced load for the Speed setting *** depending on the model	

Programme/type of laundry/information Name of the programme: Brief explanation of the programme and for which textiles it is suitable.	Settings max. load; temperature spin speed* additional settings that can be selected
Sportswear: Sportswear and leisure wear made from microfibre fabrics Notes <ul style="list-style-type: none"> Laundry must not be treated with fabric softener. Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue. 	2 kg; - - (cold) - 40 °C - - (Rinse Stop), 0 - 800 rpm ≡☹☺, Less Ironing, Water Plus/Rinse Plus
Dark Wash: Dark textiles made of cotton and dark easy-care textiles. Note: Wash textiles inside out.	3.5 kg; - - (cold) - 40 °C - - (Rinse Stop), 0 - 1200* rpm ≡☹☺, Less Ironing, Water Plus/Rinse Plus
Shirts: Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics Notes <ul style="list-style-type: none"> Shirts/blouses are only given a short spin on the Less Ironing*** setting. Hang them up to dry while still dripping wet. → Self-smoothing effect Use the Delicates/Silk programme to wash shirts/blouses made of silk/delicate fabrics. 	2 kg; - - (cold) - 60 °C - - (Rinse Stop), 0 - 800 rpm ≡☹☺, Less Ironing, Water Plus/Rinse Plus
Allergy+: Hard-wearing fabrics made of cotton or linen Note: Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	6.5 kg; - - (cold) - 60 °C - - (Rinse Stop), 0 - 1400* rpm ≡☹☺, Less Ironing, Water Plus/Rinse Plus
* the maximum spin speed depends on the programme and model ** reduced load for the Speed setting *** depending on the model	





Consumption values table

Energy and water consumption, programme duration and residual moisture for the main washing programme

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Programme duration*
Cottons 20 °C	8 kg	0.29 kWh	78 l	2 1/2 h
Cottons 40 °C	8 kg	1.01 kWh	78 l	3 h
Cottons 60 °C	8 kg	1.20 kWh	78 l	2 1/2 h
Cottons 90 °C	8 kg	2.25 kWh	89 l	2 1/2 h
Easy-Care 40 °C	4 kg	0.79 kWh	69 l	2 h

Programme	Load	Energy consumption*	Water consumption*	Programme duration*
Mixed Load 40 °C	4 kg	0.63 kWh	46 l	1 1/4 h
Delicates/Silk 30 °C	2 kg	0.22 kWh	38 l	3/4 h
 Wool 30 °C	2 kg	0.19 kWh	44 l	3/4 h


Programme	Approximate information on the residual moisture**		
	WAN28...	WAN24...	WAN20...
	Max. 1400 rpm	Max. 1200 rpm	Max. 1000 rpm
Cottons	53 %	58 %	68 %
Easy-Care	40 %	40 %	40 %
Delicates/Silk	30 %	30 %	30 %
 Wool	45 %	45 %	45 %

 
 
 
 
 
 
Values determined acc. EN60456:2010.

* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

** Information on residual moisture based on programme-dependent spin-speed limit and maximum loads.

Efficiency test programmes for cotton fabrics

The following programmes (standard programmes, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

Standard programmes for cottons according to (EU) Regulation No. 1015/2010	Load	Approximate programme duration
Cottons  Eco + 	8 kg	3 1/2 h
Cottons  Eco + 	4 kg	3 1/2 h
Cottons  Eco + 	4 kg	3 1/2 h

** Programme setting for testing and energy labeling in accordance with EU directive 2010/30/EU with cold water (15°C).

The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the indicated programme temperature for reasons of saving energy. The washing efficiency corresponds to the temperature selection.

Notes

- This supplementary sheet is included with your operating and installation instructions. Retain all documentation for subsequent use.
- Much more important information can be found in your operating and installation instructions.

WAN28280GB

9001196245 (9604)

