

Overview of programmes

| Program/Type of laundry/Information | Settings |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Name of the program : Brief explanation of the program and for which textiles it is suitable. | max. load, temperature ( = cold) |
|  Cottons : Hard-wearing textiles, heat-resistant textiles made of cotton or linen. | Spin speed* |
| Notes | additional settings that can be selected |
| <ul style="list-style-type: none"> ■ For the Eco setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the Eco setting or, if necessary, set a higher temperature. | max. 9 kg/5** kg;  - 90 °C |
| <ul style="list-style-type: none"> ■ The Speed setting is suitable as a short program for lightly soiled laundry. | 400 - 1400* rpm |
|  Easy care : Textiles made of synthetic materials or blended fabrics. | Speed Eco  Perfect  Rinse Plus  , Prewash  |
|  Wool : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor). | max. 4 kg;  - 60 °C 400 - 1200 rpm |
| | Speed Eco  Perfect  Rinse Plus  , Prewash  |
| | max. 2 kg;  - 40 °C |
| | 0 - 800 rpm |
| Notes | - |
| <ul style="list-style-type: none"> ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool. | |
|  Super 15/30 : Super program of approx. 15/30 minutes, suitable for small items of lightly soiled laundry. | max. 2/3,5 kg;  - 40 °C |
| | 400 - 1200 rpm |
| | Speed Eco  Perfect  |
|  Quick/Mix : Mixed load of cottons and synthetic fabrics. | max. 4 kg;  - 40 °C |
| | 400 - 1400* rpm |
| | Speed Eco  Perfect  |
| | Rinse Plus  , Prewash  |

* max. The maximum spin speed depends on the program and model

** Reduced load for the **Speed** setting

| Program/Type of laundry/Information | Settings |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------|
| Curtains: 3.5 kg heavy curtains or 25 - 30 m ² lightweight drapes. | max. 3,5 kg; - 40 °C |
| Notes | 0 - 800 rpm |
| <ul style="list-style-type: none"> ■ Shorter rinse and final spin cycles. ■ Use a detergent that is suitable for machine-washing curtains. ■ The Prewash button is set by default. If you do not require a pre-wash cycle, press the button to deactivate the function. | Speed Eco Perfect Rinse Plus , Prewash |
| Rinse: Extra rinse with selectable spin speed. | - ; - |
| | 0 - 1400* rpm |
| | Rinse Plus |
| Spin/Drain : Extra spin with selectable spin speed. Only to be empirical, set spin speed to 0. | - ; - |
| Note: The display of the Ready-in time is only updated once the program is restarted. | 0 - 1400* rpm |
| Drum clean : Program for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. | 0 kg; 90 °C 1200 rpm |
| Notes | - |
| <ul style="list-style-type: none"> ■ Run the drum-care program without any laundry. ■ Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates. | |
| Delicates/Silk : For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf). | max. 2 kg; - 40 °C |
| Note: Use a detergent suitable for machine-washing delicates or silk. | 0 - 800 rpm |
| | Speed Eco Perfect Rinse Plus , Prewash |
| Duvet program : Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down. | max. 2,5 kg; - 60 °C 400 - 1200 rpm |
| Note: Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly. | Speed Eco Perfect Rinse Plus |
| Sportswear : Sportswear and leisure wear made from microfibre fabrics. | max. 2 kg; - 40 °C |
| Notes | 400 - 800 rpm |
| <ul style="list-style-type: none"> ■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue. | Speed Eco Perfect Rinse Plus , Prewash |
| * max. The maximum spin speed depends on the program and model | |
| ** Reduced load for the Speed setting | |

| Program/Type of laundry/Information | Settings |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| Dark wash : Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out. | max. 3,5 kg; - 40 °C 400 - 1200 rpm Speed Eco Perfect Rinse Plus , Prewash |
| Shirts/Business : Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics. | max. 2 kg; - 40 °C 400 - 800 rpm Speed Eco Perfect Rinse Plus , Prewash |
| Notes | |
| <ul style="list-style-type: none"> ■ Shirts/Business are only given a short spin on the Easy iron (depend on model) setting. Hang them up to dry while still dripping wet. -> Self-smoothing effect ■ Use the Delicates/Silk program to wash Shirts/Business made of Silk/Delicate fabrics. | |
| AllergyPlus : Hard-wearing fabrics made of cotton or linen. | max. 6,5 kg; - 60 °C 400 - 1400* rpm Speed Eco Perfect Rinse Plus , Prewash |
| * max. The maximum spin speed depends on the program and model | |
| ** Reduced load for the Speed setting | |

Consumption values table

Energy and water consumption, program duration and residual moisture for the main wash program

(approximate values)

| Program | Load | Energy consumption* | Water consumption* | Program duration* |
|----------------------|------|---------------------|--------------------|-------------------|
| Cottons 20 °C | 9 kg | 0,25 kWh | 90 l | 2 ¾ h |
| Cottons 40 °C | 9 kg | 1,10 kWh | 90 l | 3 h |
| Cottons 60 °C | 9 kg | 1,06 kWh | 90 l | 2 ¾ h |
| Cottons 90 °C | 9 kg | 2,14, kWh | 100 l | 2 ¾ h |
| Easy care 40 °C | 4 kg | 0,71 kWh | 64 l | 2 h |
| Quick/Mix 40 °C | 4 kg | 0,60 kWh | 45 l | 1 ¼ h |
| Delicates/Silk 30 °C | 2 kg | 0,19 kWh | 37 l | ¾ h |
| Wool 30 °C | 2 kg | 0,19 kWh | 41 l | ¾ h |

| Program | Approximate information on the residual moisture** | | |
|----------------|----------------------------------------------------|---------------|---------------|
| | WAT28... | WAT24... | WAT20... |
| | max. 1400 rpm | max. 1200 rpm | max. 1000 rpm |
| Cottons | 48 % | 53 % | 62 % |
| Easy care | 40 % | 40 % | 40 % |
| Delicates/Silk | 30 % | 30 % | 30 % |
| Wool | 45 % | 45 % | 45 % |

* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.

** Information on residual moisture based on program-dependent spin-speed limit and maximum loads.

Most efficient programs for cotton fabrics

The following programs (standard programs, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

Standard programs for cottons in accordance with the (EU) directive no. 1015/2010

| Program + Temperature + Button | Load | Approximate program duration |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|------------------------------|
| Cottons +  + Eco  | 9 kg | 4 ¾ h |
| Cottons +  + Eco  | 4,5 kg | 4 ½ h |
| Cottons +  + Eco  | 4,5 kg | 4 ½ h |

Program setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C).

The specification of the program temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated program temperature for energy-saving reasons.

Notes

- This supplementary sheet is included with your installation and operating instructions. Retain all documentation for subsequent use.
- Much more important information can be found in your operating and installation instructions.

WAT28481IR

9001225755 (9610)

