

Overview of programmes

Program/type of laundry/information	Settings
Name of the program : Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (❄ = cold) Spin speed*, (--- = Rinse Stop) additional settings that can be selected
 Cottons : Hard-wearing textiles, heat-resistant textiles made of cotton or linen Notes ■ For the Eco Perfect  setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the Eco Perfect  setting or, if necessary, set a higher temperature. ■ The Speed Perfect  setting is suitable as a short program for lightly soiled laundry.	9 kg/5** kg; ❄ - 90 °C ---, 0 - 1600* rpm Speed/Eco Perfect  /  , Prewash  , Easy Iron 
 Synthetic : Textiles made of synthetic materials or blended fabrics	4 kg; ❄ - 60 °C ---, 0 - 1200 rpm Speed/Eco Perfect  /  , Prewash  , Easy Iron 
 Wool : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor). Notes ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool.	max. 2 kg; ❄ - 40 °C ---, 0 - 800 rpm -
 SuperQuick 15'/30' : Extra short program of approx. 15/30 minutes, suitable for small items of lightly soiled laundry Note : When selecting the Speed Perfect  setting, the program SuperQuick 15' is run.	2/3,5 kg; ❄ - 40 °C 0 - 1200 rpm Speed 
 Mix : Mixed load of cottons and synthetic fabrics	4 kg; ❄ - 40 °C ---, 0 - 1600* rpm Speed/Eco Perfect  /  , Prewash  , Easy Iron 
* Max. spin speed, depending on the programme and model ** Reduced load for Speed Perfect  setting	

Program/type of laundry/information	Settings
Night Wash  : Especially quiet programme for washing during the night; suitable for cotton, linen, synthetic and blended fabrics. Notes - Final buzzer deactivated, - Reduced final spin speed set by default and shorter washing time	4 kg;  - 40 °C ---, 0 - 1600* rpm Speed/Eco Perfect  /  , Prewash  , Easy Iron 
Rinse  : Extra rinse with selectable spin speed	-; - ---, 0 - 1600* rpm Easy Iron 
Spin / Drain   : Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0. Note : The display of the Ready-in time is only updated once the program is restarted.	-; - ---, 0 - 1600* rpm Easy Iron 
Drum clean  : Program for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. Notes - Run the drum-care program without any laundry. - Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.	0 kg; 90 °C 1600* rpm -
Delicates / Silk  : For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) Note : Use a detergent suitable for machine-washing delicates or silk.	2 kg;  - 40 °C ---, 0 - 800 rpm Speed/Eco Perfect  /  , Prewash  , Easy Iron 
Duvet  : Machine-washable fabrics stuffed with down, such as pillows and duvets; also suitable for items stuffed with synthetic fibres Note : Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	2 kg;  - 60 °C ---, 0 - 1200 rpm Speed/Eco Perfect  / 
Sportswear  : Sportswear and leisure wear made from microfibre fabrics Notes - Laundry must not be treated with fabric softener. - Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.	2 kg;  - 40 °C ---, 0 - 800 rpm Speed/Eco Perfect  /  , Prewash  , Easy Iron 
* Max. spin speed, depending on the programme and model ** Reduced load for Speed Perfect  setting	

Program/type of laundry/information	Settings
Jeans  : Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.	3,5 kg;  - 40 °C ----, 0 - 1200 rpm Speed/Eco Perfect =  /  , Prewash  , Easy Iron 
Shirts / Blouses  : Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics	2 kg;  - 60 °C ----, 0 - 800 rpm Speed/Eco Perfect =  /  , Prewash  , Easy Iron 
Notes - Shirts/blouses are only given a short spin on the Easy Iron  (depending on model) setting. Hang them up to dry while still dripping wet. → Self-smoothing effect - Use the Delicates / Silk  program to wash shirts/blouses made of silk/delicate fabrics.	
AllergyPlus  : Hard-wearing fabrics made of cotton or linen	7 kg/5** kg;  - 60 °C ----, 0 - 1600* rpm Speed/Eco Perfect =  /  , Prewash  , Easy Iron 
Note: . Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	
* Max. spin speed, depending on the programme and model ** Reduced load for Speed Perfect =  setting	



Consumption values table

Energy and water consumption, program duration and residual moisture for the main wash program

(approximate values)

Program	Load	Energy consumption*	Water consumption*	Program duration*
Cottons 20 °C	9 kg	0,25 kWh	90 l	2 ¾ h
Cottons 40 °C	9 kg	1,10 kWh	90 l	3 h
Cottons 60 °C	9 kg	1,06 kWh	90 l	2 ¾ h
Cottons 90 °C	9 kg	2,14 kWh	100 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	64 l	2 h
Mixed Load 40 °C	4 kg	0,60 kWh	45 l	1 ¼ h
Delicates/Silk 30 °C	2 kg	0,19 kWh	37 l	¾ h
Wool 30 °C	2 kg	0,19 kWh	41 l	¾ h

Program	Approximate information on the residual moisture**			
	WAW32...	WAW28...	WAW24...	WAW20...
	max. 1600 rpm	max. 1400 rpm	max. 1200 rpm	max. 1000 rpm
Cottons	44 %	48 %	53 %	62 %
Easy-Care	40 %	40 %	40 %	40 %
Delicates/Silk	30 %	30 %	30 %	30 %
Wool	45 %	45 %	45 %	45 %
* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.				
** Information on residual moisture based on program-dependent spin-speed limit and maximum loads.				

Most efficient programs for cotton fabrics

The following programs are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

Standard programs for cottons in accordance with the (EU) directive no. 1015/2010		
Program + temperature + button	Load	Approximate program duration
Cottons 60 °C + Eco Perfect 	9 kg	4 ¾ h
Cottons 60 °C + Eco Perfect 	4,5 kg	4 ½ h
Cottons 40 °C + Eco Perfect 	4,5 kg	4 ½ h
Program setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C). The specification of the program temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated program temperature for energy-saving reasons.		

Notes

- This supplementary sheet is included with your installation and operating instructions. Retain all documentation for subsequent use.
- Much more important information can be found in your operating and installation instructions.

WAW28420SG

9001249985 (9610)

