


 

 

 


## Overview of programmes

Programme/type of laundry/information Name of the programme: Brief explanation of the programme and for which textiles it is suitable.	Settings max. load; temperature spin speed* additional settings that can be selected
<p><b>Cottons:</b> Hard-wearing textiles, heat-resistant textiles made of cotton or linen</p> <p><b>Cottons 40 °C + Prewash:</b> Programme with prewash; divide the detergent between compartments <b>I</b> and <b>II</b></p> <p><b>Note:</b> The <b>Speed</b> setting is suitable as a short programme for lightly soiled laundry.</p>	<p>7 kg/4** kg; 20, 40, 60, 90 °C</p> <p>- - (Rinse Stop), 0 - 1400* rpm</p> <p>≡ ⏸ @</p>
<p><b>Cottons</b>  : Hard-wearing fabrics, heat-resistant textiles made of cotton or linen</p> <p>Energy-optimised washing by reducing the temperature while achieving a comparable washing result for the <b>Cottons</b> programme.</p> <p><b>Note:</b> The washing temperature is lower than the selected temperature. If you want to achieve a higher water temperature, use the <b>Cottons</b> programme with a higher temperature as required.</p>	<p>7 kg; 40, 60 °C</p> <p>- - (Rinse Stop), 0 - 1400* rpm</p> <p>-</p>
<p><b>Rinse:</b> Extra rinse with selectable spin speed</p>	<p>- ; -</p> <p>- - (Rinse Stop), 0 - 1400* rpm</p> <p>-</p>
<p><b>Spin/Drain:</b> Extra spin with selectable spin speed. Only to be emptied, set Spin speed to 0.</p> <p><b>Note:</b> The display of the “Ready in” time is only updated once the programme is restarted.</p>	<p>- ; -</p> <p>- - (Rinse Stop), 0 - 1400* rpm</p> <p>-</p>
<p><b>Easy-Care:</b> Textiles made of synthetic materials or blended fabrics</p>	<p>4 kg; 30, 40 °C</p> <p>- - (Rinse Stop), 0 - 1200* rpm</p> <p>≡ ⏸ @</p>
<p> <b>Wool:</b> Hand or machine-washable wool or rich-wool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep.</li> <li>■ Use a detergent that is suitable for machine-washing wool.</li> </ul>	<p>2 kg; 30 °C</p> <p>- - (Rinse Stop), 0 - 800 rpm</p> <p>-</p>
<p>* the maximum spin speed depends on the programme and model</p> <p>** reduced load for the <b>Speed</b> setting</p>	


Programme/type of laundry/information Name of the programme: Brief explanation of the programme and for which textiles it is suitable.	Settings max. load; temperature spin speed* additional settings that can be selected
<p><b>Delicates/Silk:</b> For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf)</p> <p><b>Note:</b> Use a detergent suitable for machine-washing delicates or silk.</p>	<p>2 kg; 30 °C</p> <p>- -- (Rinse Stop), 0 - 800 rpm</p> <p> </p>
<p><b>Mixed Load:</b> Mixed load of cottons and synthetic fabrics</p>	<p>4 kg; 40 °C</p> <p>- -- (Rinse Stop), 0 - 1400* rpm</p> <p> </p>
<p><b>SuperQuick 15'/30':</b> Extra short programme of approx. 15/30 minutes, suitable for small items of lightly soiled laundry</p> <p><b>Note:</b> When selecting the <b>Speed</b> setting, the programme <b>SuperQuick 15'</b> is run.</p>	<p>2/3.5 kg; 30 °C</p> <p>- -- (Rinse Stop), 0 - 1200* rpm</p> <p></p>
<p>* the maximum spin speed depends on the programme and model                  ** reduced load for the <b>Speed</b> setting</p>	




## Consumption values table

### Energy and water consumption, programme duration and residual moisture for the main washing programme

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Programme duration*
Cottons 20 °C	7 kg	0.29 kWh	76 l	2 1/2 h
Cottons 40 °C	7 kg	1.01 kWh	76 l	3 h
Cottons 60 °C	7 kg	1.20 kWh	76 l	2 1/2 h
Cottons 90 °C	7 kg	2.25 kWh	87 l	2 1/2 h
Easy-Care 40 °C	4 kg	0.79 kWh	69 l	2 h
Mix 40 °C	4 kg	0.63 kWh	46 l	1 1/4 h
Delicates/Silk 30 °C	2 kg	0.22 kWh	38 l	3/4 h
 Wool 30 °C	2 kg	0.19 kWh	44 l	3/4 h

 
Programme	Approximate information on the residual moisture**		
	WAN28...	WAN24...	WAN20...
	Max. 1400 rpm	Max. 1200 rpm	Max. 1000 rpm
Cottons	53 %	58 %	68 %
Easy-Care	40 %	40 %	40 %
Delicates/Silk	30 %	30 %	30 %
 Wool	45 %	45 %	45 %


Values determined acc. EN60456:2010.

\* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

\*\* Information on residual moisture based on programme-dependent spin-speed limit and maximum loads.

## Efficiency test programmes for cotton fabrics

The following programmes (standard programmes, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

Standard programmes for cottons according to (EU) Regulation No. 1015/2010	Load	Approximate programme duration
Cottons  **	7 kg	3 1/2 h
Cottons  **	3.5 kg	3 1/2 h
Cottons  **	3.5 kg	3 1/2 h

\*\* Programme setting for testing and energy labeling in accordance with EU directive 2010/30/EU with cold water (15°C).

The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the indicated programme temperature for reasons of saving energy. The washing efficiency corresponds to the temperature selection.

### Notes

- This supplementary sheet is included with your operating and installation instructions. Retain all documentation for subsequent use.
- Much more important information can be found in your operating and installation instructions.

**WAN24001GB**

**9001250470 (9610)**

