



Register your new Bosch now: www.bosch-home.com/welcome



Washing machine WAY327X0



en Instruction Manual and Installation Instructions

Your new washing machine

You have chosen a Bosch washing machine.

Please take a few minutes to read and become familiar with the advantages of your washing machine.

To meet the high quality demands required by Bosch, every washing machine that leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website www.boschhome.com or contact our after-sales service centres.

If the operating and installation instructions describe different models, any differences will be pointed out at the relevant points in the text.



Read these operating and installation instructions before switching on the washing machine.

Display rules

▲ Warning!

This combination of symbol and signal word indicates a possibly dangerous situation. Not heeding the warning can cause death or injuries.

Caution!

This signal word indicates a possibly dangerous situation. Not heeding the caution can cause property and/or environmental damage.

Note/tip

Information about the optimum use of the appliance/any other useful information.

1. 2. 3. / a) b) c)

The steps are represented by numbers or letters.

/ -

Lists are represented by a small box or a dash.

Contents

Sevent Intended use	5
Safety instructions Children/people/pets Installation. Operation Cleaning/Maintenance	6 7 . 10 . 11
Environmental protection Packaging/used appliance Tips on economical use	. 13
Positioning and connecting Included with the appliance	14 15 15 15 15 15 16 16 17 18 19 20 21 22 23
Getting to know the appliance Washing machine Control panel Display panel	25 26 27
Prepare the laundry Sorting laundry	. 29

Detergent	. 30
Correct selection of detergent Saving energy and detergent	.30 .30
P Overview of programmes	. 31
Starching Dyeing/bleaching Memory M1 (depending on the model)	.36
P+ Programme default settings	. 37
Temperature Spin speed Finished in	.37
P ⁺ Additional programme setting	s/
options (* depending on the model).SpeedPerfectEcoPerfectPrewash *Rinse Plus *Water Plus *Easy-Iron *Soaking *Rinse Hold *Silent Wash *	.38 .38 .38 .38 .38 .39 .39 .39 .39
Section 2 Sectio	. 41
Preparing the washing machine Switching on the appliance/ selecting a programme	
Change the programme default settings	
Select additional programme settings Placing laundry into the drum Measure and add detergent and	.42
care products	.43 ⊿⊿
Child lock \sim 3 sec	.45

en

Adding laundry	45
Changing the programme	45 45
Programme end during rinse hold.	40
Programme end	46
Removing laundry/switching off the appliance.	46
Appliance settings	47
· Sensors	48
Automatic load sensing	48
Unbalanced load detection system .	48
AquaSensor	48
Load sensor/display	48
Dosing recommendation	48
Cleaning and maintenance	49
Machine housing/control panel	49
Drum	49
Descaling.	49
Detergent drawer and housing The drain pump is blocked,	50
emergency draining	50
The drain hose at the siphon is	
blocked	51
Filter in the water supply blocked	51
Faults and what to do about	
them	
Emergency release	
Information on the display panel Faults and what to do about them	
	54
6 After-sales service	56
Consumption rates	57
Energy and water consumption,	
programme duration and residual	
moisture for the main washing	67
programmes Efficiency test programmes for	57
	58
Technical data	58
Aqua Stop Warranty	59

[§] Note: Note: Set the set of the set o

- This appliance is intended for private domestic use only.
- Do not install or operate this appliance anywhere that is liable to experience frost and/or outdoor conditions. There is a risk that the appliance will be damaged if residual water in it freezes. If hoses freeze up, they may crack/burst.
- This appliance must only be used for washing domestic laundry, consisting of machine-washable items and hand-washable woollens (see label on item). Using the appliance for any other purpose is outside of the scope of its intended application and is forbidden.
- This appliance is suitable for operation with mains water and commercially available detergents and care products (must be suitable for use in washing machines).
- This appliance is intended for use up to a maximum height of 4000 metres above sea level.

Before you switch on the appliance:

Check that there is no visible damage to the appliance. Do not operate the appliance if it is damaged. Should you have any problems, please contact your specialist dealer or our customer service.

Read and follow the operating and installation instructions and all other information provided with this appliance.

Retain the documents for subsequent use or for subsequent owners.

▲ Safety instructions

The following safety information and warnings are provided to protect you from injury and to prevent material damage to your surroundings.

It is nevertheless important to take the necessary precautions and to proceed with care when installing, maintaining, cleaning and operating the appliance.

Children/people/pets

A Warning Risk of death!

Children and other people who are unable to assess the risks involved when using the appliance may injure themselves or may find themselves in life-threatening situations. Therefore please note:

- The appliance may be used by children over the age of 8 years and by persons with reduced physical, sensory or mental capacity or by persons with a lack of experience or knowledge as long as they are supervised or have received instruction on how to use the appliance safely and they have understood the potential risks of using the appliance.
- Children must not play with this appliance.

- Do not allow children to clean or maintain this appliance unsupervised.
- Keep children under 3 years and pets away from this appliance.
- Do not leave the appliance unattended when children or other people who are unable to assess the risks are in the vicinity.

▲ Warning Risk of death!

Children may lock themselves inside appliances and find themselves in a life-threatening situation.

- Do not position the appliance behind a door, as this may obstruct the appliance door or prevent it from opening completely.
- Once an appliance has reached the end of its life, pull the mains plug from the socket **before** severing the mains cable, and then destroy the lock on the appliance door.

▲ Warning Risk of suffocation!

If allowed to play with the packaging/plastic film or packing components, children may become caught in these or pull them over their heads and suffocate.

Keep packaging, plastic film and packing components away from children.

▲ Warning Risk of poisoning!

Detergents and care products may result in poisoning if consumed.

If accidentally swallowed, seek medical advice. Keep detergents and care products out of the reach of children.

▲ Warning Risk of burns!

When washing at high temperatures, the glass in the appliance door becomes hot. Stop children from touching the appliance door when it is hot.

Marning Eye/skin irritation!

Contact with detergents or care products may cause eye/skin irritation.

Rinse eyes/skin thoroughly if they/it come(s) into contact with detergents or care products. Keep detergents and care products out of the reach of children.

Installation

Warning Risk of electric shock/fire/ material damage/damage to the appliance!

If the appliance is not installed properly, this may lead to a dangerous situation. Ensure the following:

- The mains voltage on your power socket must match the rated voltage specified on the appliance (identification plate). The connected loads and the required fuse protection are specified on the identification plate.
- The appliance must only be connected to alternating voltage via a protective contact socket that has been correctly installed. This plug socket must be freely accessible at all times.
- The mains plug and the protective contact socket must match and the earthing system must be correctly installed.
- The installation must have an adequate cross section.

- The mains plug must be freely accessible at all times. If this is not possible, in order to comply with the relevant safety regulations, a switch (all pole disconnection) must be built into the permanent installation in accordance with electrical installation regulations.
- If using a residual current circuit breaker, only use one that bears the following mark: A line presence of this mark is the only way to be sure that it fulfils all the applicable regulations.

MWarning

Risk of electric shock/fire/ material damage/damage to the appliance!

If the appliance's mains cable is altered or damaged, this may result in electric shock, short circuiting or fire due to overheating.

The mains cable must not be kinked, crushed or altered, and must not come into contact with any heat sources.

Marning Bisk of fire/mater

Risk of fire/material damage/ damage to the appliance!

The use of extension cords or power strips may result in fire due to overheating or short circuiting.

Connect the appliance directly to an earthed socket that has been correctly installed. Do not use extension cords, power strips or multi-way couplers.

Warning Risk of injury/material damage/damage to the appliance!

- The appliance may vibrate or move when in operation, potentially resulting in injury or material damage.
 Place the appliance on a clean, even, solid surface and, using a spirit level to guide you, level it with the screw-in feet.
- If you take hold of any of the appliance's protruding parts (e.g. the appliance door) in order to lift or move it, these parts may break off and cause injury.

Do not take hold of any of the appliance's protruding parts in order to move the appliance.

▲ Warning Risk of injury!

- The appliance is very heavy. Lifting it may result in injury. Do not lift the appliance on your own.
- The appliance has sharp edges on which you could cut your hands.
 Do not take hold of the appliance by its sharp edges. Wear protective gloves to lift it.
- If the hoses and mains cables are not correctly routed, they may constitute a tripping hazard, which may result in injury.
 Route hoses and cables such that they do not constitute a tripping hazard.

Caution!

Material damage/damage to the appliance

 If the water pressure is too high or too low, the appliance may not be able to operate properly, and it may also result in material damage or damage to the appliance.
 Make sure that the water

pressure in the water supply facility is at least

100 kPa (1 bar), and does not exceed

1000 kPa (10 bar).

- If the water hoses are altered or damaged, this may result in material damage or damage to the appliance. The water hoses must not be kinked, crushed, altered or severed.
- The use of hoses supplied by other brands to connect to the water supply may result in material damage or damage to the appliance. Use the hoses supplied with the appliance or genuine spare part hoses only.
- The appliance is secured for transportation by transport locking devices. If the transport locking devices are not removed before the appliance is operated, this may result in damage to the appliance.

It is important to completely remove all transport locking devices before using the appliance for the first time. Make sure that you retain these transport locking devices separately. It is important to refit the transport locking devices if the appliance is to be transported, in order to prevent the appliance from being damaged in transit.

Operation

Marning Risk of explosions/fire!

Laundry that has been pretreated with cleaning agents that contain solvents, e.g. stain remover/cleaning solvent, may cause an explosion in the drum. Rinse the laundry thoroughly with water before washing it in the machine.

▲ Warning Risk of poisoning!

Poisonous fumes may be given off by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

▲ Warning Risk of injury!

 If you support your weight/sit on the appliance door when it is open, the appliance may tip over, which may result in injury.

Do not support your weight on the appliance door when it is open.

 If you climb onto the appliance, the worktop may break, which may result in injury.

Do not climb onto the appliance.

 If you reach into the drum while it is still rotating, you risk injuring your hands. Wait until the drum has stopped rotating.

▲ Warning Risk of scalding!

When washing at high temperatures, there is a risk of scalding if you come into contact with hot detergent solution (e.g. when draining hot detergent solution into a washbasin).

Do not reach into the hot detergent solution.

Marning Eye/skin irritation!

Detergent and care products may spray out if the detergent drawer is opened while the appliance is in operation. Rinse eyes/skin thoroughly if they/it come(s) into contact with detergents or care products. If accidentally swallowed, seek medical advice.

Caution! Material damage/damage to the appliance

 If the amount of laundry in the appliance exceeds its maximum load capacity, it may not be able to operate properly, or this may result in material damage or damage to the appliance.

Do not exceed the maximum load capacity of dry laundry. Make sure you comply with the maximum load capacities specified for each of the programs. \rightarrow Page 31

 If you pour the wrong quantity of detergent or cleaning agent into the appliance, this may result in material damage or damage to the appliance. Use detergents/care products/cleaning agents and softeners in accordance with the manufacturers' instructions.

Cleaning/Maintenance

▲ Warning Risk of death!

The appliance is powered by electricity. There is a risk of electric shock if you come into contact with live components. Therefore please note:

 Switch off the appliance. Disconnect the appliance from the power supply (pull out the plug).

- Never take hold of the mains plug with wet hands.
- When removing the mains plug from the socket, always take hold of the plug itself and never the mains cable, otherwise this may damage the mains cable.
- Do not make any technical modifications to the appliance or its features.
- Repairs and any other work on the appliance must only be conducted by our customer service or by an electrician. The same applies for replacing the mains cable (when necessary).
- Spare mains cables can be ordered from our customer service.

▲ Warning Risk of poisoning!

Poisonous fumes may be given off by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

\land Warning

Risk of electric shock/material damage/damage to the appliance!

If moisture penetrates the appliance, this may cause it to short circuit.

Do not use a pressure washer, steam cleaner, hose or spray gun to clean your appliance.

Warning Risk of injury/material damage/damage to the appliance!

The use of spare parts and accessories supplied by other brands is dangerous and may result in injury, material damage or damage to the appliance. For safety reasons, use genuine spare parts and accessories only.

Caution!

Material damage/damage to the appliance

Cleaning agents and agents for pretreating laundry (e.g. stain removers, prewash sprays, etc.) may cause damage if they come into contact with the surfaces of the appliance. Therefore please note:

- Do not allow these agents to come into contact with the surfaces of the appliance.
- Clean the appliance with nothing but water and a soft, damp cloth.
- Remove any detergent, spray or other residues immediately.

Environmental protection

X

Packaging/used appliance

Dispose of packaging in an environmentally-responsible manner.

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances

recycling of used appliances as applicable throughout the EU.

Tips on economical use

 Always fill the appliance with the maximum amount of laundry for each programme.

→ " Overview of programmes" on page 31

- Wash normally soiled laundry without prewash.
- For light and normal soiling in laundry, you can save energy and detergent. → Page 30
- The selectable temperatures apply to the care labels on the textiles. The temperatures in the machine may deviate from this so that you get the optimum mix of energy-saving and washing results.
- Information on energy and water consumption: → Page 27 The displays provide information about the relative level of energy and water consumption in the selected programmes.

The more display segments are visible, the higher the respective consumption.

This enables you to compare the consumption levels of the different programmes when choosing your programme settings and decide on an energy- and water-saving programme setting.

C = = = = ○

- 🔁 Energy consumption
- Or Water consumption
- Energy-saving mode: The display panel lighting goes out after a few minutes and the ▷ III button flashes. Press any button to activate the lighting.


Energy-saving mode is not activated if a programme is running.

- Automatic switch off: If the appliance is not operated for a prolonged period, it may automatically switch off before the programme starts and when the programme has ended to save energy. Press the main switch again to switch on the appliance.
 - \rightarrow "## Appliance settings" on page 47
- If the washing will be dried in a dryer, select the spin speed according to the dryer manufacturer's instructions.

Positioning and connecting

Included with the appliance

Note: Check the machine for transport damage. Never use a damaged machine. If you have any complaints, contact the dealer from whom you purchased the appliance or our customer services. \rightarrow Page 56

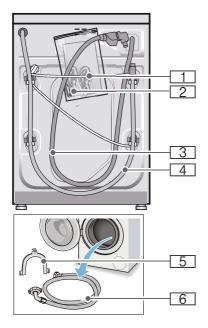

1 Mains cable

- 2 Bag:
 - Installation and operating instructions
 - Customer services location directory*
 - Warranty*
 - Cover caps for openings after the transport braces have been removed
 - Adaptor with sealing washer from 21 mm = 1/2" to 26.4 mm = 3/4" *
- 3 Water supply hose on Aqua-Stop models
- 4 Water drain hose
- 5 Elbow for securing the water drain hose*
- 6 Water supply hose on standard/ Aqua-Secure models
- * depending on the model

In addition, a hose clamp (24 - 40 mm diameter, available from specialist dealers) is required to connect the water drain hose to a siphon.

Useful tools

- Spirit level for aligning
- Spanner with:
 - WAF13 for loosening the transport braces, and
 - WAF17 for aligning the appliance feet

Safety instructions

Warning Risk of injury!

- The washing machine is very heavy. Be careful when lifting/transporting the washing machine.
- When the washing machine is lifted by its protruding parts (e.g. the washing machine door), the components may break off and cause injuries.
 Do not lift the washing machine by protruding parts.
- If the hose and mains cables are not routed properly, there is a risk of tripping and injury. Lay hoses and cables in such a way

that there is no risk of tripping.

Caution! Damage to the appliance

Frozen hoses may rip/burst. Do not install the washing machine in areas exposed to frost or outdoors.

Caution!

Water damage

The connection points for the water supply hose and water drain hose are under high water pressure. To prevent leaks and water damage, you must follow the instructions in this section.

Notes

- In addition to the safety information listed here, the local water and electricity supplier may have special requirements.
- If in doubt, have the appliance connected by a specialist.

Installation surface

Note: The washing machine be stable so that it does not move around.

- The installation surface must be firm and level.
- Soft floors/floor coverings are not suitable.

Installation on a base or a wooden joist floor

Caution!

Damage to the appliance

The washing machine may "wander" and tip/topple from the base when spinning.

The feet of the appliance must be secured with holding brackets. Order no. WMZ 2200, WX 9756, Z 7080X0

Note: On wooden joist floors, install the washing machine:

- In a corner, if possible,
- On a water-resistant wooden board (min. 30 mm thick) which is screwed tightly to the floor.

Installation on a platform with drawer

Platform order no.: WMZ 20490, WZ 20490, WZ 20510, WZ 20520

Installing the appliance in a kitchenette

Warning Danger of death!

There is a risk of electric shock if you touch live components.

Do not remove the appliance covering plate.

Notes

- Recess width of 60 cm required.
- Only install the washing machine underneath a continuous worktop that is securely connected to adjacent cabinets.

 
Removing the transport locks

Caution!


Damage to the appliance

- The machine is secured for transportation using transport locks. If the transport locks are not removed, the drum, for example, may become damaged when the machine is operated. Before using the appliance for the first time, make sure that you completely remove all four transport locks. Keep the locks in a safe place.
- To prevent transport damage from occurring if the appliance is moved at a later date, you must refit the transport locks before transporting the appliance.


Note: Keep the screws and sleeves in a safe place.



 1. Take the hoses out of the holders.



  Unscrew and remove all four transportation securing bolts with a wrench (WAF 13). Remove the sleeves. Remove the mains cable from the holders.




3. Insert the covers. Lock the covers firmly in place by applying pressure to the snap-in hooks.




Hose and cable lengths

Left-hand connection

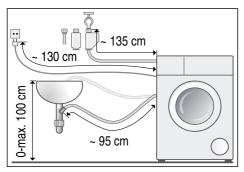

Right-hand connection

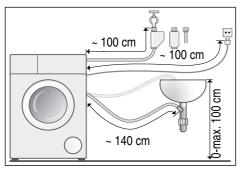

Tip: The following are available from specialist dealers/customer services:

- Extension for Aqua-Stop and cold water supply hose (approx. 2.50 m); order no. WM Z2380, WZ 10130, CZ 11350, Z 7070X0
- A longer supply hose (approx. 2.20 m) for standard models; individual component number for customer services: 00353925

Water inlet

Warning Danger of death!

 
There is a risk of electric shock if you touch live components.

Do not immerse the Aqua-Stop safety valve in water (it contains an electric valve).

Notes

- Only operate the washing machine using cold mains water.
- Do not connect the machine to the mixer tap of an unpressurised hotwater boiler.
- Do not use a used supply hose. Only use the supply hose supplied or one that was purchased from an authorised specialist retailer.
- Do not kink or squash the water supply hose.
- Do not alter (shorten, cut through) the water supply hose (otherwise its strength is no longer guaranteed).
- Only tighten the screw connections by hand. If the screw connections are tightened too much with a tool (pliers), the thread may become damaged.
- When connecting to a 21 mm = 1/2" tap, first fit an adapter* with a sealing washer from 21 mm = 1/2" to 26.4 mm = 3/4".

*supplied depending on the model



Optimum water pressure in the supply network

 
At least 100 kPa (1 bar) **Maximum** 1000 kPa (10 bar) When the tap is open, the water flow rate is at least 8 l/min.

If the water pressure is higher than this, a pressure-reducing valve must be installed.


Connection

Connect the water supply hose to the tap (26.4 mm = $\frac{3}{4}$ ") and to the appliance (not necessary for Aqua-Stop models as this is permanently installed):


Model: Standard



Model: Aqua-Secure

 

Model: Aqua-Stop

 

Note: Turn on the tap carefully, checking the leak tightness of the connection points. The screw connection is under mains water pressure.

Water outlet

Warning Risk of scalding!

When you are washing at high temperatures, there is a risk of scalding if you come into contact with hot water (e.g. when draining hot water into a washbasin).

Do not reach into the hot water.

Caution! Water damage

If the drain hose slips out of the washbasin or the connection point during draining due to high water pressure, any escaping water may cause water damage.

Secure the drain hose so that it cannot slip out.

Caution!

Damage to the appliance/fabrics

 
If the end of the drain hose is immersed in the drained water, water may be sucked back into the appliance and may damage the appliance/fabrics. Make sure that:

- The plug does not block drainage from the washbasin.
- The end of the drain hose is not immersed in the drained water.
- The water drains away quickly enough.


Note: Do not kink the water drain hose or put strain on it lengthways.

Connection

Drainage into a washbasin



 Drainage into a siphon The connection point must be secured using a hose clamp with a diameter of 24 - 40 mm (available from specialist dealers).



 Drainage into a plastic pipe with rubber bushing or into a drainage pit



Levelling

Align the appliance using a spirit level.

Incorrect alignment may result in loud noises, vibrations and machine "movement".

- 1. Loosen the lock nuts using a WAF17 spanner, by turning it in a clockwise direction.
- Check the alignment of the washing machine with a spirit level, and adjust it if necessary. Change the height by turning the appliance feet. All four appliance feet must stand firmly on the ground.
- 3. The lock nuts on all four appliance feet must be screwed tightly against the housing using a suitable WAF17 spanner. In doing so, hold the foot tight and do not adjust its height.



Electrical connection

Warning Danger of death!

There is a risk of electric shock if you touch live components.

- Never touch or hold the mains plug with wet hands.
- Only pull out the mains cable by the plug and never by the cable, as this could damage it.
- Never unplug the mains plug during operation.

Observe the following information and ensure that:

Notes

- The mains voltage and voltage indicated on the washing machine (rating plate) are the same.
 The connected load and fuse required are specified on the rating plate.
- The washing machine is only connected to an alternating current supply via a properly installed earthed socket.
- The mains plug fits the socket.
- The cable cross-section is adequate.
- The earthing system is properly installed.
- The mains cable is only replaced by a qualified electrician (if this is necessary). Replacement mains cables are available from customer services.
- No multiple plugs/couplings or extension cables are used.

 If an earth-leakage circuit breaker is used, only a type which displays the symbol is used.
 Only this symbol guarantees compliance with the currently applicable regulations.

- The mains plug can be accessed at all times. If this is not possible, in order to comply with the relevant safety regulations, a switch (2-pole switch-off) must be built into the permanent installation in accordance with electrical installation regulations.
- The mains cable is not kinked, squashed, altered or cut through.
- The mains cable does not come into contact with heat sources.

Before washing for the first time

The washing machine was thoroughly tested before leaving the factory.To remove any water that may be left over from the test, run the first wash cycle **without** any laundry.

Notes

- The washing machine must be correctly installed and connected. From → Page 14
- Never use a machine if it is damaged. Inform the after-sales service.

Preparatory work:

- 1. Check the machine.
- 2. Remove the protective film from the control panel.
- 3. Plug in the mains plug.
- 4. Turn on the tap.

Running the programme without laundry:

- **1.** Switch on the appliance.
- 2. Close the door (do not load any laundry).
- 3. Set the Drum clean 90 °C programme.
- 4. Open the detergent drawer.
- 5. Pour approximately 1 litre of water into compartment II.
- Pour standard washing powder into compartment II.
 Note: To prevent foaming, only use

half the amount of detergent recommended by the detergent manufacturer.Do not use detergents intended for woollens or delicates.

- 7. Close the detergent drawer.
- 8. Press the DI button.
- 9. Switch off the appliance at the end of the programme.

Your washing machine is now ready to use.

Transportation

E.g. when moving house

 
Preparatory work:

- 1. Turn off the tap.
- Reduce the water pressure in the supply hose: → Page 51; Cleaning and maintenance – filter in the water supply blocked
- **3.** Disconnect the washing machine from the mains.
- Drain the remaining water:


 → Page 50; cleaning and maintenance – the drain pump is blocked, emergency draining
- 5. Remove the hoses.

Fitting the transportation securing means:

- 1. Remove the covers and keep them in a safe place.
 - If required, use a screwdriver.



 
2. Insert all four sleeves. Clip the mains cable securely in the holders. Insert the transportation securing bolts and tighten them with a wrench (WAF 13).



Before switching on the appliance again:


Notes

- The transport braces **must** be removed.
- Pour approx. 1 litre of water into compartment II, select the Drain programme and start. This will prevent detergent from flowing unused into the drain during the next wash.

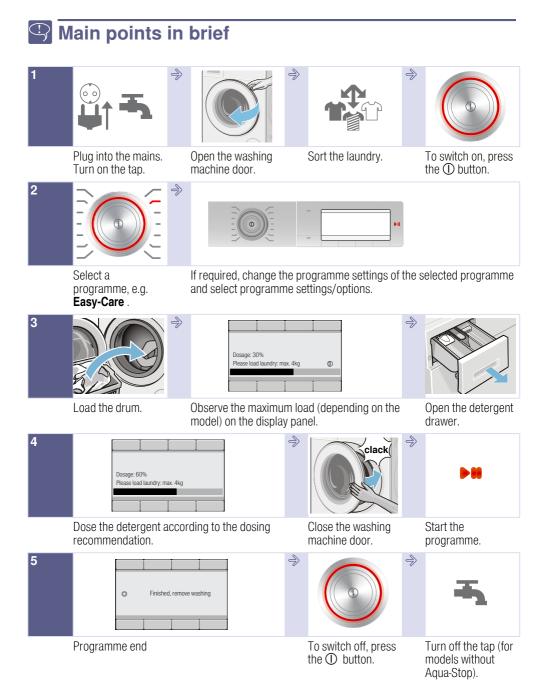

Getting to know the appliance


Washing machine

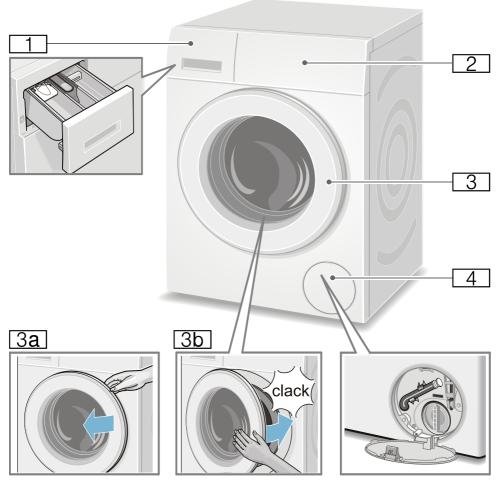

2
3
3 a
3b
4

Detergent drawer \rightarrow Page 43 Operating/display panel Door with door handle Open the door Close the door Service flap

Control panel

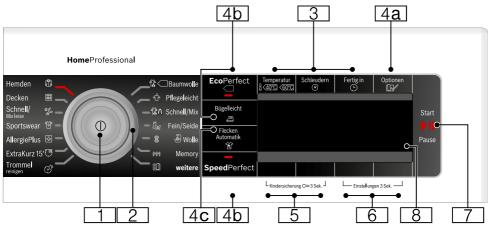

Note: All the buttons are sensitive (except for the main switch) and only need to be pressed lightly.

1	

Main switch

for switching the washing machine on and off: Press the ① button.

- 2 Programme selector for selecting a programme. The programme selector can be turned in either direction. Overview of programmes → Page 31
- 3 Buttons for changing the programme default settings: → Page 37
 - Temperature (Temperatur I),
 - Spin speed (Schleudern ©).
 - Finished in (Fertig in ^(b))

4 Buttons for selecting additional programme settings:

- 4aOptions (Optionen $\mathbb{R}')$) \rightarrow Page 27,4bEcoPerfect (@),SpeedPerfect (=(\mathbb{C})),
 - Easy-Iron (Bügelleicht <u></u>)


- 4c Stains (Flecken Automatik $\widehat{\mathfrak{U}}$) for stain selection \rightarrow Page 27, \rightarrow Page 47
- 5 Buttons **Child lock** *∽* **3 sec.** (Kindersicherung *∽* 3 Sek.) for activating/deactivating the childproof lock → Page 45
- Buttons basic settings 3 sec. (Einstellungen 3 Sek.) for changing the appliance settings, e.g. button signals, an overview of all selectable settings that can be selected → Page 28, → Page 47
- 7 **D** button for:
 - Starting a programme,
 - Interrupting a programme, e.g. to add items of laundry → Page 45,
 - Cancelling a programme → Page 45

Display panel

Main menu after selecting the programme

e.g. Easy-Care (Pflegeleicht 心)

The arrows on the display panel indicate in which direction the programme default settings can be changed using the buttons located above and below.

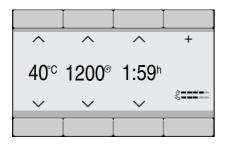


Additional programmes Programmes selected

and select, for example, the **Spin** (Schleudern) programme:

Using the buttons below the arrows, you can select the required programme. The selection is acknowledged by a tick.

—	1200©	0:13h	
Additiona	l programs	Spin	\checkmark
Main Menu		~	~

Wait or go back by pressing the **Main menu** button; the selected programme is displayed on the display panel.

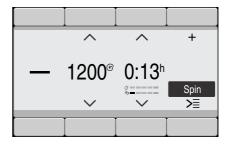


To change, select the button under the programme highlighted in black and change the programme.

Options (Optionen IIV) button selected

and select, for example, the **Rinse Hold** (\Box) option:

Using the buttons under the two lefthand arrows, select the option. Using the two right-hand arrows, select the displayed value. The selected options are active immediately and are displayed on the display panel.

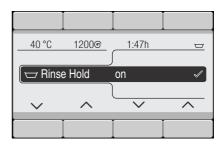


Wait or go back to the main menu by pressing the **Options** (Optionen **D**/) button.

Stains (Flecken Automatik $\ensuremath{\widetilde{\mathbb{M}}}$) button selected

and select, for example, the **grass** stain type:

Using the two right-hand arrows, select the stain type. The selected stain type is active immediately and is displayed on the display panel.

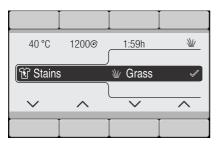


Wait or go back to the main menu by pressing the **Main menu** or **Stains** (Flecken Automatik **T**) button.

basic settings 3 sec. (Einstellungen 3 Sek.) buttons selected

Change the appliance setting: e.g. volume of the **end signal** \rightarrow *Page* 47

Using the buttons under the two lefthand arrows, select the setting. Using the two right-hand arrows, select the displayed value. The selection is acknowledged by a tick.

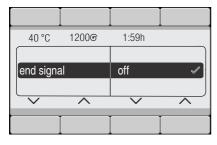

Wait or go back to the main menu by pressing the **basic settings 3 sec.** (Einstellungen 3 Sek.) (press and hold again).

R Laundry

Prepare the laundry

 
Caution!

Damage to the appliance/fabrics

Foreign objects (e.g. coins, paperclips, needles, nails) may damage the laundry or components in the washing machine.

You should therefore note the following tips when preparing your laundry:

Empty any pockets.



- Look out for metal items (paperclips, etc.) and remove them.
- Wash delicates in a laundry bag (tights, underwired bras, etc.).
- Close any zips; button up any cover buttons.
- Brush sand out of pockets and collars.
- Remove curtain fittings or place curtains in a laundry bag.

Sorting laundry

Sort your laundry according to the care instructions and manufacturer's information on the care labels, depending on:

- Type of fabric/fibre
- Colour

Note: Laundry may discolour. Wash white and coloured items separately. Wash new coloured items separately the first time you wash them.

 Soiling Wash laundry with the same level of soiling together. Some examples of soiling levels can be found on \rightarrow Page 30

- Light: Do not prewash, select the SpeedPerfect setting if necessary
- Normal
- Heavy: Load less laundry, select a programme with prewash
- Stains: Remove/pretreat stains while they are fresh. Firstly, dab with soapy water; do not rub. Then wash the items of laundry with the appropriate programme. Stubborn or dried-in stains can sometimes only be removed by washing several times.
- Symbols on the care labels
 Note: The numbers in the symbols indicate the maximum washing temperature that may be used.
 - Suitable for normal washing process;
 - e.g. Cottons programme A gentle washing process is
 - required;
 - e.g. Easy-Care programme
 - An especially gentle washing process is required; e.g. Delicate/Silk programme
 - ✓ Suitable for washing by hand;
 e.g.
 ✓ Woollens programme
 - 💥 Do not machine wash.

Detergent

Correct selection of detergent

The care label is crucial for selecting the correct detergent, temperature and treatment of the laundry. \rightarrow See also www.sartex.ch

If you visit www.cleanright.eu, you will find further information on detergents, care products and cleaning agents for domestic use.

- Standard detergent with optical brighteners
 Suitable for boil-washable white laundry made from linen or cotton Programme: Cottons/ cold - max, 90 °C
- Detergent for colours without bleach or optical brighteners Suitable for coloured laundry made from linen or cotton Programme: Cottons/ cold - max. 60 °C
- Detergent for colours/delicates without optical brighteners
 Suitable for coloured laundry made from easy-care fibres, synthetic fibres
 Programme: Easy-Care/ cold - max. 60 °C
- Detergent for delicates Suitable for delicate, fine fabrics, silk or viscose Programme: Delicate/Silk/ cold - max. 40 °C
- Detergent for woollens Suitable for wool Wool programme/ cold - max. 40 °C

Saving energy and detergent

For light and normal soiling, you can save energy (lower washing temperature) and detergent.

Saving	Soiling/note
Reduced temperature and detergent quantity as per the recommended dosage	 Light No visible dirt or stains. Clothing has taken on some body odour, e.g.: Light summer/sports clothing (worn for a few hours) T-shirts, shirts, blouses (worn for up to one day) Guest bed linen and hand towels (used for one day) Normal Visible dirt or a few light stains, e.g.: T-shirts, shirts, blouses (sweat soaked, worn a few times) Towels, bedding (used for up to one week)
Temperature as per the care label and detergent quantity as per the recommended dosage for heavy soiling	Heavy Dirt and/or stains clearly visible, e.g. tea towels, baby items, work clothing

Note: When measuring the amount of all detergents/additives/care products and cleaning agents, please always check the manufacturer's instructions and information. \rightarrow Page 43

Overview of programmes

Programmes on the programme selector

Programme/Type of laundry/Instructions	Settings
Name of the programme	Max. load
Brief explanation of the programme and for which fabrics it is suitable.	Temperature that can be selected; (
	Spin speed that can be selected; 0 = no spin cycle, draining only
	additional programme settings that can be selected*
Cottons (Baumwolle 🏦)	Max. 9 kg/5*** kg
Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen	豵 - 90 °C
Notes	0 - 1600** rpm
 In the EcoPerfect (()) setting, the washing temperature is lower than the selected temperature. If you would like to set a particular washing temperature, use the programme without the EcoPerfect (()) setting or, if necessary, set a higher temperature. The SpeedPerfect (=0) setting is suitable as a short programme for lightly soiled laundry. 	@, =Ů, ≌, ∪, ŵ, 앞, <u>⊿</u> , ∀, ∀, \$
Easy-Care (Pflegeleicht 心)	Max. 4 kg
Textiles made of synthetic materials or blended fabrics.	※ -60 °C
	0 - 1200** rpm
	®, =Ů, ≌, ⊥, ╈, ⊉, <u>⊅</u> , ☞, ᠸ, \$
Mixed Load (Schnell / Mix 🏠🖾)	Max. 4 kg
Mixed load of cottons and synthetic fabrics	發 - 40 °C
	0 - 1600** rpm
* The programmer and additional programme acting a are model don	@, =Ů, Ĥ, IJ, ː, ⊉, <u>⊅</u> , Ħ, IJ, \$

* The programmes and additional programme settings are model-dependent. The programmes/settings that are available can either be selected directly on the control panel or under **Additional programmes** Programmes or **Options** (Optionen **IP**).

** The maximum spin speed depends on the programme and model.

*** Reduced load for the SpeedPerfect (=①) setting

Programme/Type of laundry/Instructions	Settings
Delicates / Silk (Fein / Seide 🖏)	Max. 2 kg
Delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or	※ -40 °C
blends (e.g. silk blouses, silk scarves)	0 - 800** rpm
Note: . For delicates or silk, use a detergent suitable for machine- washing.	©, =Ů, Ĥ, └, ➡, ₺, <u>⊅</u> , ♡
Wool (Wolle 🕲)	Max. 2 kg
Hand- or machine-washable fabrics that are made of wool or contain wool;	↔ - 40 °C
particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the	0 - 800** rpm ☞, \$
water)	
Notes	
 Wool is of animal origin, e.g. Angora, alpaca, llama, sheep. For wool, use a detergent that is suitable for machine-washing. 	
Allergy Plus (AllergiePlus 🕀)	Max. 7 kg/5*** kg
Hard-wearing fabrics made of cotton or linen	※ -60 °C
Note: Particularly suited to washing items that need to be hygienically	0 - 1600** rpm
clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	©, =♡, ዦ, Ŀ, ➡, ⊉, <u></u> , ,, ♡, \$
SuperQuick 15(ExtraKurz 15' 🕲)	Max. 2 kg
Extra-short programme of approx. 15 minutes, suitable for small items	涨 -40 °C
of lightly soiled laundry	0 - 1200** rpm
SuperQuick 60 *	Max. 5 kg
Extra-short programme of approx. 60 minutes, suitable for small items	₩-40 °C
of lightly soiled laundry	0 - 1600** rpm
Dark Wash	Max. 3.5 kg
Dark-coloured cottons and dark-coloured easy-care fabrics;	ӂ -40 °C
Turn items inside-out before washing.	0 - 1200** rpm
	©, =Ů, Ĥ, Ŀ, ÷, £, <u>⊃</u> , ₩, ₩, \$
* The programmes and additional programme settings are model-depe	endent. The programmes/settings

that are available can either be selected directly on the control panel or under **Additional programmes** Programmes or **Options** (Optionen \mathbb{R}^{\vee}). The maximum spin speed depends on the programme and model. Reduced load for the **SpeedPerfect** (=①) setting

Programme/Type of laundry/Instructions	Settings
Outdoor *	Max. 2 kg
Membrane-coated weatherproof or outdoor clothing and water-resistant	粱 - 40 °C
fabrics Notes	0 - 800** rpm
 Use special detergent suitable for machine washing; add the correct dosage to compartment II in accordance with the manufacturer's instructions. Laundry must not be treated with fabric softener. Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue. 	@,=Ů,≌,;,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
Night Wash (Schnell / Mix leise 🖑) *	Max. 4 kg
Especially quiet programme for washing during the night; suitable for	涨 -40 °C
cotton, linen, synthetic and blended fabrics. Notes	0 - 1200** rpm
 Final buzzer deactivated, Reduced final spin speed set by default and shorter washing time 	®, =Ů, ≌, ⊥, ☎, ⊉, <u>≥</u> , ੲ, ੲ, \$
Duvet(Decken ⊞) *	Max. 2.5 kg
Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down	₩ - 60 °C
Note: . Wash large items separately. Use a detergent designed for	0 - 1200** rpm
delicates and follow the instructions on the item's care label. Use detergent sparingly.	`@, =Ů, ╈, ₺, ⊐
Shirts / Business (Hemden 🛍)	Max. 2 kg
Non-iron shirts or blouses made of cotton, linen, synthetic fibres or	豵 - 60 °C
blended fabrics Notes	0 - 800** rpm
 Shirts/blouses are only given a short spin on the Easy-Iron (Bügelleicht 2) setting. Hang them up to dry while still dripping wet. 	®, =♡, ≌, └, ☞, 앞, <u>⊿</u> , ⊌, ⊂, ₹
 Self-smoothing effect Use the Delicates / Silk (Fein / Seide ¹/₅₈) programme to wash shirts/blouses made of silk or delicate fabrics. 	

The programmes and additional programme settings are model-dependent. The programmes/settings that are available can either be selected directly on the control panel or under **Additional programmes** Programmes or **Options** (Optionen \mathbb{D} / \mathbb{P}). The maximum spin speed depends on the programme and model. Reduced load for the **SpeedPerfect** (= \mathbb{C}) setting

en Overview of programmes

Programme/Type of laundry/Instructions	Settings
Down Wear *	Max. 2 kg
Machine-washable fabrics stuffed with down, such as pillows and duvets; also suitable for items stuffed with synthetic fibres	- 60 °C
	0 - 1200** rpm
Note: . Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	@, =ᠿ, ;, ₽, ₽
Towels *	Max. 3.5 kg
Hard-wearing, heat-resistant towels made of cotton;	涨 - 90 °C
especially soft towels	0 - 1600** rpm
	®, =Ů, Ĥ, Ŀ, ⇔, ⊉, <u>⊿</u> , ,,,\$
Lingerie *	Max. 1 kg
For delicate, washable underwear, e.g. made of velvet, lace, Lycra, silk	₩ - 40 °C
or satin	0 - 600** rpm
	©, =Ů, Ĥ, ➡, ₺, <u>⊅</u> , ₩, ➡, \$
Curtains *	Max. 3.5 kg
3.5 kg heavy curtains or 25 - 30 m ² lightweight drapes	₩ - 40 °C
Notes	0 - 800** rpm
 Shorter rinse and final spin cycles. Use a detergent that is suitable for machine-washing curtains. The Prewash (↓) button is set by default. If you do not require a pre-wash cycle, press the button to deactivate the function. 	©, =Ů, Ĥ, Ľ, ŵ, ڲ, ౢ,,,,, Ҽ, \$
Drum clean (Trommel reinigen 😚)	0 kg
Programme for cleaning and caring for the drum and the outer tub, e.g.	80, 90 °C
before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a	1200 rpm
prolonged period of non-use. The Drum clean indicator lamp flashes	B
when you use have not used a programme of 60 °C or higher for a long time.	
Notes	
Run the drum care programme without any laundry.	
 Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates. 	
* The programmes and additional programme settings are model-dependent. The programmes/settings that are available can either be selected directly on the control panel or under Additional programmes Programmes or Options (Optionen III).	
** The maximum spin speed depends on the programme and model. *** Reduced load for the SpeedPerfect (=①) setting	

Pro	gramme/Type of laundry/Instructions	Settings
Rir	se (Spülen) *	-
Rinse Plus with spin		-
		0 - 1600** rpm
		ŵ, ₩, Ѣ, ₫
•	n (Schleudern) *	-
Ext	ra spin with selectable speed	-
		0 - 1600** rpm
		<u>2</u>
	in (Abpumpen) *	-
	the rinsing water, e.g. after the $rightarrow$ setting (Rinse Hold = no final spin	-
сус		-
		-
Ou	tdoor / Impregnation *	Max. 1 kg
	sh cycle followed by waterproofing of membrane-coated	₩ - 40 °C
wea	atherproof and outdoor clothing or water-resistant fabrics	0 - 800** rpm
3.	Select a programme. Add special detergent for outdoor clothing to compartment II . Add a waterproofing agent (max. 170 ml) to compartment \mathfrak{B} . Press the D II button. After-treat the laundry in accordance with the manufacturer's instructions.	; €, =Ů, Ĥ, ₩, ₩, ₩, ₩, ₩,
No	tes	
	Use a special detergent suitable for machine washing and dose in accordance with the manufacturer's instructions: Laundry must not be treated with fabric softener. Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.	
•	prts / Fitness (Sportswear 逆) *	Max. 2 kg
Sportswear and leisurewear made from microfibre fabrics Notes Laundry must not be treated with fabric softener.		發 - 40 °C
		0 - 800** rpm
	Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.	®,=♡,♈,냋,ঊ,⊉, <u>⊇</u> , ੲ,,❣
	The programmes and additional programme settings are model-dependent that are available can either be selected directly on the control panel of the selected directly on	

- Programmes or **Options** (Optionen **D**♥). ** The maximum spin speed depends on the programme and model. *** Reduced load for the **SpeedPerfect** (=①) setting

Programme/Type of laundry/Instructions	Settings
Automatic *	Max. 6 kg
Hard-wearing fabrics;	40 °C
The degree of soiling and the type of fabric are automatically detected and the washing sequence are adjusted accordingly.	1400** rpm
	[™] , , , ®
Automatic Soft *	Max. 3.5 kg
Gentler treatment of the laundry;	30 °C
The degree of soiling and the type of fabric are automatically detected and the washing sequence are adjusted accordingly.	1000** rpm
	[™] , , , ®
Memory M1*	Settings as selected programme
For saving regularly used individual programme settings $ ightarrow$ Page 36	
* The programmes and additional programme settings are model dependent. The programmes/settings	

The programmes and additional programme settings are model-dependent. The programmes/settings that are available can either be selected directly on the control panel or under **Additional programmes** Programmes or **Options** (Optionen **I**).

- ** The maximum spin speed depends on the programme and model.
- *** Reduced load for the SpeedPerfect (=①) setting

Starching

Note: Laundry should not be treated with fabric softener.

Liquid starch can be used to stiffen fabrics particularly in the Rinse and Cottons programmes. Measure starch into compartment & in accordance with the manufacturer's instructions (clean first if necessary).

Dyeing/bleaching

Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions.

Do **not** use the washing machine to bleach clothes.

Memory $\mathfrak{M}\mathfrak{l}$ (depending on the model)

The programme and all settings are permanently stored under Memory M1.

To store:

- 1. Select the **Memory** M1 programme.
- If a programme has not yet been selected for the Memory M1 programme, select a programme according to the instructions on the display panel. The selection of the programme is automatically acknowledged by a tick.
- 3. In the main menu, change the temperature, spin speed and "ready in" time and/or select additional programme settings if required.

The programme is automatically saved and displayed in the main menu.

Note: The saved programme can be changed by pressing the button under the programme. \rightarrow "Display panel" on page 27

P+ Programme default settings

The programme default settings are displayed in the main menu after selecting the programme.

Display panel \rightarrow Page 27

You can change the default settings as long as the arrow is displayed in the main menu.

An overview of all programme settings, which can be selected depending on the programme, can be found from \rightarrow Page 31.

Temperature

(Temperatur ₿)

Depending on what stage the programme is in, you can change the set temperature before and during the programme.

The maximum temperature that can be set depends on the programme that has been selected.

Spin speed

(Schleudern ©)

Depending on what stage the programme is in, you can change the spin speed (in rpm; revolutions per minute) before and during the programme.

The maximum speed that can be set depends on the model and programme that has been selected.

Setting 0: No spin cycles, the water is only drained. The laundry stays wet inside the drum, e.g. for items that should not be spun.

Finished in

(Fertig in (9)

The programme duration is shown after selecting the programme.

Before starting the programme, you can preselect the programme end in hourly increments (h = hour) up to a maximum of 24 hours.

After starting the programme, the selected number of hours e.g. 8 h is shown on the display panel and counts down until the wash programme starts. The duration of the programme is then displayed.

Note: The programme duration is automatically adjusted when the programme is running. Changes to the programme default settings or programme settings, options, foam detection function, unbalanced load detection, the load or soiling may also change the programme duration.

After starting the programme, you can change the preselected number of hours as follows:

- 1. Press the D button.
- 2. Use the **Finished in** button to change the number of hours.
- 3. Press the \bigcirc button.

After starting the programme, while the programme is running, you can add or remove laundry if necessary.

 \rightarrow Page 45

P^{+*} Additional programme settings/options (* depending on the model)

The settings/options that are available depend on the model.

Depending on the programme selected, you can select different settings/options in order to better adapt the washing process to your items of laundry.

The settings can be selected:

- via the corresponding button on the control panel or
- via the Options (Optionen III) button. → Page 26

An overview of all additional settings, which can be selected depending on the programme, can be found from \rightarrow Page 31.

SpeedPerfect

(三①)

Washing in a shorter time while achieving a washing result that is consistent with, but uses more energy than, the selected programme, without the SpeedPerfect setting.

Note: Do not exceed the maximum load.

Overview of programmes \rightarrow Page 31

EcoPerfect

(@)

Energy-optimised washing by reducing the temperature while achieving a washing result that is consistent with the selected programme, without the EcoPerfect setting.

Prewash *

(₺)

Settings that can be selected: **on** – **off**

For heavily soiled laundry.

Note: Pour detergent into compartments I and II.

Rinse Plus *

(***

Settings that can be selected:

Additional rinse cycles for particularly sensitive skin and/or for areas with very soft water.

Longer program duration.

The number of rinse cycles that the appliance actually runs depends on the number that is set as a basic setting for the program in question.

Water Plus *

(£)

Settings that can be selected:

on – off

Increased water level, gentler treatment of the laundry.

Easy-Iron *

(Bügelleicht <u></u>)

Settings that can be selected: **on** – **off**

Reduces creasing thanks to a special spin sequence followed by fluffing and reduced spin speed.

Note: The washing's residual moisture is increased.

Soaking *

(🖃)

Settings that can be selected: **on** – **off**

Before the main wash cycle starts, the washing remains for longer in the water to partially dissolve intensive soiling.

To be used for particularly stubborn soiling; put detergent in dispenser I before starting the appliance.

Notes

- Load laundry of the same colour.
- If your machine does not have this option, you can soak as follows:
- 1. Select the **Cottons 30 °C** programme and the D**I** button.
- Press the D button after approx. 10 minutes. The laundry remains in the soaking solution.
- Leave the laundry to soak for as long as required, then either press the ▷ button again to continue the programme or change the programme.

Note: No additional detergent is required; the soaking solution is used for washing.

Rinse Hold *

(┌─)

Settings that can be selected:

The washing remains in the water after the last rinse cycle. End the programme \rightarrow Page 46

Silent Wash *

(\$)

Settings that can be selected:

on – off

Reduced noise values thanks to special wash and spin cycle and deactivated end signal. Especially suitable for washing at night.

Note: Residual moisture of the washing is slightly increased.

Stains

(Flecken Automatik 😭)

In total, there are 16 different types of stain to choose from.

Types of stain that can be selected:

- Baby food
- BloodEaa
- EggStrawb
- Strawberry
 Soil + sand
- Grass
- Cosmetics
- Corange
- 9 Red wine
- Chocolate
- °⊡ Sweat
- d Dirty socks
- Grease + oil
- 🖌 Tea
- Tomatoes
- off

Do not let stains dry. Remove solid substances beforehand.

Select a programme with a stain type:

- 1. Arrange items of washing as usual.
- 2. Select a programme.
- 3. Load the washing machine
- 4. Select a stain type (depending on the selected programme).
 - \rightarrow Page 28

5. Start the programme.

The washing machine adjusts the average washing temperature, drum movement and soaking time to the specific type of stain. Hot or cold water, gentle or intensive washing and long or short soaking ensure that the washprogramme sequence is specially adapted to each type of stain. This makes sure that stains are treated in the best possible way.

The treatment of two stains explained in the following example:

Blood

Blood is first "dissolved" in cold water, then the selected wash programme starts.

Egg

Egg particles are removed by soaking in the lukewarm water bath, selecting a wash cycle with a high water level and running additional rinse cycles.

 
Following intensive research, we have developed comparable solutions for other stains.

Operating the appliance

Preparing the washing machine

Note: The washing machine must be correctly installed and connected. From \rightarrow Page 14

- 1. Plug into the mains.
- 2. Turn on the tap.
- 3. Open the washing machine door.
- Check that the drum is completely drained. Drain if necessary. Otherwise, the load display may malfunction. → Page 48



Switching on the appliance/ selecting a programme

Press the button. The appliance is switched on.

The Bosch logo appears on the display and all indicator lamps light up.

The **Cottons** programme set at the factory is then always displayed.

You can:

- use this programme or
- select another programme on the control panel or
- select a programme under
 Additional programmes.
 → Page 27

Note: If you have activated the childproof lock, you must deactivate it before you can set a programme.

 \rightarrow Page 45

The indicator lamp on the programme selector lights up and the main menu with the **programme default settings** for the selected programme appear on the display panel: \rightarrow Page 27

- Temperature,
- Spin speed,
- Programme duration,
- Any additional settings and
- Information on water and energy consumption. → Page 13

In appliances with a drum light:

The drum is lit after switching on the appliance, after opening and closing the door and after starting the programme. The light switches off automatically.

You can:

- use the programme default settings and load laundry \rightarrow Page 42,
- or change the programme default settings and/or select additional settings.

Change the programme default settings

You can use or change the default settings for each washing cycle.

To do this, repeatedly press the corresponding button until the required setting is displayed. \rightarrow Page 27

Note: Pressing and holding the buttons automatically runs through the set values.

The settings are activated without needing to be confirmed.

The settings are not saved after the washing machine is switched off.

Programme default settings \rightarrow Page 37

Select additional programme settings

By selecting additional settings/options, you can better adapt the washing process to your items of laundry.

The settings can be selected or deselected depending on the progress of the programme. \rightarrow Page 27

The EcoPerfect and SpeedPerfect button indicator lamps light up if a setting is activated.

The other settings are indicated by a symbol on the display panel if the setting is activated.

For multi-level settings, press and hold the buttons to run through the settings automatically.

The settings are not saved after the washing machine is switched off.


Additional programme settings/options \rightarrow Page 38

Placing laundry into the drum

Warning Risk of death!

Items of laundry pretreated with cleaning agents that contain solvents, e.g. stain remover/cleaning solvent, may cause an explosion after being loaded into the washing machine. Hand-rinse these items of laundry thoroughly beforehand.

Load the pre-sorted, unfolded laundry into the drum. The load screen for the selected programme (e.g. for **Easy-Care**) is indicated on the display panel.

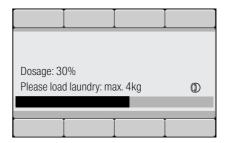

The load bar fills as the laundry is loaded. If the maximum load is exceeded, the bar flashes. Observe the maximum indicated load. Overfilling adversely affects the washing result and encourages creasing.

Notes

- Mix items of laundry of varying sizes. Laundry items of different sizes distribute themselves better during the spin cycle. Individual laundry items may cause an unbalanced load. → Page 48
- Wait until the Bosch logo no longer appears before adding laundry.
- The load screen appears when the door is opened or when the amount of laundry is changed.

Measure and add detergent and care products

Caution!


Damage to the appliance

Cleaning agents and agents for pretreating laundry (e.g. stain removers, prewash sprays, etc.) may cause damage if they come into contact with the surfaces of the washing machine. Do not allow these agents to come into contact with the surfaces of the washing machine. If necessary, immediately wipe away spray residue and other residues/ droplets with a damp cloth.

Dosing

Dose detergents and care products according to:

 the dosing recommendation on the display panel, e.g. for Easy-Care.
 Depending on the amount of washing in the washing machine, a dosing recommendation is indicated on the display panel.

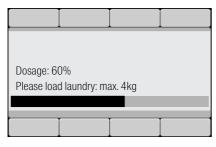

- soiling,
- water hardness; (ask your water supply company),
- the manufacturer's specifications on the packaging.

Filling

Warning Eye/skin irritation!

Detergents and care products may spray out if the detergent drawer is opened while the machine is in operation.

 
Open the drawer carefully.

Rinse eyes/skin thoroughly if they come into contact with detergents or care products.

If accidentally swallowed, seek medical advice.

Note: Dilute viscous fabric softener and fabric conditioner with a little water. This prevents blockages in the washing machine's piping.

Pour the detergent and care products into the appropriate compartments:



Measuring aid A For liquid detergent Compartment II Detergent for the main wash, water softener, bleach, stain remover Compartment & Fabric softener, liquid starch; do not exceed **max.** Compartment I Detergent for prewash

 
- 1. Pull out the detergent drawer as far as possible.
- 2. Add detergent and/or care products.
- 3. Close the detergent drawer.

Measuring aid* for liquid detergent

*depending on the model

Position the measuring aid for dosing the correct amount of liquid detergent:

- 1. Pull out the detergent drawer. Press down the insert and fully remove the drawer.
- 2. Slide the measuring aid forwards, fold it down and click it into place.
- 3. Reinsert the drawer.




Note: Do not use the measuring aid for gel detergents and washing powder, or for programmes with prewash or when the "Ready in" time is selected.

For models without a measuring aid,

pour the liquid detergent into the appropriate dispenser and place it in the drum.

Start the programme

 Make sure that no items of laundry are trapped between the door and the rubber seal, and close the door.



The main menu for the selected programme is indicated again on the display panel.

Press the \bigcirc button to start the programme.

During washing, the progress of the programme is displayed in a bar on the display panel. The bar fills in during the washing cycle and provides information about the current progress of the programme.

The arrows fade in and out according to the progress of the programme. They indicate the programme settings/ options which can be changed/added as the programme progresses.

Some programme sequence steps explained:

Load adjust active \rightarrow Page 48

∧ 40 °C	∧ 1200©	1:59h	+	
Load adjust active				
~	\sim			
	Ĭ			

- Pre-washing, Washing, Rinsing, Spin, Drain ... are displayed during the wash cycle.
- Extra rinse: foam
 Note: Foam detection
 If Foam has been detected also
 appears on the display panel, the
 washing machine has detected too
 much foam during the wash
 programme and has automatically
 switched on one or more rinse
 cycles in order to remove the foam.
 Add less detergent to the next
 washing cycle with the same load.
- Other displays \rightarrow Page 53

If you want to lock the programme to prevent it from being inadvertently adjusted, you can select the childproof lock as follows.

Child lock 🖙 3 sec.

(Kindersicherung ~ 3 Sek.)

You can lock the washing machine to prevent the functions you have set from being changed inadvertently.

To activate/deactivate, press and hold both buttons Child lock ~ 3 sec.

(Kindersicherung \simeq 3 Sek.) for approx. three seconds. \rightarrow Page 26

 \sim Childproof lock activated appears in the display panel.

After approx. three seconds, the display reverts back to the main menu.

If you adjust the programme selector or select a button when the childproof lock is activated, **⇔Childproof lock**

activated appears in the display panel.

Notes

- The childproof lock can be activated regardless of the appliance's status.
- The childproof lock remains active, even once the washing machine has been switched off. Before selecting the next programme, deactivate the childproof lock.
- If the appliance is switched off while the programme is running and childproof lock is activated, the programme continues when the appliance is switched back on.

Adding laundry

After starting the programme, you can add or remove laundry if necessary.

Press the \bigcirc button to do this.

The \bigcirc button indicator lamp flashes and the machine checks whether it is possible to add laundry.

It is possible to add laundry when **Pause: Reload is possible** appears on the display.

To continue the programme, press the

DI button. The programme continues automatically.

Notes

- Do not leave the door open for too long when adding laundry as water from the laundry may leak out.
- For safety reasons, the door remains locked when the water level or temperature is high, or while the drum is turning, and it is not possible to add laundry during this time. Follow the information on the display panel.
- The load display is not active during reloading.

Changing the programme

If you have started the wrong programme by mistake, you can change the programme as follows:

- 1. Press the D∭ button.
- 2. Select another programme.
- Press the D button. The new programme starts from the beginning.

Cancel the programme

For programmes at high temperatures:


- 1. Press the DM button.
- 2. To cool down laundry: Select Rinse.
- Press the D
 I button.

For programmes at low temperatures:

- 1. Press the D button.
- 2. Select Spin or Drain.
- 3. Press the D∭ button.

Programme end during rinse hold

The following appears on the display panel:

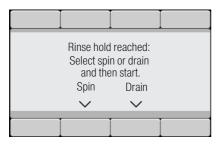

Continue the programme by:

- Select the Spin (change the spin speed if necessary) or the Drain programme.
- Press the DI button.

Programme end

 
◎Finished, remove washing appears on the display panel. The **▷** button indicator lamp is off.

Removing laundry/switching off the appliance

- 1. Open the loading door and remove the laundry. Follow the information on the display panel.
- 2. Press the D button. The appliance is switched off.
- Turn off the tap.
 Note: Not required for AquaStop models.

Notes

- Do not leave any items of laundry in the drum. They may shrink in the next wash or discolour another item.
- Remove any foreign objects from the drum and the rubber gasket – risk of rusting.
- Wipe the rubber gasket dry.



Notes

- Leave the loading door and detergent drawer open so that any residual water can evaporate.
- Always wait until the programme ends, as the appliance could still be locked. Then switch the appliance on and wait for it to unlock.
- If the display panel goes off at the end of a programme, the energysaving mode is active. Press any button to activate the panel.

Appliance settings

Settings that can be selected:

End signal off – quiet – medium – loud – very loud Adjust the volume of the end signal

Adjust the volume of the end signal.

 Button signal off – quiet – medium – loud – very loud

Adjust the volume of the button signals.

- Auto power-off of the appliance in 15 – 30 – 60 min – never The appliance automatically switches off after ... minutes (= 0 kWh energy consumption); to switch on, press the ① main switch button.
- Language German English

Change the displayed language.

 Info: Drum cleaning on – off

This instruction reminds you to carry out a drum cleaning programme. \rightarrow Page 53

To change the settings, press and hold both **basic settings 3 sec.** buttons for approx. 3 seconds. \rightarrow Page 28

Notes

- The settings are retained after the appliance is switched off.
- If you press and hold the buttons, the settings run through automatically.

• Sensors

Automatic load sensing

Depending on the type of fabric and load, the automatic load sensing function optimally adjusts the water consumption and programme duration in each programme.

Unbalanced load detection system

The automatic unbalanced load detection system detects imbalances and ensures even distribution of the laundry by repeatedly starting and stopping drum spinning.

If the laundry is extremely unevenly distributed, the speed is reduced or the spin cycle is not performed for safety reasons.

Note: Place large and small items of laundry evenly in the drum. \rightarrow Page 42, \rightarrow Page 54

AquaSensor

Depending on the program and model

During a rinse cycle, the Aqua sensor checks the turbidity of the rinsing water (turbidity is caused by dirt and detergent residue). The duration and the number of rinse cycles depend on the turbidity of the water.

Load sensor/display

The load sensor detects the load level in the washing machine when the door is open. This is indicated by the bar filling on the display panel.

Note: In order for the load sensor to fully determine the amount of laundry, the drum must be empty before the washing machine is switched on.

Dosing recommendation

The dosing recommendation indicates a recommended detergent dosage as a percentage, depending on the selected programme and the detected load. The indicated % refers to the dosing recommendation of the detergent manufacturer.

Note: By adhering to the dosing recommendation, you can help look after both the environment and your household budget.

Cleaning and maintenance

Marning Danger of death!

There is a risk of electric shock if you touch live components.

Switch off the appliance and pull out the mains plug.

▲ Warning Risk of poisoning!

Toxic vapours can be produced by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

Caution!

Damage to the appliance

Cleaning agents that contain solvents, e.g. cleaning solvent, can damage surfaces and components in the machine.

Do not use cleaning agents that contain solvents.

Prevent detergent residue from building up and odours from forming by following these instructions:

Notes

- Ensure the room in which the washing machine is set up is well ventilated.
- Leave the door and detergent dispenser tray open slightly when the washing machine is not in use.
- Occasionally run a wash using the Cottons 60 °C programme and powder detergent.

Machine housing/control panel

- Wipe the housing and the control panel with a soft, damp cloth.
- Remove the detergent residue immediately.
- Do not clean with a water jet.

Drum

Use chlorine-free cleaning agents, do not use steel wool.

If there are odours in the washing machine, or to clean the drum, run the **Drum clean 90 °C** programme without laundry. Add washing powder.

 
Descaling

Descaling should not be necessary if the detergent is measured out correctly. However, if it is required, follow the manufacturer's instructions for the descaling agent. Suitable descalers can be obtained via our website or from customer services. $\rightarrow Page 56$

Detergent drawer and housing

If the washing machine contains detergent or fabric softener residues:

- 1. Pull out the detergent drawer. Press down the insert and fully remove the drawer.
- 2. To remove the insert: Push the insert upwards from below with your finger.



- 3. Clean the detergent dispenser tray and insert with water and a brush, and dry it. Clean the inside of the housing as well.
- 4. Fit the insert and lock it in place (push the cylinder onto the guide pin).
- 5. Push in the detergent drawer.

Note: Leave the detergent drawer open so that any residual water can evaporate.

 
The drain pump is blocked, emergency draining

Warning Risk of scalding!

When you wash at high temperatures, the water gets very hot. If you come into contact with the hot water, you may be scalded.

Allow the water to cool down.

- 1. Turn off the tap so that no more water can flow in and has to be drained via the drain pump.
- 2. Switch off the appliance. Pull out the mains plug.
- 3. Open and remove the service flap.



4. Take the drain hose out of the retainer.

 
Remove the sealing cap and pour the water out into a suitable container.

Replace the sealing cap and place the drain hose back in the retainer.



5. Carefully unscrew the pump cover; residual water may leak out. Clean the interior, pump-cover thread and pump housing. The impeller in the drain pump must be able to rotate.

Refit the pump cover and screw it on tightly. The handle must be in a vertical position.




6. Place the service flap back on, lock it into place, and close it.



Note: To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment **II** and start the **Drain** programme.

The drain hose at the siphon is blocked

 - 1. Switch off the appliance. Pull out the mains plug.
- Loosen the hose clamp. Carefully remove the drain hose; residual water may leak out.
- **3.** Clean the drain hose and siphon connecting piece.



4. Re-attach the drain hose and secure the connection point using the hose clamp.

 
Filter in the water supply blocked

First, reduce the water pressure in the supply hose:


- 1. Turn off the tap.
- 2. Select any programme (except Rinse/Spin/Empty).
- Press the ▷ button. Allow the programme to run for approximately 40 seconds.
- 4. Press the ① button. The appliance is switched off.
- 5. Pull out the mains plug.

Then clean the filter:

1. Disconnect the hose from the tap. Clean the filter with a small brush.



  For standard and Aqua-Secure models, clean the filter on the rear of the appliance: Remove the hose from the rear of the appliance. Use pliers to remove the filter and then clean it.



3. Connect the hose and check for leaks.

Faults and what to do about them.

Emergency release

E.g. in the event of a power cut

The programme continues when the power supply is restored.

However, if the laundry has to be removed, the washing machine door can be opened as follows:

Warning Risk of scalding!

When you are washing at high temperatures, there is a risk of scalding if you come into contact with hot water and laundry.

If possible, leave it to cool down first.

Warning Risk of injury!

You may injure your hands if you reach into the drum while it is turning. Do not reach into the drum when it is turning.

Wait until the drum has stopped turning.

Caution! Water damage

Any escaping water may cause water damage.

Do not open the door if water can be seen through the glass.

- 1. Switch off the appliance. Pull out the mains plug.
- **2.** Drain the water. \rightarrow Page 50
- **3.** Pull the emergency release downwards with a tool and release. The door can then be opened.



Information on the display panel

Display	Cause/remedy		
Pause: Reload is not possible	Water level or temperature is too high. Press the D button to continue the programme.		
Door cannot be unlocked: Water level or temperature is too high	Water level or temperature is too high. Press the $ ho M$ button to continue the programme.		
The door cannot be locked; please open the door again, then close it and select the D II button.	 Laundry may be caught. Open and close the door again and press the DID button. If necessary, push the door closed or remove some laundry and then push it closed again. If necessary, switch the appliance off and on again; set the programme and make your individual settings; start the programme. 		
Please open tap	 Turn on the tap fully, Supply hose kinked/trapped, The water pressure is too low. Clean the filter. → Page 51 		
Please clean pump	 The drain pump is blocked. Clean the drain pump. → Page 50 The drain hose/drain pipe is blocked. Clean the drain hose at the siphon. → Page 51 		
AquaStop has been activated! Please call the after-sales service	Does not occur for models without AquaStop There is water in the base trough; the appliance is leaking. Turn off the tap. Call the after-sales service.		
Auto power-off in seconds,	Appliance automatically switches off after seconds if it is not operated for a prolonged period. To cancel, press any button. \longrightarrow Page 47		
Water cooling	To protect the wastewater pipes, the hot detergent solution is cooled before being drained.		
Drum care information:	 This instruction reminds you to carry out the Drum clean 90 °C programme or a 60 °C programme to clean and care for the drum and the outer tub. Notes Run the programme without laundry. Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates. Switch reminder information on/off. → Page 47 		
Other displays Error E:XXX	Switch off the appliance, wait for five seconds and then switch it on again. If the display appears again, call the after-sales service.		

Faults and what to do about them.

Faults	Cause/remedy
Water is leaking from the appliance.	 Attach the drain hose correctly or replace it. Tighten the threaded joint on the inlet hose.
The appliance is not filling with water. Detergent is not being dispensed.	 Have you pressed the ▷ III button? Is the tap turned on? Could the filter be clogged? Clean the filter. → Page 51 Is the inlet hose kinked or trapped?
The door cannot be opened.	 The safety function is activated. Cancel the programme? → Page 45 Is the ∽ childproof lock activated? Deactivate. → Page 45 Is → selected (Rinse Hold = no final spin)? → Page 46 Can the door only be opened by the emergency release? → Page 52
The programme will not start.	 Have you pressed the ▷ II or Finished in button? Is the door closed? Is the ∽ childproof lock activated? Deactivate. → Page 45
The drum briefly jerks or judders after the programme has started.	Not a fault – the internal motor test may cause the drum to jerk or judder briefly when the wash programme starts.
The water is not draining.	 Is → selected (Rinse Hold = no final spin)? → Page 46 Clean the drain pump. → Page 50 Clean the drain pipe and/or the drain hose.
Water is not visible in the drum.	Not a fault – the water is below the visible area.
The spin result is not satisfactory. Laundry wet/too damp.	 Not a fault - the unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed. Distribute small and large items of washing in the drum. Is Easy-Iron selected (depending on the model)? → Page 39 Is the selected speed too low? → Page 37
The spin cycle runs several times.	Not a fault – the unbalanced load detection system is adjusting an imbalance.
The programme is taking longer than usual.	 Not a fault – the unbalanced load detection system is adjusting an imbalance by repeatedly distributing the laundry. Not a fault – the foam detection is system active – a rinse cycle has been switched on.
The length of the programme changes during the wash cycle.	Not a fault – the programme sequence is optimised for the specific washing process. This may change the length of the programme shown on the display panel.
Residual water in the care-product compartment & .	 Not a fault - the effectiveness of the care product is not affected. Clean the insert if necessary. → Page 43

Faults	Cause/remedy
Odours in the washing machine.	Run the Drum clean or Cottons 90 °C programme without laundry. Add washing powder or a detergent containing bleach. Note: . To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.
The 😁 symbol lights up on the display panel. Foam may also be leaking from the detergent drawer.	Have you used too much detergent? Mix one tablespoon of fabric softener with 1/2 litre of water and pour it into compartment II (not suitable for outdoor clothing, sportswear or items made with down). Use less detergent in the next washing cycle.
Loud noises, vibrations and machine "movement" during the spin cycle.	 Appliance aligned? Align the appliance. → Page 20 Are the appliance feet secured? Secure the appliance's feet. → Page 20 Have the transport braces been removed? Remove the transport braces. → Page 16
The display panel/ indicator lights do not work while the appliance is running.	 Power failure? Have the fuses blown? Switch on/replace the fuses. If the fault occurs repeatedly, call the after-sales service.
There is detergent residue on the laundry.	 Some phosphate-free detergents contain water-insoluble residue. Select Rinse or brush the laundry after washing.
In the "Reload" status, ▷₪ flashes very quickly and a signal sounds:	 The water level is too high. It is not possible to add laundry. Close the door immediately, if necessary. Press the DOD button to continue the programme.
If you cannot rectify a fault	vourself (after switching the machine off and on again) or a repair is required:

If you cannot rectify a fault yourself (after switching the machine off and on again) or a repair is required:

- Switch off the appliance and pull out the mains plug.
- Turn off the tap and call the after-sales service.

After-sales service

If you cannot rectify a fault yourself, contact customer services. \rightarrow Cover page

We will always find an appropriate solution in order to avoid unnecessary visits by engineers.

Please give customer services the product number (E no.) and the production number (FD) of the appliance.

E-Nr._____ FD_____

E no. Product number FD Production number

You can find this information *depending on the model:

On the inside of the door*/in the opened service flap* and on the rear of the appliance.

Trust the expertise of the manufacturer.

Contact us for assistance. By doing so, you will ensure that the repairs are carried out by trained service personnel using genuine spare parts.

Consumption rates

Energy and water consumption, programme duration and residual moisture for the main washing programmes

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Programme duration*
Cottons 20 °C	9 kg	0,25 kWh	90	2 ¾ h
Cottons 40 °C	9 kg	1,10 kWh	90	3 h
Cottons 60 °C	9 kg	1,16 kWh	901	2 ¾ h
Cottons 90 °C	9 kg	2,14 kWh	1001	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	64	2 h
Mixed Load 40 °C	4 kg	0,60 kWh	451	1 ¼ h
Delicates / Silk 30 °C	2 kg	0,19 kWh	37	3∕₄ h
Wool 30 °C	2 kg	0,19 kWh	411	3∕4 h

Programme	Approximate information on the residual moisture**			
	WAY32	WAY28	WAY24	WAY20
	Max. 1600 rpm	Max. 1400 rpm	Max. 1200 rpm	Max. 1000 rpm
Cottons	44%	48%	53%	62%
Easy-Care	40%	40%	40%	40%
Delicates / Silk	30%	30%	30%	30%
Wool	45%	45%	45%	45%

* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

** Information on residual moisture based on programme-dependent spin-speed limit and maximum loads.

Efficiency test programmes for cotton fabrics

The following programmes (standard programmes, indicated by \bigcirc) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

Standard programmes for Cottons in accordance with the (EU) directive no. 1015/2010			
Programme + temperature + button	Load	Approximate programme duration	
Cottons + 🚳 + CoPerfect	9 kg	4 ¾ h	
Cottons + 🚳 + CoPerfect	4,5 kg	4 ³ ⁄4 h	
Cottons + 🐠 + CoPerfect	4,5 kg	4 ¾ h	

Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C).

The programme temperature information is based on the temperature stated on the care label for the fabrics. The actual washing temperature may deviate from the stated programme temperature for energy-saving reasons.

Technical data

Dimensions:

850 x 600 x 590 mm

(height x width x depth)

Weight:

70 - 85 kg (depending on model)

Mains connection:

Mains voltage 220 - 240 V, 50 Hz

Nominal current 10 A

Nominal power 1900 - 2300 W

Water pressure: 100 - 1000 kPa (1 - 10 bar)

Power consumption when switched off: 0.12 W

Power consumption when left on: $0{,}43\ {\rm W}$

Aqua-Stop warranty

Only for appliances with Aqua-Stop

In addition to warranty claims against the vendor based on the purchase agreement and to our appliance warranty, we will provide compensation under the following conditions:

- If water damage is caused due to a fault in our Aqua-Stop system, we will compensate domestic customers for the damage caused.
- 2. The liability guarantee is valid for the service life of the appliance.
- 3. It is a prerequisite of all warranty claims that the appliance with Aqua-Stop must have been installed and connected correctly in accordance with our instructions; this also includes a correctly fitted Aqua-Stop extension (genuine accessories). Our warranty does not cover defective feed lines or fittings leading to the Aqua-Stop connection at the tap.
- Appliances with Aqua-Stop do not need to be supervised during operation, nor secured afterwards by turning off the tap.

The tap only needs to be turned off if you are away from home for a long period, e.g. for several weeks' holiday.

Advice and repair order in the event of faults

GB 0344 892 8979 (Calls charged at local or mobile rate.)

IE 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

You can find the contact information for all countries in the attached after-sales service directory.

Robert Bosch Hausgeräte GmbH Carl-Wery-Straße 34 81739 München, GERMANY

