



Brief and handy:
everything your dishwasher
needs ...
**Before using for the first time,
read the Installation instructions
and Operating instructions!**

1

Adjusting the water softening system *

Ask your water supply
company what the water
hardness is and enter ...




* only before the first wash
or if the water hardness
has been changed

°Clarke	Hardness range	mmol/l	Setting	A	B	C
0-8	soft	0-1,1	0	☐	☐	☐
9-20	medium	1,2-2,9	1	☒	☐	☐
21-26	hard	3,0-3,7	2	☐	☒	☐
27-44	hard	3,8-6,2	3	☐	☐	☒

Quickly sorted ...

How to adjust


- Switch on ON/OFF switch.
- Hold down button > and press START button until S and III flash.
- Release the buttons.
The S Salt refill indicator III Dry indicator flash.
The A indicator lights up (= level 1).
- Change the setting as follows:
 - Press the < button until the required setting has been selected.
 - Press START button.
The S and III displays go out. The selected setting is saved.
 - Close the door.

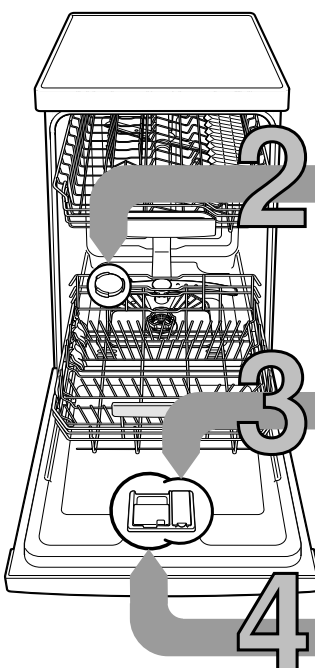


Add special salt

Dissolves limescale (not necessary when set to 0!) ...


For optimal washing results

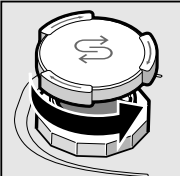


Open
the lid.

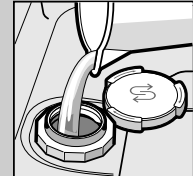

Only fill the salt
dispenser with
water before
the first wash.

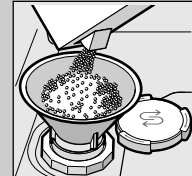

Add
special salt
(never use
detergent!).

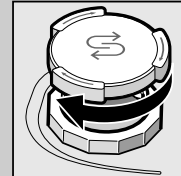


Close the lid.
Rinse immediately.


Add rinse aid

Gets it sparkling clean ...


For optimum drying results

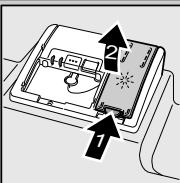

Press marking 1,
lift lid 2.

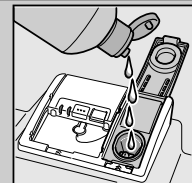


Add
rinse aid.

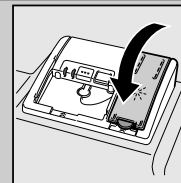

Close lid.
CLICK!



Add detergent

A lot of dirt, a lot of detergent ...

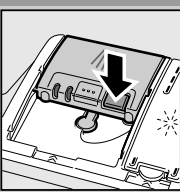


If required,
open the cover
(press button).

Attention:
Combination
products
are not suitable
for all programmes,
follow
manufacturer's
instructions.

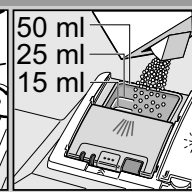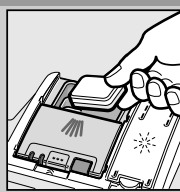

Pour detergent
into the dry
detergent
dispenser only.

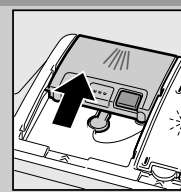

Slide cover
shut, press.
PLOP!

5

Switching on the appliance

6

Select programme

Quick, economical or intensive ...

Overview of programmes

The max. possible number of programmes is illustrated in this overview.
The corresponding programmes for your appliance can be found on the fascia.
The programme data has been measured in the laboratory according
to European standard EN 50242.
Deviations are possible in practice.
** half normal load

	Intensive 70°	Auto 45°/65°	Eco 50°	Glass 40°	65°	Quick 45°
Duration: hs/mins	←	3:15 - 1:05	→	←	1:00	0:29**
Energy consumption in kWh	←	0,70 - 1,30	→	←	1,00	0,70
Water consumption in litres	←	7 - 16	→	←	10	9

The programme duration will be different if the machine is short of rinse additive or the function is turned off.

Start programme Here we go ...

Additional options **

Flexibility ...

9

Switch off the appliance Everything o.k. ...



Express WashPlus/
Speed PerfectPlus
(VarioSpeedPlus)
... is obtained by
increased energy
consumption at
a constant cleaning
performance.



Half load
... for a few items,
saves water, energy
and time.



Intensive zone
... perfect for a mixed
load. Washing pressure
and washing temperature
are increased slightly.



HygienePlus
... the temperature
is increased during
the final rinse process.
This increases
the hygiene status.




Extra drying
... improves the drying
result by increased
temperature
in the final rinse.
(Please take care
with delicate dishes.)


** depending on model

Maintenance and care


Filters
... check,
if required,
clean.

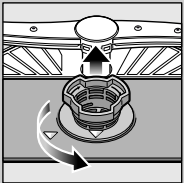


Rotate
filter cylinder,
remove filter
system ...

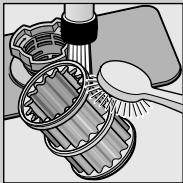

rinse under
running water ...

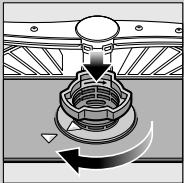

insert ...

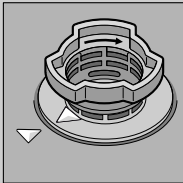


screw on
filter system.
NOTE MARK!


Cleaning waste water pump

- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.


Spray arms
... remove
blockages/deposits.

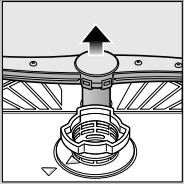


Pull lower arm
upwards ...

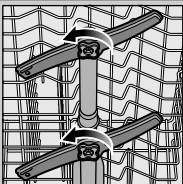

unscrew upper
spray arms ...

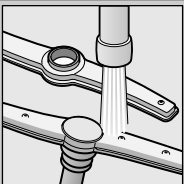



clean spray nozzles
under running water
(if required
use toothpicks) ...

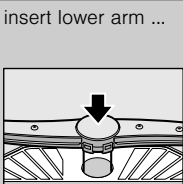

insert lower arm ...




screw on upper
spray arms tightly.

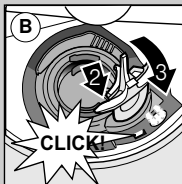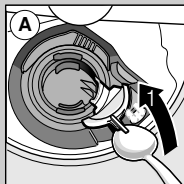


Rectifying minor faults yourself ...

... as it is worth doing it yourself!

 More information can be found in the operating instructions

Fault	Possible causes	Remedial action
Display “  ” is lit	Supply fitting jammed or calcified	▶ Open supply fitting. ▶ 1. Unscrew water connection. ▶ 2. Clean filter in the water connection. ▶ 3. Flow rate must be min. 10 l/min., when water supply is open. ▶ If the flow rate is less, replace the supply fitting.
		▶ Install supply hose without kinks.
	Waste water hose is blocked or kinked	▶ Install waste water hose without kinks.
	Cover not attached to waste water pump	▶ Attach cover (see above).
	Waste water pump blocked	▶ Clean waste-water pump (see above).
Display “  ” flashes	Appliance has technical defect	▶ Call factory customer service (state fault display). ▶ Unplug appliance.
Residual water in the appliance	The programme has not yet ended	▶ Switch on and close the appliance or terminate the programme (see Terminating the programme).
Rust on the cutlery	Cutlery not rust-resistant Hard knife blades are more susceptible	▶ Use dishwasher-proof cutlery.
	Extraneous rust	▶ Never wash rusting parts in the appliance.

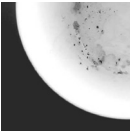Fault	Possible causes	Remedial action
Utensils are not clean	Utensils are situated close together or one above the other	▶ Separate the utensils, prevent contact points.
Sand or gritty residue on the utensils	Too little detergent	▶ Follow manufacturer's instructions (detergent).
	Unsuitable programme selected	▶ Select a more intensive programme.
	Spray arm nozzles blocked	▶ Clean the spray arms (see above).
	Filters dirty, not seated firmly	▶ Clean the filters (see above).
	Spray arms blocked	▶ Arrange the utensils so that the spray arms can rotate freely.
Stains and streaks	Rinse aid dosage too high/too low	▶ Streaks: reduce dosage. ▶ Water or limescale stains: increase dosage.
Utensils not dry	Rinse aid	▶ Increase dosage. ▶ Change the product.
	The combined detergent used has a poor drying performance	▶ Use rinse aid.
	Appliance setting	▶ Activate intensive drying (depending on model).
Milky deposits on the utensils (can be removed)	Water softening system incorrectly set	▶ Correctly set water softening system.
	No salt	▶ Refill with special salt.
Milky deposits, glasses cloudy/tarnished (cannot be removed)	Glasses not dishwasher-proof	▶ Use dishwasher-proof glasses.
		▶ Use a detergent suitable for glasses.
Plastic/utensils discoloured	Too little detergent	▶ Follow manufacturer's instructions (detergent).
	Discoloration caused by food colourings (tomato sauce)	▶ Discoloration is harmless; subsequent rinse cycles will cause it to fade.

Terminating the programme ...

While the programme is running, press the START button for approx. 3 sec. (Reset) until all displays go out.



The remaining programme sequence for draining the residual water takes approx. 1 minute.

Loading the dishwasher correctly ...

Dishwasher-proof utensils not soiled with ash, wax, lubricating grease, ink or adhesive labels; remove large remnants of jam, milk products and food according to the operating instructions and check that the spray arms can rotate freely.