 










## Overview of programmes

Program/type of laundry/information	Settings
<b>Name of the program</b> : Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (☼ = cold) Spin speed* additional settings that can be selected
<b>Cottons (Algodón/Algodão)</b>  : Hard-wearing textiles, heat-resistant textiles made of cotton or linen <b>Notes</b> <ul style="list-style-type: none"> <li>■ For the <b>Eco</b> setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the <b>Eco</b> setting or, if necessary, set a higher temperature.</li> <li>■ The <b>Turbo</b> setting is suitable as a short program for lightly soiled laundry.</li> </ul>	max. 9 kg/5** kg; ☼ - 90 °C 400 - 1200* rpm Turbo/Eco Perfect  Prewash,  Rinse Plus (Extra)
<b>Easy-Care (Sintéticos)</b> : Textiles made of synthetic materials or blended fabrics	max. 4 kg; ☼ - 60 °C 400 - 1200 rpm Turbo/Eco Perfect  Prewash,  Rinse Plus (Extra)
 <b>Wool (Lana/Lãs)</b> : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor). <b>Notes</b> <ul style="list-style-type: none"> <li>■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep.</li> <li>■ Use a detergent that is suitable for machine-washing wool.</li> </ul>	max. 2 kg; ☼ - 40 °C 0 - 800 rpm -
<b>Super 15/30 min (Rápido 15/30 min)</b> : Extra short program of approx. 15/30 minutes, suitable for small items of lightly soiled laundry <b>Note</b> : When selecting the <b>Turbo</b> setting, the program <b>Super 15 min</b> is run.	max. 2/3.5 kg; ☼ - 40 °C 400 - 1200 rpm Turbo Perfect
<b>Mix</b> : Mixed load of cottons and synthetic fabrics	max. 4 kg; ☼ - 40 °C 400 - 1200* rpm Turbo/Eco Perfect  Prewash,  Rinse Plus (Extra)
* max. The maximum spin speed depends on the program and model ** reduced load for the <b>Turbo Perfect</b> setting	

Program/type of laundry/information	Settings
<b>Curtains:</b> 3.5 kg heavy curtains or 25 - 30 m <sup>2</sup> lightweight drapes <b>Notes</b> <ul style="list-style-type: none"> <li>Shorter rinse and final spin cycles.</li> <li>Use a detergent that is suitable for machine-washing curtains.</li> <li>The <b>Prewash</b> button is set by default. If you do not require a pre-wash cycle, press the button to deactivate the function.</li> </ul>	3.5 kg; * - 40 °C ---, 0 - 800 rpm Turbo/Eco Perfect ☹ Rinse Plus
☹ <b>(Rinse):</b> Extra rinse with selectable spin speed	-; - 0 - 1200** rpm ☹ Rinse Plus
⌚ <b>(Spin)</b> / 🌀 <b>(Drain)</b> : Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0. <b>Note:</b> The display of the Ready-in time is only updated once the program is restarted.	-; - 0 - 1200** rpm -; -
<b>Drum care (Limp. tambor):</b> Program for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. <b>Notes</b> <ul style="list-style-type: none"> <li>Run the drum-care program without any laundry.</li> <li>Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.</li> </ul>	0 kg; 90 °C 1200 rpm -
<b>Delicates/Silk (Delicado/Seda):</b> For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) <b>Note:</b> Use a detergent suitable for machine-washing delicates or silk.	max. 2 kg; * - 40 °C 0 - 800 rpm Turbo/Eco Perfect ⬇ Prewash, ☹ Rinse Plus (Extra)
<b>Duvet (Edredones/Edredão sintét.):</b> Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down. <b>Note:</b> Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	max. 2.0 kg; * - 60 °C ---, 0 - 1200 rpm Speed Eco Perfect ⌚🌀⌚🌀, ☹ Rinse Plus
🧥 <b>Sportswear (Sport):</b> Sportswear and leisure wear made from microfibre fabrics <b>Notes</b> <ul style="list-style-type: none"> <li>Laundry must not be treated with fabric softener.</li> <li>Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.</li> </ul>	max. 2 kg; * - 40 °C 400 - 800 rpm Turbo/Eco Perfect ⬇ Prewash, ☹ Rinse Plus (Extra)
* max. The maximum spin speed depends on the program and model ** reduced load for the <b>Turbo Perfect</b> setting	

Program/type of laundry/information	Settings
<b>Jeans/Dark Wash (Ropa oscura/Roupa escura):</b> Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.	max. 3.5 kg; ❄️ - 40 °C 400 - 1200 rpm Turbo/Eco Perfect ⏴ Prewash, 🪣 Rinse Plus (Extra)
<b>Shirts/Business (Camisas/Blusas):</b> Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics <b>Notes</b> <ul style="list-style-type: none"> <li>■ Shirts/blouses are only given a short spin on the  <b>Less ironing</b> (depends on model) setting. Hang them up to dry while still dripping wet. -&gt; Self-smoothing effect</li> <li>■ Use the <b>Delicates/Silk (Delicado/Seda)</b> program to wash shirts/blouses made of silk/delicate fabrics.</li> </ul>	max. 2 kg; ❄️ - 60 °C 400 - 800 rpm Turbo/Eco Perfect ⏴ Prewash, 🪣 Rinse Plus (Extra)
 <b>Allergy (Antialergias):</b> Hard-wearing fabrics made of cotton or linen <b>Note:</b> Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	max. 6.5 kg; ❄️ - 60 °C 400 - 1200* rpm Turbo/Eco Perfect ⏴ Prewash, 🪣 Rinse Plus (Extra)
* max. The maximum spin speed depends on the program and model ** reduced load for the <b>Turbo Perfect</b> setting	



## Consumption values table

### Energy and water consumption, program duration and residual moisture for the main wash program

(approximate values)

Program	Load	Energy consumption*	Water consumption*	Program duration*
Cottons 20 °C	9 kg	0,25 kWh	90 l	2 ¾ h
Cottons 40 °C	9 kg	1,10 kWh	90 l	3 h
Cottons Eco** <60°C	9 kg	0,92 kWh	57 l	4 ¾ h
Cottons Eco** <60°C	4,5 kg	0,60 kWh	46 l	4 ¾ h
Cottons Eco** <40°C	4,5 kg	0,42 kWh	46 l	4 ¾ h
Cottons 60 °C	9 kg	1,16 kWh	90 l	2 ¾ h
Cottons 90 °C	9 kg	2,14, kWh	100 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	64 l	2 h
Mix 40 °C	4 kg	0,60 kWh	45 l	1 ¼ h
Delicates/Silk 30 °C	2 kg	0,19 kWh	37 l	¾ h
Wool 30 °C	2 kg	0,19 kWh	41 l	¾ h

Program	Approximate information on the residual moisture***		
	WAT28... max. 1400 rpm	WAT24... max. 1200 rpm	WAT20... max. 1000 rpm
Cottons	48 %	53 %	62 %
Easy-Care	40 %	40 %	40 %
Delicates/Silk	30 %	30 %	30 %
Wool	45 %	45 %	45 %

\* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.

\*\* Program setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C). The specification of the program temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated program temperature for energy-saving reasons

\*\*\* Information on residual moisture based on program-dependent spin-speed limit and maximum loads.

**WAT24490ES**

**9001319453 (9903)**

