



Brief and handy:
everything your dishwasher
needs ...
**Before using for the first time,
read the Installation instructions
and Operating instructions!**

1

Adjusting the water softening system *

Ask your water supply
company what the water
hardness is and enter ...

Read off the correct setting



* only before the first
wash or if the water
hardness has been
changed

°Clarke	Hardness range	mmol/l	Setting			
0-8	soft	0-1.1	0	☐	☐	☐
9-20	medium	1.2-2.9	1	☐	☐	☒
21-26	hard	3.0-3.7	2	☐	☒	☒
27-44	hard	3.8-6.2	3	☒	☒	☒


Quickly sorted ...

How to adjust

- Switch on ON/OFF switch.
- Press and hold down the START button.
- Rotate programme selector by one notch to the left or to the right.
- Release button.
The salt refill indicator flashes and the display is lit (= Setting 1).


Change the setting as follows:

- Rotate programme selector until the required setting has been selected.
- Press START button.
The display goes out. The selected setting is saved.

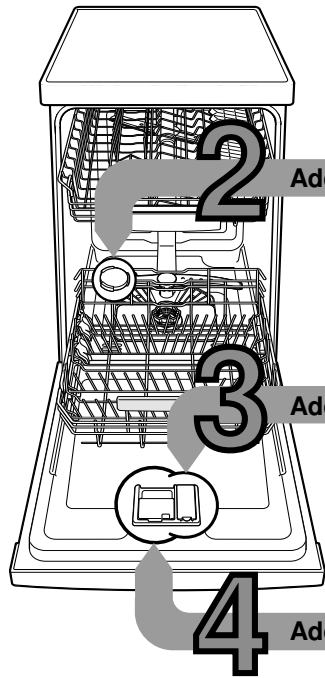


2 Add special salt

Dissolves limescale (not necessary when set to 0!) ...

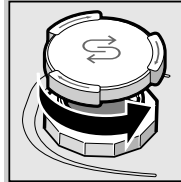


Open
the lid.

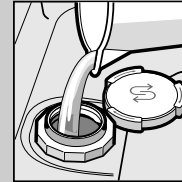


Only fill the salt
dispenser with
water before the
first wash.

For optimal washing results

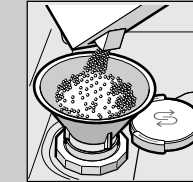


Add
special salt
(never use
detergent!).

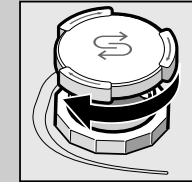

Close the lid.
Rinse immediately.

3 Add rinse aid


Gets it sparkling clean ...

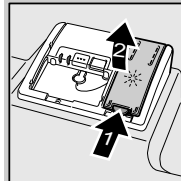


Press marking 1,
lift lid 2.



For optimum drying results

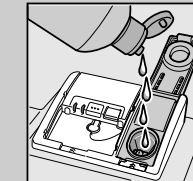


Add
rinse aid.

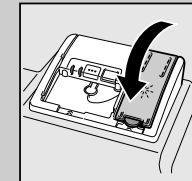

Close lid.
CLICK!

4 Add detergent



A lot of dirt, a lot of detergent ...

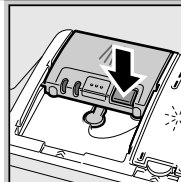


If required,
open the cover
(press button).



Attention:
Combination
products
are not suitable
for all programmes,
follow
manufacturer's
instructions.

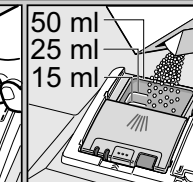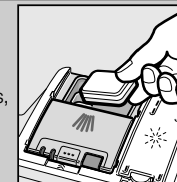

Pour detergent
into the dry
detergent
dispenser only.

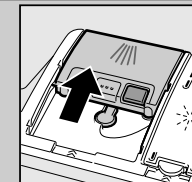

Slide cover
shut, press.
PLOP!

5 Switching on the appliance

6 Select programme

Quick, economical or intensive ...

Overview of programmes

The max. possible number of programmes is illustrated in this overview.
The corresponding programmes for your appliance can be found on the fascia.
The programme data has been measured in the laboratory according
to European standard EN 50242.
Deviations are possible in practice.
** half normal load

Intensive 70°	Auto 45°/65°	Eco 50°	Quiet * 50°	Glass 40°	65°
Duration: hs/mins	4:00 - 1:30	1:30 - 1:25	1:00	1:30 - 1:25	1:00
Energy consumption in kWh	1,30 - 0,70	0,80 - 0,75	1,00	0,80 - 0,75	1,00
Water consumption in litres	16 - 7	13 - 11	10	13 - 11	10

7 Start programme Here we go ...

Additional options **



**Express Wash/
Speed Perfect
(VarioSpeed)**
... is obtained by increased
energy consumption at a
constant cleaning
performance.



Half load
... for a few items,
saves water, energy
and time.



Intensive zone
... perfect for
a mixed load.
Washing pressure
and washing temperature
are increased slightly.



Hygiene
... the temperature
is increased during
the final rinse process.
This increases
the hygiene status.



Extra drying
... improves the drying
result by increased
temperature
in the final rinse.
(Please take care
with delicate dishes.)

** depending on model

5

6


7

8


9 Switch off the appliance Everything o.k. ...

Maintenance and care


Filters
... check,
if required,
clean.

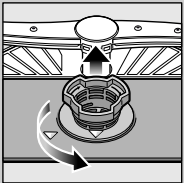


Rotate
filter cylinder,
remove filter
system ...

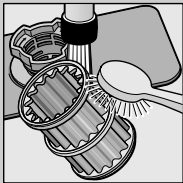

rinse under
running water ...

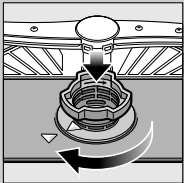

insert ...

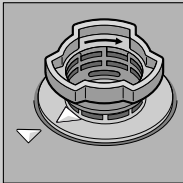


screw on
filter system.
NOTE MARK!


Cleaning waste water pump

- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.


Spray arms
... remove
blockages/deposits.

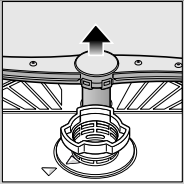


Pull lower arm
upwards ...

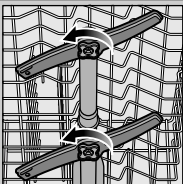

unscrew upper
spray arms ...

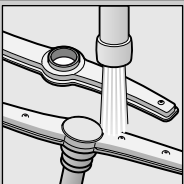



clean spray nozzles
under running water
(if required
use toothpicks) ...

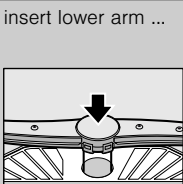

insert lower arm ...




screw on upper
spray arms tightly.

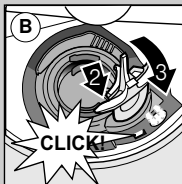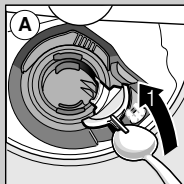


Rectifying minor faults yourself ...

... as it is worth doing it yourself!

 More information can be found in the operating instructions

Fault	Possible causes	Remedial action
Display “  ” is lit	Supply fitting jammed or calcified	▶ Open supply fitting. ▶ 1. Unscrew water connection. ▶ 2. Clean filter in the water connection. ▶ 3. Flow rate must be min. 10 l/min., when water supply is open. ▶ If the flow rate is less, replace the supply fitting. ▶ Install supply hose without kinks.
		
	Waste water hose is blocked or kinked	▶ Install waste water hose without kinks.
Display “  ” flashes	Cover not attached to waste water pump	▶ Attach cover (see above).
	Waste water pump blocked	▶ Clean waste-water pump (see above).
	Appliance has technical defect	▶ Call factory customer service (state fault display). ▶ Unplug appliance.
Residual water in the appliance	The programme has not yet ended	▶ Close the appliance and switch it on or terminate the programme (see Terminating the programme).
Rust on the cutlery	Cutlery not rust-resistant	▶ Use dishwasher-proof cutlery.
	Hard knife blades are more susceptible	
	Extraneous rust	▶ Never wash rusting parts in the appliance.

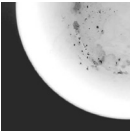Fault	Possible causes	Remedial action
Utensils are not clean	Utensils are situated close together or one above the other	▶ Separate the utensils, prevent contact points.
	Sand or gritty residue on the utensils	▶ Follow manufacturer's instructions (detergent).
		▶ Select a more intensive programme.
Stains and streaks	Too little detergent	▶ Clean the spray arms (see above).
	Unsuitable programme selected	▶ Clean the filters (see above).
	Spray arm nozzles blocked	▶ Arrange the utensils so that the spray arms can rotate freely.
Utensils not dry	Filters dirty, not seated firmly	
	Spray arms blocked	
Milky deposits on the utensils (can be removed)	Rinse aid dosage too high/too low	▶ Streaks: reduce dosage. ▶ Water or limescale stains: increase dosage.
	Water softening system incorrectly set	
	No salt	
Milky deposits, glasses cloudy/tarnished (cannot be removed)	The combined detergent used has a poor drying performance	▶ Increase dosage. ▶ Change the product.
	Appliance setting	▶ Use rinse aid.
	Glasses not dishwasher-proof	▶ Activate intensive drying (depending on model).
Plastic/utensils discoloured	Too little detergent	▶ Correctly set water softening system. ▶ Refill with special salt.
	Discoloration caused by food colourings (tomato sauce)	

Terminating the programme ...

While the programme is running, press the START button for approx. 3 sec. (Reset) until all displays go out.



The remaining programme sequence for draining the residual water takes approx. 1 minute.

Loading the dishwasher correctly ...

Dishwasher-proof utensils not soiled with ash, wax, lubricating grease, ink or adhesive labels; remove large remnants of jam, milk products and food according to the operating instructions and check that the spray arms can rotate freely.