

Overview of programmes

Program/type of laundry/information	Settings
Name of the program: Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (☼ = cold) Spin speed* additional settings that can be selected
Cottons : hard-wearing textiles, heat-resistant textiles made of cotton or linen Prewash: for heavily soiled washing; pour detergent into compartment I and II	8 kg/5** kg; ☼ - 90 °C ----, - 1400* rpm ⇒   ,  , 
Notes	
■ For the  Eco setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the  Eco setting or, if necessary, set a higher temperature. ■ The ⇒  Speed setting is suitable as a short program for lightly soiled laundry. With the Speed setting, the program will use more energy than without.	
Easy-Care: Easy-care textiles made of fine cotton, linen, synthetic fibres or blended fabrics	4 kg; ☼ - 60 °C ----, 0 - 1200* rpm ⇒   ,  , 
Mix: Textiles made of cotton and synthetic.	4 kg; ☼ - 40 °C ----, 0 - 1400* rpm ⇒   ,  , 
Delicates/Silk: for delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) Note: Use a detergent suitable for machine-washing delicates or silk.	2 kg; ☼ - 40 °C ----, 0 - 800* rpm ⇒   ,  , 
 Wool: hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, long program pauses (textiles rest in wash liquor).	2 kg; ☼ - 40 °C ----, 0 - 800 rpm -
Notes	
■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool.	
* maximum spin speed depends on the program and model	
** reduced load for the ⇒  Speed setting	
*** Depending on the model	

Program/type of laundry/information	Settings
Drum Clean: Programme for cleaning and caring for the drum and the outer tub, e.g. before the 1st wash cycle, if an odour has formed after a prolonged absence or if washing frequently at a low washing temperature (40 °C and lower)	☀: 40 °C; 90 °C 1200* rpm -
Notes ■ Run programme without laundry. ■ Use only detergents for front-loading washing machines. Do not use additional cleaning agents.	
Spin/Drain : Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0.	-; - 0 - 1400* rpm
Notes ■ The display of the Ready-in time is only updated once the program is started. ■ The program cycle is independent of the chosen amount of load. Decrease the spin speed for delicate fabric and textiles e.g. blouses or laundry made of silk or wool.	 ***
Super 15'/30' : extra short program of approx. 30 minutes, suitable for small items of lightly soiled laundry	2/3.5** kg; ☀ - 40 °C ----, 0 - 1200* rpm
Note: When selecting the  Speed setting, the program SuperQuick 15' is run.	
Allergy +: hard-wearing fabrics made of cotton or linen	6.5 kg; ☀ - 60 °C ----, 0 - 1400* rpm
Note: Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	  
Duvet : Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down	2.5** kg; ☀ - 60 °C ----, 0 - 1200* rpm
	 
Shirts: Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics	2 kg; ☀ - 60 °C ----, 0 - 800 rpm
Notes ■ Shirts/blouses are only given a short spin on the  Less iron*** setting. Hang them up to dry while still dripping wet. → Self-smoothing effect ■ Use the Delicates/Silk program to wash shirts/blouses made of silk/ delicate fabrics.	  
* maximum spin speed depends on the program and model ** reduced load for the  Speed setting *** Depending on the model	

Program/type of laundry/information	Settings
Easy-Care Plus : For jeans and dark textiles made of cotton, synthetic or blended fabrics. Advise to turn the laundry inside out for washing	3.5 kg; - 40 °C
	---, 0 - 1200* rpm
Notes	
■ Laundry must not be treated with fabric softener.	
■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.	
Sportswear : All-weather, sports and outdoor textiles with membrane technology. Not for water-repellent membrane textiles	2 kg; - 40 °C
	---, 0 - 800* rpm
Rinse : extra rinse with selectable spin speed	-; -
Note : The program cycle is independent of the chosen amount of load. Decrease the spin speed for delicate fabric and textiles e.g. blouses or laundry made of silk or wool.	---, 0 - 1400* rpm
* maximum spin speed depends on the program and model	
** reduced load for the Speed setting	
*** Depending on the model	



Consumption values table

Programme	Load	Energy consumption*	Water*	Programme duration*
Cottons 20 °C	8 kg	0,26 kWh	86 l	2 1/2 h
Cottons 40 °C	8 kg	1,13 kWh	89 l	3 h
Cottons 60 °C	8 kg	1,16 kWh	86 l	2 1/2 h
Cottons 90 °C	8 kg	2,22 kWh	99 l	2 1/2 h
Easy-Care 40 °C	4 kg	0,79 kWh	65 l	2 h
Mix 40 °C	4 kg	0,58 kWh	44 l	1 1/4 h
Delicates/Silk 30 °C	2 kg	0,20 kWh	36 l	3/4 h
 Wool 30 °C	2 kg	0,12 kWh	41 l	3/4 h

Programme	Additional function	Load	Energy consumption*	Water*	Pro-gramme du-ration*
Cottons 60 °C**	Eco Perfect  ***	8 kg	0,83 kWh	68 l	4 3/4 h
* Values determined according to IEC60456:2010.					
** Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.					
*** Programme setting with maximum spin speed for testing according to IEC 60456.					

WAT28460TH

9001331733 (9801)

