

Overview of programmes

Program/type of laundry/information	Settings
Name of the program : Brief explanation of the program and for which textiles it is suitable.	max. load, temperature Spin speed* (---- = rinse hold) additional settings that can be selected
 Cottons : Hard-wearing textiles, heat-resistant textiles made of cotton or linen Notes ■ For the Eco Perfect  setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the Eco Perfect  setting or, if necessary, set a higher temperature. ■ The Speed Perfect  setting is suitable as a short program for lightly soiled laundry.	7 kg/4** kg; 20, 40, 60, 90 °C ----, 0 - 1600* rpm Speed Perfect  , Eco Perfect  , Anti-crease 
 Easy-Care : Textiles made of synthetic materials or blended fabrics	4 kg; 30, 40 °C ----, 0 - 1200* rpm Speed Perfect  , Eco Perfect  , Anti-crease 
 Rinse : Extra rinse with selectable spin speed	-; - ----, 0 - 1600* rpm -
Spin/Empty   : Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0. Note : . The display of the Ready-in time is only updated once the program is restarted.	-; - ----, 0 - 1600* rpm -
Wool   : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor). Notes ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool.	max. 2 kg; 30 °C ----, 0 - 800 rpm -
* max. The maximum spin speed depends on the program and model ** reduced load for the Speed setting	

Program/type of laundry/information	Settings
Delicate/Silk  : For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) Note: . Use a detergent suitable for machine-washing delicates or silk.	2 kg; 30 °C ----, 0 - 800 rpm Speed Perfect  , Eco Perfect  , Anti-crease 
Mix  : Mixed load of cottons and synthetic fabrics	4 kg; 40 °C ----, 0 - 1600* rpm Speed Perfect  , Eco Perfect  , Anti-crease 
SuperQuick 15/30'  /  : Extra short program of approx. 15/30 minutes, suitable for small items of lightly soiled laundry Note: . When selecting the Speed  setting, the program Super 15'  is run.	2/3.5 kg; 30 °C ----, 0 - 1200* rpm Speed Perfect 
Sport  : Sportswear and leisure wear made from microfibre fabrics Notes ■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.	2 kg; 30 °C ----, 0 - 800 rpm Speed Perfect  , Eco Perfect  , Anti-crease 
Shirt/Blouses  : Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics Notes ■ Shirts/blouses are only given a short spin on the Anti-crease  setting. Hang them up to dry while still dripping wet. -> Self-smoothing effect ■ Use the Delicate/Silk  program to wash shirts/blouses made of silk/ delicate fabrics.	2 kg; 40 °C ----, 0 - 800 rpm Speed Perfect  , Eco Perfect  , Anti-crease 
AllergyPlus  : Hard-wearing fabrics made of cotton or linen Note: . Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	7 kg/4** kg; 60 °C ----, 0 - 1600* rpm Speed Perfect  , Eco Perfect  , Anti-crease 
* max. The maximum spin speed depends on the program and model ** reduced load for the Speed setting	



Consumption values table

Energy and water consumption, program duration and residual moisture for the main wash program

(approximate values)

Program	Load	Energy consumption*	Water consumption*	Program duration*
Cottons 20 °C	7 kg	0,25 kWh	80 l	2 ¾ h
Cottons 40 °C	7 kg	1,03 kWh	80 l	3 h
Cottons 60 °C	7 kg	1,21 kWh	80 l	2 ¾ h
Cottons 90 °C	7 kg	2,26 kWh	90 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	64 l	2 h
Mix 40 °C	4 kg	0,60 kWh	45 l	1 ¼ h
Delicate/Silk 30 °C	2 kg	0,19 kWh	37 l	¾ h
Wool 30 °C	2 kg	0,19 kWh	41 l	¾ h

Program	Approximate information on the residual moisture**			
	WAT32... max. 1600 rpm	WAT28... max. 1400 rpm	WAT24... max. 1200 rpm	WAT20... max. 1000 rpm
Cottons	44 %	48 %	53 %	62 %
Easy-Care	40 %	40 %	40 %	40 %
Delicate/Silk	30 %	30 %	30 %	30 %
Wool	45 %	45 %	45 %	45 %

* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.

** Information on residual moisture based on program-dependent spin-speed limit and maximum loads.

Most efficient programs for cotton fabrics

The following programs (standard programs, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

Standard programs for cottons in accordance with the (EU) directive no. 1015/2010		
Program + temperature + button	Load	Approximate program duration
Cottons +  + EcoPerfect  	7 kg	3 ½ h
Cottons +  + EcoPerfect  	3,5 kg	3 ½ h
Cottons +  + EcoPerfect  	3,5 kg	3 ½ h
Program setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C). The specification of the program temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated program temperature for energy-saving reasons.		

Notes

- This supplementary sheet is included with your installation and operating instructions. Retain all documentation for subsequent use.
- Much more important information can be found in your operating and installation instructions.

WAT323L7SN

9001332340 (9707)

