


Brief and handy:
everything your dishwasher
needs ...



Before using for the first time,
read the Installation instructions
and Operating instructions!

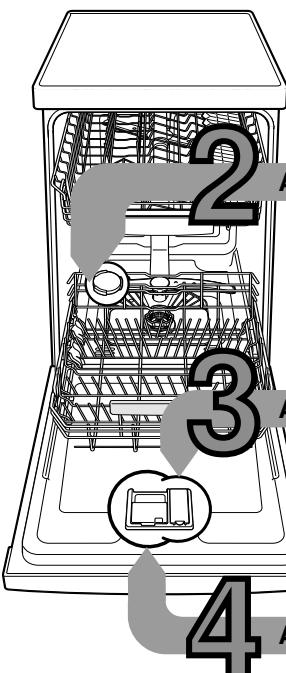

2 Add special salt

1

Adjusting the water softening system *

Ask your water supply
company what the water
hardness is and enter ...



* only before the first
wash or if the water
hardness has been
changed

Read off the correct setting

° Clarke	Hardness range	mmol/l	Setting	0	1	2	3
0-8	soft	0-1.1	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
9-20	medium	1.2-2.9	1	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	
21-26	hard	3.0-3.7	2	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	
27-44	hard	3.8-6.2	3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	

Quickly sorted ...


How to adjust

- Switch on ON/OFF switch.
 - Press and hold down the START button.
 - Rotate programme selector by one notch to the left or to the right.
 - Release button.
The salt refill indicator flashes and the display is lit (= Setting 1).
- Change the setting as follows:
- Rotate programme selector until the required setting has been selected.
 - Press START button.
The display goes out. The selected setting is saved.

3 Add rinse aid

3

Dissolves limescale (not necessary when set to 0!) ...

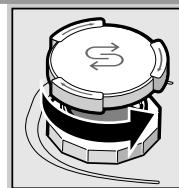


Open
the lid.




Only fill the salt
dispenser with
water before
the first wash.

For optimal washing results

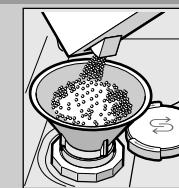

Add
special salt
(never use
detergent!).

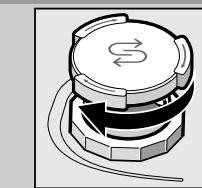


Close the lid.
Rinse immediately.

4

4 Add detergent


Gets it sparkling clean ...

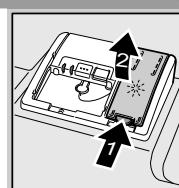

Press marking 1,
lift lid 2.





A lot of dirt, a lot of detergent ...

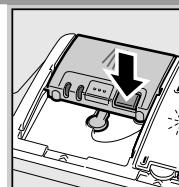


If required,
open the cover
(press button).



Attention:
Combination
products
are not suitable
for all programmes,
follow
manufacturer's
instructions.

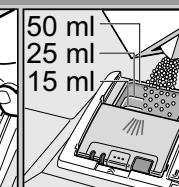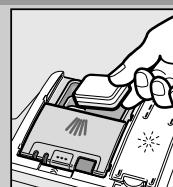

Pour detergent
into the dry
detergent
dispenser only.

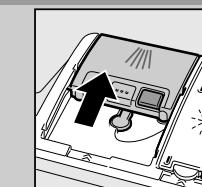


Slide cover
shut, press.
PLOP!

5

5 Switching on the appliance

6

6 Select programme

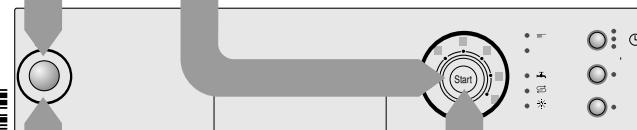

Quick, economical or intensive ...

Overview of programmes

The max. possible number of programmes
is illustrated in this overview.
The corresponding programmes for your appliance
can be found on the fascia.

The programme data has been measured
in the laboratory according to European
standard EN 50242.
Deviations are possible in practice.
* half normal load

The programme duration will be different if the machine is short of rinse additive or the function is turned off.

Intensive
70°



Auto
45°-65°



Eco
50°



Gentle
40°



Quick
45°



Prerinse



Duration: hs : mins

Energy consumption in kWh

Water consumption in litres

3:15 - 1:05

1,300 - 0,650

16 - 7

0:29 *

0,700

9

0:15

0,050

4

Start programme Here we go ...

7

Switch off the appliance Everything o.k. ...

Additional options **

Express WashPlus/
Speed PerfectPlus
(VarioSpeedPlus)
... is obtained by
increased energy
consumption at
a constant cleaning
performance.

Half load
... for a few items,
saves water, energy
and time.

Intensive zone
... perfect for a mixed
load. Washing pressure
and washing temperature
are increased slightly.

HygienePlus
... the temperature
is increased during
the final rinse process.
This increases
the hygiene status.


Extra drying
... improves the drying
result by increased
temperature
in the final rinse.
(Please take care
with delicate dishes.)

** depending on model




Maintenance and care


Filters
... check,
if required,
clean.

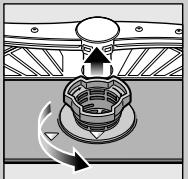


Rotate
filter cylinder,
remove filter
system ...

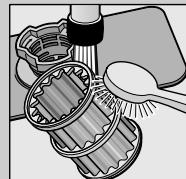

rinse under
running water ...

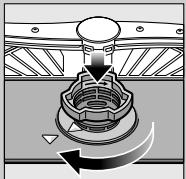


insert ...

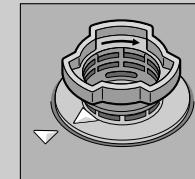


screw on
filter system.
NOTE MARK!

- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.


Spray arms
... remove
blockages/deposits.

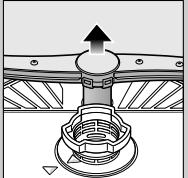


Pull lower arm
upwards ...

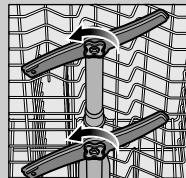

unscrew upper
spray arms ...

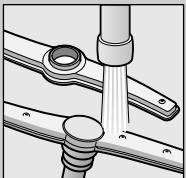


clean spray nozzles
under running water
(if required
use toothpicks) ...

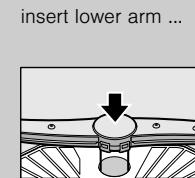

insert lower arm ...



screw on upper
spray arms tightly.

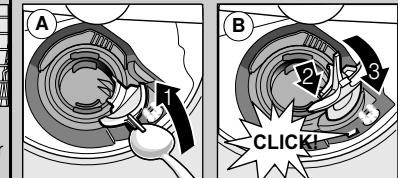

- A
- 1
- 2
- 3
- CLICK!

Rectifying minor faults yourself ...

... as it is worth doing it yourself!

 
More information can be found in the operating instructions

Fault

Possible causes

Remedial action

Display "faucet" is lit



Supply fitting jammed or calcified

- ▶ Open supply fitting.
- ▶ 1. Unscrew water connection.
2. Clean filter in the water connection.
3. Flow rate must be min. 10 l/min.,
when water supply is open.
If the flow rate is less, replace the supply fitting.
- ▶ Install supply hose without kinks.

Waste water hose is blocked
or kinked

- ▶ Install waste water hose without kinks.

Cover not attached to waste
water pump

- ▶ Attach cover (see above).

Waste water pump blocked

- ▶ Clean waste-water pump (see above).

Display "faucet" flashes

Appliance has technical defect

- ▶ Call factory customer service (state fault display).
- ▶ Unplug appliance.

Residual water
in the appliance

The programme has not yet ended

- ▶ Close the appliance and switch it on or terminate
the programme (see Terminating the programme).

Rust on the cutlery

Cutlery not rust-resistant
Hard knife blades are more susceptible
Extraneous rust

- ▶ Use dishwasher-proof cutlery.
- ▶ Never wash rusting parts in the appliance.

Fault

Possible causes

Remedial action

Utensils are not clean



Utensils are situated close together
or one above the other

- ▶ Separate the utensils, prevent contact points.

Sand or gritty residue
on the utensils

- ▶ Follow manufacturer's instructions (detergent).
- ▶ Select a more intensive programme.

Spray arm nozzles blocked

- ▶ Clean the spray arms (see above).

Filters dirty, not seated firmly

- ▶ Clean the filters (see above).

Spray arms blocked

- ▶ Arrange the utensils so that the spray
arms can rotate freely.

Stains and streaks

Rinse aid dosage too high/too low

- ▶ Streaks: reduce dosage.
- ▶ Water or limescale stains: increase dosage.

Utensils not dry

Rinse aid

- ▶ Increase dosage.
- ▶ Change the product.
- ▶ Use rinse aid.

The combined detergent used
has a poor drying performance

Appliance setting

- ▶ Activate intensive drying (depending on model).

Milky deposits
on the utensils
(can be removed)

Water softening system incorrectly set

- ▶ Correctly set water softening system.

No salt

- ▶ Refill with special salt.

Milky deposits, glasses
cloudy/tarnished
(cannot be removed)

Glasses not dishwasher-proof

- ▶ Use dishwasher-proof glasses.
- ▶ Use a detergent suitable for glasses.

Plastic/utensils
discoloured

Too little detergent

- ▶ Follow manufacturer's instructions (detergent).

Discoloration caused by food colourings
(tomato sauce)

- ▶ Discoloration is harmless;
- ▶ subsequent rinse cycles will cause it to fade.

Terminating the programme ...

While the programme is running, press the START button
for approx. 3 sec. (Reset) until all displays go out.



The remaining programme sequence for draining
the residual water takes approx. 1 minute.

Loading the dishwasher correctly ...

Dishwasher-proof utensils not soiled with ash, wax, lubricating grease, ink or adhesive labels;
remove large remnants of jam, milk products and food according to the operating instructions
and check that the spray arms can rotate freely.