

## Overview of programmes

Programme/type of laundry/information	Settings
<p><b>Programme name</b></p> <p>Brief explanation of the programme and the items for which it is suitable.</p>	<p>Max. load</p> <p>Temperature; spin speed**</p> <p>Additional programme settings</p> <p>Automatic dosing (i-Dos) (De)selectable ✓, not selectable -</p>
<p><b>Cottons</b></p> <p>Hard-wearing items and heat-resistant items made of cotton or linen</p> <p><b>Note:</b> Suitable as a short programme for lightly soiled laundry when <b>Speed</b> setting selected.</p>	<p>Max. 9.0 kg/5.0* kg</p> <p>* - 90 °C; ⌀ - 1400** rpm</p> <p>Eco, Speed, , , , </p> <p> ✓,  ✓</p>
<p><b>Cottons Eco</b></p> <p>Hard-wearing items and heat-resistant items made of cotton or linen; energy-optimised washing that works by reducing the temperature while achieving a comparable washing result to the <b>Cottons</b> programme.</p> <p><b>Note:</b> The washing temperature is lower than the selected temperature. If you want to achieve a higher water temperature, use the <b>Cottons</b> programme with a higher temperature as required.</p>	<p>Max. 9.0 kg</p> <p>* - 90 °C; ⌀ - 1400** rpm</p> <p>, , , </p> <p> ✓,  ✓</p>
<p><b>Easy-Care</b></p> <p>Items made of synthetic or blended fabrics</p>	<p>Max. 4.0 kg</p> <p>* - 60 °C; ⌀ - 1200** rpm</p> <p>Eco, Speed, , , , </p> <p> ✓,  ✓</p>
<p><b>Delicates/Silk</b></p> <p>For delicate, washable items, e.g. made of silk, satin, synthetic or blended fabrics (e.g. silk blouses, silk scarves)</p> <p><b>Note:</b> Use a detergent that is suitable for machine-washing delicate fabrics or silk.</p>	<p>Max. 2.0 kg</p> <p>* - 40 °C; ⌀ - 800 rpm</p> <p>Eco, Speed, , , , </p> <p> ✓,  ✓</p>
<p>* Reduced load with the <b>Speed</b> setting</p> <p>** Max. spin speed depends on the model</p>	

Programme/type of laundry/information	Settings
<p> <b>Wool</b></p> <p>Hand- or machine-washable items that are made of wool or contain wool; particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water)</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>■ Wool is of animal origin, e.g. angora, alpaca, llama, sheep.</li> <li>■ Use a detergent that is suitable for machine-washing wool.</li> </ul>	<p>Max. 2.0 kg</p> <p> - 40 °C;  - 800 rpm</p> <p></p> <p> -,  ✓</p>
<p><b>Mixed Load</b></p> <p>Mixed load of cottons and synthetic fabrics</p>	<p>Max. 4.0 kg</p> <p> - 40 °C;  - 1400** rpm</p> <p>Eco, Speed, , , , </p> <p> ✓,  ✓</p>
<p><b>Additional programmes</b></p> <p>Allows additional programmes to be selected via the Home Connect app (see the user and set-up instructions for more information)</p>	<p>Depending on the selected programme</p>
<p><b>Automatic (40°)</b></p> <p>Hard-wearing fabrics;</p> <p>The degree of soiling and the type of fabric are automatically detected and the washing sequence and intelligent dosing are adjusted accordingly.</p>	<p>Max. 6.0 kg</p> <p>Automatic up to: 40 °C; 1400** rpm</p> <p></p> <p> ✓,  ✓</p>
<p><b>Allergy +</b></p> <p>Hard-wearing items made of cotton or linen</p> <p><b>Note:</b> Particularly suitable for strict hygiene requirements or particularly sensitive skin thanks to the extended wash cycle at a defined temperature, higher water level and extended rinse cycle.</p>	<p>Max. 6.5 kg</p> <p> - 60 °C;  - 1400** rpm</p> <p>Eco, Speed, , , , </p> <p> ✓,  ✓</p>
<p><b>Down</b></p> <p>Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down.</p> <p><b>Note:</b> Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.</p>	<p>Max. 2.5 kg</p> <p> - 60 °C;  - 1200** rpm</p> <p>Eco, Speed, , </p> <p> -,  -</p>
<p>* Reduced load with the <b>Speed</b> setting</p> <p>** Max. spin speed depends on the model</p>	

Programme/type of laundry/information	Settings
<b>Shirts</b> Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics <b>Notes</b> <ul style="list-style-type: none"> <li>Shirts/blouses are only given a short spin with the  setting. Hang them up to dry while still dripping wet. -&gt; Self-smoothing effect</li> <li>Use the <b>Delicates / Silk</b> programme to wash shirts/blouses made of silk/delicate fabrics.</li> </ul>	Max. 2.0 kg * - 60 °C;  - 800 rpm Eco, Speed,  ,  ,   ✓,  ✓
<b>SuperQuick 15'/30'</b> Extra-short programme lasting approx. 15/30 minutes, suitable for small items of lightly soiled laundry <b>Note:</b> The <b>SuperQuick 15'</b> programme is run when the <b>Speed</b> setting is selected.	Max. 2.0/3.5 kg * - 40 °C;  - 1200** rpm Speed,   ✓,  ✓
<b>Drum Clean</b> Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after an extended period of non-use. The  indicator (drum care reminder function) will flash if you have not used any programmes at a temperature of 60 °C or higher for an extended period. <b>Notes</b> <ul style="list-style-type: none"> <li>Run the programme without laundry.</li> <li>Use standard washing powder or a detergent that contains bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents intended for woollens or delicates.</li> </ul>	0.0 kg 90 °C; 1200** rpm -  -,  -
<b>Rinse / Spin / Drain</b> Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water <b>Note:</b> The  setting is activated by default for this programme. <b>If you only want to spin the laundry:</b> Deactivate the  setting and, if required, adjust the spin speed. <b>If you only want to drain water:</b> Deactivate the  setting and select the  setting.	- -;  - 1400** rpm  ,  ,   -,  ✓
* Reduced load with the <b>Speed</b> setting ** Max. spin speed depends on the model	



## Consumption values table

**Energy and water consumption, programme duration and residual moisture for the main washing programme** (approximate information)

Programme	Load size	Energy consumption*	Water consumption*	Programme duration*
Cottons 20 °C	9 kg	0,25 kWh	90 l	2 ¾ h
Cottons 40 °C	9 kg	1,10 kWh	90 l	3 h
Cottons Eco** <60°C	9 kg	0,92 kWh	57 l	4 ½ h
Cottons Eco** <60°C	4,5 kg	0,60 kWh	46 l	4 ½ h
Cottons Eco** <40°C	4,5 kg	0,42 kWh	46 l	4 ½ h
Cottons 60 °C	9 kg	1,16 kWh	90 l	2 ¾ h
Cottons 90 °C	9 kg	2,14 kWh	100 l	2 ¾ h
Synthetics 40 °C	4 kg	0,71 kWh	64 l	2 h
Quick Wash 40 °C	4 kg	0,60 kWh	45 l	1 ¼ h
Delicates / Silk 30 °C	2 kg	0,19 kWh	37 l	¾ h
Wool 30 °C	2 kg	0,19 kWh	41 l	¾ h

Programme	Approximate information on the residual moisture***		
	WAT28 ... Max. 1400 rpm	WAT24 ... Max. 1200 rpm	WAT20 ... Max. 1000 rpm
Cottons	48 %	53 %	62 %
Synthetics	40 %	40 %	40 %
Delicates / Silk	30 %	30 %	30 %
Wool	45 %	45 %	45 %

\* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.

\*\* Programme setting for testing and energy labelling in accordance with directive 2010/30/EU with cold water (15 °C). The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.

\*\*\* Information on residual moisture based on program-dependent spin-speed limit and maximum loads.

**WAT286H0GB**

**9001359416 (9804)**

