
 
 
 


 
 
 


 
 
 

 
 
 
 

 
 
 
 








 

 


 

 







## Overview of programmes

Program/type of laundry/information	Settings
<p><b>Name of the program:</b> Brief explanation of the program and for which textiles it is suitable.</p>	<p>max. load; temperature (* = cold)</p> <p>spin speed*</p> <p>programme additional settings that can be selected</p> <p>Softener</p>
<p> <b>Cottons</b> Hard-wearing textiles, heat-resistant textiles made of cotton or linen.</p>	<p>6.2 kg/4.0** kg; * - 90 °C</p> <p>---, 400 - 1000 rpm</p> <p> Speed,  Eco,  Soak,  Rinse Plus</p> <p>Optional</p>
<p> <b>Sensitive</b> Program special designed for allergic people and advanced hygiene, suitable for hard-wearing textiles made of cotton or linen.</p>	<p>5.5 kg/3.5** kg; * - 60 °C</p> <p>---, 400 - 1000 rpm</p> <p> Speed,  Eco,  Soak,  Rinse Plus</p> <p>Optional</p>
<p> <b>Synthetics</b> Textiles made of synthetic materials or blended fabrics.</p>	<p>3.0 kg; * - 60 °C</p> <p>---, 0 - 1000 rpm</p> <p> Speed,  Eco,  Soak,  Rinse plus</p> <p>Optional</p>
<p> <b>Mix Load</b> Mixed load of cottons and synthetic fabrics.</p>	<p>4.0 kg; * - 40 °C</p> <p>---, 0 - 1000 rpm</p> <p> Speed,  Eco,  Soak,  Rinse Plus</p> <p>Optional</p>
<p> <b>Delicates/Silk</b> For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf). <b>Note:</b> Use a detergent suitable for appliance-washing delicates or silk.</p>	<p>2.0 kg; * - 40 °C</p> <p>---, 0 - 800 rpm</p> <p> Speed,  Eco,  Soak,  Rinse Plus</p> <p>Optional</p>
<p>* maximum spin speed depends on the programme and model ** reduced load for the  Speed setting</p>	

Program/type of laundry/information	Settings
<b>Wool</b>  <p>Hand or appliance-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep.</li> <li>Use a detergent that is suitable for appliance-washing wool.</li> </ul>	2.0 kg; * - 40 °C ---, 0 - 800 rpm - Optional
<b>Spin</b>  <p>Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0.</p>	- 0 - 1000 rpm - Not possible
<b>Rinse</b>  <p>Extra rinse with selectable spin speed.</p>	- ---, 0 - 1000 rpm  Rinse Plus Optional
<b>Drum Clean</b>  <p>Special program for drum hygiene or fluff removal.                      90°C = antibacterial program, use no detergent.                      40°C = antibacterial program, special drum cleaning detergent can be used.                      * (cold) = fluff rinsing program, to remove fluff accumulated in the tub.</p> <p><b>Note:</b> Run programme without laundry.</p>	0.0 kg; *, 40 °C, 90 °C 1000 rpm - Not possible
<b>Allergy Plus</b>  <p>Washing program together with disinfectant, for cotton and synthetic fibres.</p>	4.0 kg; * - 40 °C ---, 0 - 1000 rpm  Speed,  Eco,  Soak,  Rinse Plus Optional
<b>Soft Toys</b>  <p>For appliance washable plush toy (details pls. refer to washing indication label on the item). If there are some small parts made of paper in the toys, they are not suitable to be washed.</p>	1.5 kg; * - 40 °C ---, 0 - 1000 rpm  Speed,  Eco,  Soak,  Rinse Plus Optional
* maximum spin speed depends on the programme and model ** reduced load for the  Speed setting	

Program/type of laundry/information	Settings
<b>Jeans</b>  Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.	2.0 kg; * - 40 °C ----, 0 - 1000 rpm ≡⏻ Speed, Ⓞ Eco, 🪥 Soak, 🏰 Rinse Plus Optional
<b>Bedsheets</b>  Machine-washable textiles filled with down (e.g. jackets, pillows, blankets)	2.0kg; * - 60 °C ----, 0 - 1000 rpm ≡⏻ Speed, Ⓞ Eco, 🏰 Rinse Plus Not possible
<b>Sportswear</b>  Washing followed by water proofing of weatherproof and outdoor clothing with membrane coating and water-resistant textiles	1.0 kg; * - 40 °C 0 - 800 rpm ≡⏻ Speed, Ⓞ Eco, 🏰 Rinse Plus Not possible
<b>Super 45/30/15 min</b> ⏰ Super 15 min programme, for less soiling and low load capacity, e.g., daily changing laundry or new laundry. Super 30 min programme, for less soiling cotton or linen laundry. Super 45 min programme, for less soiling cotton or linen laundry. <b>Note:</b> The ≡⏻ Speed setting is suitable as a short program for lightly soiled laundry.	3.5 kg/2.0** kg; * - 40 °C ----, 0 - 1000 rpm ≡⏻ Speed, Ⓞ Eco Optional
* maximum spin speed depends on the programme and model ** reduced load for the ≡⏻ <b>Speed</b> setting	

**en** Supplementary sheet for the installation and operating instructions

**WLK20260IN**

**9001370263 (9802)**

