

Overview of programmes

Program/type of laundry/information	Settings
Name of the program: Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (☀ = cold) Spin speed* additional settings that can be selected
 Cottons: hard-wearing textiles, heat-resistant textiles made of cotton or linen  + Prewash: for heavily soiled washing; distribute detergent between dispensers I and II	8 kg/5** kg; ☀ - 90 °C ----, 400 - 1200* rpm    
Notes ■ For the  Eco setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the  Eco setting or, if necessary, set a higher temperature. ■ The  Speed setting is suitable as a short program for lightly soiled laundry.	
 Synthetics: textiles made of synthetic materials or blended fabrics	4 kg; ☀ - 60 °C ----, 0 - 1200* rpm    
 Daily Wash: mixed load of cottons and synthetic fabrics	4 kg; ☀ - 40 °C ----, 0 - 1200* rpm    
 Delicates/Silk: for delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) Note: Use a detergent suitable for machine-washing delicates or silk.	2 kg; ☀ - 40 °C ----, 0 - 800 rpm    
 Wool: hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).	2 kg; ☀ - 40 °C ----, 0 - 800 rpm -
Notes ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool.	
* maximum spin speed depends on the program and model ** reduced load for the  Speed setting *** depending on the model	

Program/type of laundry/information	Settings
Drum Clean  : Programme for cleaning and caring for the drum and the outer tub, e.g. before the 1st wash cycle, if an odour has formed after a prolonged absence or if washing frequently at a low washing temperature (40 °C and lower)	 : 40 °C; 90 °C 1200* rpm -
Notes - Run programme without laundry. - Use only detergents for front-loading washing machines. Do not use additional cleaning agents.	
Spin/Drain  : Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0.	-; - 0 - 1200* rpm 
Note: The display of the Ready-in time is only updated once the program is restarted.	
SuperQuick 15'/30'  : extra short program of approx. 30 minutes, suitable for small items of lightly soiled laundry	2/3.5** kg;  - 40 °C ----, 0 - 1200* rpm 
Note: When selecting the  Speed setting, the program SuperQuick 15' is run.	
Allergy Plus  : hard-wearing fabrics made of cotton or linen	6.5 kg;  - 60 °C ----, 400 - 1200* rpm    
Note: Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	
Jeans/Dark Laundry  : Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.	3.5 kg;  - 40 °C ----, 0 - 1200* rpm    
Shirts/Blouses  : Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics	2 kg;  - 60 °C ----, 0 - 800 rpm    
Notes - Shirts/blouses are only given a short spin on the  Less iron*** setting. Hang them up to dry while still dripping wet. → Self-smoothing effect - Use the Delicates/Silk program to wash shirts/blouses made of silk/delicate fabrics.	
Freshen Up  : Items made from cotton or synthetic or blended fabrics. Quick washing programme suitable for freshening up laundry that has been soaked in the rain. By reheating the water during the final rinse cycle, the appliance is able to more effectively eliminate water from the laundry during the spin cycle	2 kg; 30 - 60 °C ----, 800 - 1200* rpm -
* maximum spin speed depends on the program and model ** reduced load for the  Speed setting *** depending on the model	

Program/type of laundry/information	Settings
Sportswear  : Sportswear and leisure wear made from microfibre fabrics	2 kg;  - 40 °C
Notes	---, 0 - 800 rpm
■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.	   
Rinse  : extra rinse with selectable spin speed	-; -
	---, 0 - 1200* rpm
	 
* maximum spin speed depends on the program and model ** reduced load for the  Speed setting *** depending on the model	



Consumption values table

Programme	Load	Energy consumption*	Water*	Programme duration*
Cottons 20 °C	8 kg	0,25 kWh	84 l	2 1/2 h
Cottons 40 °C	8 kg	1,01 kWh	86 l	3 h
Cottons 60 °C	8 kg	1,16 kWh	84 l	2 1/2 h
Cottons 90 °C	8 kg	1,90 kWh	94 l	2 1/2 h
Easy Care/Synthetics*** 40 °C	4 kg	0,79 kWh	65 l	2 h
Mix/Daily Wash*** 40 °C	4 kg	0,58 kWh	44 l	1 1/4 h
Delicates/Silk 30 °C	2 kg	0,20 kWh	36 l	3/4 h
Wool 30 °C	2 kg	0,17 kWh	41 l	3/4 h

Programme	Additional function	Load	Energy consumption*	Water*	Programme duration*
Cottons 60 °C**	Eco	8 kg	0,95 kWh	60 l	4 3/4 h
Values determined according to IEC 60456. * Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions. ** Programme setting with maximum spin speed for testing according to IEC 60456; Programme used for the evaluation of the captioned model under the Mandatory Water Efficiency Labelling Scheme (MWELS) in Singapore. *** Programme names depending on the model.					

WAT24481SG

9001375344 (9902)

