

## Overview of programmes

Program/type of laundry/information	Settings
<p><b>Name of the program</b> : Brief explanation of the program and for which textiles it is suitable.</p>	<p>max. load, temperature (☼ = cold)</p> <p>Spin speed*</p> <p>additional settings that can be selected</p>
<p><b>Baumwolle (Cottons)</b>: Hard-wearing textiles, heat-resistant textiles made of cotton or linen</p> <p><b>Note</b> : The <b>Speed</b> setting is suitable as a short program for lightly soiled laundry.</p>	<p>8 kg/5** kg; ☼ - 90 °C</p> <p>----, 0 - 1400* rpm</p> <p>Speed Eco, Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)</p>
<p><b>Baumwolle (Cottons) Eco</b>  : Hard-wearing textiles, heat-resistant textiles made of cotton or linen;</p> <p>Energy-optimised washing by reducing the temperature while achieving a comparable washing result for the <b>Baumwolle (Cottons)</b> programme.</p> <p><b>Note</b> : The washing temperature is lower than the selected temperature. If you want to achieve a higher water temperature, use the <b>Baumwolle (Cottons)</b> programme with a higher temperature as required.</p>	<p>8 kg; ☼ - 90 °C</p> <p>----, 0 - 1400* rpm</p> <p>Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)</p>
<p><b>Pflegeleicht (Easy Care)</b>: Textiles made of synthetic materials or blended fabrics</p>	<p>4 kg; ☼ - 60 °C</p> <p>----, 0 - 1200* rpm</p> <p>Speed Eco, Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)</p>
<p><b>Wolle (Wool)</b>: Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep.</li> <li>■ Use a detergent that is suitable for machine-washing wool.</li> </ul>	<p>2 kg; ☼ - 40 °C</p> <p>----, 0 - 800 rpm</p> <p>-</p>
<p><b>Express 15'/30'</b>: Extra short program of approx. 15/30 minutes, suitable for small items of lightly soiled laundry</p> <p><b>Note</b> : When selecting the <b>Speed</b> setting, the program <b>Express 15'</b> is run.</p>	<p>2/3.5 kg; ☼ - 40 °C</p> <p>----, 0 - 1200* rpm</p> <p>Speed</p>
<p><b>Schnell/Mix (Quick/Mix)</b> : Mixed load of cottons and synthetic fabrics</p>	<p>4 kg; ☼ - 40 °C</p> <p>----, 0 - 1400* rpm</p> <p>Speed Eco, Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)</p>
<p>* max. The maximum spin speed depends on the program and model</p> <p>** reduced load for the <b>Speed</b> setting</p>	

Program/type of laundry/information	Settings
<p><b>Pflegeleicht Plus (Easy Care Plus):</b> Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.</p>	<p>3.5 kg;  - 40 °C                      ----, 0 - 1200* rpm                      Speed Eco, Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)</p>
<p><b>Spülen/Schleudern/Abpumpen (Rinse/Spin/Empty):</b> Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water.</p> <p><b>Note:</b> The setting <b>Spülen Plus (Extra Rinse)</b> is activated at the factory for this programme.</p> <p><b>If you only want to spin the laundry:</b> Deactivate the <b>Spülen Plus (Extra Rinse)</b> setting and, if required, adjust the spin speed.</p> <p><b>If you only want to drain water:</b> Deactivate the <b>Spülen Plus (Extra Rinse)</b> setting and select the spin speed <b>0</b>.</p>	<p>;-                      ----, 0 - 1400** rpm                      Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)</p>
<p><b>Trommel reinigen (Drum Care):</b> Program for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use.</p>	<p>0 kg; 90 °C                      1200* rpm                      -</p>
<p><b>Notes</b></p> <ul style="list-style-type: none"> <li>■ Run the drum-care program without any laundry.</li> <li>■ Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.</li> </ul>	
<p><b>Fein/Seide (Delicate/Silk):</b> For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf)</p> <p><b>Note:</b> Use a detergent suitable for machine-washing delicates or silk.</p>	<p>2 kg;  - 40 °C                      ----, 0 - 800 rpm                      Speed Eco, Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)</p>
<p><b>Erde und Sand (Mud)</b>  : Textiles made of synthetic or blended fabrics</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>■ Do not allow stains to dry in, and remove any solid residue beforehand.</li> <li>■ The temperature progression, soaking time and drum movement are all adjusted depending on the type of stain.</li> <li>■ Stains are treated optimally without the use of additional special detergents.</li> </ul>	<p>4 kg;  - 60 °C                      ----, 0 - 1200* rpm                      Speed Eco, Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)</p>
<p>* max. The maximum spin speed depends on the program and model                      ** reduced load for the <b>Speed</b> setting</p>	

Program/type of laundry/information	Settings
<b>Gras (Grass)</b>  : Textiles made of synthetic or blended fabrics <b>Notes</b> <ul style="list-style-type: none"> <li>Do not allow stains to dry in, and remove any solid residue beforehand.</li> <li>The temperature progression, soaking time and drum movement are all adjusted depending on the type of stain.</li> <li>Stains are treated optimally without the use of additional special detergents.</li> </ul>	4 kg;  - 60 °C ----, 0 - 1200* rpm Speed Eco, Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)
<b>Schweiß (Sweat)</b>  : Textiles made of synthetic or blended fabrics <b>Notes</b> <ul style="list-style-type: none"> <li>Do not allow stains to dry in, and remove any solid residue beforehand.</li> <li>The temperature progression, soaking time and drum movement are all adjusted depending on the type of stain.</li> <li>Stains are treated optimally without the use of additional special detergents.</li> </ul>	4 kg;  - 60 °C ----, 0 - 1200* rpm Speed Eco, Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)
<b>Sportswear:</b> Sportswear and leisure wear made from microfibre fabrics <b>Notes</b> <ul style="list-style-type: none"> <li>Laundry must not be treated with fabric softener.</li> <li>Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.</li> </ul>	2 kg;  - 40 °C ---, 0 - 800 rpm Speed Eco, Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)
<b>AllergiePlus (Hygiene):</b> Hard-wearing fabrics made of cotton or linen <b>Note:</b> Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	6.5 kg;  - 60 °C ----, 0 - 1400* rpm Speed Eco, Bügelleicht (Anti-crease), Spülen Plus (Extra Rinse)
* max. The maximum spin speed depends on the program and model ** reduced load for the <b>Speed</b> setting	



## Consumption values table

### Energy and water consumption, programme duration and residual moisture for the main wash programme

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Programme duration*
Cottons 20 °C	8 kg	0.30 kWh	88 l	2 ¾ h
Cottons 40 °C	8 kg	1.09 kWh	88 l	3 h
Cottons 60 °C	8 kg	1.28 kWh	88 l	2 ¾ h
Cottons 90 °C	8 kg	2.22 kWh	98 l	2 ¾ h
Easy-Care 40 °C	4 kg	0.75 kWh	64 l	2 h

Programme	Load	Energy consumption*	Water consumption*	Programme duration*
Quick/Mix 40 °C	4 kg	0.60 kWh	45 l	1 ¼ h
Delicates/Silk 30 °C	2 kg	0.21 kWh	36 l	¾ h
Wool 30 °C	2 kg	0.19 kWh	40 l	¾ h

Programme	Approximate residual moisture**		
	WA.28... // WU.28...	WA.24... // WU.24...	WA.20... // WU.20...
	Max. 1400 rpm	Max. 1200 rpm	Max. 1000 rpm
Cottons	48 %	53 %	62 %
Easy-Care	40 %	40 %	40 %
Delicates/Silk	30 %	30 %	30 %
Wool	45 %	45 %	45 %

\* Values may differ from those indicated here depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, degree of soiling to the laundry, detergent used, fluctuations in the power supply and any additional functions selected.

\*\* Residual moisture based on the maximum spin speeds and loads of the individual programmes.

### Most efficient programmes for cotton fabrics

The following programmes (standard programs, indicated by ◻) are suitable for cleaning normally soiled cotton fabrics and are the most efficient in terms of energy and water consumption combined.

Standard programmes for cottons in accordance with the (EU) Directive no. 1015/2010		
Programme + Temperature	Load	Approximate programme duration
Cottons Eco ◻ + ◻60°C	8 kg	3 ¾ h
Cottons Eco ◻ + ◻60°C	4 kg	3 ¾ h
Cottons Eco ◻ + ◻40°C	4 kg	3 ¾ h

Programme setting with maximum speed for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C).  
 The stated programme temperature is based on the temperature indicated on the fabrics' care label.  
 The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.

### Notes

- This supplementary sheet is included with your operating and installation instructions. Keep all documentation for future reference.
- You can also find more important information in your operating and installation instructions.

WUQ28420 / ...

9001392343 (9804)

