

## Overview of programmes

Program/type of laundry/information	Settings
<b>Name of the program:</b> Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (☼ = cold) Spin speed* additional settings that can be selected
<b>Cottons</b>  : hard-wearing textiles, heat-resistant textiles made of cotton or linen <b>Notes</b> <ul style="list-style-type: none"> <li>■ For the  <b>Eco</b> setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the  <b>Eco</b> setting or, if necessary, set a higher temperature.</li> <li>■ The  <b>Speed</b> setting is suitable as a short program for lightly soiled laundry.</li> </ul>	8 kg/5** kg; ☼ - 90 °C ----, 400 - 1400* rpm   ,  , 
<b>Synthetics</b>  : textiles made of synthetic materials or blended fabrics	4 kg; ☼ - 60 °C ----, 0 - 1200* rpm   ,  , 
<b>Mix Load</b>  : mixed load of cottons and synthetic fabrics	4 kg; ☼ - 40 °C ----, 0 - 1400* rpm   ,  , 
<b>Delicates/Silk</b>  : for delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) <b>Note:</b> Use a detergent suitable for machine-washing delicates or silk.	2 kg; ☼ - 40 °C ----, 0 - 800 rpm   ,  , 
 <b>Wool</b>  : hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor). <b>Notes</b> <ul style="list-style-type: none"> <li>■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep.</li> <li>■ Use a detergent that is suitable for machine-washing wool.</li> </ul>	2 kg; ☼ - 40 °C ----, 0 - 800 rpm -
* maximum spin speed depends on the program and model ** reduced load for the  <b>Speed</b> setting *** depending on the model	

Program/type of laundry/information	Settings
<b>Drum Clean</b>  : Programme for cleaning and caring for the drum and the outer tub, e.g. before the 1st wash cycle, if an odour has formed after a prolonged absence or if washing frequently at a low washing temperature (40 °C and lower)	*; 40 °C; 90 °C 1200* rpm -
<b>Notes</b> <ul style="list-style-type: none"> <li>■ Run programme without laundry.</li> <li>■ Use only detergents for front-loading washing machines. Do not use additional cleaning agents.</li> </ul>	
<b>Spin/Drain</b>  : Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0.	-; - 0- 1400* rpm -
<b>Note:</b> The display of the Ready-in time is only updated once the program is restarted.	
 <b>Super 15/30 min</b> : extra short program of approx. 30 minutes, suitable for small items of lightly soiled laundry	2/3.5 kg; * - 40 °C ----, 0- 1200* rpm ≡ 
<b>Note:</b> When selecting the ≡  <b>Speed</b> setting, the program <b>Super 15</b> is run.	
 <b>Allergy Plus</b> : hard-wearing fabrics made of cotton or linen	6.5 kg; * - 60 °C ----, 400- 1400* rpm ≡   ,  , 
<b>Note:</b> Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	
 <b>Freshen Up</b> : fabrics made from cotton or synthetics	2 kg; 30- 60 °C 800- 1400* rpm -
Short programme suitable for removing dust and sand from washing, e.g. after rainfall; washing warmer after the last rinse cycle, this may reduce the subsequent drying process.	
 <b>Lingerie</b> : programme suitable for saris made of washable textiles such as cotton and synthetics; Creasing is reduced.	1 kg; * - 40 °C ----, 0- 600 rpm ≡   , 
<b>Note:</b> Wash a maximum of 2 saris per wash cycle (including blouse and petticoat). Glued adornments or embroidery may detach and are not recommended to be washed.	
 <b>Jeans/Dark Laundry</b> : Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out	3.5 kg; * - 40 °C ----, 0- 1200* rpm ≡   ,  , 
 <b>Sportswear</b> : machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down	2 kg; * - 40 °C ---, 0- 800* rpm ≡   ,  , 
* maximum spin speed depends on the program and model ** reduced load for the ≡  <b>Speed</b> setting *** depending on the model	

Program/type of laundry/information	Settings
 <b>Shirts</b> : Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics	2 kg;  - 60 °C
<b>Notes</b>	---, 0 - 800* rpm
<ul style="list-style-type: none"> <li>■ Shirts/blouses are only given a short spin on the  <b>Less iron</b>** setting. Hang them up to dry while still dripping wet. → Self-smoothing effect</li> <li>■ Use the <b>Delicates/Silk</b> program to wash shirts/blouses made of silk/delicate fabrics.</li> </ul>	   
 <b>Rinse</b> : extra rinse with selectable spin speed	;-
	---, 0 - 1400* rpm
* maximum spin speed depends on the program and model ** reduced load for the  <b>Speed</b> setting *** depending on the model	



## Consumption values table

Programme	Load	Energy consumption*	Water*	Programme duration*
Cottons 20 °C	8 kg	0,25 kWh	84 l	2 1/2 h
Cottons 40 °C	8 kg	1,01 kWh	86 l	3 h
Cottons 60 °C	8 kg	1,16 kWh	84 l	2 1/2 h
Cottons 90 °C	8 kg	1,90 kWh	94 l	2 1/2 h
Synthetics 40 °C	4 kg	0,79 kWh	65 l	2 h
Daily Wash/Mix Load** 40 °C	4 kg	0,58 kWh	44 l	1 1/4 h
Delicates/Silk 30 °C	2 kg	0,20 kWh	36 l	3/4 h
Wool 30 °C	2 kg	0,17 kWh	41 l	3/4 h

\* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

\*\* Programme names depending on the model

**WAT2846WIN WAT2846SIN**

**9001396091 (9808)**

