

Overview of programmes

Programme/Type of laundry/Information	Settings
Name of the programme Brief explanation of the programme and the fabrics for which it is suitable.	Max. load Temperature; spin speed** Additional programme settings
Cottons Hard-wearing fabrics and heat-resistant items made of cotton or linen Note: The Speed setting is suitable as a short programme for lightly soiled laundry.	max. 8.0 kg / 5.0* kg * - 90 °C; ⌀ - 1400** rpm Eco, Speed,  ,  ,  ,  ,  ,  ,  , 
Cottons Eco  Hard-wearing fabrics and heat-resistant items made of cotton or linen; Energy-optimised washing by reducing the temperature while achieving a comparable washing result to the Cottons programme. Note: The washing temperature is lower than the selected temperature. If you want to achieve a higher water temperature, use the Cottons programme with a higher temperature as required.	max. 8.0 kg * - 90 °C; ⌀ - 1400** rpm  ,  ,  ,  ,  ,  ,  , 
Easy-Care Items made of synthetic or blended fabrics	max. 4.0 kg * - 60 °C; ⌀ - 1200 rpm Eco, Speed,  ,  ,  ,  ,  ,  ,  , 
Delicates/silk For delicate washable items, e.g. made of silk, satin, synthetic or blended fabrics (e.g. silk blouses, silk scarves) Note: Use a detergent that is suitable for machine-washing delicate fabrics or silk.	max. 2.0 kg * - 40 °C; ⌀ - 800 rpm Eco, Speed,  ,  ,  ,  ,  ,  ,  , 
 Wool Hand- or machine-washable items that are made of wool or contain wool. Particularly gentle washing programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water) Notes <ul style="list-style-type: none"> ■ Wool is of animal origin, e.g. angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine washing wool. 	max. 2.0 kg * - 40 °C; ⌀ - 800 rpm 
* Reduced load for the Speed setting ** max. spin speed, depending on the model	

Programme/Type of laundry/Information	Settings
<p>Mix</p> <p>Mixed load of cottons and synthetic fabrics.</p>	<p>max. 4.0 kg</p> <p>✳ - 40 °C; ⌚ - 1400** rpm</p> <p>Eco, Speed, , , , ,</p> <p>, , , </p>
<p>Dark wash</p> <p>Dark-coloured items made from cotton or easy-care fabric; turn items inside-out before washing.</p>	<p>max. 3.5 kg</p> <p>✳ - 40 °C; ⌚ - 1200 rpm</p> <p>Eco, Speed, , , , ,</p> <p>, , , </p>
<p>Rinse/Spin/Drain</p> <p>Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water</p> <p>Note: The  setting is activated at the factory for this programme.</p> <p>If you only want to spin the laundry: Deactivate the  setting and, if required, adjust the spin speed.</p> <p>If you only want to drain water: Deactivate the  setting and select the  setting.</p>	<p>-</p> <p>⌚ - 1400** rpm</p> <p>, , </p>
<p>Drum Clean</p> <p>Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. The  indicator (memory function, drum care) will flash if you have not used any programme at a temperature of 60 °C or higher for an extended period.</p> <p>Notes</p> <ul style="list-style-type: none"> ■ Run the programme without laundry. ■ Use standard washing powder or a detergent that contains bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents intended for woollens or delicates. 	<p>0.0 kg</p> <p>90 °C; 1200 rpm</p> <p>-</p>
<p> Super 15'/30'</p> <p>Extra short programme of approx. 15/30 minutes, suitable for small items of lightly soiled laundry.</p> <p>Note: The Super 15' programme is run for the Speed setting.</p>	<p>max. 2.0 / 3.5 kg</p> <p>✳ - 40 °C; ⌚ - 1200 rpm</p> <p></p> <p>, , , </p>
<p>* Reduced load for the Speed setting</p> <p>** max. spin speed, depending on the model</p>	

Programme/Type of laundry/Information	Settings
Shirts Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics Notes <ul style="list-style-type: none"> Shirts/blouses are only given a short spin with the  setting. Hang them up to dry while still dripping wet. -> Self-smoothing effect Use the Delicates/Silk programme to wash shirts/blouses made of silk/delicate fabrics. 	max. 2.0 kg * - 60 °C;  - 800 rpm  Eco,  Speed,  ,  ,  ,  ,  ,  , 
Sportswear Sportswear and leisurewear made from microfibre fabrics Notes <ul style="list-style-type: none"> Laundry must not be treated with fabric softener. Before washing, thoroughly clean the left-hand compartment in the detergent drawer. 	max. 2.0 kg * - 40 °C;  - 800 rpm  0 - 800 rpm  Eco,  Speed,  ,  ,  ,  ,  ,  , 
Allergy Plus Hard-wearing items made of cotton or linen Note: Particularly suitable for strict hygiene requirements or particularly sensitive skin thanks to the extended wash cycle at a defined temperature, higher water level and extended rinse cycle.	max. 6.5 kg * - 60 °C;  - 1400** rpm Eco, Speed,  ,  ,  ,  ,  ,  , 
Down Machine-washable fabrics stuffed with down, such as pillows and duvets; also suitable for items stuffed with synthetic fibres Note: Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	max. 2.0 kg * - 60 °C;  - 1200** rpm  Eco,  Speed,  , 
* Reduced load for the Speed setting	
** max. spin speed, depending on the model	



Consumption values table

Energy and water consumption, programme length and residual moisture for the main washing programme (approximate information)

Programme	Load	Energy consumption*	Water consumption*	Programme length*
Cottons 20 °C	8 kg	0,25 kWh	87 l	2 ¾ h
Cottons 40 °C	8 kg	1,05 kWh	87 l	3 h
Cottons Eco** <60°C	8 kg	0,74 kWh	55 l	3 ½
Cottons Eco** <60°C	4 kg	0,70 kWh	37 l	3 ½
Cottons Eco** <40°C	4 kg	0,35 kWh	37 l	3 ½
Cottons 60 °C	8 kg	1,15 kWh	87 l	2 ¾ h
Cottons 90 °C	8 kg	2,20 kWh	97 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	64 l	2 h
Mix 40 °C	4 kg	0,60 kWh	45 l	1 ¼ h
Delicate/Silk 30 °C	2 kg	0,19 kWh	37 l	¾ h
Wool 30 °C	2 kg	0,19 kWh	41 l	¾ h

Programme	Approximate residual moisture***		
	WAT28... Max. 1400 rpm	WAT24... Max. 1200 rpm	WAT20... Max. 1000 rpm
Cottons	48%	53%	62%
Easy-Care	40%	40%	40%
Delicate/Silk	30%	30%	30%
Wool	45%	45%	45%

* Values may differ from those indicated here depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, degree of soiling to the laundry, detergent used, fluctuations in the power supply and any additional functions selected.

** Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C). The stated programme temperature is based on the temperature indicated on the fabrics' care label. The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.

*** Residual moisture based on the maximum spin speeds and loads of the individual programmes.

WAT285H0

9001414284 (9904)

