



# Washer dryer

WDU28560SA

[en]

User manual and installation instructions

### Your new washer dryer

You have chosen a Bosch washer dryer.

Please take a few minutes to read and become familiar with the advantages of your washer dryer.

To meet the high quality demands required by Bosch, every washer dryer that leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website www.boschhome.com or contact our after-sales service centres.

If the operating and installation instructions describe different models, any differences will be pointed out at the relevant points in the text.



Read these operating and installation instructions before switching on the washer dryer.

### Display rules

### 

This combination of symbol and signal word indicates a possibly dangerous situation. Not heeding the warning can cause death or injuries.

#### Caution!

This signal word indicates a possibly dangerous situation. Not heeding the caution can cause property and/or environmental damage.

### Note/tip

Information about the optimum use of the appliance/any other useful information.

### 1. 2. 3. / a) b) c)

The steps are represented by numbers or letters.

### \_ / -

Lists are represented by a small box or a dash.

### **Contents**

Intended use4	Drying table31
Safety instructions	P+ Programme default settings32 Temperature
Environmental protection	Wash+Dry       .33         Dry       .33         ⊞ (Cupboard dry)       .33         ⊞⁺ (Cupboard dry+)       .33
Positioning and connecting	☐ (Iron dry)       .33         Speed       .33         Eco       .33         ☑ (Prewash)       .34         ☒ (Hygiene care)       .34         ☒ (Easy iron)       .34         ☒ (Water plus)       .34         ☒ (Memory)       .34         ☒ (Silent)       .34         ☒ Operating the appliance       .35
Water inlet:	Preparing the appliance
Getting to know the appliance 22  Appliance	Starting the programme
Preparing laundry for washing	Programme end

#### Intended use en

Sensors	
Cleaning and maintenance 4 Appliance housing/control panel 4 Drum	0 0 0 1 1 2
Filter in the water supply is blocked 4.	_
Faults and what to do about then	n
Emergency release 4. Information on the display panel 4. Faults and what to do about them 4.	5
After-sales service 4	9
Consumption values 5	0
Technical data5	1
Aqua-Stop warranty 5	1



### Intended use

- This appliance is intended for private domestic use only.
- Do not install or operate this appliance anywhere that is liable to experience frost and/or outdoor conditions. There is a risk that the appliance will be damaged if residual water in it freezes. If hoses freeze up, they may crack/burst.
- This appliance must only be used for washing domestic laundry, consisting of machine-washable items and hand-washable woollens (see label on item). Using the appliance for any other purpose is outside of the scope of its intended application and is forbidden.
- This appliance must only be used for drying and freshening up domestic laundry, consisting of items that have been washed with water and are suitable for tumble drying (see label on item). Using the appliance for any other purpose is outside of the scope of its intended application and is forbidden.
- This appliance is suitable for operation with mains water and commercially available detergents and care products (must be suitable for use in washing machines).
- This appliance is intended for use up to a maximum height of 4000 metres above sea level.

### Before you switch on the appliance:

Check that there is no visible damage to the appliance. Do not operate the appliance if it is damaged. Should you have any problems, please contact your specialist dealer or our customer service.

Read and follow the operating and installation instructions and all other information provided with this appliance.

Retain the documents for subsequent use or for subsequent owners.

# **▲** Safety instructions

The following safety information and warnings are provided to protect you from injury and to prevent material damage to your surroundings.

It is nevertheless important to take the necessary precautions and to proceed with care when installing, maintaining, cleaning and operating the appliance.

### Children/people/pets

### 

Children and other people who are unable to assess the risks involved when using the appliance may injure themselves or may find themselves in life-threatening situations. Therefore please note:

- The appliance may be used by children over the age of 8 years and by persons with reduced physical, sensory or mental capacity or by persons with a lack of experience or knowledge as long as they are supervised or have received instruction on how to use the appliance safely and they have understood the potential risks of using the appliance.
- Children must not play with this appliance.

- Do not allow children to clean or maintain this appliance unsupervised.
- Keep children under 3 years and pets away from this appliance.
- Do not leave the appliance unattended when children or other people who are unable to assess the risks are in the vicinity.

## 

Children may lock themselves inside appliances and find themselves in a life-threatening situation.

- Do not position the appliance behind a door, as this may obstruct the appliance door or prevent it from opening completely.
- Once an appliance has reached the end of its life, pull the mains plug from the socket **before** severing the mains cable, and then destroy the lock on the appliance door.

# 

If allowed to play with the packaging/plastic film or packing components, children may become caught in these or pull them over their heads and suffocate.

Keep packaging, plastic film and packing components away from children.

# 

Detergents and care products may result in poisoning if consumed.

If accidentally swallowed, seek medical advice. Keep detergents and care products out of the reach of children.

# **⚠** Warning Eye/skin irritation!

Contact with detergents or care products may cause eye/skin irritation.

Rinse eyes/skin thoroughly if they/it come(s) into contact with detergents or care products. Keep detergents and care products out of the reach of children.

### Installation

### 

If the appliance is not installed properly, this may lead to a dangerous situation. Ensure the following:

The mains voltage on your power socket must match the rated voltage specified on the appliance (identification plate). The connected loads and the required fuse protection are specified on the identification plate.

- The mains plug and the protective contact socket must match and the earthing system must be correctly installed.
- The installation must have an adequate cross section.
- The mains plug must be freely accessible at all times. If this is not possible, in order to comply with the relevant safety regulations, a switch (all pole disconnection) must be built into the permanent installation in accordance with electrical installation regulations.
- If using a residual current circuit breaker, only use one that bears the following mark: . The presence of this mark is the only way to be sure that it fulfils all the applicable regulations.

# Warning Risk of electric shock/fire/

material damage/damage to the appliance!

If the appliance's mains cable is altered or damaged, this may result in electric shock, short circuiting or fire due to overheating.

The mains cable must not be kinked, crushed or altered, and must not come into contact with any heat sources.

### 

The use of extension cords or power strips may result in fire due to overheating or short circuiting.

Connect the appliance directly to an earthed socket that has been correctly installed. Do not use extension cords, power strips or multi-way couplers.

## 

- The appliance may vibrate or move when in operation, potentially resulting in injury or material damage.
   Place the appliance on a clean, even, solid surface and, using a spirit level to guide you, level it with the screw-in feet.
- If you take hold of any of the appliance's protruding parts (e.g. the appliance door) in order to lift or move it, these parts may break off and cause injury. Do not take hold of any of the appliance's protruding parts in order to move the appliance.

# 

- The appliance is very heavy. Lifting it may result in injury. Do not lift the appliance on your own.
- The appliance has sharp edges on which you could cut your hands.
   Do not take hold of the appliance by its sharp edges. Wear protective gloves to lift it.
- If the hoses and mains cables are not correctly routed, they may constitute a tripping hazard, which may result in injury.
   Route hoses and cables such that they do not constitute a tripping hazard.

# Caution! Material damage/damage to the appliance

If the water pressure is too high or too low, the appliance may not be able to operate properly, and it may also result in material damage or damage to the appliance. Make sure that the water pressure in the water supply facility is at least 100 kPa (1 bar), and does not exceed 1000 kPa (10 bar).

- If the water hoses are altered or damaged, this may result in material damage or damage to the appliance. The water hoses must not be kinked, crushed, altered or severed.
- The use of hoses supplied by other brands to connect to the water supply may result in material damage or damage to the appliance. Use the hoses supplied with the appliance or genuine spare part hoses only.
- The appliance is secured for transportation by transport locking devices. If the transport locking devices are not removed before the appliance is operated, this may result in damage to the appliance.

It is important to completely remove all transport locking devices before using the appliance for the first time. Make sure that you retain these transport locking devices separately. It is important to refit the transport locking devices if the appliance is to be transported, in order to prevent the appliance from being damaged in transit.

### **Operation**

# **⚠** Warning Risk of explosions/fire!

Laundry that has come into contact with solvents, oil, wax, wax remover, paint, grease or stain remover may ignite when dried in the machine, or even cause the appliance to explode. Therefore please note:

- Rinse the laundry thoroughly with warm water and detergent before drying it in the machine.
- Do not place laundry in this appliance to be dried if the laundry has not been washed first.
- Do not use the appliance if industrial chemicals have been used to clean the laundry.

# **⚠** Warning Risk of explosions/fire!

Laundry that has been pretreated with cleaning agents that contain solvents, e.g. stain remover/cleaning solvent, may cause an explosion in the drum. Rinse the laundry thoroughly with water before washing it in the machine.

- Certain objects may ignite when drying is in progress, or even cause the appliance to catch fire or explode.
   Remove any lighters or matches from pockets on items of clothing.
- If there is coal dust or flour in the air around the appliance, this may cause an explosion. Make sure that the area around the appliance is kept clean when it is in operation.

### 

If a program is terminated before the drying cycle has finished, this prevents the laundry from cooling down sufficiently and may cause the laundry to ignite, or may result in material damage or damage to the appliance.

- During the last part of the drying cycle, the laundry in the drum is not heated (cooling cycle). This is to ensure that it remains at a temperature at which it will not be damaged.
- Do not switch off the appliance before the drying cycle has finished unless you remove all items of laundry from the drum immediately and spread them out (to dissipate the heat).

# **⚠** Warning Risk of poisoning!

Poisonous fumes may be given off by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

# 

- If you support your weight/sit on the appliance door when it is open, the appliance may tip over, which may result in injury.
  - Do not support your weight on the appliance door when it is open.
- If you climb onto the appliance, the worktop may break, which may result in injury.
   Do not climb onto the appliance.
- If you reach into the drum while it is still rotating, you risk injuring your hands.
   Wait until the drum has stopped rotating.

# 

When washing at high temperatures, there is a risk of scalding if you come into contact with hot detergent solution (e.g. when draining hot detergent solution into a washbasin).

Do not reach into the hot detergent solution.

# ⚠ Warning Eye/skin irritation!

Detergent and care products may spray out if the detergent drawer is opened while the appliance is in operation. Rinse eyes/skin thoroughly if they/it come(s) into contact with detergents or care products. If accidentally swallowed, seek medical advice.

## Caution! Material damage/damage to the appliance

- If the amount of laundry in the appliance exceeds its maximum load capacity, it may not be able to operate properly, or this may result in material damage or damage to the appliance. Do not exceed the maximum load capacity of dry laundry. Make sure you comply with the maximum load capacities specified for each of the programs.
- Foam and foam rubber may deform or melt if dried in the appliance.
   Do not dry laundry items that contain foam or foam rubber in the appliance.

If you pour the wrong quantity of detergent or cleaning agent into the appliance, this may result in material damage or damage to the appliance.

Use detergents/care products/cleaning agents and softeners in accordance with the manufacturers' instructions.

### Cleaning/Maintenance

## 

The appliance is powered by electricity. There is a risk of electric shock if you come into contact with live components. Therefore please note:

- Switch off the appliance. Disconnect the appliance from the power supply (pull out the plug).
- Never take hold of the mains plug with wet hands.
- When removing the mains plug from the socket, always take hold of the plug itself and never the mains cable, otherwise this may damage the mains cable.
- Do not make any technical modifications to the appliance or its features.

- Repairs and any other work on the appliance must only be conducted by our customer service or by an electrician. The same applies for replacing the mains cable (when necessary).
- Spare mains cables can be ordered from our customer service.

## 

Poisonous fumes may be given off by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

### 

If moisture penetrates the appliance, this may cause it to short circuit.

Do not use a pressure washer, steam cleaner, hose or spray gun to clean your appliance.

# ↑ Warning Risk of injury/material damage/damage to the appliance!

The use of spare parts and accessories supplied by other brands is dangerous and may result in injury, material damage or damage to the appliance. For safety reasons, use genuine spare parts and accessories only.

### Caution! Material damage/damage to the appliance

Cleaning agents and agents for pretreating laundry (e.g. stain removers, prewash sprays, etc.) may cause damage if they come into contact with the surfaces of the appliance. Therefore please note:

- Do not allow these agents to come into contact with the surfaces of the appliance.
- Clean the appliance with nothing but water and a soft, damp cloth.
- Remove any detergent, spray or other residues immediately.

# Environmental protection

## Packaging/used appliance



Dispose of packaging in an environmentally-responsible manner.

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

- Automatic switch off: If the appliance is not operated for a prolonged period (approx. 20 minutes), it will automatically switch off (depending on the water level inside of appliance) before the programme starts and after the programme has ended. Press the power button ① again to switch on the appliance.
- If the laundry is then dried in the appliance, select the maximum possible spin speed. The less water the laundry contains, the less time and energy are required for drying. Do not dry dripping wet laundry.

### Tips on economical use


- Always fill the appliance with the maximum amount of laundry for each programme. 

  Page 27
- Wash normally soiled laundry without pretreating.
- For light and normal soiling in laundry, you can save energy and detergent.
- The selectable temperatures apply to the care labels on the textiles. The temperatures in the appliance may deviate from this so that you get the optimum mix of energy-saving and washing results.
- Sleep mode: If the appliance is not operated for a prolonged period (approx. 5 minutes), the display panel lighting goes out before the programme starts and after the programme has ended, ① flashes. Touch any area of display panel to activate the display backlighting. When the programme is running, most of the display panel lighting goes out. Touch any area of display panel to re-activate the lighting.

# Positioning and connecting

### Standard accessories

**Note:** Check the appliance for transport damage. Never use a damaged appliance. If you have any complaints, contact the dealer from whom you purchased the appliance or our Customer Service.

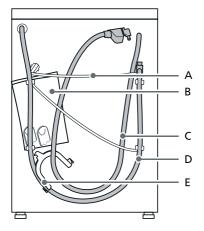



- A Mains lead
- B Bag:
  - Installation and operating instructions
  - Customer Service location directory\*
  - Warranty\*
  - Supplementary sheet for the installation and operating instructions\*
  - Cover caps for openings after the transport braces have been removed
  - Home Connect Installation Guides\*
- C Water inlet hose on aquaStop models
- D Water outlet hose
- E Elbow for securing the water outlet hose\*
- F Cold water inlet hose on Standard/Agua-Secure models
- Depending on the model

**In addition**, a hose clamp (24 - 40 mm diameter, available from specialist retailers) is required to connect the water outlet hose to a siphon.

### Useful tool

- Spirit level for aligning
- Wrench with:
  - WAF13 for loosening the transport braces and
  - WAF17 for aligning the appliance feet

### Safety instructions



- The appliance is very heavy.
   Be careful when lifting/transporting the appliance.
- When the appliance is lifted by its protruding parts (e.g. the appliance door), the components may break off and cause injuries.
   Do not lift the appliance by protruding parts.

 If the hose and mains cables are not routed properly, there is a risk of tripping and injury.
 Lay hoses and cables in such a way that there is no risk of tripping.

# Caution! Damage to the appliance

Frozen hoses may rip/burst. Do not install the appliance in areas exposed to frost or outdoors.

### Caution! Water damage

The connection points for the water supply hose and water drain hose are under high water pressure. To prevent leaks and water damage, you must follow the instructions in this section.

#### **Notes**

- In addition to the safety information listed here, the local water and electricity supplier may have special requirements.
- If in doubt, have the appliance connected by a specialist.

### Installation surface

**Note:** The appliance must be stable aligned so that it does not move around.

- The installation surface must be firm and level.
- Soft floors/floor coverings are not suitable.

# Installation on a base or a wooden joist floor

# Caution! Damage to the appliance

The appliance may "wander" and tip/topple from the base when spinning. The feet of the appliance must be secured with holding brackets.

Order no. WMZ 2200, WX 975600, CZ 110600, Z 7080X0.

**Note:** On wooden joist floors, install the appliance:

- In a corner, if possible,
- On a water-resistant wooden board (min. 30 mm thick) which is screwed tightly to the floor.

# Installing the appliance in a kitchenette



There is a risk of electric shock if you touch live components.

Do not remove the appliance covering plate.

#### **Notes**


- Recess width of 60 cm required.
- Only install the appliance underneath a continuous worktop that is securely connected to adjacent cabinets.

### Removing the transport locks


# Caution! Damage to the appliance

- The appliance is secured for transportation using transport locks. If the transport locks are not removed, the appliance may become damaged when it is operated.
  - Before using the appliance for the first time, make sure that you completely remove all four transport locks. Keep the locks in a safe place.
- To prevent transport damage from occurring if the appliance is moved at a later date, you must refit the transport locks before transporting the appliance.


**Note:** Keep the screws and sleeves in a safe place.

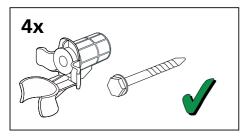


1. Take the hoses out of the holders.

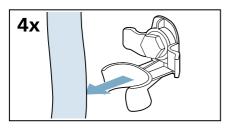


2. Unscrew and remove all four transport brace screws.

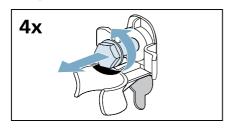


a) Remove the mains cable from the holders.

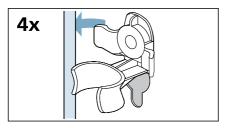


b) Remove the sleeves.

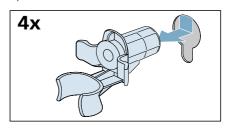

3. Fit the covers.

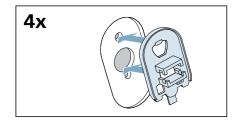


**4.** Lock the covers firmly in place by applying pressure to the snap-in hooks.

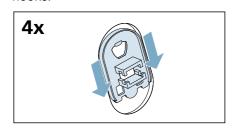

# **Removing the support struts**


1. Unscrew and remove all screws in the vertical transport struts.

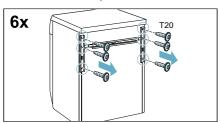


2. Remove the transport struts.



3. Undo and remove the screws on the horizontal transport strut.

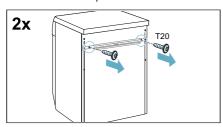


4. Remove the transport strut.

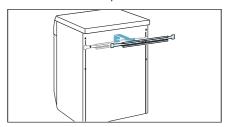

## Hose and cable lengths


### Connection on left side

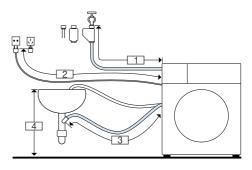

- 105 cm
- 2 ~ 150 cm
- 3 ~ 95 cm 4 0 cm ~ 100 cm

۸r

### Connection on right side

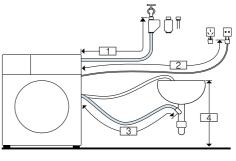

- 1 ~ 60 cm
- 2 ~ 195 cm
- 3 ~ 140 cm

4 0 cm ~ 100 cm

**Note:** If the supply hose is too short for your connection, you can order an extension from the after-sales service.

### Water inlet

### 

There is a risk of electric shock if you touch live components.

Do not immerse the Aqua-Stop safety valve\* in water (it contains an electric valve).

\* Depending on the model

Observe the following when connecting the appliance:

#### **Notes**

- Only operate the appliance using cold mains water.
- Do not connect the appliance to the mixer tap of an unpressurised hotwater boiler.
- Do not use a used supply hose. Only use the supply hose supplied or one that was purchased from an authorised specialist retailer.
- Do not bend, squash, modify or cut through the water supply hose (otherwise its strength is no longer guaranteed).
- Only tighten the screw connections by hand. If the screw connections are tightened too much with a tool (pliers), the thread may be damaged.

# Optimum water pressure in the supply network

At least 100 kPa (1 bar)


Maximum 1000 kPa (10 bar)

When the tap is open, the water flow is at least 8 l/min.


If the water pressure is higher than this, a pressure-reducing valve must be installed.

#### Connection


- Connect the water supply hose to the water tap (<sup>3</sup>/<sub>4</sub>" = 26.4 mm) and to the appliance:
  - Model: Standard

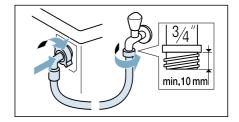

Model: Aqua-Secure

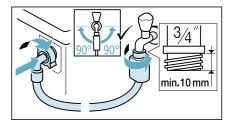

Model: Aqua-Stop

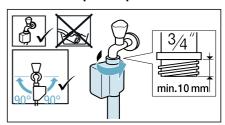

**Tip:** Connect also an external water filter (depending on the model) between water supply hose and tap. The filter filters dirt particles out of the water.

Water filter must be cleaned regularly to remove contaminants. This will prevent blockages. See also → separate installation and cleaning instruction for water filter.

Open the water tap carefully, checking the leak tightness of the connection points. The screw connection is under mains water pressure.

### Water outlet

### 

When you are washing at high temperatures, there is a risk of scalding if you come into contact with hot water (e.g. when draining hot water into a washbasin).

Do not reach into the hot water.

### Caution! Water damage

When water is being pumped away, the outlet hose is under water pressure and may slip out of the wash basin or connection point.

Secure the drain hose so that it cannot slip out.

# Caution! Damage to the appliance/fabrics

If the end of the drain hose is immersed in the drained water, water may be sucked back into the appliance and may damage the appliance/fabrics. Make sure that:


- The plug does not block drainage from the washbasin.
- The end of the drain hose is not immersed in the drained water.
- The water drains away quickly enough.

**Note:** Do not kink the water drain hose or put strain on it lengthways.

#### Connection

### Drainage into a siphon

The connection point must be secured using a hose clamp with a diameter of 24 - 40 mm (available from specialist dealers).

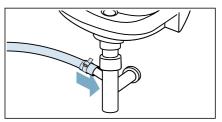


### Drainage into a washbasin


Secure the outlet hose so that it cannot slip out.

Elbow available from after-sales service:

Individual part number 00655300

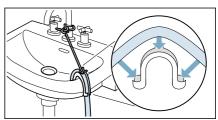

### Drainage into a plastic pipe with rubber bushing or into a drainage pit

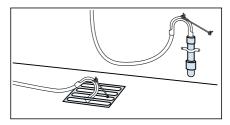


**Note:** The plastic pipe is not standard accessory, available from specialist dealers.


### **Alignment**

Level the appliance using a spirit level. Incorrect levelling may result in intense noise, vibrations and "wandering".


 Loosen the lock nuts using a wrench, by turning it in a clockwise direction.

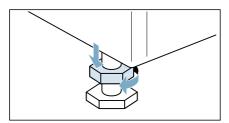

 Check the alignment of the appliance with a spirit level, and adjust it if necessary. Change the height by turning the appliance feet. All four appliance feet must stand firmly on the ground.

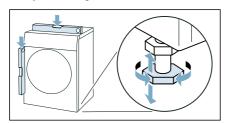

 Tighten the lock nut against the housing.
 In doing so, hold the foot tight and do not adjust its height.
 The lock nuts on all four appliance feet must be screwed tightly against the housing.

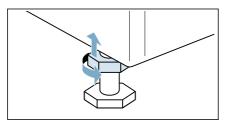

### **Electrical connection**

# ⚠ Warning Risk of death!

There is a risk of electric shock if you touch live components.

- Never touch or hold the mains plug with wet hands.
- Only pull out the mains cable by the plug and never by the cable, as this could damage it.

Observe the following information and ensure that:

#### **Notes**

- The mains voltage and voltage indicated on the appliance (rating plate) are the same.
   The connected load and fuse required are specified on the rating plate.
- The appliance is only connected to an alternating current via a properly installed earthed socket.
- The mains plug fits the socket.
- The earthing system is properly installed.
- The mains cable is only replaced by a qualified electrician (if this is necessary). Replacement mains cables are available from the aftersales service.
- No multiple plugs/couplings or extension cables are used.
- The mains plug can be accessed at all times.
- The mains cable is not bent, squashed, modified, cut through, or in contact with heat sources.

# Before washing for the first time

The appliance was inspected thoroughly before leaving the factory. To remove any residual test water, run the **Drum Clean** programme the first time **without** laundry.

#### Note:

- The appliance must have been installed and connected properly.
  → "Positioning and connecting" on page 13
- Never switch on a damaged appliance.
- 1. Insert mains plug.
- 2. Turn the water tap on.
- 3. Press the ① button till the indicator lamp lights up, release the button. The appliance is switched on.
- 4. Close the door. Do not load any laundry.
- Select the Drum Clean 90°C programme.
- 6. Open the detergent drawer.
- 7. Pour approx. 1 litre of water into dispenser II.
- 8. Add standard detergent to dispenser II according to manufacturer's instructions for light soiling.

**Note:** To prevent over sudsing, use only half the recommended amount of detergent. Do not use any woollens or mild detergents.

- 9. Close the detergent drawer.
- 10. Select ▷M.
- 11. When the programme ends, press the ① button till the indicator lamp turns off, release the button.

Your appliance is now ready for use.

### **Transportation**

e.g. when moving home


### Preparatory work:

 
- 1. Turn off the water tap.
- 2. Reduce the water pressure in the supply hose. → Page 43
- Drain any residual water.
   → Page 42
- **4.** Disconnect the appliance from the mains.
- 5. Remove the hoses.
- 6. Empty the dispensers.

### Installing the transport locks:


1. Remove the covers and keep them in a safe place.

**Note:** Use a screwdriver if necessary.

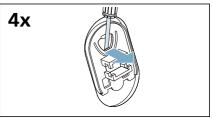





2. Insert all four sleeves.

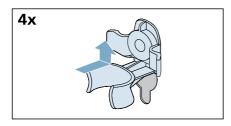


a) Clip the mains cable securely in the holders.

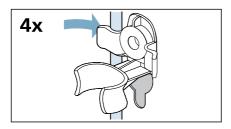

b) Insert and tighten the screws.

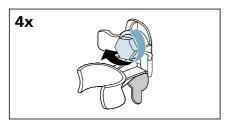

c) Clip the hoses securely in the holders.

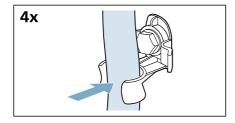


# Before switching on the appliance again:

### **Notes**

- The support struts must be removed.
  - → Page 16
- The transport braces must be removed.
  - → "Removing the transport locks" on page 14
- Pour approx. 1 litre of water into dispenser II, select the **Drain** programme and start.
  This will prevent detergent from flowing straight into the drain during the next wash.


# Getting to know the appliance

# **Appliance**

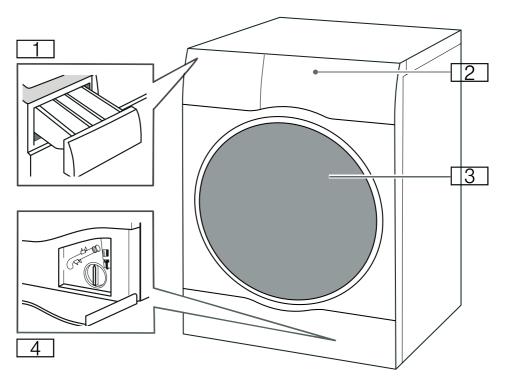

- Detergent drawer Control panel
- Loading door Service flap

# **Control panel**

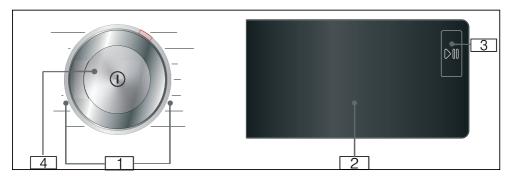

- 1 Programmes that can be selected.
- Z Touch-Display3 Start/Pause button Touch DM button to start, interrupt (e.g. reload washing) and cancel the programme.
- 4 Power button Press the ① button to switch the appliance on/off.

# **Touch-Display**

### Programme default settings



Display	Setting	Description		
<b>*</b> - 90°	Temperature	Temperature that can be set in °C <b>※</b> = cold		
Ø, 400- 1400*	Spin speed	Spin speed in rpm (revolutions per minute) Ø = No spin		
2:30*	Programme remaining time	Programme remaining time depends on the programme selec- tion in h:min (hours:minutes)		
0.5 - 24 h	"Finish in" time	Programme ends after h (h = hours)		
10.0* kg/ 6.0* kg	Maximum load for Washing/Dry- ing	Recommended load in kg		
* Depending on the selected model and pro-				


### **Additional programme settings**

gramme.



Display	Setting
Wash+Dry	
Dry	
⊞ <sup>+</sup> (Cupboard dry+)	
田 (Cupboard dry)	
(Iron dry)	
(Prewash)	
(Rinse plus)	→ "Additional programme settings" on page 33
(Water plus)	settings on page 55
(Easy iron)	
িয়া (Hygiene care)	
Speed	
Eco	
☆ (Memory)	
(Silent)	

# Status indicators for the programme progress (programme sequence)

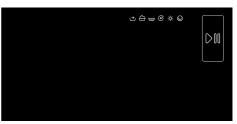

Display	Setting
$\triangleright$ 00	Start/Pause button
$\rightarrow$	Pretreatment
	Wash
(EEE)	Rinse
<b>©</b>	Spin/Drain
-¤-	Dry
0	Wrinkle guard
End	Programme end

# Laundry

## Preparing laundry for washing

### Protecting your laundry and appliance

### Caution!

### Damage to the appliance/textiles

Foreign objects (e.g. coins, paper clips, needles, nails) may damage the washing or components of the appliance.

The following instructions must be observed when preparing your laundry:

- Always follow the manufacturer's instructions when dosing all detergents, cleaning aids, care products and cleaning agents.
- Do not exceed maximum load.
   Overfilling will impair the washing result.
- Keep detergents and agents for the pretreatment of laundry (e.g. stain remover, prewash sprays, etc.) away from the surfaces of the appliance. Using a damp cloth, immediately remove any fine spray residue and other residue or droplets.
- Empty any pockets. Remove any foreign objects.
- Remove metal parts (paper clips, etc.).
- Trousers, knitwear and knitted textiles, e.g. jersey garments, T-shirts or sweatshirts, should be turned inside out.
- Ensure that underwired bras are appliance-washable.
- Wash delicates in a net or bag (tights, underwired bras, etc).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or place in a net/bag.

### **Sorting laundry**

Sort your laundry according to the care instructions and manufacturer's information on the care labels, depending on:

- Type of fabric/fibre
- Colour

**Note:** Laundry may discolour. Wash white and coloured items separately. Wash new coloured items separately the first time you wash them.

- Soiling Wash laundry with the same level of soiling together.
  - Light: No need to pretreat, adjust the Speed setting if necessary.
  - Normal
  - Heavy: Load less laundry, need to pretreat or soak laundry firstly.
  - Stains: Remove/pretreat stains while they are fresh. First dab with soapy water; do not rub. Then wash the items of laundry with the appropriate programme. Stubborn or dried-in stains can sometimes only be removed by washing several times.
- Symbols on the care labels
  - Suitable for normal washing process;
  - e.g. Cottons programme

    A gentle washing process is required;
  - e.g. Easy Care programme
    An especially gentle washing process is required;
    e.g. Abaya programme
  - Suitable for washing by hand; e.g. Wool programme
  - Do not machine wash.

### **Preparing laundry for drying**

**Note:** To ensure an even drying result, sort the laundry according to the:

- Type of fabric
- Care symbols which are indicated on the care labels.

Only dry laundry which is labelled "dryer-proof" or which has the following care symbols:

- \( \text{\text{\$\Omega}} \) : You can select
   \( \text{Cottons/AllergyPlus/My Time + Dry} \)
- ② : You can select
  Easy Care/Mix/ Wool/Down Wear/
  Sportswear/Shirts + Dry

The following textiles should not be dried:

- Ø = care symbol "Do not dry"
- Delicates (silk, synthetic curtains).
- Textiles which contain foam rubber or similar materials.
- Textiles which were treated with flammable liquids, e.g. with stain remover, petroleum ether, thinners. Risk of explosion!
- Textiles which still contain hairspray or similar substances.

### **Notes**

- Before drying, hand-washed textiles must be spun at the appropriate spin speed.
- Before drying, spin at the optimum speed. A spin speed of more than 1000 rpm is recommended for cotton, more than 800 rpm for easycare textiles.
- Do not iron washing immediately after drying. It is recommended to roll the washing up first to distribute residual moisture evenly.
- To ensure a good drying performance, quilts, terry cloths and other large textiles should be dried separately. Do not dry more than 6 terry cloths (or 5 kg).
- Do not exceed the maximum load.

### **Starching**

**Note:** Laundry should not be treated with fabric softener.

- 1. Switch on the appliance.
- 2. Select the **Rinse** programme.
- Measure starch into S in accordance with the manufacturer's instructions (clean first if necessary).
- 4. Touch the DM button.

## Dyeing/bleaching

Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions.

Do **not** use the appliance to bleach clothes.

# Overview of programmes

# Selectable programme

Programme/Type of laundry	Options/Information		
Brief explanation of the programme and for which fabrics it is suitable.	Max. load for washing/ Max. load for drying		
	Max. load as kg depending on the model and the pro- gramme		
	selectable temperature* as °C		
	selectable spin speed* in rpm		
	possible additional programme settings*		
Cottons	10.0 (5.0**) kg/6.0 kg		
Hard-wearing fabrics, heat-resistant fabrics made of cotton or	<b>*</b> -90 °C		
linen.	400 - 1400 rpm		
	Speed, Eco, ② (Water plus), ② (Easy iron), ⓒ (Hygiene care), ❤ (Rinse plus), ③ (Prewash), ☆ (Memory), ③ (Silent), Wash+Dry, Dry, ⊞* (Cupboard dry+), ⊞ (Cupboard dry), ② (Iron dry)		
Easy Care	4.0 kg/2.5 kg		
Textiles made of synthetic materials or blended fabrics.	<b>*</b> - 60 °C		
	400 - 1400 rpm		
	Speed, Eco, ② (Water plus), ② (Easy iron), ③ (Hygiene care),  (Rinse plus), ③ (Prewash), ☆ (Memory), ⑤ (Silent), Wash+Dry, Dry, ⊞ (Cupboard dry+), ⊞ (Cupboard dry), ② (Iron dry)		
Mix	4.0 kg/2.5 kg		
Mixed load of cottons and synthetic fabrics.	<b>*</b> -60 °C		
	400 - 1400 rpm		
	Speed, Eco, ② (Water plus), △ (Easy iron), ③ (Hygiene care),  (Rinse plus), ① (Prewash), ☆ (Memory), ③ (Silent), Wash+Dry, Dry, ⊞ (Cupboard dry+), ⊞ (Cupboard dry), △ (Iron dry)		
* Depending on the model and the programme. ** Reduced load with <b>Speed</b> additional programme setting.			

### **en** Overview of programmes

- · · ·			
Programme/Type of laundry	Options/Information		
Abaya	2.0 kg/-		
For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blends (e.g. silk blouses, silk scarves).	<b>*</b> - 40 °C		
	Ø - 800 rpm		
	② (Water plus), ② (Easy iron),  (Rinse plus), ③ (Prewash), ☆ (Memory), ③ (Silent)		
<b>₩ Wool</b>	2.0 kg/1.0 kg		
Hand- or appliance-washable fabrics that are made of wool or	<b>*</b> - 40 °C		
contain wool;	Ø - 800 rpm		
particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water).	☆ (Memory), 뿡 (Silent), Wash+Dry, Dry		
<b>Note:</b> In order to prevent clothing shrink, after drying still contain a small amount of water, please take out the clothes as soon as possible after the end of the programme to flat dry.			
Down Wear	1.5 kg/1.5 kg		
Appliance-washable fabrics stuffed with down; also suitable for	<b>*</b> - 60 °C		
items stuffed with synthetic fibres.	400 - 1200 rpm		
<ul> <li>It is recommended that you pull down the coat zipper before drying and turn the inner layer inside out.</li> <li>Use the special detergent for down.</li> </ul>	② (Water plus), ☑ (Hygiene care),  (Rinse plus), ☆ (Memory), Wash+Dry, Dry, ⊞ (Cupboard dry+), ⊞ (Cupboard dry)		
Rinse/Spin/Drain	-		
Combined extra programme for rinsing and spinning the laun-	-		
dry, and draining the rinsing water	Ø - 1400 rpm		
<b>Note:</b> The setting (Rinse plus) is activated at the factory for this programme.	② (Water plus), ② (Easy iron), ③ (Rinse plus), ☆ (Memory), Wash+Dry, ③ (Cupboard dry+), ④ (Cupboard dry), ③ (Iron dry)		
If you only want to spin the laundry: Deactivate the (Rinse plus) setting and, if required, adjust the spin speed.			
If you only want to drain water: Deactivate the $\mbox{\ \ \ }$ (Rinse plus) setting and select the $\mbox{\ \ \ }$ setting.			
* Depending on the model and the programme. ** Reduced load with <b>Speed</b> additional programme setting.			

Programme/Type of laundry	Options/Information		
	<u> </u>		
<ul> <li>Drum Clean</li> <li>Special programme for drum hygiene or fluff removal. Do not load any laundry.</li> <li>90°C = antibacterial programme.</li> <li>40°C = antibacterial programme, special drum cleaning detergent can be used.</li> <li>♣ = no antibacterial programme, to remove hair or fluff from the tub.</li> <li>The Drum Clean programme indicator flashes if you have not used any programme at a temperature of 60 °C or higher for an extended period.</li> <li>Notes</li> <li>Switching the Drum Clean information signal on/off.         <ul> <li>→ "Switching the drum-care information signal on/off" on page 40</li> </ul> </li> <li>Always follow the manufacturer's instructions when dosing the detergent.</li> </ul>	0.0 kg/- \$*, 40°C, 90 °C 1200 rpm ☆ (Memory),  ⑤ (Silent)		
AllergyPlus	6.5 kg/5.0 kg		
Hard-wearing fabrics made of cotton or linen.	\$ -60 °C		
Note: Particularly suited to washing items that need to be hy-	400 - 1400 rpm		
gienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	Speed, Eco, ② (Water plus), ဩ (Easy iron), 瓣 (Hygiene care),  (Rinse plus), औ (Prewash), ☆ (Memory), ∜ (Silent), Wash+Dry, Dry, ⊞* (Cupboard dry+), ⊞ (Cupboard dry), ဩ (Iron dry)		
Sportswear	2.0 kg/2.0 kg		
Suitable for sportsweare made of microfibre e.g Acrylic, Nylon,	<b>*</b> - 40 °C		
Spandex etc.	400 - 800 rpm		
	(Water plus), $$ (Easy iron), $$ (Rinse plus), $$ (Prewash), $$ (Memory), $$ (Silent), Wash+Dry, Dry, $$ (Cupboard dry+), $$ (Cupboard dry)		
* Depending on the model and the programme. ** Reduced load with <b>Speed</b> additional programme setting.			

## **en** Overview of programmes

Programme/Type of laundry	Options/Information		
Shirts	2.0 kg/2.0 kg		
Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics.	<b>*</b> -60 °C		
	400 - 800 rpm		
	(Water plus), (Easy iron), (Hygiene care), (Rinse plus), (Prewash), ☆ (Memory), ∜ (Silent), Wash+Dry, Dry, ⊞ (Cupboard dry), (Iron dry)		
My Time	2.0 kg/6.0 kg		
Mixed fabrics; for lightly soiled laundry made of cotton and syn-	<b>*</b> - 40 °C		
thetics.	400 - 1200 rpm		
The length of the programme can be set each time. The maximum programme length is 60 minutes for washing and 120 minutes for drying, it can be reduced in 10-minute increments.	② (Water plus), ② (Easy iron), ☑ (Rinse plus), ☆ (Memory), ∜ (Silent), Dry		
Notes Increase the length of the programme with (Rinse)	·		
<ul> <li>plus) additional programme setting.</li> <li>The ③ (Finish in) programme default setting can not be selected for this programme.</li> <li>If you use this programme for drying, the detergent can not</li> </ul>			
be added.	0.01, 74.01		
Super 15' / Wash & Dry 60'	2.0 kg/1.0 kg		
For small amount lightly soiled garments made of cotton, linen, synthetic or blended fabrics. Approx. 15 mins for washing. If	<b>*</b> - 40 °C		
drying function is selected, it's followed by another approx. 45	400 - 1200 rpm		
mins drying process.  Note: The default programme is <b>Super 15</b> '. You can switch to <b>Wash &amp; Dry 60</b> ' programme by touching <b>Wash+Dry</b> button.	☆ (Memory), ❸ (Silent), Wash+Dry, 田 (Cupboard dry)		
Refresh	-/1.0 kg		
Odor removal and wrinkle reduction program, suitable for wool,	-		
linen, suits, etc. which do not need frequent washing.			
<ul> <li>It is recommended to hang the clothing in a ventilated environment for 3-5mins after program finished. In case of continuously using the refresh program, it is recommended to run a washing cycle between each refresh program cycle to remove odor from the appliance.</li> <li>The detergent can not be added for this programme.</li> </ul>	☆ (Memory), 🏖 (Silent), Dry		
* Depending on the model and the programme.  ** Reduced load with <b>Speed</b> additional programme setting.			

## **Drying table**

		Estimated drying time (min)			
Recommended drying programme	Option	Drying load (kg)	☐ (Iron dry)	⊞ (Cup- board dry)	⊞⁺ (Cup- board dry+)
Cottons/AllergyPlus	Speed	1.0-2.0	40-50	50-70	65-90
		2.0-4.0	50-75	70-95	90-135
		4.0-6.0	75-90	95-120	135-160
	Eco	1.0-2.0	45-65	60-90	75-110
		2.0-4.0	65-115	90-160	110-185
		4.0-6.0	115-150	160-240	185-265
Easy Care/Mix/Sports- wear/Shirts	Speed	0.5-1.5	30-40	35-60	45-80
		1.5-2.5	40-60	60-90	80-110
	Eco	0.5-1.5	35-50	55-80	75-105
		1.5-2.5	50-75	80-120	105-145
Down Wear		1.5	-	50-120	80-150

- i The time listed above is the reference value, the actual drying effect may be affected by the clothing type, clothing weight, dehydration degree and ambient temperature.
- i In order to achieve uniform drying effect, it is recommended to distinguish between heavy and light-weight clothing. For example, separate the thick towel and the shirt to bake.
- i  $\mathbb{H}^+$  (Cupboard dry+) is recommended for drying bulky or heavy clothing.
- i In order to reduce the wrinkling of clothing after drying, it is recommended to put a small amount of clothing drying.
- i Please refer to the panel display for the drying time of the programme not mentioned in the table above.

#### en

# P+ Programme default settings

You can change the default settings for selected programmes. The settings can be changed even while the selected programme is running. The effects depending on the progress of the programme.

### **Temperature**

Before and after the programme starts, you can change the temperature setting, depending on what stage the programme is in, by adjusting the desired temperature on the display.

The maximum temperature that can be set depends on the programme that has been selected.

## Spin speed

Depending on what stage the programme is in, you can change the spin speed (in rpm; revolutions per minute) before and during the programme by adjusting the desired speed on the display.

**setting**  $\mathscr{O}$ :  $\mathscr{O}$ ="No spin". The water is only drained.

You can select "No spin" to prevent creasing if the laundry will not be taken out of the appliance immediately after the programme has ended.

The maximum speed that can be set depending on the model and the programme that has been selected.

### Finish in

**Before starting the programme**, you can preselect the programme end ("Finish in" time) in 0.5h increments (h = hour) up to a maximum of 24 hours.

To do this:

- Select a programme (except My Time programme).
   The programme duration is displayed for the selected programme, e.g. 2:30 (hours:minutes).
- Select the + button repeatedly until the required number of hours is displayed.

**Note:** The setting values are increased using the + button, and decreased using the - button.



Select the DII button.
 The programme starts.
 The selected number of hours (e.g. 8h) is shown in the display panel and counts down until the programme starts. The duration of the programme is then displayed.

**Note:** The length of the programme is automatically adjusted when the programme is running. Changes to the programme default settings or programme additional settings may also change the programme duration.

After starting the programme (if a "Finish in" time has been selected and the programme has not yet started), you can change the preselected number of hours as follows:

- 1. Select the DM button.
- 2. Touch the + or button to change the number of hours.
- 3. Select the DM button.

# Pf Additional programme settings

**Note:** You can find possible additional programme settings in the overview; these differ depending on the model.

By selecting additional programme settings, you can better adapt the washing/drying process to your items of laundry.

The settings can be selected or deselected depending on the progress of the programme.

The button indicator lamps light up if a setting is activated.

The settings are not retained after the appliance is switched off.

### Wash+Dry

Continuous cycle with washing and drying at once.

### Dry

Drying cycle without washing.

### **⊞** (Cupboard dry)

For single-layer fabrics. Garments can be folded or hung up in a cupboard.

### **⊞**<sup>+</sup> (Cupboard dry+)

For fabrics made of thick, multilayered items of clothing, which need to be dried longer. Garments can be folded or hung up in a cupboard. Laundry more dry than  $\boxplus$  (Cupboard dry).

# (Iron dry)

Normal, single-layered laundry that still needs to be damp after drying and is suitable for ironing or hanging up.

### **Speed**

Washing/drying in a shorter time while achieving a washing/drying result that is consistent with the normal performance.

Touch **Speed** to activate or deactivate this additional programme setting.

**Note:** With the additional **Speed** option activated, the maximum washing load will be reduced, and extra cooling water will be needed for the drying process.

### Eco

Washing with less energy while achieving a washing result that is consistent with the normal performance. Drying with less water while achieving a drying result that is consistent with the normal performance.

Touch **Eco** to activate or deactivate this additional programme setting.

**Note:** With the **Eco** additional programme setting activated, washing at lower temperatures over a longer period of time to conserve washing performance; drying with less water over a longer period of time to achieve drying result.

## (Prewash)

Prewash for heavily soiled laundry.

Touch **U** (**Prewash**) to activate or deactivate it.

Note: Put the detergent into dispenser I and II.

#### en

## (Rinse plus)

Settings that can be selected:

- +1 + 1 rinse cycle
- +2 + 2 rinse cycles
- +3 + 3 rinse cycles

Additional rinse cycles for particularly sensitive skin and/or for areas with very soft water.

Longer programme duration, due to additional rinse cycle.

The number of rinse cycles that the programme actually runs depends on the number that is set as a basic setting for the programme.

# (Hygiene care)

An innovative function, pretreat dry laundry by hot air (up to 65°C) for additional hygienic demands, followed by a low temperature washing cycle. Achieves both hygiene effect and fabric care. Suitable for most non-delicate textiles.

**Note:** During this process, the drum light will illuminate for approx. 10 minutes.

# (Easy iron)

Reduces creasing by means of a special spin sequence followed by fluffing and reduced spin speed.

Touch (Easy iron) and activate or deactivate it.

Note: If <u>(Easy iron)</u> has been activated, the laundry will have retained a higher than average level of moisture after spinning.

# (Water plus)

Increased water level for gentler treatment of the laundry.

Touch **(Water plus)** to activate or deactivate it.

### ☆ (Memory)

With memory you can save a selected programme with your favourite settings.

#### To store:

- 1. Switch on the appliance.
- 2. Select a programme.
- If required, change the programme default settings and/or select programme additional settings.
- **4.** Touch and hold ☆ (**Memory**) button for approx. three seconds.

The programme is saved if all of the settings flash briefly.

**Calling up**: touch ☆ (Memory) button briefly after you switch on the appliance.

**Reset**: touch and hold ☆ **(Memory)** button again for approx. three seconds after selecting the new programme and settings.

# **\$ (Silent)**

Function designed for noise reduction. Washing and drying process noise will be reduced, and ending signal will be switched off.

**Note:** If silent is selected for wash only, remaining moisture of the laundry will be slightly increased. The spin result may not be satisfying. Before hanging you can select **Spin** programme to further reduce moisture.

# Operating the appliance

### Preparing the appliance

The appliance was tested before delivery. To remove residual water from the test procedure, the first wash cycle should be run without laundry using the **Drum Clean** programme.


→ "Before washing for the first time" on page 20

### **Notes**

- Never switch on a damaged appliance!
- Inform customer service!
- 1. Insert mains plug.

# Warning Risk of death from electric shock! Risk of death if live parts are touched.

- Never pull out the mains plug by tugging the power cord.
- Insert/pull out the mains plug with dry hands only.
- 2. Turn the water tap on.

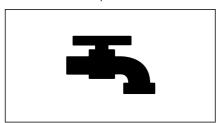

3. Open the appliance door.



### Switching on the appliance/ selecting a programme

Press the ① button till the indicator lamp lights up, release the button. The appliance is switched on.

The **Cottons** programme, which is preset at the factory, is then always displayed.

You can use this programme or select a different programme.

**Note:** If you have activated the childproof lock, you must deactivate it before you can set a programme.

Presettings and maximum load are indicated on the Touch-Display for the selected programme.

 
You can use the displayed presettings or adjust the selected programme optimally to the items of washing by changing the — "Programme default settings" on page 32 and/or selecting — "Additional programme settings" on page 33.

## Placing laundry into the drum

Insert the laundry.

Close the door.





#### **Notes**

- Unfold and load presorted items of laundry. Mix large and small items. Washing items of different size distribute themselves better during the spin cycle. Individual items of washing may cause an unbalanced load.
- Observe the maximum specified load. Overfilling adversely affects the washing/drying result and promotes creasing. Make sure that no items of laundry are trapped between the door and the rubber seal, and close the door.

# Dosing and adding detergent and care products

### Caution!

### Damage to the appliance

Detergents and agents for the pretreatment of laundry (e.g. stain remover, prewash sprays, etc.) may damage the surfaces of the appliance. Keep these agents away from the surfaces of the appliance. Using a damp cloth, immediately remove any fine spray residue and other residue/droplets.

### Dosing

Dose the detergents and care products according to:

- water hardness (ask your water supply company),
- the manufacturer's specifications on the packaging,
- the amount of laundry,
- soiling.

### Filling the dispensers


**1.** Pull out the detergent drawer.



### Eye / skin irritation!

If the detergent drawer is opened while the appliance is running, detergent/care product may run out. Carefully open the drawer. If detergent/care product comes into contact with eyes or skin, rinse thoroughly. If accidentally swallowed, seek medical advice.

Pour in detergent and/or cleaning product.

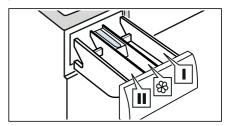

Dispenser I

Detergent for pretreat and clothing disinfectant. (only for the appliance with pretreat and disinfectant function)

Dispenser &

Softener, starch. Do not exceed

the maximum load.

Dispenser II

Detergent for main wash, water softener, bleach, stain remover.

#### **Notes**

- Always follow the manufacturer's instructions when dosing all detergents, cleaning aids, care products and cleaning agents.
- Dilute viscous fabric softener and fabric conditioner with water. This will prevent blockages.
- Be careful when opening the detergent drawer while the appliance is running.

## Starting the programme

Touch and hold D button for 1<sup>2</sup> seconds, then release the button. The programme starts and the appliance door is locked.

The **Finish in** time is shown in the Touch-Display and counts down until the programme starts. After the programme has started, the programme duration is displayed. And the displays for the programme's progress light up.

—> "Touch-Display" on page 24

#### Note: Foam detection

If the symbol also lights up in the Touch-Display, the appliance has detected too much foam during the wash cycle and automatically activated additional rinse cycles to remove the foam.

If you want to lock the programme to prevent it from being adjusted inadvertently, you can select the childproof lock.

## Childproof lock

You can lock the appliance to prevent the functions you have set from being changed inadvertently. To do this, activate the childproof lock.

To activate the childproof lock:

After the programme starts, Touch and hold the  $\hookrightarrow$  (3s) button for 3 seconds.

- (3s) lights up: The childproof lock is activated.
- (3s) flashes: If the programme and programme settings are adjusted while childproof lock is activated.

**Note:** When the programme ends, **End** is displayed. The door is unlocked. **○ (3s)** remain on to remind you to deactivate the childproof lock.

To deactivate the childproof lock:

Touch and hold the  $\hookrightarrow$  (3s) button until the  $\hookrightarrow$  (3s) indicator lamp is off.

# Adding/removing laundry

After starting the programme, you can add or remove laundry if necessary.

Touch the ▷M button. The appliance checks whether reloading is possible.

If the following appears on the Touch-Display:

- The symbol disappears, reloading is possible.
- The symbol lights up, reloading is not possible.

**To continue the programme, touch the** DIII button. The programme continues automatically.

#### **Notes**

- Do not leave the door open for too long when adding laundry as water from the laundry may leak out.
- For safety reasons, the door remains locked when the water level or temperature is high, or while the drum is turning, and it is not possible to add laundry during this time.

## Changing the programme

If you have started the wrong programme by mistake, you can change the programme as follows:

- 1. Touch the DM button.
- 2. Select another programme.
- And touch the DM button again. The new programme starts from the beginning.

**Note:** If drying is activated, you have to switch the appliance off and on again to change the drying programme.

# **Cancel the programme**

For programmes washing at high temperatures:

- 1. Touch the DM button.
- 2. To cool down laundry: Select Rinse.
- 3. Touch the DM button.

For programmes washing at low temperatures:

- 1. Touch the DM button.
- 2. Select Spin.
- 3. Touch the DII button.

For programmes in drying process:

- 1. Switch the appliance off.
- 2. Switch the appliance on again.
- To cool down laundry: Select the My Time + Dry.
- 4. Touch the DM button.

# Programme end

**End** lights up on the Touch-Display and DM and C displays are off.

If you have selected  $\mathscr{D}$ , the water is only drained after rinse process, no spin cycle.

#### **Notes**


- If Hot flashes in the display before the drying programme ends, the temperature in the drum is high. The programme for cooling the drum runs until the temperature in the drum has dropped.
- Wrinkle guard process starts after drying process is finished to prevent laundry getting wrinkle if you do not take laundry out in time. The process lasts about 30 minutes. PUSH, Ła and End will be displayed alternately on Touch-Display and ⑤ symbol will be displayed as the status symbol. You can touch any area of Touch-Display to terminate this process, then the door will be released and laundry can be taken out.

# Removing laundry/switching off the appliance

- Press the ① button till the indicator lamp turns off, release the button. The appliance is switched off.
- 2. Open the door and remove the laundry.
- Turn off the water tap.
   Note: Not required for Aqua-Stop models.

#### **Notes**

- Do not leave any items of laundry in the drum. They may shrink in the next wash or discolour another item.
- Remove any foreign objects from the drum and the rubber seal – risk of rusting.
- Wipe the rubber seal dry.

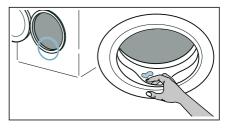

- Leave the door and detergent drawer open so that any residual water can evaporate.
- Always wait until the programme ends, as the appliance could still be locked. Then switch the appliance on and wait for it to unlock.


# **Appliance settings**
 
#### **Automatic switch-off**

If the appliance is not operated for a prolonged period (at least 20 minutes, depending on the water level inside of appliance), it will automatically switch off before the programme starts or after the programme has ended. Press the power button ① again to switch on the appliance.

## **Basic settings**

To access the basic settings, touch and hold the **\$\mathbb{S}\$ (Silent)** button for approx. 3 seconds. The control panel show:




You can change the following basic settings:

- The volume of the end signal.
- The volume of the buttons.
- The brightness of the Touch-Display.
- Switching the Drum Clean information signal on/off.

#### **End signal**

You can select position 1 and use the + button to adjust the volume of the end signal, e.g. *R-3*.

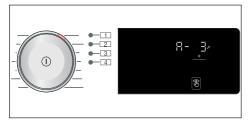


#### Possible setting values:

- 0 off
- 1 quiet
- 2 medium
- 3 loud
- 4 very loud

#### **Button signal**

You can select position **2** and use the + button to adjust the volume of the button signal, e.g. **b**-**3**.

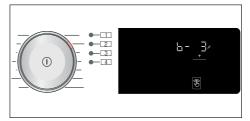


#### Possible setting values:

- 0 off
- 1 quiet
- 2 medium
- 3 loud
- 4 very loud

## **Brightness**

Possible setting values: 1 - 4

You can select position **3** and use the + button to adjust the brightness of the Touch-Display, e.g.  $\mathcal{L}$ - $\mathcal{A}$ .

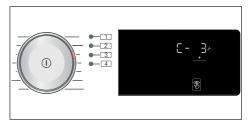


#### Possible setting values:

- 1 not very bright
- 2 normal level of brightness
- 3 bright
- 4 very bright

# Switching the drum-care information signal on/off

 You can select position **4** and use the + button to switch the **Drum Clean** information signal on or off, e.g. **d-** 1.



#### Possible setting values:

0 off 1 on



# Unbalanced load detection system

The automatic unbalanced load detection system detects imbalances and ensures even distribution of the laundry by repeatedly starting and stopping drum spinning.

If the laundry is extremely unevenly distributed, the spin speed is reduced or the spin cycle is not performed for safety reasons.

**Note:** Place large and small items of laundry evenly in the drum.





There is a risk of electric shock if touch live components.

Press the button ① and pull out the mains plug.

#### Caution!

#### Fire and explosion hazard!

Toxic vapours can be produced by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

#### Caution!

#### The appliance may be damaged!

Cleaning agents that contain solvents, e.g. cleaning solvent, can damage surfaces and components in the appliance.

Do not use cleaning agents that contain solvents.

# Appliance housing/control panel

- Remove the detergent residue immediately.
- Wipe the housing and the control panel with a soft, damp cloth.
- Do not use abrasive cloths, sponges or detergents (stainless steel cleaner).
- Do not clean the appliance with a water jet.

## **Drum**

Use chlorine-free cleaning agents, do not use steel wool.

If there are odours in the appliance, or to clean the drum, run the **Drum Clean 90°C** programme without laundry.


# **Descaling**

Descaling should not be necessary if the detergent is measured out correctly. However, if it is required, follow the manufacturer's instructions for the descaling agent. Suitable descalers can be obtained via our website or from customer services.


# Emptying the detergent draw, cleaning the detergent drawer and its housing

If the appliance contains detergent or fabric softener residues:


 Pull out the detergent drawer. Press down the insert and fully remove the drawer.

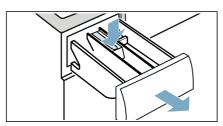


2. To remove the insert: Push the insert upwards from below with your finger.

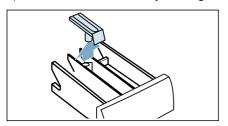


Clean the detergent dispenser tray and insert with water and a brush, and dry it. Clean the inside of the housing as well.

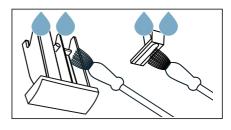

 Fit the insert and lock it in place (push the cylinder onto the guide pin).

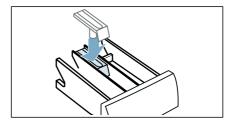

5. Push in the detergent drawer.

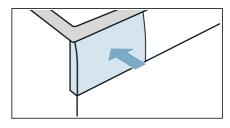


**Note:** Leave the detergent drawer open so that any residual water can evaporate.

#### en
 
# Drain pump is blocked


**Note:** Turn the water tap off to prevent more water from flowing in and to ensure that it is drained via the pump.



When you wash at high temperatures, the water gets very hot. If you come into contact with the hot water, you may be scalded.

Allow the water to cool down first.

- 1. Press the ① button. Pull out the mains plug.
- 2. Open the service flap.

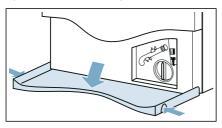


**3.** Take the drain hose out of the retainer.

Remove the sealing cap and pour the water out into a suitable container.


Replace the sealing cap and place the drain hose back in the retainer.




4. Carefully unscrew the pump cover; residual water may leak out. Clean the interior, pump cover thread and pump housing. The impeller in the drain pump must be able to rotate.

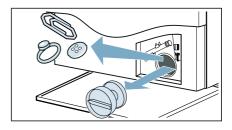

Refit and screw on the pump cover. The handle must be in a vertical position.

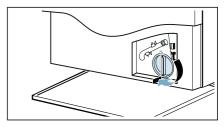


6. Close the service flap.

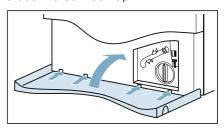

**Note:** To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into dispenser II and start the **Drain** programme.

# The drain hose at the siphon is blocked

- 1. Press the ① button. Pull out the mains plug.
- Loosen the hose clamp. Carefully remove the drain hose; residual water may leak out.
- 3. Clean the drain hose and siphon connecting piece.

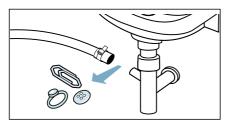

 Re-attach the drain hose and secure the connection point using the hose clamp.

# Filter in the water supply is blocked

# Release water pressure in the supply hose:


- 1. Turn off the water tap.
- 2. Select the **Cottons** (activate **Speed** setting) programme.

**Note:** If your appliance with intelligent dosing system\*, you also need to deactivate the intelligent dosing system.


- Select the DIII button. Allow the programme to run for approx. 40 seconds.
- 4. Press the button (1).
- 5. Pull out the mains plug.

#### Clean the filters:

1. Disconnect the hose from the rear of the appliance.

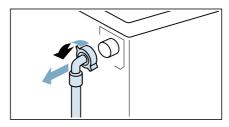


2. Use pliers to remove the filter.

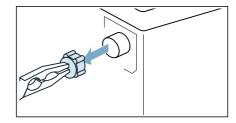

3. Clean the filter with a small brush.



Connect the hose and check for leaks.

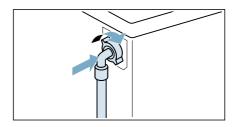



# **?** Faults and what to do about them

## **Emergency release**

E.g. power outage or in the event of a loss of power

The programme continues when the power supply is restored.

However, if the laundry has to be removed, the appliance door can be opened as follows:



# **M** Warning

### Risk of scalding!

When you are washing at high temperatures, there is a risk of scalding if you come into contact with hot water and laundry.

If possible, leave it to cool down first.

# **M** Warning Risk of injury!

Reaching into the drum while it is still turning may cause hand injuries. Do not reach into the drum when it is

Wait until the drum has stopped turning.


#### Caution!

#### Water damage!


Any escaping water may cause water damage.

Do not open the door if water can be seen through the glass.

- 1. Press the ① button. Pull out the mains plug.
- 2. Open the service flap.

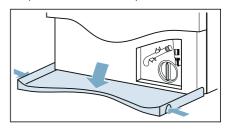

 - 3. Drain the water.  $\rightarrow$  Page 42
- 4. Pull the emergency release downwards with a tool and release. The door can then be opened.



# Information on the display panel

Display	Cause/Remedy
<b>C</b>	<ul> <li>Flashes fast + signal: The door was opened and the water level is too high. Close the door, continue the programme with ○</li></ul>
Hot	The temperature in the drum is too high. Wait for the appliance running to cool down the laundry till the <b>Hot</b> disappears on the display panel, then the door can be opened.
是	<ul> <li>■ Flashes (no water supply): Water tap turned on? Filter in the water supply is blocked?         → "Filter in the water supply is blocked" on page 43         Is the supply hose kinked or trapped?     </li> <li>■ Lights up (low water pressure): For information only. This will not affect the programme progress. The programme duration is extended.</li> </ul>
E:36 alternating with -10	<ul> <li>■ Drain pipe or water drain hose is blocked. Clean the drain pipe and the water outlet hose.</li> <li>■ Drain pipe or water drain hose is caught or jammed. Ensure that the drain pipe and water drain hose are not kinked or trapped.</li> <li>■ The drain pump is blocked.         <ul> <li>→ "Drain pump is blocked" on page 42</li> </ul> </li> <li>■ The drain hose at the siphon is blocked.             <ul> <li>→ "The drain hose at the siphon is blocked" on page 43</li> </ul> </li> <li>■ The water drain hose is connected too high. Install the water outlet hose at a maximum height of 1 meter.             <ul> <li>→ "Hose and cable lengths" on page 16</li> </ul> </li> </ul>
H:95 alternating with End when programme is finished	No water detected in drying phase, may get bad drying result.
H:32 alternating with End when programme is finished	The unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed. Distribute small and large items of laundry evenly in the drum.
<b>◯ (3s)</b> lights up	The childproof lock is activated – deactivate it.
🕾 lights up	Too much foam has been detected and an additional wash cycle has been activated. Add less detergent to the next washing cycle with the same load.

en

Display	Cause/Remedy
The indicator lamp of the <b>Drum Clean</b> pro- gramme flashes	Run the <b>Drum Clean 90°C</b> programme to clean and care for the drum and the outer tub.
	<ul> <li>Run the programme without laundry.</li> <li>Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergent designed for woollens or delicates.</li> <li>Switching the Drum Clean information signal on/off.</li> <li>—&gt; "Switching the drum-care information signal on/off" on page 40</li> </ul>
Other displays	Switch off the appliance, wait for five seconds and then switch it on again. If the display appears again, call customer service.

# Faults and what to do about them

Faults	Cause/Remedy
Water is leaking from the appliance.	<ul> <li>Attach the drain hose correctly or replace it.</li> <li>Tighten the screw fitting on the supply hose.</li> </ul>
The appliance is not filling with water.  Detergent is not being dispensed.	<ul> <li>■ Programme does not start?</li> <li>■ Is the water tap turned on?</li> <li>■ Could the filter in the water supply be blocked?</li> <li>→ "Filter in the water supply is blocked" on page 43</li> <li>■ Is the supply hose kinked or trapped?</li> </ul>
The wrong detergent/fabric softener has been poured into the dispenser(s).	Dispenser(s):  1. Empty and clean. 2. Refill.
Detergent/fabric softener has congealed in the dispensers.	Clean and refill the dispensers.
The door cannot be opened.	<ul> <li>■ The temperature in drum is too high to open the door.</li> <li>■ The safety function is activated. Stop the programme?</li> <li>■ The water level in drum is too high.</li> <li>■ Can the door only be opened by the emergency release?</li> <li>→ "Emergency release" on page 44</li> </ul>
The programme will not start.	<ul> <li>Have you touched the ▷⋂ button or selected ☺ (Finish in) time?</li> <li>Is the door closed?</li> <li>Childproof lock activated? Deactivate childproof lock.</li> <li>Shop mode activated? If the display shows ५hpP for 5 s after you have switched on or off the appliance, the appliance is in shop mode. Turn off the shop mode as follows:</li> <li>Switch the appliance off and on again.</li> <li>Wait for the display message ५hpP to disappear.</li> <li>Touch and hold ▷⋂ for at least 5 s.</li> <li>The appliance will automatically switch off. You can use the appliance now as usual.</li> </ul>

Faults	Cause/Remedy			
The programme has started and the drum is rotating, but the drum is not filling with water.	Not a fault – Some programme specifically detect and weigh the load after the program has started in order to calculate the optimum amount of water for washing. The drum will then start filling with water.			
The water is not draining.	<ul> <li>Drain pipe or water drain hose is blocked. Clean the drain pipe and the water drain hose.</li> <li>Drain pipe or water drain hose is caught or jammed. Ensure that the drain pipe and the water drain hose are not kinked or trapped.</li> <li>Could the drain pump be blocked?         <ul> <li>"Drain pump is blocked" on page 42</li> </ul> </li> <li>Could the drain hose at the siphon be blocked?         <ul> <li>"The drain hose at the siphon is blocked" on page 43</li> </ul> </li> <li> (Rinse hold = no final drain) is activated (depending on the module). Continue the programme by selecting Spin and pressing DD.</li> <li>The water drain hose is connected too high. Install the water drain hose at a maximum height of 1 meter.         <ul> <li>"Hose and cable lengths" on page 16</li> </ul> </li> </ul>			
Water is not visible in the drum.	Not a fault - the water is below the visible area.			
The spin result is not satisfactory. Laundry wet/too damp.	<ul> <li>Not a fault – the unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed. Distribute small and large items of laundry evenly in the drum.</li> <li>Is 2 (Easy iron) additional programme setting selected (depending on the model)?</li> <li>Is 3 (Silent) additional programme setting or Silent programme selected (depending on the model)?</li> <li>Is the selected spin speed too low?</li> </ul>			
The spin cycle runs several times.	Not a fault - the unbalanced load detection system is adjusting an imbalance.			
Residual water in the dispenser for care product.	<ul> <li>Not a fault – effect of the care product not impaired.</li> <li>If required, remove the insert. Clean the detergent drawer and re-insert it.</li> </ul>			
Compartment & is not rinsed out completely.	Remove the insert. Clean the detergent drawer and reinsert it.			
The programme is taking longer than usual.	<ul> <li>Not a fault – the unbalanced load detection system is adjusting an imbalance by repeatedly distributing the laundry.</li> <li>Not a fault – the foam detection system is activated – a rinse cycle has been switched on.</li> </ul>			
The length of the programme changes during the wash/dry cycle.	Not a fault – the programme sequence is optimised for the specific washing/drying process. This may change the length of the programme shown on the Touch-Display.			

# en Faults and what to do about them

Faults	Cause/Remedy			
Foam may come out of the detergent drawer.	Too much detergent used?  Mix 1 tablespoon of fabric softener with ½ litre of water and pour into dispenser II. (Not for outdoor, sports and down-filled textiles!)  Reduce detergent dosage for the next wash cycle.  Use commercially available low foam detergent and care product which are suitable for machine.			
Odours, stain formation in the appliance.	Run the <b>Drum Clean 90°C</b> programme without laundry.  Add washing powder or a detergent containing bleach. <b>Note:</b> To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.			
Loud noises, vibrations and appliance "movement" during the spin cycle.	<ul> <li>Is the appliance aligned?</li> <li>→ "Alignment" on page 19</li> <li>Are the appliance's feet fixed? Secure the appliance's feet.</li> <li>Have the transport locks been removed?</li> <li>→ "Removing the transport locks" on page 14</li> </ul>			
The Touch-Display indicator lights do not work while the appliance is running.	<ul> <li>Circuit breaker fuses blown? Reset/replace the fuses.</li> </ul>			
There is detergent residue on the laundry.	<ul> <li>Some phosphate-free detergents contain water-insoluble residue.</li> <li>Select Rinse or brush the laundry after washing.</li> </ul>			
Spin noise during the drying phase.	This is an innovative process known as thermal spinning used to reduce energy consumption during the drying phase.			
Fluff found on the laundry.	Run the <b>Drum Clean *</b> (cold) programme without laundry and detergent to remove fluff which have accumulated inside the drum during the previous drying cycle.			
Water inlet noise during the drying phase.	The washer dryer uses water condensation technology, water is constantly needed to dry the laundry. Therefore the water tap must be on all the time, till the end of the drying phase.			
Drying duration extended.	<ul> <li>Run the <b>Drum Clean</b> &amp; (cold) programme to remove fluff which has collected in the washer drum during the drying phase.</li> <li>If the ambient temperature is higher than 30 °C, this may extend the drying time.</li> <li>Insufficient air circulation in the room may increase the drying time. Ventilate the room.</li> </ul>			
Drying programme does not start.	<ul><li>Drying additional programme setting not selected?</li><li>Door not closed properly?</li></ul>			
Creasing.	<ul> <li>Creasing occurs when you have exceeded the maximum load or selected the wrong program for the type of fabric. All the required information can be found in the programme overview table.</li> <li>Remove clothes immediately after drying; creasing may occur if they are left in the drum.</li> </ul>			

Faults	Cause/Remedy				
The drying result is not satisfactory (laundry is not dry enough).	<ul> <li>After the end of the programme, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse.</li> <li>Excessively high ambient temperature (above 30 °C) or inadequate ventilation in the room in which the washer dryer is situated.</li> <li>The laundry has not been spun well enough before drying. Always set the highest selectable spin speed for the particular washing programme.</li> <li>Washer dryer overloaded: Observe the recommendations for the maximum load in the programme table and on the load display. Do not overload the washer dryer, as the maximum load for the drying phase is less than the maximum load for the wash cycle. Unload the washer dryer after washing with the maximum load and divide the laundry into two drying cycles.</li> <li>The power supply voltage is too low (below 200 V) – provide a suitable power supply.</li> <li>The water pressure is low. According to water condensing principle, low water pressure will cause evaporated steam to not condense properly and completely.</li> <li>The water tap is closed during drying. Due to the use of the water condensation technology for drying, please keep the connected water tap open during the drying process, otherwise proper drying cannot be guaranteed.</li> </ul>				
	Thick multilayered textiles or textiles with thick fillings dry easily on the surface, but not inside. This equalisation process may take longer. For these types of textiles, select drying mode  (Cupboard dry+) or select My Time with Dry.				

If you cannot rectify a fault yourself (after switching the appliance off and on again) or a repair is required:

- Switch off the appliance and pull out the mains plug.
- Turn off the water tap and call customer service.

# 60

# After-sales service

If you cannot rectify a fault yourself, (→ "Faults and what to do about them" on page 44), please contact our aftersales service.

We will always find an appropriate solution to avoid unnecessary visits by engineers.

Please provide the after-sales service with the product number (E-Nr.) and the production number (FD) of the appliance.

E-Nr	FD

E-Nr. Product number FD Production number

You can find this information (depending on the model):

- On the inside of the loading door
- On the back of the appliance

**Trust the expertise of the manufacturer.** Contact us. By doing so, you can be sure that the repairs are carried out by trained service personnel using genuine spare parts.



# Energy and water consumption, programme duration and residual moisture for the main washing programmes

(approximate values)

Programme	Load	Energy consump- tion*	Water consump- tion*	Programme duration*
Cottons 20 °C	10,0 kg	0,39 kWh	81	31/4 h
Cottons 40 °C ***	10,0 kg	1,32 kWh	811	3½ h
Cottons 40 °C + Eco **	5,0 kg	0,57 kWh	47 I	53⁄4 h
Cottons 60 °C + Eco **	5,0 kg	0,64 kWh	47	53/4 h
Cottons 60 °C + Eco **	10,0 kg	0,95 kWh	60 I	6½ h
Cottons 60 °C	10,0 kg	1,52 kWh	81	31/4 h
Cottons 90 °C	10,0 kg	2,70 kWh	96 I	3 h
Easy Care 40 °C ***	4,0 kg	0,80 kWh	69 I	2½ h
Mix 40 °C	4,0 kg	0,63 kWh	50 I	11⁄4 h
Abaya 30 °C	2,0 kg	0,21 kWh	351	3∕₄ h
₩ Wool 30 °C	2,0 kg	0,21 kWh	411	3∕₄ h

Values determined according to the valid version of IEC60456.

- \* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.
- \*\* Program settings with maximum spin speed for testing and energy labeling in accordance with SA-SO2885 with cold water (15°C). The programs are suitable for the cleaning of normally soiled cotton textiles and regarding the combination of energy and water consumption the most effective. The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the indicated programme temperature for reasons of saving energy. The washing efficiency corresponds to the legal requirements.

\*\*\* Information for the testing institutes: For a test based on the valid standard EN60456, the maximum speed must be selected and automatic dosing deactivated, unless this function is the subject of the test.

# Technical data

#### **Dimensions:**

848 mm x 598 mm x 620 mm (height x width x depth)

#### Weight:

84 kg

#### Mains connection:

Nominal voltage 220-240V, 60 Hz Minimum installation protection (⇒)10

Nominal power 1900-2300 W

#### Water pressure:

100-1000 kPa (1-10 bar)



# Aqua-Stop warranty

#### Only for appliances with Agua-Stop

In addition to warranty claims against the vendor based on the purchase agreement and to our appliance warranty, we will provide compensation under the following conditions:

- 1. If water damage is caused due to a fault in our Aqua-Stop system, we will compensate domestic customers for the damage caused.
- 2. The liability guarantee is valid for the service life of the appliance.
- 3. It is a prerequisite of all warranty claims that the appliance with Aqua-Stop must have been installed and connected correctly in accordance with our instructions; this also includes a correctly fitted Aqua-Stop extension (genuine accessories). Our warranty does not cover defective feed lines or fittings leading to the Agua-Stop connection at the tap.
- 4. Appliances with Aqua-Stop do not need to be supervised during operation, nor secured afterwards by turning off the tap. The tap only needs to be turned off if you are away from home for a long period, e.g. for several weeks' holiday.



# Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- · Expert tips & tricks for your appliance
- · Warranty extension options
- Discounts for accessories & spare-parts
- Digital manual and all appliance data at hand
- Easy access to Bosch Home Appliances Service

Free and easy registration – also on mobile phones: **www.bosch-home.com/welcome** 



# Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you: www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

## BSH Hausgeräte GmbH

Carl-Wery-Straße 34 81739 München, GERMANY www.bosch-home.com

A Bosch Company

