

## Overview of programs

Programmes and fabrics	Maximum load size	Use softener?
<b>Cotton</b>  Hard-wearing items made from cotton, linen or blended fabrics. When used for a light load (* max. 5 kg) with the <b>Speed</b> setting, this programme is suitable as a quick programme for lightly soiled laundry.	9 kg/5 kg*	Yes
<b>Cottons Eco</b>  Hard-wearing items made from cotton, linen or blended fabrics. For energy-saving reasons, the actual washing temperature may differ from the washing temperature that has been set. The washing performance meets legal requirements.	9 kg	Yes
<b>Easy-care</b>  Items made from synthetic or blended fabrics.	4 kg	Yes
<b>Delicate/Silk</b>  Delicate, washable items made from silk, viscose or synthetic fabrics. <b>Notes</b> <ul style="list-style-type: none"> <li>■ Particularly delicate items should be washed in a mesh washing bag.</li> <li>■ Use a detergent that is suitable for machine-washing delicate fabrics or silk.</li> </ul>	2 kg	Yes
<b>Wool</b>  Hand- and machine-washable items made from wool or containing wool. Particularly gentle washing programme with longer pauses in the programme to prevent laundry from shrinking. <b>Note:</b> Use a detergent that is suitable for machine-washing wool.	2 kg	Yes
<b>Quick/mix</b>  Items made from cotton, linen, or synthetic or blended fabrics.	4 kg	Yes
<b>Easy-Care stains</b> Items made from synthetic or blended fabrics. The temperature variation, soaking time and drum movement are all adjusted to suit the type of stain. <b>Notes</b> <ul style="list-style-type: none"> <li>■ Do not let stains dry.</li> <li>■ Remove any solid residues before washing.</li> </ul>	4 kg	Yes

<p><b>Outdoor/Waterproofing</b></p> <p>Weatherproof or outdoor clothing made using membrane technology or water-resistant fabrics. Suitable for washing and then waterproofing.</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>■ Use a special detergent for outdoor textiles.</li> <li>■ Use a waterproofing agent suitable for machine-washing.</li> </ul> <p>Proceed as follows:</p> <ol style="list-style-type: none"> <li>1. Set a programme.</li> <li>2. Pour special detergent into the compartment for manual dosing.</li> <li>3. Press Start/Pause .</li> <li>4. The programme stops before the final rinse cycle. Add a waterproofing agent into the compartment for manual dosing.</li> <li>5. Press Start/Pause  again.</li> <li>6. After-treat the laundry in accordance with the manufacturer's instructions.</li> </ol>	<p>1 kg</p>	<p>No</p> <p>Clean the compartment for manual dosing in the detergent drawer before washing.</p>
<p><b>Rinse/Spin/Drain</b> </p> <p>Combined programme: Rinses and then spins the laundry, and then pumps out the water.</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>■ The <b>Rinse</b> programme, after which the laundry is spun and the water is pumped out, has been preactivated.</li> <li>■ If you only want to rinse the laundry and pump out the water, set the spin speed to <b>0</b>.</li> <li>■ If you only want to spin the laundry and pump out the water, deactivate the <b>Rinse Plus</b>  setting.</li> <li>■ If you only want to pump out the water, deactivate the <b>Rinse Plus</b>  setting and set the spin speed to <b>0</b>.</li> </ul>	<p>—</p>	<p>Yes when using the <b>Rinse</b> programme</p>
<p><b>Drum Clean</b> </p> <p>Programme for cleaning and caring for the drum, e.g.:</p> <ul style="list-style-type: none"> <li>■ Before using the appliance for the first time</li> <li>■ If you regularly wash at temperatures of 40 °C or lower, or</li> <li>■ If you have been away for an extended period and odours have built up.</li> </ul> <p>The drum cleaning indicator will flash to remind you if you have not used a programme at 60 °C or higher for a long time.</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>■ Run the programme without laundry.</li> <li>■ Use standard washing powder or a detergent that contains a bleaching agent. Halve the amount of detergent to reduce foaming.</li> <li>■ Do not use liquid detergent or detergent that is intended for woolens or delicates.</li> </ul>	<p>0 kg</p>	<p>No</p>
<p><b>Super 15'/30'</b></p> <p>SuperQuick programmes lasting approx. 15/30 minutes for items made from cotton or synthetic or blended fabrics. Suitable for lightly soiled laundry.</p> <p><b>Note:</b> If you want to use the <b>Super 15'</b> programme, activate the <b>Speed</b> setting.</p>	<p>2/4 kg</p>	<p>Yes</p>

<b>Shirts/Blouses / Shirts/Business</b> Non-iron shirts/blouses made from cotton, linen, or synthetic or blended fabrics. Shirts/blouses are only given a short spin with the <b>Easy-Iron</b>  setting. They can then be hung up to dry while still dripping wet. The self-smoothing effect eliminates or reduces the need for ironing. <b>Note:</b> Use the Delicates/Silk programme to wash shirts/blouses made from silk or delicate fabrics.	2 kg	Yes
<b>AllergyPlus</b>  Hard-wearing items made from cotton, linen or blended fabrics. Suitable for allergy sufferers and for strict hygiene requirements. Once the selected temperature has been reached, it remains constant throughout the washing process.	6,5 kg	Yes
<b>Automatic</b>  Hard-wearing items made from cotton or synthetic or blended fabrics. Programme for normal laundry treatment at temperatures of up to 40 °C. The degree of soiling and the type of fabric are automatically detected and the washing sequence and intelligent dosing are adjusted accordingly.	6 kg	Yes

## Possible program settings

Programme	Max. temperature	Max. speed			Rinse Plus 	Prewash 	Soaking 	Rinse Stop 	Easy-Iron 	Speed
Cotton 	90	1400	●	●	●	●	●	●	●	●
Cottons Eco 	90	1400	●	●	●	●	●	●	●	-
Easy-care 	60	1200	●	●	●	●	●	●	●	●
Delicate/Silk 	40	800	●	●	●	●	●	●	●	-
Wool 	40	800	-	●	-	-	-	●	-	-
Quick/mix 	60	1400	●	●	●	●	●	●	●	●
Easy-Care stains	40	1200	●	●	●	●	●	●	●	●
Outdoor/Waterproofing	40	800	-	-	●	-	-	●	-	-
Rinse/Spin/Drain 	-	1400	-	●	●	-	-	●	●	-
Drum Clean 	-	1200	-	-	-	-	-	-	-	-
Super 15'/30'	40	1200	●	●	●	-	-	●	-	●
Shirts/Blouses / Shirts/Business	60	800	●	●	●	●	●	●	●	-
AllergyPlus 	60	1400	●	●	●	●	●	●	●	●
Automatic 	40	1400	●	●	-	-	-	●	-	-

- Can be activated/deactivated
- Cannot be activated/deactivated



## Consumption values

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Programme duration*	Approximate residual moisture values***
	in kg	in kWh	in l	in Std	in %
Cotton 20 °C	9	0,36	90	3 ¼	53
Cotton 40 °C	9	1,20	90	3 ¾	53
Cotton 60 °C	9	1,30	90	3	53
Cottons Eco + <img alt="40°C icon" data-bbox="198 308 228 323"/>**	4,5	0,44	46	4 ¾	53
Cottons Eco + <img alt="60°C icon" data-bbox="198 331 228 346"/>**	4,5	0,59	46	4 ¾	53
Cottons Eco + <img alt="60°C icon" data-bbox="198 354 228 369"/>**	9	0,90	57	4 ¾	53
Cotton 90 °C	9	2,35	100	3	53
Easy-care 40 °C	4	0,78	61	2	40
Quick/mix 40 °C	4	0,64	44	1 ¼	60
Delicate/Silk 30 °C	2	0,21	34	¾	30
Wool 30 °C	2	0,24	42	¾	45

Values determined in accordance with EN60456

\* The observed values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type, amount and soiling of laundry, the detergent used, fluctuations in the mains voltage and which additional functions are selected.

\*\* Programme setting at maximum speed for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C) and for deactivated automatic dosing (i-DOS). These programmes are suitable for cleaning normally soiled cotton items and are the most efficient in terms of combined energy and water consumption.

The stated programme temperature is based on the temperature indicated on the care label for the laundry. The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance meets legal requirements.

\*\*\* The stated residual moisture is based on the maximum spin speed and load of each individual programme.

**WAT286H9IN**

**9001534568 (0001)**

