



Washing machine

WAX32LH0HK

[en]

User manual and installation instructions

Table of contents

| 1 Safety 4 | 10 Before using for the |
|--|---|
| 1.1 General information | first time |
| 1.3 Restriction on user group 4 | cycle34 |
| 1.4 Safe installation 5 | |
| 1.5 Safe use 7 | 11 Laundry |
| 1.6 Safe cleaning and mainten- | 11.1 Preparing the laundry |
| ance9 | 11.2 Sorting laundry |
| 2 Preventing material damage 11 | 11.4 Degrees of soiling |
| | 11.5 Care symbols on the care |
| 3 Environmental protection and saving energy12 | labels 36 |
| 3.1 Disposing of packaging | 12 Detergents and care |
| 3.2 Save energy and conserve | products 37 |
| resources12 | 12.1 Detergent recommendation 37 |
| 3.3 Energy saving mode12 | 12.2 Detergent dosage 38 |
| 4 Installation and connection 13 | 13 Basic operation 39 |
| 4.1 Unpacking the appliance 13 | 13.1 Switching on the appliance 39 |
| 4.2 Contents of package14 | 13.2 Setting a programme39 |
| 4.3 Requirements for the install- | 13.3 Adjusting the programme |
| ation location14 | settings39 |
| 4.4 Removing the transit bolts 15 | 13.4 Loading laundry |
| 4.5 Removing the transport | 13.5 Using a measuring aid for liquid detergent |
| struts | 13.6 Use the measuring aid for |
| 4.7 Aligning the appliance | liquid detergent40 |
| 4.8 Connecting the appliance to | 13.7 Adding detergent and care |
| the electricity supply19 | product 41 |
| 5 Familiarising yourself with | 13.8 Starting the programme 41 |
| your appliance 20 | 13.9 Soaking laundry |
| 5.1 Appliance20 | 13.10 Adding laundry |
| 5.2 Detergent drawer21 | gramme |
| 5.3 Controls 21 | 13.12 Resuming the programme |
| 6 Display 22 | when the programme |
| • • | status is Rinse Hold |
| 7 Buttons 25 | 13.13 Unloading the laundry 42 |
| 8 Programmes 27 | 13.14 Switching off the appliance42 |
| 0. Accessories 24 | G00 |
| | |

| 14 Childproof lock |
|---|
| 14.1 Activating the childproof lock43 |
| 14.2 Deactivating the childproof |
| lock43 |
| 15 Home Connect 43 |
| |
| 15.1 Home Connect settings 44 15.2 Connecting the appliance |
| to a WLAN home network |
| (Wi-Fi) with WPS function 44 |
| 15.3 Connecting the appliance |
| to a WLAN home network |
| (Wi-Fi) without WPS func- |
| tion 44 |
| 15.4 Connecting your appliance |
| to the Home Connect app 45 |
| 15.5 Connecting the appliance |
| to the energy manager |
| 15.6 Activating Wi-Fi on the appliance |
| 15.7 Deactivating Wi-Fi on the |
| appliance |
| 15.8 Software update |
| 15.9 Resetting the appliance |
| network settings 47 |
| 15.10 Remote diagnostics 47 |
| 15.11 Data protection 47 |
| 16 Basic settings 49 |
| 16.1 Overview of basic settings 49 |
| 16.2 Changing the basic set- |
| tings50 |
| _ |
| 17 Cleaning and servicing 50 |
| 18 Troubleshooting 57 |
| 19 Transportation, storage and |
| disposal 66 |
| 19.1 Removing the appliance 66 |
| 19.2 Inserting the transit bolts 66 |
| 19.3 Using the appliance again 67 |
| 19.4 Disposing of old appliance 67 |

| 20 Customer Service | 68 |
|-----------------------------|----|
| 21 Consumption values | 69 |
| 22 Technical specifications | 69 |

en



1 Safety

Observe the following safety instructions.

1.1 General information



- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:

- For washing machine-washable fabrics and hand-washable wool in accordance with the care label.
- With tap water and commercially available detergents and care products suitable for washing machines.
- In private households and in enclosed spaces in a domestic environment.
- Up to an altitude of max. 4000 m above sea level.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Children must not play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Keep children under the age of 3 years and pets away from the appliance.

1.4 Safe installation

Take note of the safety instructions when installing the appliance.

Improper installation is dangerous.

- ► Connect and operate the appliance only in accordance with the specifications on the rating plate.
- ► Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ► The protective conductor system of the domestic electrical installation must be properly installed. The installation must have a sufficiently large cross section.
- ▶ When using a residual current circuit breaker, only use a type with the mark.
- ► Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an all-pole isolating switch must be installed in the permanent electrical installation according to the installation regulations.
- ▶ When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.

- ► Never let the power cord come into contact with hot appliance parts or heat sources.
- ► Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ▶ If the power cord is too short, contact Customer Service.
- ▶ Only use adapters approved by the manufacturer.

⚠ WARNING – Risk of injury!

The high weight of the appliance may result in injury when lifted.

▶ Do not lift the appliance on your own.

If this appliance is not correctly installed in a washer-dryer stack, the installed appliance may fall.

- ► Only stack the dryer on a washing machine using the connection kit from the dryer manufacturer. No other installation method is permitted.
- ➤ Do not install the appliance in a washer-dryer stack if the dryer manufacturer does not offer a suitable connection kit.
- ▶ Do not install appliances from different manufacturers and with varying depths and widths in a washer-dryer stack.
- ▶ Do not install a washer-dryer stack on a platform; the appliances may tip over.

△ WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ► Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

⚠ CAUTION – Risk of injury!

The appliance may vibrate or move when in use.

- ▶ Place the appliance on a clean, even, solid surface.
- ▶ Align the appliance using the appliance feet and a spirit level. If hoses and power cords have been laid incorrectly, this causes a tripping hazard.
- ► Lay hoses and power cords in such a way that there is no risk of tripping.

If the appliance is moved by holding onto protruding components, such as the appliance door, the parts may break off.

▶ Do not move the appliance by holding onto protruding parts.

△ CAUTION – Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

▶ Do not touch the sharp edges on the appliance.

► Wear protective gloves when installing and transporting the appliance.

1.5 Safe use

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box and turn off the water tap.
- ► Call Customer Service. → Page 68
- ► Repairs to the appliance should only be carried out by trained specialist staff.

An ingress of moisture can cause an electric shock.

- ▶ Only use the appliance in enclosed spaces.
- ▶ Never expose the appliance to intense heat or humidity.
- ▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

⚠ WARNING – Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ▶ Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- ▶ With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

Children may breathe in or swallow small parts, causing them to suffocate.

- ► Keep small parts away from children.
- ▶ Do not let children play with small parts.

△ WARNING – Risk of poisoning!

Detergents and care products may result in poisoning if consumed.

- ▶ If accidentally swallowed, seek medical advice.
- ► Keep detergents and care products out of the reach of children.

⚠ WARNING – Risk of explosion!

Laundry that has been pretreated with cleaning agents that contain solvents may cause an explosion in the appliance.

► Rinse pretreated laundry thoroughly with water before washing.

△ CAUTION – Risk of injury!

The covering plate may break if you stand on or climb onto the appliance.

▶ Do not stand on or climb onto the appliance.

The appliance may tip over if you sit on or lean against the open door.

- ▶ Do not sit on or lean against the appliance door.
- ▶ Do not place any objects on the appliance door.

Reaching into the drum while it is still turning may cause hand injuries.

▶ Wait for the drum to come to a complete stop before reaching inside.

⚠ CAUTION – Risk of burns!

When washing at high temperatures, the glass in the appliance door becomes hot.

- ▶ Do not touch the appliance door when it is hot.
- ► Keep children away from the appliance door when it is hot.

△ CAUTION – Risk of scalding!

When you wash at high temperatures, the detergent solution gets hot.

▶ Do not touch the hot detergent solution.

△ CAUTION – Risk of injury!

This appliance runs programmes that use active oxygen. Active oxygen can cause eyes to water and irritate the mucosa.

- ▶ Do not open the appliance door using the emergency release if a programme is running with active oxygen.
- ▶ Wait for the appliance door to be released.

△ CAUTION – Risk of chemical burns!

If the detergent drawer is opened, detergent and care products may spray out from the appliance. Contact with eyes or skin may cause irritation.

- ► Rinse eyes and/or skin thoroughly with clean water if they come into contact with detergents or care products.
- ► If accidentally swallowed, seek medical advice.
- ► Keep detergents and care products out of the reach of children.

1.6 Safe cleaning and maintenance

Take note of the safety instructions when cleaning and performing maintenance work on the appliance.

Improper repairs are dangerous.

- ► Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

An ingress of moisture can cause an electric shock.

▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

⚠ WARNING – Risk of injury!

The use of non-original spare parts and non-original accessories is dangerous.

► Only use the manufacturer's original spare parts and original accessories.

⚠ WARNING – Risk of poisoning!

Poisonous fumes may be given off if you use cleaning agents that contain solvents.

▶ Do not use cleaning agents that contain solvents.

2 Preventing material damage

Follow these instructions to avoid material damage and damage to the appliance.

ATTENTION!

The functionality of the appliance may be impaired if you use the wrong quantity of fabric softener, detergent, care product or cleaning agent.

Follow the dosage recommendations from the manufacturer.

Exceeding the maximum load capacity impairs the function of the appliance.

- Observe the maximum load capacity → Page 27 for each programme and do not exceed it. The appliance is secured for transportation using transit bolts. Transit bolts which have not been removed may result in material damage and damage to the appliance.
- Before starting up the appliance. remove the transit bolts completely and keep them in a safe place.
- Before transport, fit the transit bolts fully in order to prevent damage in transit.

Material damage may be caused if the water inlet hose is connected incorrectly.

- Tighten the screw connections on the water inlet until they are handtight.
- ► Ideally, connect the water inlet hose directly to the water tap, without any additional connecting elements such as adapters, extensions, valves or similar.
- Make sure that the valve housing for the water inlet hose does not come into contact with its surroundings and is not subjected to any external forces.

- Ensure that the inner diameter of the water tap is at least 17 mm.
- Make sure that the length of the thread on the connection to the water tap is at least 10 mm.

If the water pressure is too high or too low, the appliance may not be able to operate properly.

- ► Make sure that the water pressure in the water supply system is min. 100 kPa (1 bar) and max. 1000 kPa (10 bar).
- ▶ If the water pressure exceeds the maximum value specified, a pressure-reducing valve must be installed between the drinking water connection and the hose set of the appliance.
- ▶ Do not connect the appliance to the mixer tap of an unpressurised hot-water boiler.

Modified or damaged water hoses may result in material damage and damage to the appliance.

- Never kink, crush, modify or cut through water hoses.
- Only use the water hoses supplied with the appliance or genuine spare hoses.
- ▶ Never re-use water hoses that have been used before.

Operating the appliance using water that is dirty or too hot may cause material damage.

 Only operate the appliance with cold mains water.

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive detergents.
- ▶ Do not use cleaning products with a high alcohol content.
- Do not use hard scouring pads or cleaning sponges.
- Clean the appliance with nothing but water and a soft, damp cloth.

► Remove all detergent residue, spray residue or other residues immediately if they come into contact with the appliance.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

 Sort the individual components by type and dispose of them separately.

3.2 Save energy and conserve resources

If you follow these instructions, your appliance will use less electricity and less water.

Choose programmes with low temperatures and longer wash times and use maximum load capacity

- → Page 27.
- Energy consumption and water consumption is most efficient.

Use the economy programme settings.

If you adjust the programme settings for a programme, the display shows the expected consumption.

Add → Page 38 detergent based on the laundry's degree of soiling.

For light to normal soiling, a smaller amount of detergent is sufficient. Observe the dosage recommendation from the detergent manufacturer.

Reduce the washing temperature for lightly and normally soiled laundry.

At low temperatures, the appliance consumes less energy. For light to normal soiling, lower temperatures than indicated on the care label are also sufficient.

Set the maximum spin speed if you want to dry the laundry in a tumble dryer afterwards.

✓ The drier the laundry, the shorter the programme duration when drying which, in turn, reduces energy consumption. A higher spin speed reduces the residual moisture in the laundry and increases the volume of the spin noise.

Wash the laundry without prewash.

 Washing with prewash increases the programme duration and increases energy and water consumption.

The appliance has a continuous automatic load adjustment function.

Depending on the type of fabric and load capacity, the continuous automatic load adjustment function optimally adjusts the water consumption and programme duration.

3.3 Energy saving mode

If you do not use the appliance for an extended period, it automatically switches to energy-saving mode. All displays go out and **Start/Reload** DIII flashes.

Energy-saving mode ends when you use the appliance again, e.g. if you open or close the door.

If you do not use the appliance for an extended period, the appliance switches off automatically.

Note: If Wi-Fi is activated, the appliance will not switch itself off automatically.

4 Installation and connection

4.1 Unpacking the appliance

Note: Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.

ATTENTION!

Objects remaining in the drum that are not designed for operation with the appliance may cause material damage and damage to the appli-


Remove these objects, along with all supplied accessories, from the drum before starting the appliance. 1. Remove any packaging and protective covers completely from the appliance.

For the environmentally friendly disposal of the packaging materials, observe the information on the topic of

- → "Disposing of packaging", Page 12.
- 2. Check the appliance for visible damage.
- 3. Open the door. → "Basic operation", Page 39
- 4. Remove the accessory from the drum.
- 5. Close the door.

4.2 Contents of package

After unpacking all parts, check for any damage in transit and completeness of the delivery.

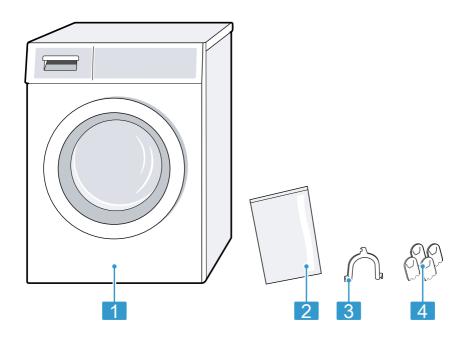

- Washing machine
- 2 Accompanying documents
- 3 Elbow for fixing the water outlet hose
- 4 Cover caps

4.3 Requirements for the installation location

The appliance may "wander" when it spins. Observe the instructions for the installation location.

Note: Please read the information in the Safety \rightarrow *Page 4* and Preventing material damage \rightarrow *Page 11* sections to ensure that you use the appliance safely.

/!\ WARNING Risk of electric shock!

The appliance contains live parts. Touching live parts is dangerous.

▶ Do not operate the appliance without a cover cap.

⚠ WARNING Risk of injury!

When using the appliance on a base, the appliance may tip over.

► Always secure the feet of the appliance to a base using the manufacturer's fixing brackets → Page 34 before using the appliance for the first time.

ATTENTION!

If the appliance is installed in areas exposed to frost or outdoors, frozen residual water may damage the appliance and frozen hoses may crack or split.

Do not install or operate this appliance anywhere that is liable to experience frost and/or outdoors.

The appliance underwent a function test before leaving the factory and may, therefore, contain residual water. This residual water may leak out if the appliance is tilted at an angle greater than 40°.

► Tilt the appliance carefully.

Installation loca- Requirements tion

On a base



Secure the appliance with fixing brackets

→ Page 34.

 
Installation loca- Requirements tion

On a wooden ioist floor




Place the appliance on a waterresistant wooden board which is screwed tightly to the floor. The wooden board should be at least 30 mm thick

In a kitchen unit



- A niche width of 60 cm is reauired.
- Only install the appliance underneath a continuous worktop that is securely connected to adjacent cabinets.

 On a wall



Do not trap the hoses between the wall and the appliance.

4.4 Removing the transit bolts


The appliance is secured for transportation using transit bolts on the rear of the appliance.

Notes


- Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.
- Keep the transit bolts, screws and sleeves in a safe place for future transport → Page 66.

en Installation and connection


1. Pull the hoses out of the holders.

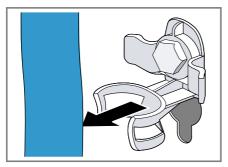


2. Unscrew ① and remove ② all four screws for the transit bolts with a WAF 13 wrench.

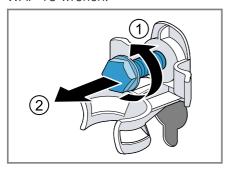

3. Pull the power cord out of the holder.

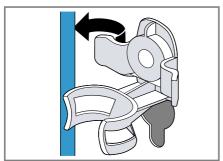


4. Remove the four sleeves.

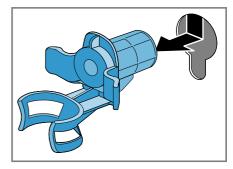

5. Put on the four cover caps.




6. Press down on the four cover caps.

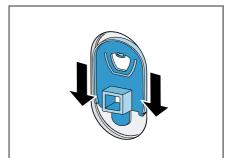


4.5 Removing the transport struts

Note: Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.


1. Unscrew and remove the screws in the vertical transport struts using a T20 screwdriver.

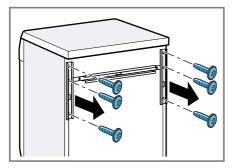


2. Remove the transport struts.

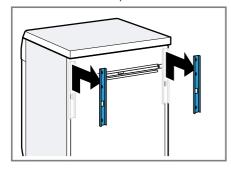

3. Undo and remove the screws in the horizontal transport strut using a T20 screwdriver.

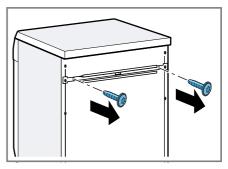

4. Remove the transport strut.

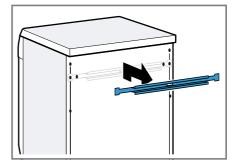

4.6 Connecting the appliance

Connect your appliance to the power supply, water inlet and water outlet.

Connecting the water inlet hose


Note: Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.

/!\ WARNING Risk of electric shock!

The appliance contains live parts. Touching live parts is dangerous.

► Do not immerse the electrical AguaStop valve in water.

1. Connect the water inlet hose to a tap (26.4 mm = 3/4").

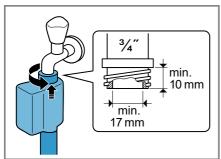

2. Open the water tap carefully and check that the connection points are tight.

Water outlet connection types

This information is intended to help you to connect this appliance to the water outlet.

Note: Please read the information in the Safety \rightarrow *Page 4* and Preventing material damage \rightarrow *Page 11* sections to ensure that you use the appliance safely.

 
ATTENTION!

When draining, the water outlet hose is subject to water pressure and may come loose from the installed connection point.

 Secure the water outlet hose against unintentional loosening.


Note: Observe the draining heights. The maximum draining height is 100 cm.

Drainage into a siphon




Secure the connection point with a (24–40 mm) hose clamp.

 Drainage into a washbasin



Fix and secure the water outlet using an elbow.

 Drainage into a plastic pipe with rubber sleeve or into a gully.






4.7 Aligning the appliance


In order to reduce noise and vibration and to prevent the appliance from moving, align the appliance correctly.

Note: Please read the information in the Safety \rightarrow *Page 4* and Preventing material damage \rightarrow *Page 11* sections to ensure that you use the appliance safely.

 Loosen the lock nuts using a WAF 17 wrench by turning it in a clockwise direction

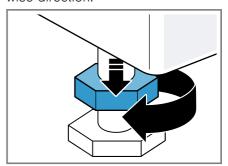


2. To align the appliance, turn the appliance feet. Check that the appliance is level using a spirit level.

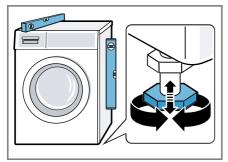

All appliance feet must stand firmly on the ground.

3. Screw the lock nuts tightly against the housing using a WAF 17 wrench.

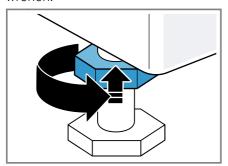

In doing so, hold the foot tight and do not adjust its height.

4.8 Connecting the appliance to the electricity supply

Note: Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.


1. Insert the mains plug of the appliance's power cable in a socket nearby.

- The connection details of the appliance can be found under Technical data → Page 69.
- 2. Check the mains plug is inserted properly.

5 Familiarising yourself with your appliance

5.1 Appliance

You can find an overview of the parts of your appliance here.

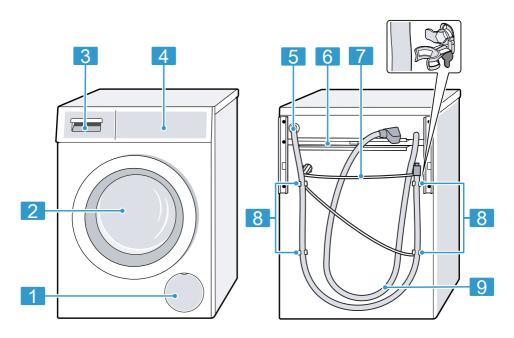


On certain models, specific details such as the colour and shape may differ from those pictured.

| 1 | Maintenance flap for the drain pump → Page 52 |
|---|---|
| 2 | Door |
| 3 | Detergent drawer → Page 21 |
| 4 | Controls → Page 21 |
| 5 | Water outlet hose → Page 18 |
| 6 | Transport struts → Page 17 |
| 7 | Power cord → Page 19 |

| 8 | Transit bolts → Page 15 |
|---|----------------------------|
| 9 | Water inlet hose → Page 17 |


5.2 Detergent drawer

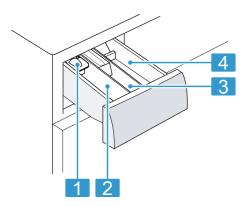

- Measuring aid for liquid deter-
 - → "Using a measuring aid for liquid detergent", Page 40
- Compartment II:
 - Detergent for main wash
 - Water softener
 - Bleach
 - Stain remover
- 3 Compartment \&:
 - Fabric softener
 - Liquid starch
 - Waterproofing agent
- Compartment I: 4
 - Detergent for prewash
 - Hygiene detergent

5.3 Controls


You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

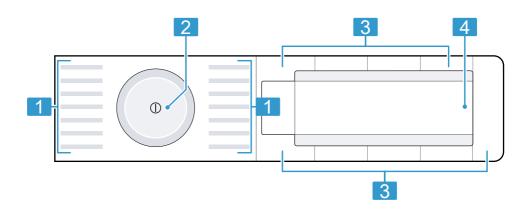

- Programmes → Page 27
- Programme selector → Page 39
- Buttons → Page 25
- Display → Page 22

6 Display

The display shows the current settings, options or relevant information.

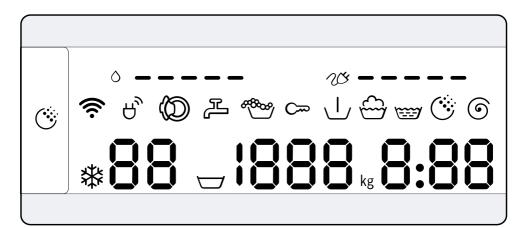

| Display | Designation | Description |
|--|---|--|
| 0:40 1 | Programme duration/programme time remaining | Approximate expected programme duration or programme time remaining. |
| 10h ¹ | "Ready in" time | The programme end has been set and the remaining number of hours is displayed. → "Buttons", Page 25 |
| 10 kg ¹ | Recommended load | The maximum load capacity for the selected programme in kg. |
| □ - 1600 | Spin speed | Set spin speed in rpm. → "Buttons", Page 25 0= No final spin, only draining □: Rinse Hold, no draining |
| * – 90 | Temperature | Set temperature in °C. → "Buttons", Page 25 It (cold) |
| <u>U</u> | Prewash | Programme status |
| <u>*************************************</u> | Active oxygen treatment | Programme status |
| <u></u> | Wash | Programme status |
| (##T) | Rinse | Programme status |
| ¹ Example | | |
| | | |

| Display | Designation | Description |
|----------------------|-------------------------|---|
| <u>©</u> | Spin | Programme status |
| -P- | Pause | Programme status |
| -0- | End of pro- gramme | Programme status |
| B | Childproof lock | Lights up: The childproof lock is activated. Flashes: The childproof lock is active and the programme selector has been adjusted. → "Deactivating the childproof lock", Page 43 |
| 75 | Energy consump- tion | Energy consumption for the selected programme. - : Low energy consumption - : High energy consumption |
| \delta | Water consumption | Water consumption for the selected programme. - : Low water consumption - : High water consumption |
| ्रि | Wi-Fi | Lights up: The appliance is connected to your home network. Flashes: The appliance is trying to connect to your home network. |
| <u></u> 6° | Energy manager | → "Home Connect ", Page 43 The appliance is connected to the smart energy system (energy manager). → "Connecting the appliance to the energy manager", Page 46 |
| <u> </u> | Active oxygen treatment | Active oxygen treatment is activated. |
| ⊕ and Ф | Active oxygen treatment | A programme with active oxygen treatment has been interrupted and the door is locked until the active oxygen is no longer present in the drum. Note: It may take up to 25 minutes until there is no longer any active oxygen in the drum |
| 6°° | Foam detection system | The appliance has detected too much foam. |
| (| Door | The door is unlocked and can be opened. |
| ¹ Example | | |

en Display

| Display | Designation | Description |
|----------------------|-------------|---|
| 是 | Тар | No water pressure.The water pressure is too low. |
| E:60 / -2B 1 | Error | Error code, error display, signal. |
| ¹ Example | | |

7 Buttons

The selection of programme settings depends on the selected programme. You can see the selection options for each programme in the overview for → "Programmes", Page 27.

| Button | Selection | Description |
|------------------|--|---|
| Start/Reload № | StartCancelPause | Start, cancel or pause the programme. |
| SpeedPerfect =Ü | ActivateDeactivate | Activate or deactivate a short washing programme. Note: Energy consumption increases. The washing result is not affected by this. |
| Intensive Plus ® | ActivateDeactivate | Activate or deactivate an extended washing programme. The programme duration is extended by up to 30 minutes. Suitable for heavily soiled laundry. |
| Active Oxygen | ActivateDeactivate | Activate or deactivate active oxygen treatment. Active oxygen is a special type of oxygen which effectively reduces odours. |
| - Finish in ① + | 1-24 hours | Set the programme end. The programme duration is already included in the set number of hours. Once the programme has started, the programme duration is displayed. |
| Temp. | * − 90 °C | Adjust the temperature in °C. |
| Spin © | ₩ - 1600 | Adjust the spin speed or activate (Rinse Hold). If is selected, the water is not drained at the end of the washing cycle and the spin cycle is deactivated. The laundry remains in the water used for rinsing. |
| ① (mains switch) | Switch onSwitch off | Switch the appliance on or off. |

en Buttons

| | | · |
|----------------------|--|---|
| Button | Selection | Description |
| Remote Start □ | Activate Deactivate Open the Home Connect menu | If you briefly press the button, the appliance will be enabled for remote start via the Home Connect app If you press the button for approx. 3 seconds, the Home Connect menu opens. Notes For safety reasons, remote start cannot be activated if the door is open. Remote start is deactivated for safety reasons in the following circumstances: Open the door. Press Start/Reload ▷ II. Press Remote Start □ . Switch off the appliance. Following a power cut. |
| Child Lock C∞ 3 sec. | ActivateDeactivate | Activate or deactivate the childproof lock. Disable the control panel to prevent unwanted or accidental operation. If the childproof lock is activated and the appliance has been switched off, the childproof lock remains activated. → "Childproof lock", Page 43 |
| Spin © | Basic settings | Change the basic settings for the appliance. → "Changing the basic settings", Page 50 |
| Pre-wash ₺ | ActivateDeactivate | Activate or deactivate prewash, e.g. for washing heavily soiled laundry. |
| Extra Rinse 🖶 | ActivateDeactivate | Activate or deactivate an additional rinse cycle. Recommended for particularly sensitive skin or in regions with very soft water. |

8 Programmes

Below is an overview of the programmes. You can find information on the load and on the adjustable programme options.

Tip: The laundry's care labels provide you with additional information on programme selection. \rightarrow "Care symbols on the care labels", Page 36

| Programme | Description | Ma | | | Prog | ramm | Programme settings | sbu | | |
|--------------------------------|--|--------------|-----------------------|-------------------------|-----------------|---------------|--------------------------|----------|---|------------------|
| | | x. load (kg) | Max. temperature (°C) | Max. spin speed (rpm) 1 | SpeedPerfect =® | Extra Rinse 🖮 | Spin ⓒ ⇐ (Rinse Hold) | Pre-wash | | Intensive Plus 🐠 |
| Cottons 🏗 | Wash hard-wearing items made from cotton, linen or blended fabrics. Also suitable as a short programme for normally soiled laundry when you activate SpeedPerfect =℧. If SpeedPerfect =℧ is activated, the maximum load capacity is reduced to 5 kg. | 10 | 06 | 1600 | • | • | • | • | • | • |
| Cottons Eco @ | Wash hard-wearing items made from cotton, linen or blended fabrics. | 10 | 06 | 1600 | 1 | • | • | • | • | I |
| ¹ Programme setting | tling | | | | | | | | | |

| Programme | Description | Ma | | | Prog | Iramm | Programme settings | sbu | | |
|---------------------|--|--------------|-----------------------|-------------------------|-----------------|---------------|--------------------------|------------|-----------------|-------------------------------|
| | | x. load (kg) | Max. temperature (°C) | Max. spin speed (rpm) 1 | SpeedPerfect =® | Extra Rinse 🖮 | Spin ⓒ ⇐ (Rinse Hold) | Pre-wash ⊍ | ☼ Active Oxygen | Intensive Plus ⊕ [†] |
| | Note: To save energy, the actual washing temperature may deviate from the set washing temperature. The washing performance meets legal requirements. | | | | | | | | | |
| Synthetics 🏠 | Wash items made from synthetic or blended fabrics. | 4 | 09 | 1200 | • | • | • | • | • | • |
| Mix >>ABM | Wash items made from cotton, linen, or synthetic or blended fabrics. Suitable for lightly soiled laundry. | 4 | 09 | 1600 | • | • | • | • | • | • |
| Delicates/ Silk t | Wash delicate, washable items made from silk, viscose and synthetics. Use a detergent that is suitable for delicates or silk. | 2 | 40 | 800 | 1 | • | • | • | • | 1 |
| 1 Programme setting | ting | | | | | | | | | |

| Programme | Description | Ма | | | Prog | Iramm | Programme settings | sgu | | |
|----------------|--|--------------|-----------------------|-------------------------|-----------------|---------------|--------------------------|--------------------|---|------------------|
| | | x. load (kg) | Max. temperature (°C) | Max. spin speed (rpm) 1 | SpeedPerfect =® | Extra Rinse 🖮 | Spin ⑤ ─ (Rinse Hold) | Pre-wash ⊎ | | Intensive Plus ∰ |
| | Note: Wash especially delicate items or items with hooks, eyelets or clips in a mesh laundry bag. | | | | | | | | | |
| ® NooN ® | Hand- or machine-washable items that are made from wool or contain wool. To prevent the laundry from shrinking, the drum moves the items very gently with long pauses. Use a detergent that is suitable for wool. | N | 40 | 800 | 1 | 1 | • | 1 | 1 | 1 |
| Rinse 📨 | Rinses and then spins the laundry, and then drains the water. | I | I | 1600 | I | • | • | I | I | I |
| ⑤零 Spin/Drain | Spins and drains the water. If you only want to drain the water, activate 0. The laundry is not spun. | 1 | I | 1600 | I | I | I | I | I | • |
| 1 Programme se | setting | | | | | | | | | |

| Programme | Description | Ма | | Pro | gramm | Programme settings | sgu | | |
|---------------------------|---|--------------|--|-----------------|---------------|-------------------------------------|------------------|-----------------|------------------|
| | | x. load (kg) | Max. spin speed (rpm) 1 Max. temperature (°C) | SpeedPerfect =Ü | Extra Rinse 🖮 | Spin ⊚ □ (Rinse Hold) | Pre-wash | ⊗ Active Oxygen | Intensive Plus ⊕ |
| © Drum Clean | Cleaning and caring for the drum. Cleaning programme with active oxygen. Use this programme in the following cases: Before using the appliance for the first time If you regularly wash at temperatures of 40 °C or lower After a prolonged period of non-use Use washing powder or a detergent containing bleach. Halve the amount of detergent to avoid foaming. Do not use fabric softener. Do not use liquid detergent or detergent that is intended for woollens or delicates. | 1 | - 1200 | 1 | 1 | 1 | 1 | • | 1 |
| ¹ Programme se | etting | | | | | | | | |

| Programme | Description | Ма | | | Progr | amm | Programme settings | sbı | | |
|---------------------|--|--------------|-----------------------|-------------------------|-----------------|---------------|--------------------------|------------------|-----------------|------------------|
| | | x. load (kg) | Max. temperature (°C) | Max. spin speed (rpm) 1 | SpeedPerfect =® | Extra Rinse 🕁 | Spin ⓒ ☑ (Rinse Hold) | Pre-wash | ⊗ Active Oxygen | Intensive Plus ® |
| | Note: The drum cleaning indicator will flash to remind you if you have not used a programme at 60 °C or higher for a long time. | | | | | | | | | |
| | For all washable items and for items that are suitable for professional cleaning only. Programme for freshening up dry laundry or removing odours, e.g. cigarette or kitchen odours. Dry the drum with a cloth before loading the laundry. Tip: The programme does not remove stains or sweat odours. | - | ı | 1 | 1 | I | I | 1 | 1 | 1 |
| 母 AllergyPlus | Wash hard-wearing items made from cotton, linen or blended fabrics. Suitable for allergy sufferers and for strict hygiene requirements. | 6,5 | 09 | 1600 | • | • | • | • | • | • |
| 1 Programme setting | ting | | | | | | | | | |

| Programme | Description | Ma | | | Prog | ramm | Programme settings | sgu | | |
|---------------------------|--|--------------|-----------------------|-------------------------|-----------------|---------------|--------------------------|--------------------|---|------------------|
| | | x. load (kg) | Max. temperature (°C) | Max. spin speed (rpm) 1 | SpeedPerfect =® | Extra Rinse 🕁 | Spin ⓒ ─ (Rinse Hold) | Pre-wash ⊎ | | Intensive Plus ∰ |
| | Note: Once the set temperature has been reached, it remains constant throughout the washing process. | | | | | | | | | |
| 母 Shirts | Wash non-iron shirts and blouses made from cotton, linen, synthetic or blended fabrics. Note: Use the Delicates/ Silk tprogramme to wash shirts and blouses made from silk or delicate fabrics. | ~ | 09 | 800 | ı | • | • | • | • | • |
| 管 Sportswear | Wash sports and leisure items made from synthetic fibres, microfibre or fleece. Use a detergent that is suitable for sports items. Do not use fabric softener. Tip: Use the Synthetics &programme to wash heavily soiled laundry. | N | 40 | 800 | 1 | • | • | • | • | • |
| ¹ Programme se | setting | | | | | | | | | |

en

9 Accessories

Use original accessories. These have been made especially for your appliance.

| | Use | Order number |
|----------------------------|--|--------------|
| Water inlet hose extension | Extend the water inlet hose for cold water or AquaStop (approx. 2.50 m). | WMZ2381 |
| Fixing brackets | Improves the stability of the appliance. | WMZ2200 |
| Liquid detergent insert | Measure liquid detergent. | 00605740 |

10 Before using for the first time


Prepare the appliance for use.

10.1 Starting an empty washing cycle

Your appliance was inspected thoroughly before leaving the factory. To remove any residual water, run the first wash cycle without any laundry.


Note: Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.

1. Press ①.

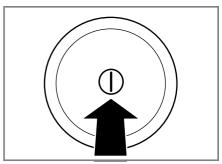


It may take a few seconds for the appliance to switch on.

- 2. Set the & Drum Clean programme.
- **3.** Close the door.
- 4. Pull out the detergent drawer.

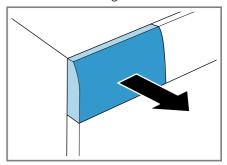


5. Pour washing powder into compartment II.

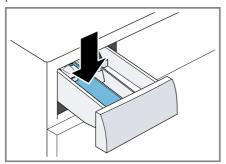

To prevent foaming, use only half of the amount of detergent recommended by the detergent manufacturer for light soiling. Do not use detergent suitable for woollens or delicates.

6. Push in the detergent drawer.

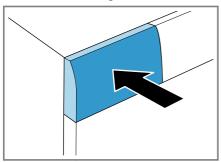

- 7. Press Start/Reload DII to start the programme.
- ✓ The display shows the remaining. programme duration.
- After the programme has ended, the display shows: -0-.
- 8. Start the first wash cycle or press ① to switch off the appliance.
 - → "Basic operation", Page 39

11 Laundry

You can wash all items that the manufacturer has marked as machinewashable on the care label and fabrics made from hand-washable wool using your appliance.

To remove odours, you can also simply freshen up fabrics using active oxygen.

11.1 Preparing the laundry

ATTENTION!

Objects remaining in the laundry may damage the laundry and the drum.

- ► Remove all items from any pockets in your laundry before using the appliance.
- ► To protect your appliance and the laundry, prepare the laundry beforehand.
 - Empty all pockets
 - Brush sand out of all collars and pockets
 - Close bed covers and cushion covers
 - Close all zips, Velcro fasteners, hooks and eyes
 - Tie cloth belts and apron strings together or use a mesh laundry
 - Remove curtain hooks and lead strips or use a mesh laundry
 - Use a mesh laundry bag for small items of laundry such as children's socks
 - Separate items of laundry and shake them out
 - Wash large and small items of laundry together
 - Dab fresh stains with soapv water (do not rub them)
 - Some stubborn or dried-in stains. can be removed by washing several times

11.2 Sorting laundry

Note: Please read the information in the Safety \rightarrow *Page 4* and Preventing material damage \rightarrow *Page 11* sections to ensure that you use the appliance safely.

- ► To improve washing results and prevent discolouration, sort the laundry according to the following criteria before washing.
 - Type of fabric and fibre type
 - Whites
 - Colours
 Wash new coloured items separately the first time you wash them.
 - Soiling → Page 36

Care symbols on the care labels
 → Page 36

11.3 Freshening up laundry

Note

Observe the following information to freshen up the laundry:

- Suitable for all items, including items marked by the manufacturer on the care label as suitable for dry cleaning, such as suits, jackets and trousers
- Not suitable for removing stains, sweat and sweat odours
 These items of laundry need to be washed.
- Only freshen up dry laundry
- After freshening up the laundry, shake it out briefly

11.4 Degrees of soiling

| Degree of soiling | Soiling | Examples |
|-------------------|---|---|
| Light | No dirt or stains are visibleLaundry has absorbed odours | Light summer clothing or sports clothing that has been worn for a just a few hours |
| Normal | Dirt or light stains are visible | T-shirts, shirts or blouses are sweat-soaked or have been worn a few times Towels or bedding that has been used for up to one week |
| Heavy | Dirt or stains are clearly visible | Tea towels, baby items or work clothing |

11.5 Care symbols on the care labels

The symbols indicate the recommended programme and the numbers in the symbols indicate the maximum recommended washing temperature.

| Symbol | Washing process | Recommended programme |
|---------------------|-----------------|-----------------------|
| V357 V667 V467 V367 | Normal | Cottons |
| <u> </u> | Gentle | Easy Care |

| Symbol | Washing process | Recommended programme |
|---|----------------------------------|------------------------------------|
| / ************************************ | Particularly gentle | Delicates/Silk for washing by hand |
| *** | Hand wash | Wool |
| *** | Not suitable for machine-washing | - |

Tip: You can find more information about care symbols at www.ginetex.ch.

12 Detergents and care products

You can protect your appliance and your laundry by selecting and using the correct detergents and care products. You can use all detergents and care products which are suitable for domestic washing machines.

Note: Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.

The manufacturer's instructions for use and dosage can be found on the packaging.

Notes

- only use liquid detergents that are self-flowing
- Do not mix different liquid detergents
- Do not mix detergent and fabric softener
- Do not use products that have expired or are highly congealed.
- Do not use products containing solvents, caustic agents or volatile substances (e.g. bleach)
- Use dyes sparingly as salt may damage stainless steel
- Do not use bleaching agents in the appliance

12.1 Detergent recommendation

| Detergent | Laundry | Pro- gramme | Temperature |
|---|--|--------------------|-----------------------|
| Standard detergent with optical brighteners | Heat-resistant white fabrics made from cotton or linen | Cotton | From cold up to 90 °C |
| Detergent for colours without bleach or optical brighteners | Coloured fabrics made from linen or cotton | Cotton | From cold up to 60 °C |
| Detergent for col- ours/delicates without optical brighteners | Coloured fabrics made from easy-care fabrics or synthetic materials | Easy Care | From cold up to 60 °C |
| Detergent for delicates | Delicate fine textiles, silk or viscose | Delicates/ Silk | From cold up to 40 °C |

en Detergents and care products

| Detergent | Laundry | Pro- gramme | Temperature |
|------------------------|---------|----------------|--------------------------|
| Detergent for woollens | Wool | Wool | From cold up to 40 °C |

Tip: Visit www.cleanright.eu to find further information on detergents, care products and cleaning agents for domestic use.

12.2 Detergent dosage

Use the correct detergent dosage to achieve optimal washing results and save resources.

The detergent dosage depends on:

- The amount of laundry
- Degree of soiling

Water hardness
 You can find out how hard your
 water is from your local water com pany or measure it yourself using
 a water hardness tester.

Water hardness

| Hardness range | Total hardness in mmol/ | German degrees in °dH |
|----------------|-------------------------|-----------------------|
| soft (I) | 0-1.5 | 0-8.4 |
| medium (II) | 1.5- 2.5 | 8.4–14 |
| hard (III) | over 2.5 | over 14 |

Example of a manufacturer's instructions for detergent

These example values refer to a standard load of 4–5 kg.

| Soiling | Light | Normal | Heavy |
|--------------------------------|-------|--------|--------|
| Water hardness: Soft/medium | 40 ml | 55 ml | 80 ml |
| Water hardness: Hard/very hard | 55 ml | 80 ml | 105 ml |


The dosages can be found on the manufacturer's packaging.

 Adjust the dosage to the actual load.

13 Basic operation

13.1 Switching on the appliance

► Press ①.

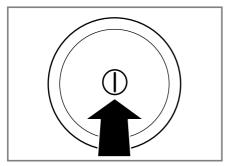

It may take a few seconds for the appliance to switch on.

Note: The drum is lit up after the door is opened and closed and once the programme has started. The light goes out automatically.

13.2 Setting a programme

1. Set the programme selector to the required programme → Page 27.



2. If necessary, adjust the programme settings → Page 39.

13.3 Adjusting the programme settings

Depending on the programme and programme progress, you can adjust or activate/deactivate the settings.

Note: Overview of all programme settings:

→ "Buttons", Page 25

Requirement: A programme has been set

Adjust the programme settings. The programme settings are not saved permanently for the programme.


13.4 Loading laundry

Notes

- Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.
- To prevent creasing, take note of the maximum load for the relevant programme → Page 27.

Requirement: Prepare and sort the laundry.

- → "Laundry", Page 35
- 1. Open the door.

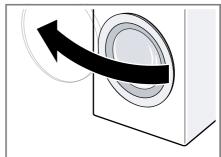

- **2.** Ensure that the drum is empty.
- 3. Separate the laundry and place it in the drum.

en Basic operation


Note: Ensure that there is no laundry trapped in the door.

Close the door.


13.5 Using a measuring aid for liquid detergent

If you order the measuring aid as an accessory, you must use the measuring aid.


1. Pull out the detergent drawer.

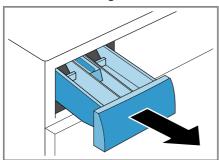


2. Press down on the insert and remove the detergent drawer.

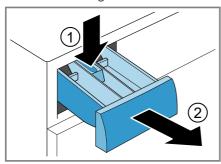

3. Insert the measuring aid.

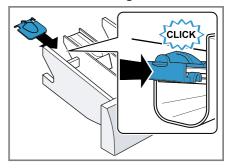


4. Insert the detergent drawer.

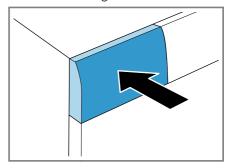


13.6 Use the measuring aid for liquid detergent

To add liquid detergent, you can use a measuring aid in the detergent drawer.

- 1. Pull out the detergent drawer.
- 2. Slide the measuring aid forwards.

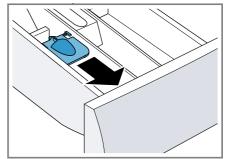

3. Fold the measuring aid down and click it into place.

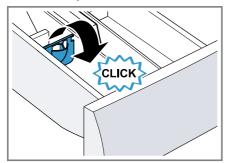

4. Push in the detergent drawer.

13.7 Adding detergent and care product

Notes

- Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.
- Do not use the measuring aid for liquid detergent for gel detergents, washing powder, or if Prewash or "Ready in" time are activated.

Requirement: Find out the optimum dosage for detergent and care product. → Page 37

- 1. Pull out the detergent drawer.
- 2. Pour in detergent.
 - → "Detergent drawer", Page 21
- 3. If required, add the care product.
- 4. Push in the detergent drawer.

13.8 Starting the programme

Note: If you want to change the time until the programme ends, set the "Ready in" time first.

▶ Press Start/Reload DM.

- ▼ The drum rotates and load detection takes place. This can take up to 2 minutes, after which water enters the drum.
- ▼ The display shows either the programme duration or the "Ready in" time.
- ✓ If you start a programme with active oxygen, the drum lights up after the programme starts and the mist that is created can be seen.
- After the programme has ended, the display shows: -0-.

13.9 Soaking laundry

You can soak the laundry before washing in the appliance by pausing the programme.

Note: No additional detergent is reguired. The washing solution is then used for washing.

- **1.** Start the programme.
- 2. To pause the programme, after approx. 10 minutes, press Start/Reload DII.
- 3. To resume the programme, after the desired soaking time, press Start/Reload D

 ■

13.10 Adding laundry

Notes

- Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.
- If you a start a programme with active oxygen, you cannot add any laundry after the programme has started.

1. Press Start/Reload DM.

The appliance is paused and checks whether it is possible to add or remove laundry. Take note of the programme status.

- 2. Add or remove laundry.
- 3. Close the door.
- Press Start/Reload D. III.

13.11 Cancelling the programme

Once the programme has started, you can cancel it at any time.

Notes

- Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.
- If you cancel a programme with active oxygen, the door will remain locked for up to 25 minutes until there is no longer any active oxygen in the drum. ② and ③ flash while the active oxygen is being removed. The door is then unlocked.
- 1. Press Start/Reload DM.
- 2. Open the door.

The appliance door remains locked for safety reasons if the temperature and water levels are high.

- If the temperature is high, start the **Rinse** programme.
- If the water level is high: Start the **Spin** or **Drain** programme.
- 3. Remove the laundry.

13.12 Resuming the programme when the programme status is Rinse Hold

- Set the ⑤ Spin or ♥ Drain programme.
- 2. Press Start/Reload DII.

13.13 Unloading the laundry


Note: Please read the information in the Safety \rightarrow *Page 4* and Preventing material damage \rightarrow *Page 11* sections to ensure that you use the appliance safely.

- 1. Open the door.
- 2. Remove the laundry.




13.14 Switching off the appliance

1. Press ①.

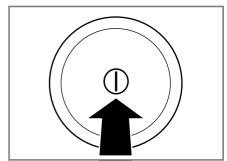

2. Wipe the rubber gasket dry and remove any foreign objects.

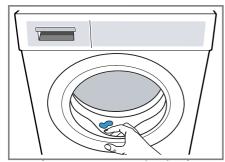

3. Leave the door and detergent drawer open so that residual water can evaporate.

14 Childproof lock

Secure your appliance against being operated unintentionally using the controls.

14.1 Activating the childproof lock

- Press and hold the two Child Lock C 3 sec. buttons for approx. 3 seconds.
- ▼ The display shows cm.
- The controls are locked.
- The childproof lock remains active even after the appliance has been switched off.

14.2 Deactivating the childproof lock

Requirement: To deactivate the childproof lock, the appliance must be switched on.

Press and hold the two Child Lock C 3 sec. buttons for approx. 3 seconds.

So that the programme currently running is not cancelled, the programme selector must be set to the initial programme.

✓ compose out in the display.

15 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of Home Connect services in your country. You can find information about this at: www.home-connect.com.

- → "Connecting the appliance to a WLAN home network (Wi-Fi) with WPS function", Page 44
- → "Connecting the appliance to a WLAN home network (Wi-Fi) without WPS function". Page 44 The Home Connect app guides you through the entire login process. Follow the instructions in the Home Con-

nect app to configure the settings.

- Please consult the documents supplied by Home Connect.
- Please also follow the instructions in the Home Connect app.

Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app.
 - → "Safety", Page 4

Operating the appliance on the appliance itself always takes priority.
 During this time it is not possible to operate the appliance using the Home Connect app.

15.1 Home Connect settings

Adapt Home Connect to your needs. You can find the Home Connect settings in the basic settings for your appliance. Which settings the display shows will depend on whether Home Connect has been set up and whether the appliance is connected to your home network.


15.2 Connecting the appliance to a WLAN home network (Wi-Fi) with WPS function

Using your router's WPS function is the simplest way to connect the appliance to your home network.

Requirement: If your router has a WPS function, you can connect the appliance to your WLAN home network (Wi-Fi) automatically.

- ✓ The display shows Aut.
- 2. Press Start/Reload DM.
- 3. Press the WPS button on the router within the next 2 minutes.

 Take note of the information in the documents for your router.
- flashes in the display.
- The appliance attempts to connect to your WLAN home network.
- If the display shows con and fights up permanently, the appliance is connected to the home network.

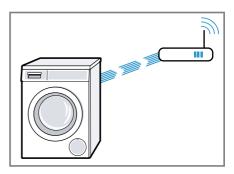

- If the display shows Err, the appliance is not connected to the home network.
 - Check whether your appliance is in range of your home network.
 - Reconnect the appliance to the WLAN home network (Wi-Fi) with WPS function.
- 5. Connect your appliance to the Home Connect app. → Page 45

15.3 Connecting the appliance to a WLAN home network (Wi-Fi) without WPS function

If your router does not have a WPS function, you can connect the appliance to your WLAN home network (Wi-Fi) manually. The appliance quickly sets up its own Wi-Fi network. You can connect a mobile device to the WLAN network and transfer the network information for the WLAN home network (Wi-Fi) to your appliance.


Requirement: The Home Connect app is open and you have logged on.

- The display shows Aut.
- 2. Set the programme to position 2.
- ✓ The display shows SAP.
- 3. Press Start/Reload DM.

- flashes in the display.
- The appliance now sets up its own Wi-Fi network with the name (SSID) HomeConnect.



- **4.** Call up the Wi-Fi settings on the mobile device.
 - Connect the mobile device to the Home Connect Wi-Fi network and enter the password (key) Home-Connect.
- Your mobile device now connects to the appliance. The connection process may take up to 60 seconds.

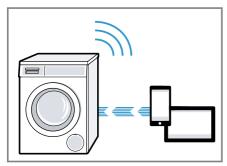

- 5. Open the Home Connect app on your mobile device and carry out the steps in the app.
- In the Home Connect app, enter the network name (SSID) and password (key) for your home network.

- 7. Carry out the steps in the Home Connect app to connect the appliance.
- If the display shows con and fights up permanently, the appliance is connected to the home network.
- If the display shows Err, the appliance is not connected to the home network.
 - Check whether your appliance is in range of your home network.
 - Reconnect the appliance to the WLAN home network (Wi-Fi) with WPS function.
- Connect your appliance to the Home Connect app → Page 45.

15.4 Connecting your appliance to the Home Connect app

Requirements

- The appliance is connected to the WLAN home network (Wi-Fi).
- The Home Connect app is open and you have logged on.
- **1.** Set the programme to position 3.
- ✓ The display shows APP.
- 2. Press Start/Reload DII.
- → The appliance connects to the Home Connect app.
- Once your appliance is displayed in the Home Connect app, carry out the last steps in the Home Connect app.
- If the display shows con, the appliance is connected to the Home Connect app.

15.5 Connecting the appliance to the energy manager

If you connect the appliance to the smart energy system (energy manager), you will optimise your energy consumption. The appliance starts only when your home photovoltaic system can provide sufficient energy or the energy tariff is good.

Requirements

- The smart energy system (energy manager) must use the EEBus Initiative communications standard.
- You have read about how to connect your appliance to the smart energy system (energy manager) in the instruction manual for the smart energy system (energy manager).
- Press and hold Remote Start ☐ for approx. 3 seconds.
- The display shows Aut.
- 2. Set the programme to position 7.
- ✓ The display shows EnG.
- 3. Press Start/Reload DII.
- The appliance is connected to the smart energy system (energy manager).
- If the appliance has connected to the energy manager successfully, the display shows con and θ°.
- 4. Activate Flex Start if you want the smart energy system (energy manager) to start up your appliance.

→ "Activate Flex Start", Page 46

Activate Flex Start

Activate Flex Start to allow your smart energy system (energy manager) to start your appliance once your home photovoltaic system is able to provide sufficient energy or the energy tariff is good. **Requirement:** The smart energy system (energy manager) cannot start your appliance until it is connected to the appliance.

- **1.** Set the programme you require.
- 2. Press Finish in (9 + to set the required time.
- 3. Press Start/Reload DM.
- 4. Press Start/Reload DII.
- The display shows e[®] and Flex Start is activated. The appliance waits to be started by the smart energy system (energy manager).
- If the time changes on the display, e.g. to 8 h, the smart energy system (energy manager) has established a time at which your appliance can start.
- If the smart energy system (energy manager) does not start the appliance within the set time, the appliance will start the programme itself before the set time period ends. The programme ends when the time period ends.

Note

Flex Start is deactivated for safety reasons in the following circumstances:

- Press Start/Reload DII.
- Open the door.
- Switch off the appliance.
- Power failure.

15.6 Activating Wi-Fi on the appliance

Note: When Wi-Fi is activated, the energy consumption increases in comparison to the values specified in the consumption value table.

- 2. Set the programme to position 4.
- ✓ The display shows Con.

- 3. Press **Start/Reload DII** repeatedly until the display shows **On**.
- ✓ Wi-Fi is activated.

Notes

- If Wi-Fi is activated, the appliance will not switch itself off automatically.
- If Wi-Fi is activated, the appliance will not switch itself off automatically.

15.7 Deactivating Wi-Fi on the appliance

- 2. Set the programme to position 4.
- ✓ The display shows Con.
- 3. Press **Start/Reload DII** repeatedly until the display shows **OFF**.
- ✓ Wi-Fi is deactivated.

Note: If Wi-Fi is switched off and your appliance was previously connected to your home network, this connection will be re-established automatically when Wi-Fi is switched back on.

15.8 Software update

Requirement: The display shows **UPd**.

- Press and hold Remote Start

 ^a for approx. 3 seconds.
- **2.** Set the programme to position 6.
- UPd appears on the display.
- 3. Press Start/Reload DII.
- The software update is installed.
- ✓ If End is shown on the display, the software update is installed.

Note: The software update may take several minutes. Do not switch off the appliance while the software update is in progress.

15.9 Resetting the appliance network settings

- 2. Set the programme to position 5.
- ✓ The display shows rES.
- 3. Press Start/Reload DII.
- ✓ The display shows YES.
- 4. Press Start/Reload DII.
- ▼ The network settings are reset.
- If End is shown on the display, the network settings are reset.

Tip: If you wish to operate your appliance again via the Home Connect app, you will need to reconnect it to the Wi-Fi and to the Home Connect app.

15.10 Remote diagnostics

Customer Service can use Remote Diagnostics to access your appliance if you contact them, have your appliance connected to the Home Connect server and if Remote Diagnostics is available in the country in which you are using the appliance.

Tip: For further information and details about the availability of Remote Diagnostics in your country, please visit the service/support section of your local website: www.home-connect.com

15.11 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your

en Home Connect

appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the Wi-Fi communication module installed).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous reset to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.


Note: Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

16 Basic settings

You can configure the appliance to meet your needs.

16.1 Overview of basic settings


Below is an overview of the basic settings on your appliance.

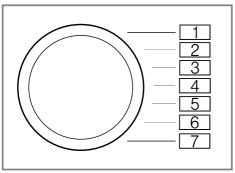

| Basic setting | Programme position | Value | Description |
|------------------------|--------------------|---|--|
| End signal | 2 | 0 (off) 1 (quiet) 2 (medium) 3 (loud) 4 (very loud) | Set the volume of the signal at the end of the pro- gramme. |
| Button signal | 3 | 0 (off) 1 (quiet) 2 (medium) 3 (loud) 4 (very loud) | The volume of the audible signal emitted when the buttons are pressed. |
| Drum cleaning reminder | 4 | ON OFF | Activate or deactivate the reminder to clean the drum. |

16.2 Changing the basic settings

1. Set the programme selector to position 1.

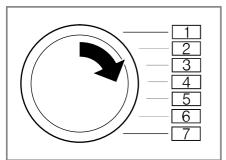

- 2. Press **Spin** © and, at the same time, turn the programme selector to position 2.
- The display shows the current value.
- **3.** Set the programme selector to the required position.
- 4. To change the value, press / +.
- **5.** To save the changes, switch off the appliance.

17 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

17.1 Tips on appliance care

Follow the tips for appliance care to ensure your appliance works correctly in the long term.

Wipe down the housing and the control panel

The appliance parts remain clean and hyaienic. with nothing but water and a damp cloth.

Remove all detergent residue, spray residue or other residues immediately. Fresh deposits are easier to remove without leaving any residue.

Keep the appliance door and detergent drawer open after use.

This allows the residual water to dry, reducing odours in the appliance.

17.2 Cleaning the drum

If you often wash at a washing temperature of 40 °C and lower or the appliance has not been used for a long period, clean the drum.

⚠ CAUTION Risk of injury!


Permanently washing at low temperatures and a lack of ventilation for the appliance may damage the drum and cause injury.

- Regularly run a programme for cleaning the drum or wash at temperatures of at least 60 °C.
- Leave the appliance to dry after every operation with the door open, and leave the detergent drawer to dry.
- Run the Drum Clean programme without laundry.
 Add washing powder.


17.3 Cleaning the detergent drawer

Note: Please read the information in the Safety \rightarrow *Page 4* and Preventing material damage \rightarrow *Page 11* sections to ensure that you use the appliance safely.


- **1.** Pull out the detergent drawer.
- 2. Press down on the insert and remove the detergent drawer.

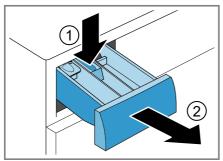


3. Press out the insert upwards from below.

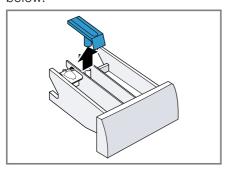

4. Clean the detergent drawer and insert with water and a brush, and then dry them.

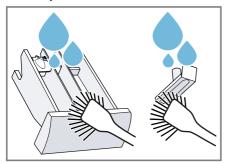

5. Fit the insert and lock it into place.

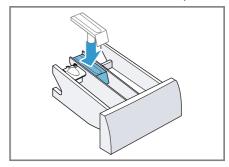

6. Cleaning the opening for the detergent drawer.



7. Push in the detergent drawer.

17.4 Descaling

If you add detergent correctly, you do not need to descale your appliance. If you still wish to use descaler, follow the manufacturer's instructions for use.

ATTENTION!

The use of unsuitable descaling agents, e.g. for coffee machines, may damage the appliance.

► For this appliance, only use descaling agents that are available from the manufacturer's website or our after-sales service.


17.5 Cleaning the drain pump

Clean the drain pump in the event of faults, e.g. blockages or rattling noises.


Emptying the drain pump

Note: Please read the information in the Safety \rightarrow *Page 4* and Preventing material damage \rightarrow *Page 11* sections to ensure that you use the appliance safely.


- 1. Turn off the water tap.
- 2. Switch off the appliance.
- **3.** Disconnect the appliance's mains plug from the power supply.
- 4. Open the maintenance flap.

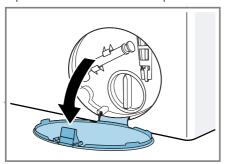


5. Remove the maintenance flap.

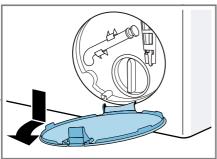

6. Slide a sufficiently large receptacle under the opening.

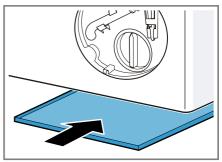


7. Take the drain hose out of the holder.

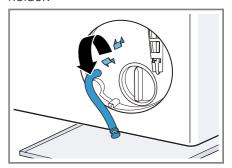


- When you wash at high temperatures, the detergent solution gets hot.
- ▶ Do not touch the hot detergent solution.


To allow the detergent solution to flow out into the container, remove the sealing cap.

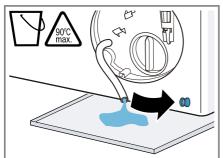

9. Firmly press on the sealing cap.

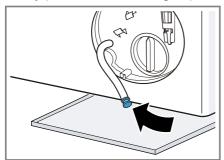

10. Insert the drain hose into the holder.

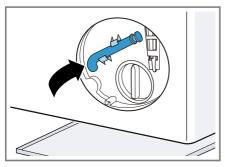


Cleaning the drain pump


Note: Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.

Requirement: The drain pump is empty. → Page 52

- 1. Since water may remain in the drain pump, remove the pump cap carefully.
 - The filter insert in the pump housing may become stuck due to coarse particles of dirt. Loosen the dirt and remove the filter insert.

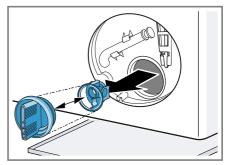


2. Clean the interior, the thread on the pump cap and the pump housing.

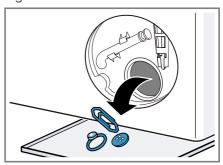


The pump cap is comprised of two parts which can be taken apart for cleaning.


- en Cleaning and servicing
- **3.** Ensure that both impellers can turn.

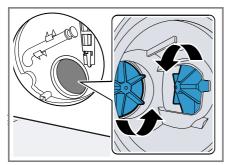

- 4. Insert the pump cap.
 - Ensure that the parts of the pump cap are correctly assembled.

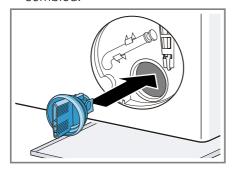


5. Insert the pump cap and screw it on as far as it will go.

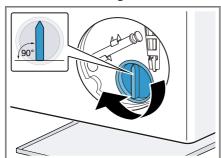

The handle on the pump cap must be in a vertical position.

6. Insert the maintenance flap and lock it into place.

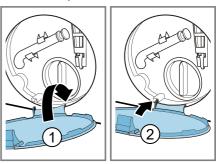


7. Close the maintenance flap.

17.6 Cleaning the intake opening in the rubber gasket

Regularly check the intake opening in the rubber gasket for any blockages and clean the intake opening.

- 1. Open the door.
- Check the intake opening for blockages and remove any blockages.

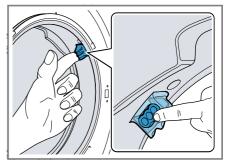


Note: Do not use any sharp or pointed objects.

17.7 Cleaning the water outlet hose at the siphon


If the water outlet hose at the siphon is dirty or the detergent solution is not being pumped out, you must clean these.

- 1. Switch off the appliance.
- 2. Disconnect the appliance's mains plug from the power supply.
- 3. Loosen the hose clamp and carefully remove the water outlet hose.

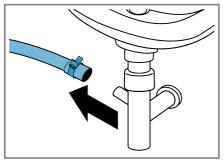


Residual water may leak out.

4. Clean the water outlet hose and siphon connecting piece.

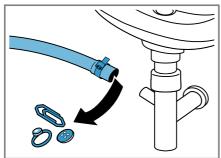

5. Reattach the water outlet hose and secure the connection point using the hose clamp.

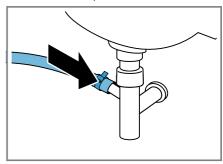

17.8 Cleaning the water inlet filter

Clean the filter in the water inlet in the event of blockages or if the water pressure is too low.

Emptying the water inlet hose

In order to clean the filter, first empty the water inlet hose.

- 1. Turn off the tap.
- 2. Set a programme, except for Rinse , Spin or T Drain.
- 3. Start the programme and leave it to run for approx. 40 seconds.
- 4. Switch off the appliance.
- 5. Disconnect the appliance's mains plug from the power supply.


Cleaning the filter on the tap

Note: Please read the information in the Safety → Page 4 and Preventing material damage → Page 11 sections to ensure that you use the appliance safely.


Requirement: The water inlet hose is empty.

en Cleaning and servicing


1. Remove the water inlet hose from the tap.

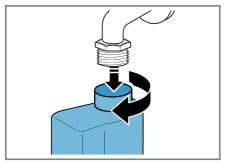

2. Clean the filter with a small brush.

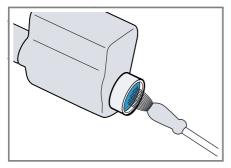

3. Connect the water inlet hose and check for leaks.

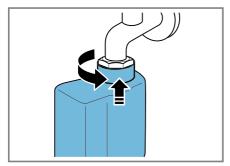

18 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.



. WARNING

Risk of electric shock!

Incorrect repairs are dangerous.

- ► Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

| Fault | Cause and troubleshooting |
|--|--|
| The display goes out and Start/Reload DIII flashes. | Energy-saving mode is active▶ Press any button.✓ The symbol lights up again. |
| "E:30 / -80" | Drain pipe or water outlet hose is blocked.▶ Clean the drain pipe and the water outlet hose. |
| | Drain pipe or water drain hose is caught or jammed. ► Ensure that the drain pipe and water drain hose are not kinked or trapped. |
| | Drain pump is blocked. ► → "Cleaning the drain pump", Page 52 |
| | The water outlet hose is connected too high. ► Install the water outlet hose at a maximum height of 1 metre. |
| | Pump cover is not correctly assembled. Correctly assemble the pump cover. |
| | Detergent dosage is too high. Immediate measure: Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdoor clothing, sportswear or items stuffed with down). Reduce the amount of detergent for the next washing cycle with the same load. |
| | Unapproved extension installed on the water drain hose. Remove any unapproved extensions from the water hose. Connecting the appliance |

en Troubleshooting

| Fault | Cause and troubleshooting |
|--|--|
| "E:36 / -25 / -26" | Drain pump is blocked. ▶ → "Cleaning the drain pump", Page 52 |
| "E:38 / -25 / -26" | Drain pump is blocked. ► → "Cleaning the drum", Page 50 if the fault is displayed again, ► → "Cleaning the drain pump", Page 52 |
| | Inlet opening of the rubber gasket is blocked. → "Cleaning the intake opening in the rubber gasket", Page 54 |
| 光 | The water pressure is low. No remedial action possible. The filter in the water inflow is blocked. ► Clean the water inflow filter → Page 55. |
| | The tap is turned off. ► Turn on the tap. |
| | The water inlet hose is kinked or jammed.Ensure that the water inlet hose is not kinked or jammed. |
| "E:35 / -10" | There is water in the base trough. ► Turn off the water tap. ► Call the after-sales service. → "Customer Service", Page 68 |
| | The appliance is leaking. ► Turn off the water tap. ► Call the after-sales service. → "Customer Service", Page 68 |
| ************************************** | Detergent dosage is too high. Immediate measure: Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdoor clothing, sportswear or items stuffed with down). Reduce the amount of detergent for the next washing cycle with the same load. |
| (10) lights up. | The temperature is too high. ► Wait until the temperature has dropped. ► → "Cancelling the programme", Page 42 |
| | Water level is too high. ► Start the Train programme. |
| | Laundry is caught in the door. |

The temperature is too high.

► Wait until the temperature has dropped.

| Foult | Cause and troublesheating |
|--|--|
| Fault The deer connet | Cause and troubleshooting |
| The door cannot be opened. | → "Cancelling the programme", Page 42 |
| | Water level is too high. ► Start the Train programme. |
| | Programme with active oxygen has been stopped; the active oxygen is removed. • Wait until there is no active oxygen in the drum. |
| | Power failure. ► Open the door using the emergency release. → "Emergency release", Page 66 |
| The water is not draining. | Drain pipe or water outlet hose is blocked. ► Clean the drain pipe and the water outlet hose. |
| | Drain pipe or water drain hose is caught or jammed. ► Ensure that the drain pipe and water drain hose are not kinked or trapped. |
| | Drain pump is blocked. ► → "Cleaning the drain pump", Page 52 |
| | is activated. Continue the programme by selecting ⑤ Spin or ⑨ Drain and pressing Start/Reload ▷ III. → "Resuming the programme when the programme status is Rinse Hold", Page 42 |
| | The water outlet hose is connected too high. ▶ Install the water outlet hose at a maximum height of 1 metre. |
| | Pump cover is not correctly assembled. • Correctly assemble the pump cover. |
| | Detergent dosage is too high. Immediate measure: Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdoor clothing, sportswear or items stuffed with down). Reduce the amount of detergent for the next washing cycle with the same load. |
| | Unapproved extension installed on the water drain hose. ► Remove any unapproved extensions from the water hose. Connecting the appliance |
| Water is not flowing in. Detergent is not being dispensed. | You have not pressed Start/Reload DII. ► Press Start/Reload DII. |

| Fault | Cause and troubleshooting |
|---|--|
| Water is not flowing in. Detergent is not | The filter in the water inflow is blocked. ► Clean the water inflow filter → Page 55. |
| being dispensed. | The tap is turned off. ► Turn on the tap. |
| | The water inlet hose is kinked or jammed. ► Ensure that the water inlet hose is not kinked or jammed. |
| The spin cycle runs several times. | The unbalanced load detection system eliminates an imbalance by repeatedly redistributing the laundry. Not a fault – no action required. |
| | Note: When loading, where possible, place large and small items of laundry together in the drum. Different sized items of laundry distribute themselves better during the spin cycle. |
| The programme duration changes during the wash cycle. | The programme operation is optimised electronically. This may change the programme duration. ► Not a fault – no action required. |
| | The unbalanced load detection system eliminates an imbalance by repeatedly redistributing the laundry. Not a fault – no action required. |
| | Note: When loading, where possible, place large and small items of laundry together in the drum. Different sized items of laundry distribute themselves better during the spin cycle. |
| | Foam detection system switches on a rinse cycle if foam build-up is too high. Not a fault – no action required. |
| No water is visible in the drum. | Water is below the visible area. ▶ Not a fault – no action required. ▶ Do not add any extra water to the appliance while it is operating. |
| Drum jerks after the programme starts. | This is caused by an internal motor test. ▶ Not a fault – no action required. |
| Residual water is present in the compartment &. | Insert in compartment [⊕] is blocked. ► → "Cleaning the detergent drawer", Page 50 |
| Vibrations and movement of the appliance | Appliance is not correctly aligned. ► Aligning the appliance |
| whilst spinning. | The appliance feet are not fixed. ▶ Secure the appliance feet. Aligning the appliance |

| Fault | Cause and troubleshooting |
|---|--|
| Vibrations and movement of the appliance whilst spinning. | Transit bolts have not been removed. ▶ Removing the transit bolts |
| Drum does not turn, water does not flow in. | Load detection is active. ► Not a fault – no action required. |
| | Note: The load detection can take up to two minutes. |
| Heavy foam build-up | Detergent dosage is too high. Immediate measure: Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdoor clothing, sportswear or items stuffed with down). Reduce the amount of detergent for the next washing cycle with the same load. |
| High spin speed not reached. | A low spin speed is selected.► The next time you run a wash cycle, set a higher spin speed. |
| | Unbalance load detection system is using a reduced spin speed to eliminate an unbalance. Redistribute the laundry in the drum. |
| | Note: Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle. |
| | ► Start the ⑤ Spin programme. |
| The spin programme does not start. | Drain pipe or water outlet hose is blocked. ▶ Clean the drain pipe and the water outlet hose. |
| | Drain pipe or water drain hose is caught or jammed. Ensure that the drain pipe and water drain hose are not kinked or trapped. |
| | The unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed. • Redistribute the laundry in the drum. |
| | Note: Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle. |
| | ► Start the ⑤ Spin programme. |
| Rushing, hissing noise. | Water is flushed under pressure into the detergent drawer. ► Not a fault – normal operating noise. |

| Fault | Cause and troubleshooting |
|---|--|
| Loud noises during the spin cycle. | Appliance is not correctly aligned. ► Aligning the appliance |
| | The appliance feet are not fixed. ▶ Secure the appliance feet. Aligning the appliance |
| | Transit bolts have not been removed. ▶ Removing the transit bolts |
| Persistent, quiet whirring fan noise. | Active oxygen treatment is active. ► Not a fault – normal operating noise. |
| Banging noises, rattling in the drain pump. | Foreign bodies have got into the drain pump. ▶ → "Cleaning the drain pump", Page 52 |
| Slurping, rhythmical suction noise. | The drain pump is active, the detergent solution is pumped out. ▶ Not a fault – normal operating noise. |
| Creasing. | The spin speed is too high. ➤ The next time you run a wash cycle, set a lower spin speed. |
| | The load is too large. ➤ The next time you run a wash cycle, reduce the amount of laundry being loaded. |
| | The wrong programme is selected for the type of fabric. ▶ Select the programmes that are suitable for the type of fabric. → "Programmes", Page 27 |
| Detergent or fabric softener drips off the seal and collects on the door or in the seal fold. | Too much detergent/fabric softener in the detergent drawer. ➤ When dosing liquid detergent and fabric softener, observe the marking in the detergent drawer and do not dose above this. |
| The spin result is not satisfactory. The laundry is too wet/too damp. | A low spin speed is selected. ► The next time you run a wash cycle, set a higher spin speed. ► Start the ⑤ Spin programme. |
| | Drain pipe or water outlet hose is blocked. ► Clean the drain pipe and the water outlet hose. |
| | Drain pipe or water drain hose is caught or jammed.Ensure that the drain pipe and water drain hose are not kinked or trapped. |

| Fault | Cause and troubleshooting |
|---|--|
| The spin result is not satisfactory. The laundry is too wet/too damp. | The unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed. • Redistribute the laundry in the drum. |
| · | Note: Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle. |
| | Start the Spin programme. |
| | Unbalance load detection system is using a reduced spin speed to eliminate an unbalance. ▶ Redistribute the laundry in the drum. |
| | Note: Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle. |
| | ► Start the ⑤ Spin programme. |
| Detergent residue on the damp washing. | Detergents may contain water-insoluble substances that deposit on the laundry. Start the Rinse programme. |
| Detergent residue on the dry laundry. | Detergents may contain water-insoluble substances that deposit on the laundry. • Brush out the laundry after washing and drying. |
| HomeConnect is not working correctly. | Different causes are possible. • Go to www.home-connect.com. |
| No connection to the home network. | Wi-Fi is switched off. ► → "Activating Wi-Fi on the appliance", Page 46 |
| | Wi-Fi is activated but a connection to your home network cannot be established. 1. Ensure that the home network is available. 2. Reconnect the appliance to the home network. → "Connecting the appliance to a WLAN home network (Wi-Fi) with WPS function", Page 44 → "Connecting the appliance to a WLAN home network (Wi-Fi) without WPS function", Page 44 |
| Water is leaking out at the water inlet hose. | Water inlet hose is not correctly/securely connected.1. Connect the water supply hose correctly. Connecting the water inlet hose2. Tighten the screw connection. |
| Water is leaking out at the water outlet hose. | The water outlet hose is damaged. ▶ Replace the damaged water outlet hose. |
| | Water outlet hose is not connected correctly. |

| Fault | Cause and troubleshooting |
|--|---|
| Water is leaking out at the water outlet hose. | ► Connect the water outlet hose correctly. Water outlet connection types |
| Odours have formed in the appliance. | Humidity and detergent residue may promote the formation of bacteria. ► → "Cleaning the drum", Page 50 ► If you are not using the appliance, leave the door and detergent drawer open so that residual water can evaporate. |

18.1 Emergency release


To remove the laundry in the event of a power failure, for example, you can manually release the door.

Releasing the door

Requirement: The drain pump is empty. → Page 52

- 1. ATTENTION! Escaping water may cause material damage.
- ▶ Do not open the door if you can see water through the glass.

Pull the emergency release downwards with a tool and release.

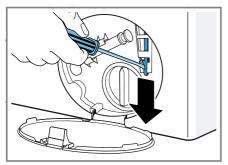

- ✓ The door lock is released.
- 2. Insert the maintenance flap and lock it into place.
- 3. Close the maintenance flap.

19 Transportation, storage and disposal

You can find out here how to prepare your appliance for transportation and storage. You will also find out how to dispose of old appliances.

19.1 Removing the appliance


- 1. Turn off the tap.
- 2. → "Emptying the water inlet hose". Page 55.
- 3. Switch off the appliance.

- 4. Unplug the appliance's mains plug.
- 5. Drain the remaining detergent solution.
 - → "Cleaning the drain pump", Page 52
- 6. Detach the hoses.

19.2 Inserting the transit bolts


Secure the appliance for transportation using transit bolts in order to prevent damage.

- 1. Remove the four cover caps.
 - If necessary, use a screwdriver to remove the cover caps.

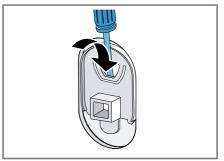


Keep the cover caps.


2. Insert the four sleeves.

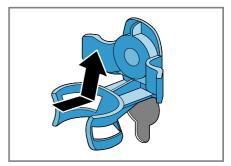


3. Insert all screws into the four transit bolts and tighten slightly.

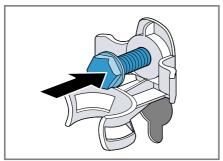

4. Insert the power cord into the holder 1 and tighten all four screws for the transit bolts with a WAF 13 wrench 2.

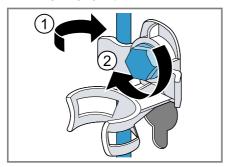

5. Insert the hose into holder.

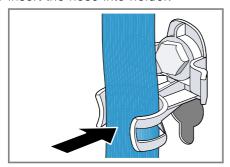

19.3 Using the appliance again

Remove the transit bolts.

19.4 Disposing of old appliance

Valuable raw materials can be reused by recycling.

⚠ WARNING Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- ► With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.
- 1. Unplug the appliance from the mains.
- 2. Cut through the power cord.
- 3. Dispose of the appliance in an environmentally friendly manner. Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

20 Customer Service

If you have any queries on use, are unable to rectify faults on the appliance yourself or if your appliance needs to be repaired, contact Customer Service.

You can solve many problems yourself by consulting the information on troubleshooting in these instructions or on our website. If this is not the case, contact our after-sales service. With any warranty claims, we will make sure that your appliance is repaired by trained after-sales technicians using genuine spare parts, including after the manufacturer's warranty has expired.

Detailed information on the warranty period and terms of warranty in your country is available from our aftersales service, your retailer or on our website.

If you contact Customer Service, you will require the product number (E-Nr.) and the production number (FD) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

20.1 Product number (E-Nr.) and production number (FD)

You can find the product number (E-Nr.) and the production number (FD) on the appliance's rating plate. Depending on the model, the rating plate is located:

- On the inside of the door.
- On the inside of the maintenance flap.
- On the rear of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

20.2 AQUA-STOP quarantee

In addition to warranty claims against the seller under the purchase agreement and in addition to our manufacturer's warranty, we offer compensation under the following conditions.

- If our Aqua-Stop system is defective and causes water damage, we will make good the damage for private users. To ensure protection from water damage, the appliance must be connected to the power vlagus.
- The liability guarantee is valid for the service life of the appliance.
- A claim can only be made under the guarantee if the appliance has been correctly installed and connected with Aqua-Stop according to our instructions; this also includes correctly fitting the Aqua-Stop extension (genuine accessory). Our guarantee does not cover defective supply lines or fittings up to the Agua-Stop connection on the tap.
- If your appliance is fitted with Aqua-Stop, you can in principle leave your appliance unattended during operation and the tap turned on afterwards. The tap only needs to be turned off if you are away from home for a long period, e.g. on holiday for several weeks.

21 Consumption values

The indicated consumption values are approximate.

The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the mains voltage and selected settings.

| Program: | Temperat- ure (°C) | Load (kg) | Energy consump- tion (kWh) ¹ | Water consump- tion (I) ¹ | Program duration (hr:min) ¹ |
|-------------------------|-----------------------|-----------|--|--|--|
| Cottons 🛣 | 20 | 10,0 | 0,500 | 95,0 | 3:00 |
| Cottons 🛣 | 40 | 10,0 | 1,300 | 95,0 | 3:45 |
| Cottons 🛣 | 60 | 10,0 | 2,100 | 95,0 | 3:45 |
| Cottons 🛣 | 90 | 10,0 | 2,500 | 110,0 | 3:00 |
| Cottons Eco @2 | 60 | 10,0 | 0,830 | 56,0 | 4:35 |
| Synthetics ☆ | 40 | 4,0 | 0,750 | 57,0 | 2:30 |
| Mix ≫®® | 40 | 4,0 | 0,650 | 44,0 | 1:00 |
| | 30 | 2,0 | 0,220 | 36,0 | 0:45 |
| | 30 | 2,0 | 0,210 | 40,0 | 0:45 |
| ActiveOxygen Refresh | - | 1,0 | 0,020 | 0,0 | 0:45 |

values determined according to the valid version of IEC60456

22 Technical specifications

Facts and figures for your appliance can be found here.

| Appliance height | 85,0 cm |
|------------------|--------------------|
| Appliance width | 60,0 cm |
| Appliance depth | 64,0 cm |
| Weight | 73 kg ¹ |
| Maximum load | 10 kg |
| | |

Depending on the appliance specifications

| Mains voltage | 220 - 440 V, | |
|--|--------------|--|
| | 50 Hz | |
| ⇔ Minimum installation protection | 10 A | |
| Rated power | 2300 W | |
| ¹ Depending on the appliance specifications | | |

Programme setting with maximum speed for testing in accordance with the applicable version of IEC60456 with cold water (15 °C).

en Technical specifications

| Power consumption | Off mode: 0,10 W Left-on mode: 0,43 W Time until the networked standby mode is set (Wi-Fi): 20 Min. Networked standby mode (Wi-Fi): 1,10 W | |
|---|---|--|
| Water pressure | Minimum: 100 kPa (1 bar)Maximum: 1000 kPa (10 bar) | |
| Length of the water inlet hose | 150 cm | |
| Length of the water outlet hose | 150 cm | |
| Length of the power cord | 160 cm | |
| Depending on the appliance specifications | | |





Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- · Expert tips & tricks for your appliance
- · Warranty extension options
- Discounts for accessories & spare-parts
- Digital manual and all appliance data at hand
- Easy access to Bosch Home Appliances Service

Free and easy registration – also on mobile phones: **www.bosch-home.com/welcome**



Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you: **www.bosch-home.com/service**

Contact data of all countries are listed in the attached service directory.

Robert Bosch Hausgeräte GmbH

Carl-Wery-Straße 34 81739 München GERMANY www.bosch-home.com



9001568270 (001105)