

Brief and handy:
everything your dishwasher
needs ...



Before using for the first time,
read the Installation instructions
and Operating instructions!


1

Adjusting the water softening system *

Ask your water supply company what the water hardness is and enter ...

* only before the first wash or if the water hardness has been changed

Water hardness value °Clarke	Hardness range	mmol/l	Factory setting
0-8	soft	0-1.1	H:00
9-10	soft	1.2-1.4	H:01
11-12	medium	1.5-1.8	H:02
13-15	medium	1.9-2.1	H:03
16-20	medium	2.2-2.9	H:04
21-26	hard	3.0-3.7	H:05
27-38	hard	3.8-5.4	H:06
39-62	hard	5.5-8.9	H:07

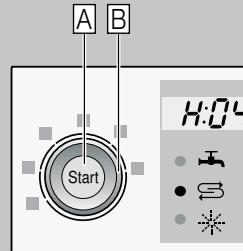


Quickly sorted ...

How to adjust


- Switch on ON/OFF switch.
- Press and hold down the START button A.
- Rotate programme selector B until H:0: is indicated on the digital display.
- Release button. The factory set value H:04 is lit on the digital display.
- Rotate programme selector B until the required value is indicated on the digital display.
- Press START button A. The set value is saved.

2 Filling the salt dispenser

Dissolves limescale (not necessary when set to 0!) ...

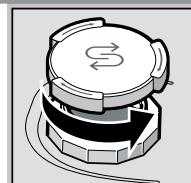


Open the lid.

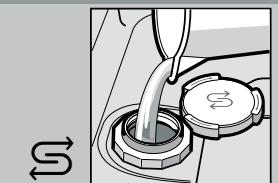


Only fill the salt dispenser with water before the first wash.

For optimal washing results

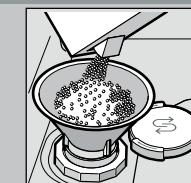


Add special salt (never use detergent!).

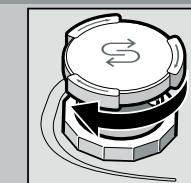

Close the lid. Rinse immediately.

3 Adding rinse aid


Gets it sparkling clean ...

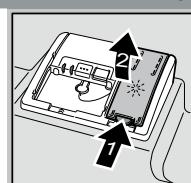


Press marking 1, lift lid 2.



For optimum drying results

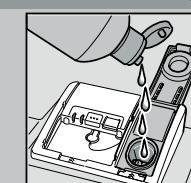


Add rinse aid.

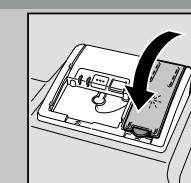


Close lid. CLICK!

4 Adding detergent


A lot of dirt, a lot of detergent ...

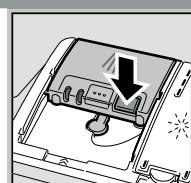

 If required, open the cover (press button).




Attention: Combination products are not suitable for all programmes, follow manufacturer's instructions.

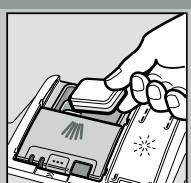


50 ml
25 ml
15 ml

Pour detergent into the dry detergent dispenser only.

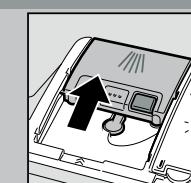

Slide cover shut, press. PLOP!

5 Switching on the appliance

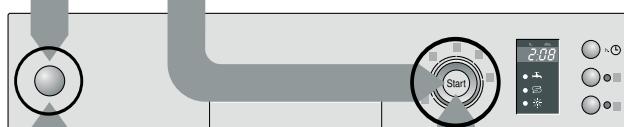

6 Select programme

 
 
 
 
Quick, economical or intensive ...

Overview of programmes

The max. possible number of programmes is illustrated in this overview. The corresponding programmes for your appliance can be found on the fascia.

The programme data has been measured in the laboratory according to European standard EN 60436. Deviations are possible in practice.
* half normal load

The programme duration will be different if the machine is short of rinse additive or the function is turned off.



Duration: hs/mins
3:30 - 1:00

Energy consumption in kWh
1,500 - 0,750

Water consumption in litres
15 - 9

0:29 0:15
0,800 0,050
10 4

7 Start programme Here we go ...

8 Switch off the appliance Everything o.k. ...

Additional options **

Express Wash/Speed Perfect (VarioSpeed)
... is obtained by increased energy consumption at a constant cleaning performance.

Half load ... for a few items, saves water, energy and time.

Intensive zone ... perfect for a mixed load. Washing pressure and washing temperature are increased slightly.


HygienePlus ... the temperature is increased during the final rinse process. This increases the hygiene status.

Extra drying ... improves the drying result by increased temperature in the final rinse. (Please take care with delicate dishes.)



Maintenance and care


Filters
... check,
if required,
clean.

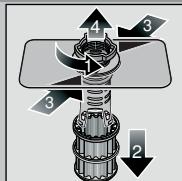


Rotate
filter cylinder,
remove filter
system ...



rinse
under
running
water ...

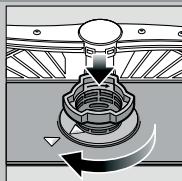


insert ...

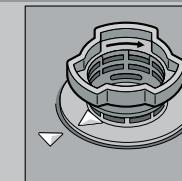


Screw on
filter system
NOTE
MARK!

- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.


Spray arms
... Remove
blockages/
deposits.

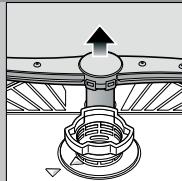


pull lower arm
upwards ...

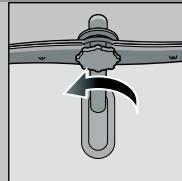


unscrew
upper arm ...

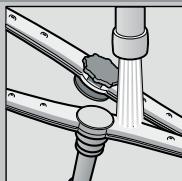


clean spray nozzles
under running water
(if required
use toothpicks) ...

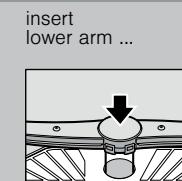

insert
lower arm ...

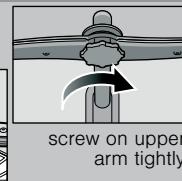

screw on upper
arm tightly

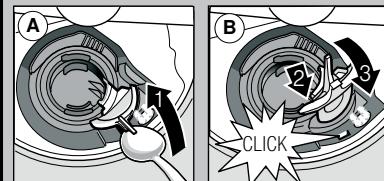

For more information see the instruction manual

Rectify small faults yourself ...

... because self-help is worth it!

 
Fault

Possible causes

Solution

Display "■" is lit

Supply fitting jammed
or furred up



- Open supply fitting.
- 1. Unscrew water connection.
2. Clean filter in the water supply.
3. Flow rate must be min. 10 l/min when water supply is open.
If the flow rate is less, replace the supply fitting.
- Install supply hose without kinks.

Display "E:22"

Filters are soiled or blocked

- Clean the filters (see above).

Display "E:24"
and "■" are lit

Waste water hose is blocked
or kinked
Cover of waste water pump
not attached

- Reposition the waste water hose without kinks.
- Attach cover (see above).

Display "E:25"
and "■" are lit

Waste water pump blocked

- Clean waste water pump (see above).

Other error display
"E:XX" is lit

Appliance technically defective

- Call customer service (state the error displayed).
- Unplug the appliance.
Turn off the tap.

Residual water in the
appliance

Programme has not yet ended

- Close the appliance and switch it on or terminate the programme (see Terminating the programme).

Rust on cutlery

Cutlery not rust-resistant
Hard knife blades are more susceptible
Extraneous rust

- Use dishwasher-safe cutlery.
- Never wash rusting parts in the appliance.


Fault

Possible causes

Solution

Tableware is not clean

Sand or gritty
residue on the tableware

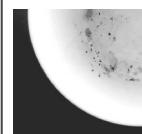

Items of tableware lying against
or on top of each other

Not enough detergent

Unsuitable programme selected

Spray arm nozzles blocked

Filters are soiled, not securely positioned

Spray arms blocked

- Separate tableware, prevent points of contact.

- Follow the manufacturer's instructions (detergent).

- Select a more intensive programme.

- Clean spray arms (see above).

- Clean the filters (see above).

- Arrange tableware so that spray arms can rotate freely.

Marks and streaks

Rinse aid dosage too high /
too low

- In the case of streaks: reduce detergent dosage.
- With water or limescale marks: increase dosage.

Tableware is not dry

Rinse aid

- Increase dosage.
Change product.
- Use rinse aid.

Milky deposits on
the tableware
(removable)

The combined detergent used
has poor drying performance.
Appliance setting

- Activate intensive drying (depending on model)
- Configure water softening system correctly.

Milky deposits, glasses
clouded / opaque
(cannot be removed)

Water softening function is
wrongly configured;
Insufficient special salt

- Add special salt.

Glasses not dishwasher-proof.

Glasses not dishwasher-proof.

- Use dishwasher-safe glasses.

Plastic / tableware items
discoloured

Not enough detergent
Discolouration by
food colourings (tomato sauce)

- Use gentle detergents for glass.
- Follow the manufacturer's instructions (detergent).
- Discolouration will not damage the appliance;
It will fade after further wash cycles.

Terminating the programme ...

While the programme is running,
press the START button
for approx. 3 sec. (Reset).



The numerical display
indicates "0:01";
approx. 1 minute after
the programme ends,
"0:00" is indicated.



Switch off the appliance.

Loading the dishwasher correctly ...

Dishwasher-proof utensils (not soiled with ash, wax, lubricating grease, ink or adhesive labels; remove large remnants of jam, milk products and food according to the operating instructions and check that the spray arms can rotate freely).