



Tumble dryer

WQB245CESN

[en]

User manual and installation instructions

Further information and explanations are available online:



Table of contents

1 Sa	afety	. 4
1.1	General information	. 4
	Intended use	
1.3	Restriction on user group	. 4
1.4	Safe installation	. 5
	Safe use	
	Safe cleaning and mainten-	
	ance	. 9
2 Pı	reventing material damage	11
3 Eı	nvironmental protection and	
Sa	nving energy	11
	Disposing of packaging	11
	Saving energy	11
3.3	Energy saving mode	12
4 In	stallation and connection	12
4.1	Unpacking the appliance	12
4.2	Scope of delivery	12
4.3	Requirements for the install-	
	ation location	13
	Water drain hose	13
	Aligning the appliance	16
	Reversing the door	16
4.7	Connecting the appliance to	
	the electricity supply	19
5 Fa	amiliarising yourself with	
	our appliance	20
	Appliance	20
	Wool basket	21
	Control panel	21
5.4	Operating logic	21
6 D i	splay	23
7 B	uttons	25

B Dryness level	30 30
9.1 Automatic programmes9.2 Timed programmes	31 31 32
10 Accessories	34
I1 Laundry11.1 Preparing the laundry	35
12.1 Switching on the appliance 12.2 Setting a programme 12.3 Adjusting the programme settings 12.4 Saving the programme settings 12.5 Loading laundry 12.6 Starting the programme 12.7 Adding laundry 12.8 Cancelling the programme 12.9 Unloading the laundry	35 35 35 36 36 36 36 36 36 37 38
13 Childproof lock	39
lock 13.2 Deactivating the childproof	39
lock	39

			en
14.1 Starting a programme with the crease-removal function		19.2 Water tank filter	51 51
14.2 Filling the water tank		19.4 Condensation container filter	52
15 Wool basket		20 Troubleshooting	53
15.2 Starting a programme with the wool basket	42	 21 Transportation, storage and disposal 21.1 Preparing the appliance for transportation 21.2 Disposing of old appliance 	58
16 1 Catting up the Hama Con	43	22 Customer Service	59
16.1 Setting up the Home Connect app16.2 Setting up Home Connect16.3 Home Connect menu16.4 Activating Wi-Fi on the ap-	44	22.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)	
pliance	44	23 Consumption values	60
appliance	44	24 Technical data 25 Declaration of Conformity	
16.7 Remote start16.8 Intelligent programme recommendation16.9 Remote diagnostics16.10 Data protection	45 45		
17 Basic settings	47		
17.1 Overview of the basic settings17.2 Changing the basic set-	47		
tings	48		
18 Appliance care	48		
care	48		
care programme	48		
ance care programme	49		
ance care programme	49		
19 Cleaning and servicing 19.1 Tips on cleaning and care			



1 Safety

Observe the following safety instructions.

1.1 General information



- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:

- for drying and freshening up fabrics that are washed with water and suitable for dryers.
- in private households and in enclosed spaces in a domestic environment.
- up to an altitude of max. 4000 m above sea level.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Keep children under the age of 3 years and pets away from the appliance.

1.4 Safe installation

Incorrect installation is dangerous.

- Connect and operate the appliance only in accordance with the specifications on the rating plate.
- Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ► The protective conductor system of the domestic electrical installation must be properly installed. The installation must have a sufficiently large cross section.
- ▶ When using a residual current circuit breaker, only use a type with the mark.
- ► Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ Never connect the appliance to a circuit that is regularly switched on and off by the energy supplier.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an all-pole isolating switch must be installed in the permanent electrical installation according to the installation regulations.
- ► When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.

- ► Never let the power cord come into contact with hot appliance parts or heat sources.
- Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- Only use adapters and power cords approved by the manufacturer.

en Safety

▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

⚠ WARNING – Risk of injury!

The high weight of the appliance may result in injury when lifted.

▶ Do not lift the appliance on your own.

If this appliance is not correctly installed in a washer-dryer stack, the installed appliance may fall.

- Only stack the dryer on a washing machine using the connection kit from the dryer manufacturer
 - → "Accessories", Page 34. No other installation method is permitted.
- ▶ Do not install the appliance in a washer-dryer stack if the dryer manufacturer does not offer a suitable connection kit.
- ▶ Do not install appliances from different manufacturers and with varying depths and widths in a washer-dryer stack.
- ▶ Do not install a washer-dryer stack on a platform; the appliances may tip over.

⚠ WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ► Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

△ CAUTION – Risk of injury!

The appliance may vibrate or move when in use.

- ▶ Place the appliance on a clean, even, solid surface.
- ► Align the appliance using the appliance feet and a spirit level. If hoses and power cords have been laid incorrectly, this causes a tripping hazard.
- ► Lay hoses and power cords in such a way that there is no risk of tripping.

If the appliance is moved by holding onto protruding components, such as the appliance door, the parts may break off.

▶ Do not move the appliance by holding onto protruding parts.

△ CAUTION – Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

- ▶ Do not touch the sharp edges on the appliance.
- Wear protective gloves when installing and transporting the appliance.

1.5 Safe use

⚠ WARNING – Risk of electric shock!

If the appliance or the power cord is damaged, this is dangerous.

- ► Never operate a damaged appliance.
- ► Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ► Call customer services. → Page 59

An ingress of moisture can cause an electric shock.

- ► Only use the appliance in enclosed spaces.
- ► Never expose the appliance to intense heat or humidity.
- ▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

△ WARNING – Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ► Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

↑ WARNING – Risk of suffocation!

Children may breathe in or swallow small parts, causing them to suffocate.

- ► Keep small parts away from children.
- ▶ Do not let children play with small parts.

⚠ WARNING – Risk of explosion!

If there is coal dust or flour in the air around the appliance, this may cause an explosion.

► Keep the area around the appliance clean during operation.

⚠ WARNING – Risk of poisoning!

Condensation water from this appliance is not suitable for drinking and may be contaminated with fluff.

Do not drink or reuse the condensation water from the appliance.

Detergents and care products may result in poisoning if consumed.

- ▶ If accidentally swallowed, seek medical advice.
- ► Keep detergents and care products out of the reach of children.

⚠ WARNING – Risk of fire!

The refrigerant R290 in this appliance is environmentally friendly yet combustible and may ignite if it comes into contact with open flames or ignition sources.

► Keep naked flames and ignition sources away from the appli-



⚠ WARNING – Risk of explosion!

If there is any residual material left in the fluff filter, this may ignite during the drying process.

Clean the fluff filter regularly.

Highly flammable objects such as lighters or matches may ignite during the drying process.

► Remove all highly flammable objects from any pockets in your laundry before the drying process.

Unwashed laundry that has come into contact with solvents, oil, wax, wax remover, paint, grease or stain remover may ignite when drying is in progress.

▶ Do not place laundry in this appliance to be dried if the laundry has not been washed first.

- ► Rinse the laundry thoroughly with warm water and detergent before drying it in the machine.
- ▶ Do not use the appliance if industrial chemicals have been used to clean the laundry beforehand.

★ WARNING – Risk of fire!

If drying is interrupted early, the laundry is not cooled sufficiently and may ignite.

- ▶ Do not interrupt the drying programme early.
- ► If drying is interrupted early, remove the laundry immediately and spread it out.

△ CAUTION – Risk of injury!

The covering plate may break if you stand on or climb onto the appliance.

▶ Do not stand on or climb onto the appliance.

The appliance may tip over if you sit on or lean against the open door.

- ▶ Do not sit on or lean against the appliance door.
- ▶ Do not place any objects on the appliance door.

Reaching into the drum while it is still turning may cause hand injuries.

► Wait for the drum to come to a complete stop before reaching inside.

1.6 Safe cleaning and maintenance

Improper repairs are dangerous.

- ▶ Never make any technical modifications to the appliance or its features.
- ► Repairs to the appliance should only be carried out by trained specialist staff.
- ► Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

en Safety

An ingress of moisture can cause an electric shock.

▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

⚠ WARNING – Risk of injury!

The use of non-original spare parts and non-original accessories is dangerous.

► Only use the manufacturer's original spare parts and original accessories.

⚠ WARNING – Risk of poisoning!

Poisonous fumes may be given off if you use cleaning agents that contain solvents.

▶ Do not use cleaning agents that contain solvents.

2 Preventing material damage

ATTENTION!

The functionality of the appliance may be impaired if you use the wrong quantity of fabric softener, detergent, care product or cleaning agent.

Follow the dosage recommendations from the manufacturer.

Exceeding the maximum load capacity impairs the function of the appliance.

- Observe the maximum load capacity for each programme and do not exceed it.
- → "Programmes", Page 31 The function of the appliance may be impaired if the appliance overheats.
- Keep the ventilation opening on the appliance clear during operation.
- Make sure that the area is adequately ventilated.

Light objects such as hair and fluff may be sucked in from the ventilation opening on the appliance during operation and impair the function of the appliance.

- Keep the area around the appliance clean during operation.
- Keep light objects away from the appliance.

Foam and foam rubber may deform or melt during the drying process.

Do not dry laundry that contains foam or foam rubber.

Unsuitable cleaning products may damage the surfaces of the appliance.

- Do not use harsh or abrasive detergents.
- Do not use cleaning products with a high alcohol content.
- Do not use hard scouring pads or cleaning sponges.

- Clean the appliance with nothing but water and a soft, damp cloth.
- ► Remove all detergent residue. spray residue or other residues immediately if they come into contact with the appliance.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

 Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

Operate the appliance in a well-ventilated room and keep the ventilation opening on the appliance clear.

✓ If air exchange is impeded, this extends the programme duration and increases energy consumption.

Spin the laundry in the washing machine before drying.

✓ Damper laundry extends the programme duration and increases energy consumption.

Observe the programme's maximum load capacity.

- → "Programmes", Page 31
- ✓ If the maximum load is exceeded, this extends the programme duration and increases energy consumption.

After drying, clean the fluff filter → Page 37.

✓ If the fluff filter is dirty, this reduces the air flow in the appliance, extends the programme duration and increases energy consumption.

Deactivate Wi-Fi on the appliance if it is not being used.

- → "Deactivating Wi-Fi on the appliance", Page 44.
- If the Wi-Fi is activated, this increases energy consumption.

3.3 Energy saving mode

If you do not use the appliance for an extended period, it automatically switches to energy-saving mode. All displays go out and \triangleright flashes. Energy-saving mode ends when you use the appliance again. If you do not continue operating the appliance, it automatically switches to standby mode.

4 Installation and connection

4.1 Unpacking the appliance

ATTENTION!

Objects remaining in the drum that are not designed for operation with the appliance may cause material damage and damage to the appliance.

- Remove these objects, along with all supplied accessories, from the drum before starting the appliance.
- Remove any packaging and protective covers completely from the appliance.

- → "Disposing of packaging", Page 11
- 2. Check the appliance for visible damage.
- 3. Open the door.
- Remove any accessories from the drum.
- 5. Close the door.

4.2 Scope of delivery

After unpacking all parts, check for any damage in transit and completeness of the delivery.

ATTENTION!

If the appliance is operated with incomplete or defective accessories, the appliance may not be able to operate properly, or this may result in material damage or damage to the appliance.

- Do not operate the appliance with incomplete or defective accessories.
- Replace the accessories in question before operating the appliance.
 - → "Accessories", Page 34

Included with the appliance Tumble dryer Accompanying documents Water drain hose with connection adapter, fixing material and elbow. "Water drain

hose", Page 13

Included with the appliance	Description
	Water jug → "Filling the wa- ter tank", Page 40
	Wool basket with insert → "Wool basket", Page 41

4.3 Requirements for the installation location

ATTENTION!

If the appliance is tilted at an angle greater than 40°, residual water may leak out of the appliance and cause material damage.

- ► Tilt the appliance carefully.
- Transport the appliance in an upright position.

If residual water in the appliance freezes, this may cause damage to the appliance.

 
 Do not install or operate this appliance anywhere that is liable to experience frost or outdoors.

If the appliance is operated immediately after transportation, the refrigerant contained in the appliance may result in damage to the appliance.

 Immediately after transporting the appliance, leave it to rest for two hours before putting it into operation.

Installation loca- Requirements tion

On the floor



Place the appliance on a clean. level and firm surface. Align the appliance

→ Page 16.

Installation loca- Requirements tion

In a washer-dryer stack

 


Only use the oriainal connection set from the dryer manufacturer when setting up this appliance in a washer-dryer stack.

- Connection kit with pull-out worktop
 - → Page 34
- Connection kit → Page 34

This appliance must only be stacked on a washing machine from the same manufacturer. The depth and width of this appliance must correspond with the dimensions of the washing machine. Do not place the washer-dryer stack on a platform.

Against a wall



Do not trap the hoses and power cord between the wall and the appliance.

4.4 Water drain hose

Condensation that forms in the appliance as it dries the laundry is collected by default in the condensation

container. Use the water outlet hose to drain away excess condensation directly into the waste water system.

Notes

- Operate this appliance using the water outlet hose provided.

 → "Connecting the water drain hose", Page 14

 If you connect the water outlet hose, you do not have to regularly empty the condensation container.

 → "Emptying the condensation container", Page 38
- You can order this optional
 → "Accessories", Page 34 from
 our customer service.

Connecting the water drain hose

If you do not want to regularly empty the appliance's condensation container, connect the water outlet hose.

ATTENTION!


When operating the appliance without the water drain hose being connected properly, liquid may leak out of the connecting piece.

 Before operating the appliance, connect the water drain hose properly to the connecting piece.

Requirements

- The appliance and the accessory have been unpacked.
 - → "Unpacking the appliance", Page 12
- The appliance is installed at the installation location.
 - → "Requirements for the installation location", Page 13


1. Pull out the condensation hose from the connecting piece.

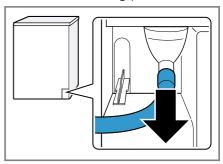


The condensation hose is connected to the connecting piece at the factory.

Note: When removing the condensation hose, liquid may leak out of the connecting piece.


2. Push the condensation hose into the holder.

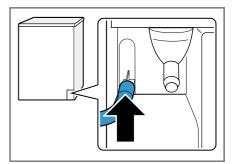


3. Push the water drain hose as far as it will go into the connecting piece.

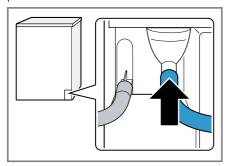


4. Empty the condensation container → Page 38.

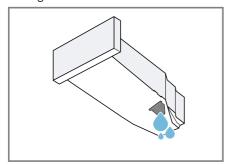

5. Remove the stopper on the underside.

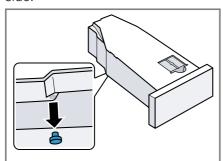

6. Insert the stopper into the recess in the top.

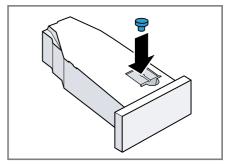

- Insert the condensation container → Page 39.
- 8. Connect the appliance to the water outlet.
 - → "Water outlet connection types", Page 15

Tip: To collect condensation in the condensation container again (e.g. if you change where the appliance is located), carry out these steps in reverse order.

 
Water outlet connection types

ATTENTION!

In the event of a blocked or covered outlet, accumulated wastewater can flow back into the appliance.

▶ Before operating the appliance, ensure that the wastewater drains away quickly and eliminate any blockages.


Drainage into a siphon.



Secure the connection point with a (12-22 mm) hose clamp. Secure the water outlet hose with a hose guide at a height of at least 80 cm and no more than 100 cm.

Note: You can use the Y-distributor → Page 34 to connect the water drain hose of an additional appliance, such as a washing machine, to the same siphon out-

 
Drainage into a wash basin.



Push the water drain hose fully through the elbow → Page 12 and secure it using fixing material.

Secure the elbow at a height of no more than 100 cm.

 Drainage into a gully.




Push the water drain hose fully through the elbow → Page 12 and secure it usina fixina material.

Secure the elbow to the gully.

4.5 Aligning the appliance

In order to reduce vibrations and noises, align the appliance correctly.

► To align the appliance, turn the appliance feet. Check that the appliance is level using a spirit level.

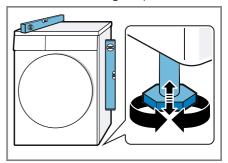

All appliance feet must stand firmly on the ground.

4.6 Reversing the door

To make it easier to place and remove laundry in the drum, you can change the side on which the door is hinged.

⚠ CAUTION Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

- ► Do not touch the sharp edges on the appliance.
- Wear protective gloves when installing and transporting the appliance.


Notes

- Only use a Torx T15 screwdriver and a Torx T20 screwdriver to remove and insert screws.
- To prevent material damage, lav the removed door on a level and soft surface.

Removing the door


Requirement: The appliance is disconnected from the mains.

- 1. Open the door.
- 2. Unscrew the door.

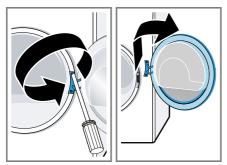


Changing the door hinge and door hook


1. Unscrew the door hinge cover.

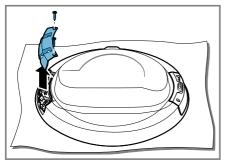

2. Unscrew the door hinge and the door hook.

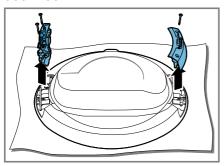


3. Screw the door hinge and the door hook onto the opposite sides.

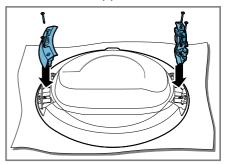

When you do this, ensure that the door seal is not trapped or damaged.


4. Screw on the door hinge cover.

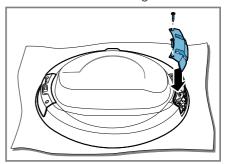

When you do this, ensure that the door seal is not trapped or damaged.

en Installation and connection

Remove the colour door handle indicator and swap it with the cover on the opposite side.

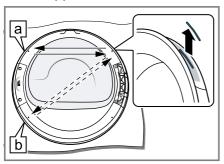


Select the position of the door handle indicator based on the appliance's installation location:


- a The appliance is installed on the floor.
- b The unit is installed in a raised position in a washer-dryer stack.

Changing the door lock


1. Unscrew the door lock cover.

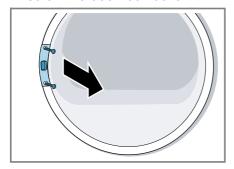


2. Remove the door lock.

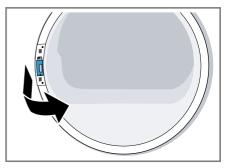


3. Insert the door lock on the opposite side.

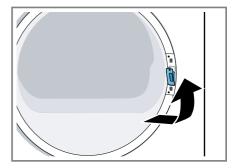

4. Screw on the door lock cover.

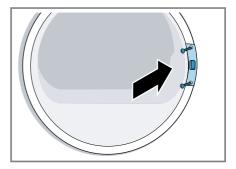

5. Screw on the door.

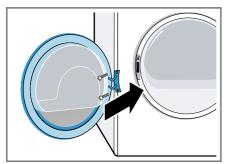

4.7 Connecting the appliance to the electricity supply

1. Insert the mains plug of the appliance's power cable in a socket nearby.


The connection details of the appliance can be found under Technical data → Page 61.

2. Check the mains plug is inserted properly.

5 Familiarising yourself with your appliance


5.1 Appliance

You can find an overview of the parts of your appliance here.

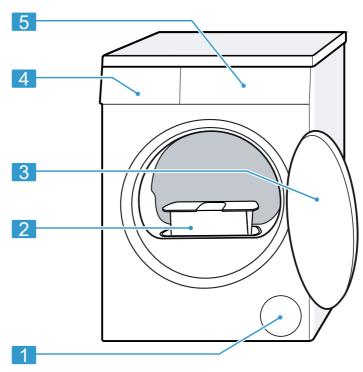

On certain models, specific details such as the colour and shape may differ from those pictured.


1	Ventilation opening
2	Fluff filter → Page 37
3	Door
4	Condensation container → Page 38
5	Control panel → Page 21

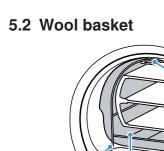

1	Securing foot
2	Wool basket
3	Insert
4	Tab for securing in the hook

5.3 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

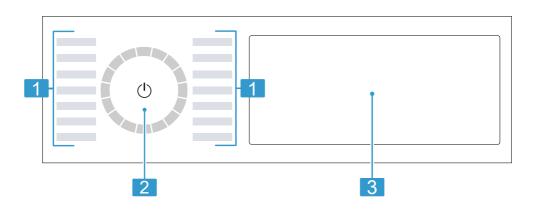

	Flogrammes - Fage 31
2	Programme selector → Page 35
3	Buttons → Page 25 and display → Page 23

Programmos - Pago 21

Some areas of the display are buttons and respond to touch. You can activate, deactivate or change set-

5.4 Operating logic

tings by pressing the buttons. The activated settings are highlighted brightly on the display.

ATTENTION!

Pressing on the display with force may cause damage.

- Do not apply heavy pressure on the display.
- ► Do not press on the display using pointed or sharp objects.

Changing a setting value


If you activate certain settings, the display shows selection buttons and you can change the setting value.

Press the selection buttons → Page 25.

The display shows the setting value.

6 Display

The display shows the current settings, options or relevant information.

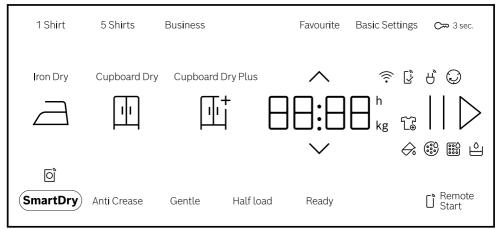

Example: Display

Display	Description
0:40 ¹	Expected programme duration or programme time remaining in hours and minutes.
9.0 1	Recommendation for the maximum load capacity for the selected program in kg.
10h ¹	Program end time → "Buttons", Page 28
	You can remove or add laundry, and interrupt the current programme. → "Adding laundry", Page 36
٩	Empty and insert the condensation container. → "Emptying the condensation container", Page 38
	Clean the fluff filter. → "Cleaning the fluff filter", Page 37
CArE	Run the basic appliance care programme. → "Appliance care", Page 48
⇔	Fill the water tank for the crease-removal function. → "Filling the water tank", Page 40
¹ Example	

en Display

Diamlan	Description	
Display	Description	
Hot	The cooling process cools the laundry for a few minutes while the drum is rotating, in order to avoid damage to the laundry. The cooling process can be cancelled by opening the door.	
	Note: Do not change the set programme.	
<u></u>	 Lights up: The appliance is connected to your home network via Wi-Fi. Flashes: The appliance is trying to connect to your home network via Wi-Fi. 	
	→ "Home Connect ", Page 43	
<u>`</u> }	Settings that are not available on the appliance have been set via the Home Connect app. You can find more information in the Home Connect app.	
©	Crease-reduction function Programme status	
	Pause Programme status	
End	Program end Programme status	
¹ Example		

7 Buttons

Below is an overview of the buttons and their setting options.

Button	Selection	Description
	StartCancelPause	Start, cancel or pause the programme. If is displayed, you can pause the programme. If > is displayed, you can start the programme.
(mains switch)	Switch onStandby mode	Switch on the appliance or put it in standby mode.
c∞ 3 sec.	ActivateDeactivate	Activate or deactivate the childproof lock. Disable the control panel to prevent unwanted or accidental operation. If the childproof lock is activated and the appliance has been switched off, the childproof lock remains activated. → "Childproof lock", Page 39
\Diamond	Multiple selection	To change a setting, press the \(\subseteq \) or \(\subseteq \) selection button until the display shows the required setting.
Basic Settings	Multiple selection	→ "Basic settings", Page 47
Favourite	SavingSetting	Press the button for approx. 3 seconds to save your customised program settings. → "Saving the programme settings", Page 36 If you briefly press the button, you can set customised program settings for your program.

en Buttons

Button	Selection	Description
Cupboard Dry Plus III	ActivateDeactivate	The dryness level defines how damp or dry the laundry is after the programme ends. → "Dryness level", Page 30
Cupboard Dry 🖽	ActivateDeactivate	The dryness level defines how damp or dry the laundry is after the programme ends. → "Dryness level", Page 30
Iron Dry <i>□</i>	ActivateDeactivate	The dryness level defines how damp or dry the laundry is after the programme ends. → "Dryness level", Page 30
5 Shirts	■ Activate ■ Deactivate	Adjust the set programme with crease-removal function Iron Assist ♥. → "Crease-removal function", Page 40 Suitable for dry shirts and blouses that have only been worn once. Activate for 2 to 5 items of laundry. Notes The laundry is not dried or washed. To prevent creasing, remove the laundry after the programme ends.

Button	Selection	Description
Business	■ Activate ■ Deactivate	Adjust the set programme with crease-removal function Iron Assist ♥. → "Crease-removal function", Page 40 Suitable for dry suits, jackets and trousers that have not been worn for long and are labelled "Dry clean only". Activate for one suit or two items of laundry. Notes The laundry is not dried or washed. To prevent creasing, remove the laundry after the programme ends. The programme is not suitable for thin, lightweight summer suits.
1 Shirt	■ Activate ■ Deactivate	Adjust the set programme with crease-removal function Iron Assist ♥ . → "Crease-removal function", Page 40 Suitable for dry shirts and blouses that have only been worn once. Activate for one item of laundry. Notes The laundry is not dried or washed. To prevent creasing, remove the laundry after the programme ends.

Button	Selection	Description
Anti Crease	ActivateDeactivate	Activate or deactivate the crease-reduction function. Once the programme has ended, the drum moves the laundry at regular intervals for 120 minutes to prevent creasing.
Gentle	ActivateDeactivate	Activate or deactivate gentle drying. The temperature is reduced for delicate fabrics, e.g. polyacrylic or elastane. The programme duration is extended.
Ready	Up to 24 hours	Set the programme end time. The programme duration is already included in the set number of hours. Once the programme has started, the programme duration is displayed.
Half load	ActivateDeactivate	Dry individual items of laundry or small loads of laundry.
© SmartDry	Activate	After you have washed your laundry in the washing machine, the dryer recommends a suitable programme for drying the laundry. Note: The washing machine must be compatible with Home Connect. The washing machine and dryer must be connected to your home network and registered in your Home Connect app.
🗋 Remote Start	ActivateDeactivate	→ "Remote start", Page 44

Button	Selection	Description
	Open the Home Connect menu	

8 Dryness level

Each automatic programme has a specified dryness level. The dryness level defines how dry or damp your laundry is after the programme ends.

Dryness level	Laundry	Drying result
瓩	Multi-layered, thick laundry that does not dry readily.	The laundry is dry.
<u> </u>	Normal, single-layered laundry.	The laundry is dry.
a	Normal, single-layered laundry.	The laundry is still slightly damp. To prevent creasing after drying, iron the laundry or hang it up.

8.1 Changing the dryness level

For some automatic programmes, you can change the dryness level so that your laundry will be drier or more damp.

- 1. Set an automatic programme. → "Automatic programmes". Page 31
- The display shows the specified dryness level.
- 2. Press Cupboard Dry III, Cupboard **Dry Plus**

 iii or **Iron Dry**

 iii ...

8.2 Adjusting the dryness level

If the laundry feels too damp after it has been dried to a particular dryness level, you can adjust the dryness level.

Note: You can also adjust the dryness level in the basic settings.

- **1.** Set an automatic programme. → "Automatic programmes", Page 31
- The display shows the specified dryness level.

- 2. Press and hold Cupboard Dry !!! . Cupboard Dry Plus I or Iron Dry ☐ for approx. 3 seconds.
- 3. Press \wedge or \vee to adjust the dryness level.
- 4. Press and hold the selected dryness level for approx. 3 seconds to return to the automatic programme.

9 Programmes

You can dry your fabrics using either an automatic programme or a timed programme.

9.1 Automatic programmes

Automatic programmes are programmes in which humidity sensors measure the residual moisture in the laundry during the drying cycle. The programme only ends once the set dryness level is reached. Each automatic programme has a dryness level → Page 30. The dryness level defines how dry or damp the laundry is after the programme ends.

Tips

- Select the dryness level according to the type of fabric or the desired drying result.
 - → "Dryness level", Page 30
- The laundry's care labels provide you with additional information about programme selection.

Programme	Description	Max. load (kg)
Cotton	Dry hard-wearing, heat-resistant fabrics made of cotton or linen.	9.0
Cotton Eco	Dry hard-wearing, heat-resistant fabrics made of cotton or linen. Energy-saving programme.	9.0
Easy Care	Dry items made of synthetic materials or blended fabrics.	3.5
Mix	Dry items made of cotton and synthetics.	3.0
Bed linen	Dry duvet covers, pillowcases and sheets made of cotton. Note: The drum movement is optimised for drying large items of laundry.	3.5
Delicate	Dry delicate items made of satin, synthetics or blended fabrics.	2.0
Hygiene Plus	Dry hard-wearing, heat-resistant fabrics made of cotton or linen. Note: Particularly suitable for strict hygiene requirements.	4.0

en Programmes

Programme	Description	Max. load
Shirts/Blouses	Suitable for shirts and blouses made of cotton, linen, synthetics or blended fabrics. Note: For optimal drying results, dry a maximum of 5 shirts or 5 blouses at the same time. Once the laundry is dry, iron it or hang it up. The residual moisture is then distributed available.	(kg) 1.5
Rapid 40'	uted evenly. Dry items made of synthetics and light cotton.	1.0
Towels	Dry hard-wearing, heat-resistant towels and dressing gowns made of cotton or linen.	6.0
Iron Assist ூ	Reduce creasing and airborne odours. → "Crease-removal function", Page 40 To adjust the programme with crease-removal function, press the corresponding button. → "Buttons", Page 25	-
App programs গ্রী	Select additional programmes directly via the Home Connect app. A description of the programmes can be found in the Home Connect app. Note: Your appliance must be connected to your home network and registered in your Home Connect app. → "Home Connect", Page 43	-

9.2 Timed programmes

Timed programmes are programmes with a defined or adjustable programme duration. The programme ends once this time has elapsed, even if the laundry is still not dry, for example. Timed programmes are suitable for drying individual items of laundry or thin fabrics.

Tip: The laundry's care labels provide you with additional information about programme selection.

Programme	Description	Max. load
		(kg)
Wool in Basket	Dry items made of wool or containing wool.	One item of laundry
	Note: Dry these items only using the wool basket. → "Wool basket", Page 41	
Time Program Warm	Dry all types of fabric except for wool and silk. Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry. Note: This programme is suitable for drying using the wool basket. → "Wool basket", Page 41	3.0
App programs 🖹	Select additional programmes directly via the Home Connect app. A description of the programmes can be found in the Home Connect app. Note: Your appliance must be connected to your home network and registered in your Home Connect app. → "Home Connect", Page 43	_

10 Accessories

Use original accessories. These have been made especially for your appliance.

Note: Some accessories are available in other colours. Contact → "Customer Service", Page 59.

	Use	Order number
Connection kit	To save space, stack the appliance on a suitable washing machine of the same width and depth and that is from the same manufacturer.	WTZ27510
Connection kit with pull- out worktop	To save space, stack the appliance on a suitable washing machine of the same width and depth and that is from the same manufacturer. The pull-out worktop makes it easier to load and unload the appliance.	WTZ27500
Wool basket	Dry or air individual woollen items, sports shoes and soft toys.	WMZ20600
Y-distributor	Connect the water drain hose of an additional appliance to the same siphon outlet.	15000490
Appliance care product	Spare part for the intensive appliance care function.	00311829
Platform	Install the appliance at a raised height so that it can be easily loaded and unloaded.	WTZPW20D

11 Laundry

11.1 Preparing the laundry

ATTENTION!

Objects remaining in the laundry may damage the laundry and the drum.

► Remove all items from any pockets in your laundry before using the appliance.

Note

The appliance and fabrics are protected when you prepare your laundry.

- Brush off sand and soil
- Sort the laundry according to colour and textiles and observe the care labels
- Close all zips. Velcro fasteners. hooks and eyes
- Remove curtain fittings and lead strips
- Load the laundry unfolded into the drum
- Spin the laundry before drying
- Dry woollen items, sports shoes and soft toys in the wool basket → "Wool basket", Page 41

12 Basic operation

12.1 Switching on the appliance

Note: If you switch the appliance on the first time after you have connected it to the electrical system, the switch-on process takes up to one minute

Requirement: The appliance has been correctly installed and connected


- → "Installation and connection", Page 12
- ► Press 🛈.

The switch-on process takes a few seconds.

Note: The lighting for the drum goes out automatically.

12.2 Setting a programme

1. Press the required programme. → "Programmes", Page 31

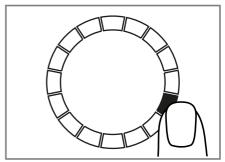

- ✓ The display shows the programme settings.
- 2. If required, adjust the programme settinas.
 - → "Adjusting the programme settings", Page 35

12.3 Adjusting the programme settings

Depending on the programme and programme progress, you can adjust or activate/deactivate the settings.

Requirement: A programme is set. → "Setting a programme", Page 35

 Adjust the programme settings. → "Buttons", Page 25

Observe the information about operating logic → Page 21.

Note: The programme settings are not saved permanently for the programme.

12.4 Saving the programme settings

You can save your individual programme settings as favourites.

Requirements

- A programme is set.
 - → "Setting a programme", Page 35
- The programme settings have been adjusted.
 - → "Adjusting the programme settings", Page 35
- Press and hold Favourite for approx. 3 seconds.

Press **Favourite** to call up the saved programme.

Note: To overwrite the saved programme, repeat the steps above.

12.5 Loading laundry

Note: To prevent creasing, note the maximum load for the programmes. → "Programmes", Page 31

Requirements

- The laundry is prepared and sorted.
 - → "Laundry", Page 35
- The drum is empty.
- 1. Open the door.
- 2. Place the laundry in the drum.
- Close the door.Ensure that there is no laundry trapped in the door.

12.6 Starting the programme

Requirement: A programme is set. → "Setting a programme", Page 35

► Press | | >.

- The display shows the programme duration or the programme end time.
- ✓ After the programme has ended, the display shows: "End".

Note: If "Hot" appears, the appliance cools the laundry.
When "Hot" goes out, the laundry

12.7 Adding laundry

has cooled down.

After the programme starts, you can remove or add laundry at any time.

1. Press | | >.

The cooling process starts automatically after approximately 30 seconds and cools down the laundry while the drum is rotating. If you want to avoid or cancel the cooling process, open the door.

→ "Display", Page 24

- 2. Open the door.
- 3. Add or remove laundry.
- 4. Close the door.
- 5. Press | | >.

12.8 Cancelling the programme

- **1.** Press | | ▷ .
- 2. Open the door.
- Remove the laundry.
 → "Unloading the laundry",
 Page 36

12.9 Unloading the laundry

- 1. Open the door.
- **2.** Remove the laundry from the drum.

12.10 Put the appliance into standby mode

► Press 🖰 .

12.11 Fluff filter

During drying, fluff from the laundry is collected in the fluff filter. The fluff filter protects the appliance from fluff.


Cleaning the fluff filter

If the drying programme has finished or the display shows a notification while the appliance is in operation, clean the fluff filter.


Note: If you do not clean the appliance as described, the appliance's functionality may be impaired.

Requirements


- The display shows the following after drying: "End"
- or the display shows the following
- 1. Open the door.
- 2. Remove the fluff from the door

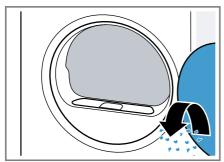

3. Remove the two-part fluff filter.

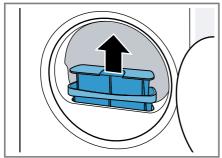


4. Remove the fluff from the recess.

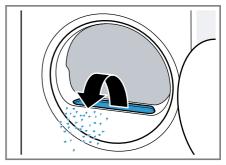


Ensure that no fluff falls into the air channel.


5. Disconnect the two-part fluff filter.

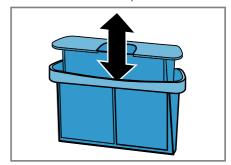


6. Open the two fluff filters.

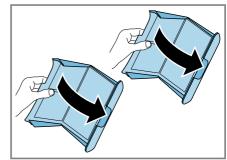


7. Remove the fluff.

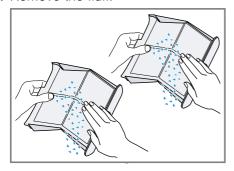


8. Clean the two fluff filters thoroughly under warm, running water and then dry them off.

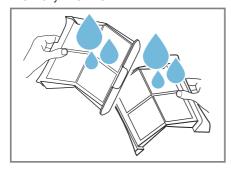

9. Close the two fluff filters and put them together.

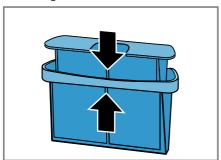

10. Insert the two-part fluff filter.

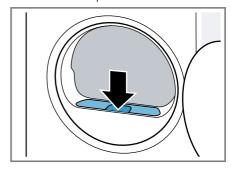

11. Close the door.

12.12 Condensation container

Condensation that forms in the appliance as it dries the laundry is collected by default in the condensation container.

Note: Operate this appliance using the water outlet hose provided.

→ "Connecting the water drain hose", Page 14

If you connect the water outlet hose, you do not have to regularly empty the condensation container.

→ "Emptying the condensation container", Page 38


Emptying the condensation container

If the drying programme has finished or the display shows a notification while the appliance is in operation, empty the condensation container.


Requirements

- The display shows the following after drying: "End"
- or the display shows the following during operation: 🗳 .

1. Pull out the condensation container, keeping it level.

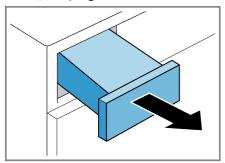

2. Empty the condensation container.

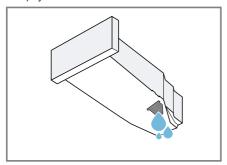


Check the condensation container filter → Page 52 regularly and clean the filter if it is dirty. Make sure that you insert the condensation container before operating the appliance.

→ "Inserting the condensation container", Page 39

Inserting the condensation container

 Push the condensation container in as far as it will go.

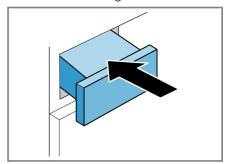

13 Childproof lock

Secure your appliance against being operated unintentionally using the controls.

13.1 Activating the childproof lock

- ▶ Press and hold c 3 sec. for approx. 3 seconds.
- ✓ The control elements are locked.
- ▼ The childproof lock also remains activated when the appliance is in standby mode and in the event of a power cut.

13.2 Deactivating the childproof lock

Requirement: To deactivate the childproof lock, the appliance must be switched on.

▶ Press and hold c 3 sec. for approx. 3 seconds.

14 Crease-removal function

In order to reduce creasing and airborne odours, such as cigarette smoke, you can use a programme with a crease-removal function for any laundry that has not been worn for long.

14.1 Starting a programme with the crease-removal function

Note

Wash items of laundry that have traces of sweat, perfume or deodorant before wearing them again. Do not use dryer cleaning sets. Do not use a programme with the crease-removal function for the following fabrics:

- Wool, leather and viscose
- Fabrics with parts made from metal, wood or plastic
- Waxed jackets and oilskin jackets

Requirements

- The laundry is prepared. → "Preparing the laundry", Page 35
- The laundry is sorted.
- The laundry is placed in the appli-
 - → "Loading laundry". Page 36
- 1. Set a programme with crease-removal function.
 - → "Automatic programmes", Page 31
- 2. If required, adjust the set programme with crease-removal function.
 - → "Buttons", Page 25
- **3.** Start the programme. → "Starting the programme", Page 36

If the water tank is empty, the display shows: 4.

→ "Filling the water tank", Page 40

The average programme duration of the crease-removal function is approx. 45 minutes and may be longer or shorter depending on the ambient temperature.

- ✓ After the programme has ended, the display shows: "End".
- **4.** Remove the laundry. → "Unloading the laundry", Page 36

The results of the crease-removal function may vary depending on the type of fabric, the amount of laundry and the selected programme.

- Remove the laundry immediately after the programme has ended to prevent creasing.
- 5. Hang up the items of laundry and pull them into shape.

14.2 Filling the water tank

Your appliance removes the creases from rarely worn clothing using cold drinking water. If the display shows a notification while the appliance is in operation, fill the water tank.


ATTENTION!

Operating the appliance with water that is dirty or too hot may result in damage to the appliance.

- Only fill the water tank with cold drinking water.
- Never use condensed water, distilled water, additives or descaler for the crease-removal function.

Requirements

- You have started a programme with the crease-removal function. → "Starting a programme with the crease-removal function". Page 40
- The condensation container → Page 38 is removed from the appliance.
- 1. Add approx. 180 ml cold mains water through the front opening, using the water jug provided.

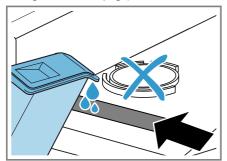

Check the water tank filter regularly and clean the filter if it is dirty. → "Cleaning the water tank filter", Page 51

If \$\hat{\omega}\$ does not go out on the display, add cold drinking water through the front opening and align the appliance correctly.

- → "Aligning the appliance". Page 16
- ✓ ⇔ goes out on the display.
- 2. Insert the condensation container. → "Inserting the condensation container", Page 39
- 3. Start the programme.
 - → "Starting a programme with the crease-removal function". Page 40

15 Wool basket


Use the wool basket to gently dry delicate fabrics, soft toys or sports shoes in a stationary position.

Note: You can order this optional → "Accessories", Page 34 from our customer service.


15.1 Inserting the wool basket

1. Open the door. Ensure that the drum is empty.

2. Insert the feet of the wool basket into the holes from the door openina.

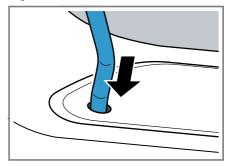

3. Insert the tab on the front of the wool basket into the upper hooks.

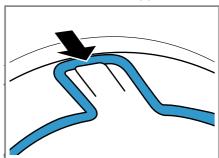

15.2 Starting a programme with the wool basket

ATTENTION!


If items of laundry in the wool basket touch the rotating drum or the ribs of the drum, the laundry may cause material damage and damage to the appliance.

 Place the items of laundry in the insert or wool basket such that they do not touch the drum or the ribs of the drum.

Requirement: The wool basket is inserted into the appliance.

→ "Inserting the wool basket", Page 41

- Place the laundry into the wool basket, either directly or using the insert.
 - → "Examples of how to use the wool basket", Page 42

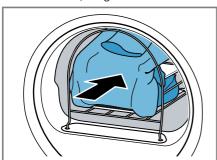

- 2. Close the door.
- **3.** Set a programme that is suitable for drying with the wool basket.
 - Observe the programme description.
 - → "Timed programmes", Page 32
- **4.** If required, adjust the duration of the programme.

Observe the recommended programme duration for items of laundry in the wool basket:

Laundry item	Programme duration in hours:minutes				
Thin woollen pullover	Approx. 1:20				
Thick woollen pullover	Approx. 1:30 - 3:00				
Skirt	Approx. 1:00 - 1:30				
Trousers	Approx. 1:00 - 1:30				
Gloves	Approx. 0:30				
Sports shoes	Approx. 1:30/ max. 2:00 with airing				

Tip: Increase the programme duration for thick or multi-layered items of laundry.

- **5.** Start the programme \rightarrow *Page 36.*
- **6.** Remove the wool basket once the programme has ended.

15.3 Examples of how to use the wool basket

ATTENTION!

If items of laundry in the wool basket touch the rotating drum or the ribs of the drum, the laundry may cause material damage and damage to the appliance.


 Place the items of laundry in the insert or wool basket such that they do not touch the drum or the ribs of the drum.

Example	Use
Trousers or skirt	Place the items
2 3	of laundry unfolded into the in-
	sert.
	Note: Spin the
	laundry before
	drying.

Example

Use

 Pullover



Sports shoes



Lift the tongues of the shoes. Remove the insoles or heel cushions. Place a rolled-up hand towel in the wool basket to create an inclined surface. Place the shoes on the towel with the heels facing down.

Note: Do not use the insert. Do not dry leather shoes or shoes with leather parts.

Soft toys



Place the soft toy in the wool basket.

Note: Do not use the insert. If you place numerous or small soft toys in the wool basket. make sure they do not fall out.

16 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of Home Connect services in your country. You can find information about this at: www.home-connect.com.

The Home Connect app guides you through the entire login process. Follow the instructions in the Home Connect app to configure the settings.

Tips

- Please consult the documents supplied by Home Connect.
- Please also follow the instructions in the Home Connect app.

Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app. → "Safety", Page 4
- Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.

16.1 Setting up the **Home Connect app**

- 1. Install the Home Connect app on your mobile device.
- 2. Start the Home Connect app and set up access for Home Connect. The Home Connect app guides you through the entire login process.

16.2 Setting up Home Connect

Requirements

- The Home Connect app has been installed on your mobile device.
- Wi-Fi has been activated on the router.
- The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.
- 1. Press and hold (i) Remote Start for approx. 3 seconds.
- **2.** Follow the instructions in the Home Connect app.

16.3 Home Connect menu

The Home Connect menu contains all of the Home Connect settings.

Calling up the Home Connect menu

- ► Press and hold (i) Remote Start for at least 3 seconds.
- The display shows the first setting of the Home Connect menu.

Navigating in the Home Connect menu

 Briefly press D Remote Start until the display shows the required setting.

Exiting the Home Connect menu

► Press and hold D Remote Start for at least 3 seconds.

16.4 Activating Wi-Fi on the appliance

Requirements

- The Home Connect menu is called up.
 - → "Calling up the Home Connect menu", Page 44
- The display shows "oFF".

- ▶ Press | | ▷ to change the setting.
- ▼ The display shows "on" if the Wi-Fi is activated.

Note: If the Wi-Fi is activated, the display alternately shows "on" and the signal strength of the Wi-Fi connection.

16.5 Deactivating Wi-Fi on the appliance

Requirements

- The Home Connect menu is called up.
 - → "Calling up the Home Connect menu", Page 44
- The display shows "on".
- ▶ Press | | ▷ to change the setting.
- ▼ The display shows "oFF" if the Wi-Fi is deactivated.

16.6 Resetting the appliance network settings

Requirements

- The Home Connect menu is called up.
 - → "Calling up the Home Connect menu", Page 44
- The display shows "rES".
- Press and hold | ▷ for at least 3 seconds.
- ✓ The network settings are reset.

16.7 Remote start

Enable the appliance for remote start via the Home Connect app.

Note

Remote start is deactivated for safety reasons in the following circumstances:

- The appliance door is opened.
- || b is pressed.
- □ Remote Start is pressed.
- Following a power cut.

Activating remote start

Requirements

- The appliance is connected to your home WiFi network.
- The appliance is connected to the Home Connect app.
- A programme is selected.
- The appliance door is closed.
- The refresher tank is not empty.
- ► Press 🖺 Remote Start .
- ✓ □ Remote Start lights up and the appliance is enabled for remote start via the Home Connect app.

Deactivating remote start

- Press [] Remote Start .
- ✓ □ Remote Start goes out.

16.8 Intelligent programme recommendation

After you have washed your laundry in the washing machine, the dryer will recommend a suitable programme for drying your laundry.

To determine the best drying programme to use, your appliances must transmit and receive information. Observe the following:

- The washing machine must be an appliance with the Home Connect function.
- The washing machine and dryer must be connected to your home network and registered in your Home Connect app.

Using the intelligent programme recommendation

- 1. Press D SmartDry .
- The appliance detects a suitable programme. To cancel or change the programme recommendation, set a different programme or switch the appliance to standby mode.

- If the appliance finds a suitable programme, the display for the programme lights up and the programme information is displayed.
- If the appliance does not find a suitable programme, a signal sounds and the display shows "-
- 2. Press | D.

Note

Why is my dryer unable to recommend a programme?

- No suitable drying programmes for the selected washing programme on the dryer.
- No data is available for the last washing programme used. The data is stored for 24 hours and then deleted.
- The washing programme has been cancelled. The washing programme must run through to the end for analysis to be possible.

16.9 Remote diagnostics

Customer Service can use Remote Diagnostics to access your appliance if you contact them, have your appliance connected to the Home Connect server and if Remote Diagnostics is available in the country in which you are using the appliance.

Tip: For further information and details about the availability of Remote Diagnostics in your country, please visit the service/support section of your local website: www.home-connect.com.

16.10 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your

en Home Connect

appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the Wi-Fi communication module installed).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous reset to factory settings.


This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.

Note: Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

17 Basic settings

You can configure the basic settings for your appliance to meet your needs.

17.1 Overview of the basic settings

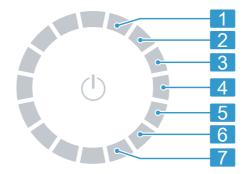

Posi- tion	Basic setting	Selection	Description
1	End signal	0 (off) 1 (quiet) 2 (medium) 3 (loud) 4 (very loud)	Set the volume of the signal at the end of the programme.
2	Button signal	0 (off) 1 (quiet) 2 (medium) 3 (loud) 4 (very loud)	Set the volume of the signal tone emitted when the buttons are pressed.
3	Display bright- ness	1 (low) 2 (medium) 3 (high) 4 (very high)	Set the display brightness.
4	Dryness level	0 1 2 3	Adjust the dryness level. → "Dryness level", Page 30
5	Appliance care	CP1 CP2	Start the appliance care programme. → "Appliance care", Page 48
6	Programme counter		Display the number of started programmes.
7	Factory set- tings	rES	Restore the appliance to the factory settings.

17.2 Changing the basic settings

- 1. To call up the basic settings, press **Basic Settings** .
- Select the required basic setting.
 → "Overview of the basic settings",
 Page 47
- 3. Adjust the basic setting:
 - To change the value, press ∧ or ✓.
 - To reset the appliance to the factory settings, press and hold
 | | ▷ for approx. 3 seconds.
- **4.** Press **Basic Settings** to save the settings.

18 Appliance care

The appliance offers cleaning programmes for basic and intensive appliance care.

18.1 Preparing for appliance care

Preparing the appliance for the appliance care programme

Prepare the appliance before running the appliance care programme.


Requirements

- The drum is empty.
- The appliance is in standby mode.
- Clean the fluff filter.
 → "Cleaning the fluff filter",
 Page 37
- Pull out the condensation container horizontally and empty it.
 → "Emptying the condensation container", Page 38


Preparing the condensation container for the appliance care programme

If you are draining the condensation water from the appliance using the drain hose, prepare the condensation container before running the appliance care programme.

1. Remove the stopper from the recess in the top.

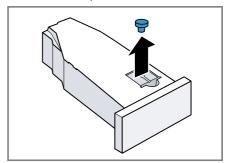

2. Insert the stopper on the underside.

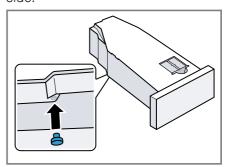

3. Clean the filter in the condensation container.

18.2 Calling up the appliance care programme

Requirement: The appliance care programme is ready.

- → "Preparing for appliance care", Page 48
- 1. Press \odot .

- The switch-on process takes a few seconds.
- 2. Press Basic Settings.
- 3. Set the programme to position 5.
- tion alternate on the display.

18.3 Running the basic appliance care programme

To remove any dirt deposits in the appliance, you can run the basic appliance care programme.

Notes

- The basic appliance care programme runs for approximately 1 hour.
- After a lengthy period of use, the appliance reminds you to run the basic appliance care programme. Before the programme starts or after the programme has ended, the display shows the notification "CArE". This notification appears repeatedly until you have run the basic appliance care programme through to the end.

Requirements

- The appliance care programme is readv.
 - → "Preparing for appliance care", Page 48
- The appliance care programme is now called up.
 - → "Calling up the appliance care programme", Page 48
- 1. Pour approx. 1.5 litres of hot mains water into the condensation container
 - Hold the filled condensation container level so that no liquid spills
- 2. Insert the condensation container so that it locks into place.
- 3. Press | | >.

- ✓ The appliance care programme starts and a signal tone sounds.
- ✓ "End" appears on the display and a signal tone sounds once the appliance care programme has ended.
- 4. Pull out the condensation container horizontally and empty it. → "Emptying the condensation container", Page 38
- 5. If you are draining the condensation water using the drain hose:
 - Remove the stopper from the underside of the condensation container.
 - Insert the stopper into the recess on the top of the condensation container.
- **6.** Insert the condensation container so that it locks into place.
- 7. Put the appliance into standby mode.
 - → "Put the appliance into standby mode", Page 36

18.4 Running the intensive appliance care programme

You can run the intensive appliance care programme to remove any stubborn dirt deposits in the appliance and odours after a downtime of more than one month.

Notes

- The intensive appliance care programme runs for approximately 4 hours and must not be cancelled.
- When you run the intensive appliance care programme, you need the original appliance care product.
 - → "Accessories", Page 34

⚠ WARNING Risk of injury!

The use of non-original spare parts and non-original accessories is dangerous.

 Only use the manufacturer's original spare parts and original accessories.

Starting the intensive appliance care programme

Requirements

- The appliance care programme is readv.
 - → "Preparing for appliance care", Page 48
- The appliance care programme is now called up.
 - → "Calling up the appliance care programme", Page 48
- 1. Press V.
- ▼ "CP2" and the programme duration alternate on the display.
- ATTENTION! The functionality of the appliance may be impaired if you use the wrong quantity of fabric softener, detergent, care product or cleaning agent.
- Follow the dosage recommendations from the manufacturer.
 Pour a bottle of the appliance care

Pour a bottle of the appliance care product and approx. 1.5 litres of hot mains water into the condensation container.

Hold the filled condensation container level so that no liquid spills out.

- 3. Insert the condensation container so that it locks into place.
- **4.** Press | | ▷ .
- The appliance care programme starts and a signal tone sounds.

- After around 3 hours, the appliance pauses the appliance care programme and the remaining programme duration flashes on the display.
- 5. Pull out the condensation container horizontally and empty it.
- Pour approx. 1.5 litres of hot mains water into the condensation container.
- Carefully swing the condensation container horizontally and empty it to rinse out any remaining appliance care product.

Continuing the intensive appliance care programme

- Pour approx. 1.5 litres of hot mains water into the condensation container.
 - Hold the filled condensation container level so that no liquid spills out.
- Insert the condensation container so that it locks into place.
- **3.** Press | | ▷ .
- The appliance care programme continues.
- "End" appears on the display and a signal tone sounds once the appliance care programme has ended.
- **4.** Pull out the condensation container horizontally and empty it.
- 5. If you are draining the condensation water using the drain hose:
 - Remove the stopper from the underside of the condensation container.
 - Insert the stopper into the recess on the top of the condensation container.
- **6.** Insert the condensation container so that it locks into place.

- **7.** Put the appliance into standby mode.
 - → "Put the appliance into standby mode", Page 36

19 Cleaning and servicina

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

19.1 Tips on cleaning and care

Wipe down the This ensures the housing and the parts of the applicontrols with ance will remain nothing but water clean and hyand a damp aienic. cloth. Remove all de-Fresh deposits are easier to retergent residue. spray residue or move without other residues leaving any immediately. residue. This allows the Leave the appliance door open residual water to after use. dry, reducing odours in the appliance.

19.2 Water tank filter


The filter in the water tank protects the appliance from dirt and contaminants.

Cleaning the water tank filter


Check the filter regularly and clean the filter if it is dirty.

Requirement: The condensation container → Page 38 is removed from the appliance.

1. Pull out the filter.

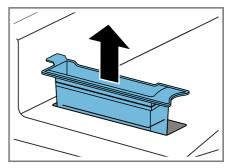

- 2. Clean the filter under warm, running water or in the dishwasher.
- 3. Fit the filter.

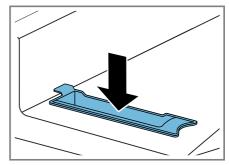

4. Insert the condensation container → Page 39.

19.3 Moisture sensor

The moisture sensor in this appliance measures how damp the laundry is during the drving cycle. The appliance changes the duration of the automatic programme depending on the residual moisture in the laundry.

Cleaning the moisture sensor

Over time, residue from limescale. detergents and care products can build up on the moisture sensor. Clean the moisture sensor regularly.


ATTENTION!

Hard or rough objects may damage the moisture sensor.

 Do not use hard or rough objects, abrasive cleaning products or steel wool for cleaning.

Note: If you do not clean the appliance as described, the appliance's functionality may be impaired.

- 1. Open the door.
- 2. Clean the moisture sensor with a sponge.

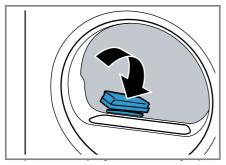


19.4 Condensation container filter

During drying, fluff from the laundry gets into the condensation. The filter in the condensation container protects the appliance from fluff.


Clean the filter for the condensation tank.

The filter is cleaned automatically when the condensation container is emptied. Check the filter regularly and clean the filter if it is dirty.


Empty the condensation container.
 → "Emptying the condensation container", Page 38

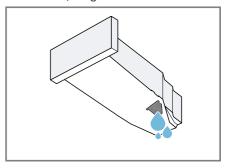

2. Remove the filter.

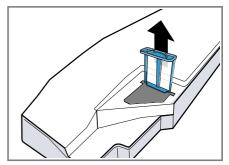

- 3. Clean the filter under warm, running water or in the dishwasher.
- 4. Slide in the filter as far as it will go.

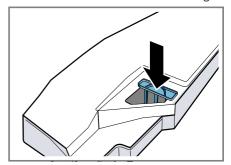

Insert the condensation container.
 → "Inserting the condensation container", Page 39

20 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.



⚠ WARNING

Risk of electric shock!

Incorrect repairs are dangerous.

- ► Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ► If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

Fault	Cause and troubleshooting
"Hot" and the drum rotates.	Cooling process active.1. Not a fault.2. Do not change the programme during the cooling process.
	Note: The cooling process takes up to 10 minutes. You can continue to operate the appliance.
Humming noise.	Compressor active. ► Not a fault – normal operating noise.
The display goes out and ▷ flashes.	Energy-saving mode is active▶ Press any button.✓ The display lights up again.
"CArE"	 After a period of operation, the appliance automatically recommends that you run the basic appliance care programme. ► Running the basic appliance care programme on the appliance. → "Appliance care", Page 48
The crease-removal function takes too long.	A low ambient temperature extends the duration of the crease-removal function. ► Not a fault – no action required.
®	Fluff filter is soiled. ► → "Cleaning the fluff filter", Page 37
The appliance is not working.	The mains plug of the power cord is not plugged in. Connect the appliance to the power supply.
	The circuit breaker in the fuse box has tripped. • Check the circuit breaker in the fuse box.

en Troubleshooting

Fault	Cause and troubleshooting
The appliance is not working.	There has been a power cut. ► Check whether the lighting in your room or other appliances are working.
Appliance paused, but the drum is rotating.	Cooling process active. Not a fault – no action required.
Home Connect is not working properly.	Different causes are possible. • Go to www.home-connect.com.
No connection to the home network.	 Wi-Fi is switched off. Activating Wi-Fi on the appliance. → "Activating Wi-Fi on the appliance", Page 44.
	 Wi-Fi is activated but a connection to your home network cannot be established. 1. Ensure that the home network is available. 2. Reconnect the appliance to the home network.
Creasing.	The load is too large. ► Observe the maximum load capacity of the → "Programmes", Page 31.
	The laundry lies in the drum for too long after drying.1. Remove the laundry from the drum as soon as the drying programme has finished.2. Spread the items of laundry for cooling.
	Unsuitable programme for the type of fabric. ► Set the suitable programme for the type of fabric. → "Programmes", Page 31
	Easy-Care fabrics are dried for too long. → "Changing the dryness level", Page 30. → "Adjusting the dryness level", Page 30.
	Anti-Crease not activated. ► Activate the Anti-Crease function. → "Buttons", Page 28
≜ and programme terminated.	Condensation tank filled. 1. → "Emptying the condensation container", Page 38. 2. → "Inserting the condensation container", Page 39. 3. → "Starting the programme", Page 36.
	Water drain hose is caught or jammed.1. Ensure that the water drain hose is not kinked or trapped.2. Route the water drain hose without kinks.

Fault	Cause and troubleshooting				
The drying time is too long.	Insufficient air circulation at the appliance's installation location. Ventilate the appliance's installation location.				
	Insufficient condensation for the automatic self-cleaning when permanently using the crease-removal function.				
	The appliance's ventilation opening is blocked. • Ensure that the ventilation opening of the appliance is kept clear.				
	 Heat exchanger is soiled. Running the basic appliance care programme on the appliance. → "Appliance care", Page 48 				
Water is leaking from the appliance.	Appliance is not correctly aligned. ► → "Aligning the appliance", Page 16				
	Water drain hose is not connected correctly. ► Ensure that the water drain hose is connected correctly.				
_	→ "Connecting the water drain hose", Page 14				
<i>⇔</i>	The water tank for the crease-removal function is empty. Fill water tank.				
\\/_t	→ "Filling the water tank", Page 40.				
Water overflows when filling the water tank.	The water tank has been filled.				
gea.ea	Note: The overflowing water is harmless.Do not pour any more water into the water tank.				
	The water tank filter is soiled. ► → "Cleaning the water tank filter", Page 51.				
The laundry is too damp.	Unsuitable programme for the type of fabric. ► Set a timed programme for the subsequent drying. → "Programmes", Page 31				
	There has been a power cut.Check whether the lighting in your room or other appliances are working.				
	The load is too large. ► Observe the maximum load capacity of the → "Programmes", Page 31.				
	After the end of the programme, warm laundry feels damper than it actually is.				

Fault	Cause and troubleshooting		
The laundry is too damp.	 Remove the laundry from the drum as soon as the drying programme has finished. Spread the items of laundry for cooling. 		
	Unsuitable dryness level set. ► → "Changing the dryness level", Page 30.		
	Drying target not adjusted. ► → "Adjusting the dryness level", Page 30.		
	Load too small. ► Set a timed programme for the subsequent drying. → "Programmes", Page 31		
	Moisture sensor dirty. ► → "Cleaning the moisture sensor", Page 51.		
	The drying process is interrupted and the condensation tank has been filled. 1. → "Emptying the condensation container", Page 38. 2. → "Inserting the condensation container", Page 39. 3. → "Starting the programme", Page 36.		
Odours have formed in the appliance.	Stubborn dirt in the appliance or an extended appliance downtime of more than one month. ► Run the intensive appliance care programme. → "Appliance care", Page 48		

21 Transportation, storage and disposal

21.1 Preparing the appliance for transportation

ATTENTION!

If the appliance is operated immediately after transportation, the refrigerant contained in the appliance may result in damage to the appliance.

► Immediately after transporting the appliance, leave it to rest for two hours before putting it into operation.

Tip: The appliance may contain residual water, which may drip out of it when transported. The appliance should be transported upright.

Requirements

- The condensation container is emptied. Emptying the condensation container → Page 38
- The appliance has been switched
 - → "Switching on the appliance", Page 35
- 1. Set any programme → Page 35.
- 2. Start the programme → Page 36 and wait 5 minutes.
- The condensation is drained.
- 3. Put the appliance into standby mode.
 - → "Put the appliance into standby mode", Page 36
- 4. Remove the water drain hose from the connection point.
 - → "Water outlet connection types", Page 15
- 5. Secure the water drain hose on the appliance against unintentional loosening.

- Ensure that you do not bend the water drain hose.
- 6. Empty the condensation container → Page 38.
- 7. Insert the condensation container → Page 39.
- 8. Disconnect the appliance's mains plug from the power supply.
- ✓ The appliance is now ready to be transported.

21.2 Disposing of old appli-

Valuable raw materials can be reused by recycling.

⚠ WARNING Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

✓ WARNING Risk of fire!

The refrigerant R290 used in this appliance is environmentally friendly. It is however flammable and may ignite if appliances are not disposed of properly.

- Dispose of the appliance properly.
- Do not damage the tubing of the refrigerant circuit.
- 1. Unplug the appliance from the mains.
- **2.** Cut through the power cord.

3. Dispose of the appliance in an environmentally friendly manner. Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic eauipment - WEEE). The auideline determines the framework for the return and recycling of used appliances as applicable throughout the FU.

22 Customer Service

Function-relevant genuine spare parts according to the corresponding Ecodesign Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.

Note: Under the terms of the manufacturer's warranty the use of Customer Service is free of charge.

Detailed information on the warranty period and terms of warranty in your country is available from our aftersales service, your retailer or on our website.

If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website

22.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

You can find the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) on the appliance's rating plate. Depending on the model, the rating plate is located:

- On the inside of the door.
- On the inside of the maintenance flap.
- On the rear of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

23 Consumption values

The Cotton Eco programme (denoted by the arrow symbol) is suitable for drying cotton laundry with a normal dampness level, and is the most efficient programme for drying damp cotton laundry in terms of combined energy consumption.

The consumption values for this programme that are declared on the energy label refer to a moisture content of the laundry of 60%.

The values specified for other programmes are indicative only and were determined in accordance with the applicable standard EN61121.

The actual values may deviate from the indicated values depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric, set degree of dryness, amount of laundry being loaded, environmental conditions and the activation of additional functions. The expected programme dura-

tion/"Ready in" time that is shown on the appliance display when selecting the programme is based on the spin speed in the washing machine of 1000 rpm when the appliance is delivered.

Programme		Final mois- ture level (%)	Load (kg)	Spin speed (rpm)	Initial mois- ture level (%)	Pro- gramm e dura- tion (h:min)	Energy con- sump- tion (kWh/ cycle)
Cotton Dry III	+ Cupboard	-1.5	9.0	1400	50	3:16	1.54
Cotton Dry III	+ Cupboard	-1.5	4.5	1400	50	2:23	0.98
Cotton Dry 🗓	+ Cupboard	-1.5	9.0	1000	60	3:38	1.78
Cotton Dry 🖽			4.5	1000	60	2:36	1.12
Cotton Dry 🗓			9.0	800	70	4:00	2.01
Cotton + Cupboard Dry 🗓		-1.5	4.5	800	70	2:49	1.27
Cott	on Eco	0.0	9.0	1400	50	2:52	1.36
Cott	on Eco	0.0	4.5	1400	50	1:54	0.78
Cotton Eco		0.0	9.0	1000	60	3:15	1.60
Cotton Eco		0.0	4.5	1000	60	2:05	0.89
Cotton Eco		0.0	9.0	800	70	3:38	1.84
Cott	Cotton Eco		4.5	800	70	2:16	1.00
Cotton + Iron Dry △		12.0	9.0	1400	50	2:05	0.96

Program	me	Final mois- ture level (%)	Load (kg)	Spin speed (rpm)	Initial mois- ture level (%)	Pro- gramm e dura- tion (h:min)	Energy con- sump- tion (kWh/ cycle)
Cotton + Iron Dry △		12.0	4.5	1400	50	1:22	0.54
Cotton + Iron Dry ≥		12.0	9.0	1000	60	2:28	1.21
Cotton	+ Iron Dry ≥	12.0	4.5	1000	60	1:35	0.68
Cotton	+ Iron Dry <i>△</i>	12.0	9.0	800	70	2:51	1.45
Cotton	+ Iron Dry ≥	12.0	4.5	800	70	1:48	0.82
Easy Care + Cupboard Dry 🖽		2.0	3.5	800	40	1:08	0.42
Easy Carboard Dry		2.0	3.5	600	50	1:20	0.52

24 Technica	al data				
Appliance height	84.2 cm				
Appliance width	59.8 cm				
Appliance depth	61.3 cm				
Appliance depth with door closed	66.2 cm				
Appliance depth with door open	110.5 cm				
Weight	54.7 kg				
Maximum load	9.0 kg				
Mains voltage	220-240 V, 50 Hz				
⇔ Minimum installation protection	10 A				
Nominal power	600 W				
Power consumption	Standby mode: 0.30 WLeft-on mode: 0.30 W				

Ambient temperature	Minimum: 5 °CMaximum: 35 °C
Length of the power cord	145 cm

This product contains light sources from energy efficiency class F. These light sources are available as a spare

part and must only be replaced by trained specialist staff. You can find more information about your model online at https:// eprel.ec.europa.eu/1. This web address is linked to the official EU EPREL product database. Please then follow the instructions on searching for the model. The model identifier is made up of the characters before the slash in the product number (E-Nr.) on the rating plate. Alternatively, you can also find the model identifier in the first line of the EU energy label.

Only applies to countries in the European Economic Area

25 Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the essential requirements and other relevant provisions of Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at www.bosch-home.com among the additional documents on the product page for your appliance.



Hereby, BSH Hausgeräte GmbH declares that the appliance with Home Connect functionality is in compliance with relevant statutory requirements.1

A detailed Declaration of Conformity can be found online at www.boschhome.co.uk among the additional documents on the product page for your appliance.1

UK

2.4 GHz band (2400-2483.5 MHz): Max. 100 mW 5-GHz band (5150-5350 MHz + 5470-5725 MHz): max. 150 mW

	BE	BG	CZ	DK	DE	EE	ΙE	EL	ES
	FR	HR	ΙΤ	CY	LI	LV	LT	LU	HU
	MT	NL	AT	PL	PT	RO	SI	SK	FI
	SE	NO	СН	TR	IS	UK (NI)		'	
5 GHz	5 GHz WLAN (Wi-Fi): For indoor use only.								
						i.			
AL	ВА	N	1D	ME	MK	RS	UK		UA
5 GHz WLAN (Wi-Fi): For indoor use only.									

Only applies to Great Britain





Thank you for buying a **Bosch Home Appliance!**

Register your new device on MyBosch now and profit directly from:

- · Expert tips & tricks for your appliance
- Warranty extension options
- Discounts for accessories & spare-parts
- Digital manual and all appliance data at hand
- Easy access to Bosch Home Appliances Service

Free and easy registration – also on mobile phones: www.bosch-home.com/welcome



Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you: www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

BSH Hausgeräte GmbH

Carl-Wery-Straße 34 81739 München, GERMANY www.bosch-home.com

A Bosch Company



9001866055 (030811)

Valid within Great Britain: Imported to Great Britain by BSH Home Appliances Ltd. Grand Union House Old Wolverton Road Wolverton, Milton Keynes MK12 5PT United Kingdom