



Tumble dryer

WQC855C30W

[en]

User manual and installation instructions

Further information and explanations are available online:



Table of contents

1 Safety	4 4 4 5 7
3	11
3.1 Disposing of packaging	11 11 11
	12
	12 12
ation location	12 13 14 17
	17
5.1 Appliance	18 18 19
6.1 Programme menu	21 21 21
7 Buttons	23

B.1 Automatic programmes	27 27
8.2 Timed programmes	29
9 Accessories	32
10 Laundry 10.1 Preparing the laundry	32
11.1 Basic operation	32 32 33 33 34 34 34 34 34 34
12 Dryness level 12.1 Changing the dryness level 12.2 Adjusting the dryness level	37 37 37
13 Childproof lock	38 38
14 Allergen filter 14.1 Inserting the allergen filter	38

	Starting a programme with the allergen filter	39
14.3	Cleaning and caring for the allergen filter	40
	rease-removal function Starting a programme with	40
	the crease-removal function Filling the water tank	41 41
	/ool basket	42
	Inserting the wool basket Starting a programme with	42
	the wool basket	42
16.3	Examples of how to use the wool basket	43
	ome Connect	44
17.1	Setting up the Home Connect app	44
17.2	Setting up Home Connect Activating Wi-Fi on the ap-	45
	pliance	45
17.4	Deactivating Wi-Fi on the appliance	45
17.5	Installing the software up-	
17.6	date Resetting the appliance	45
	network settings	45
	Remote start	45 46
	Data protection	
	asic settings Overview of the basic set-	46
	tings	46
18.2	Changing the basic settings	47
19 A	ppliance care	47
19.1	Preparing for appliance care	47
19.2	Calling up the appliance	
10.0	care programme	47
19.3	Running the basic appliance care programme	48
19.4	Running the intensive appliance care programme	48

20 Cleaning and servicing	
20.2 Moisture sensor	
ter	52
21 Troubleshooting	53
22 Transportation, storage and disposal	58
22.1 Disposing of old appliance	
23 Customer Service	58
(Z-Nr.)	58
24 Technical data	58
25 Applicable standard	59

en



1 Safety

Observe the following safety instructions.

1.1 General information



- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:

- for drying and freshening up fabrics that are washed with water and suitable for dryers.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 4000 m above sea level.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Keep children under the age of 3 years and pets away from the appliance.

1.4 Safe installation

Incorrect installation is dangerous.

- Connect and operate the appliance only in accordance with the specifications on the rating plate.
- Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ► The protective conductor system of the domestic electrical installation must be properly installed. The installation must have a sufficiently large cross section.
- ▶ When using a residual current circuit breaker, only use a type with the mark.
- ► Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ Never connect the appliance to a circuit that is regularly switched on and off by the energy supplier.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an all-pole isolating switch must be installed in the permanent electrical installation according to the installation regulations.
- ► When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.

- ► Never let the power cord come into contact with hot appliance parts or heat sources.
- Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

⚠ WARNING – Risk of injury!

The heavy weight of the appliance may result in injury when lifted.

▶ Do not lift the appliance on your own.

If this appliance is not correctly installed in a washer-dryer stack, the installed appliance may fall.

- Only stack the dryer on a washing machine using the connection kit from the dryer manufacturer. No other installation method is permitted.
- ► Do not install the appliance in a washer-dryer stack if the dryer manufacturer does not offer a suitable connection kit.
- ▶ Do not install appliances from different manufacturers and with varying depths and widths in a washer-dryer stack.
- ▶ Do not install a washer-dryer stack on a platform; the appliances may tip over.

△ WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ► Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

△ CAUTION – Risk of injury!

The appliance may vibrate or move when in use.

- ▶ Place the appliance on a clean, even, solid surface.
- ► Align the appliance using the appliance feet and a spirit level. If hoses and power cords have been laid incorrectly, this causes a tripping hazard.
- Lay hoses and power cords in such a way that there is no risk of tripping.

If the appliance is moved by holding onto protruding components, such as the appliance door, the parts may break off.

▶ Do not move the appliance by holding onto protruding parts.

△ CAUTION – Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

▶ Do not touch the sharp edges on the appliance.

Wear protective gloves when installing and transporting the appliance.

1.5 Safe use

If the appliance or the power cord is damaged, this is dangerous.

- ► Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ► Call customer services. → Page 58

An ingress of moisture can cause an electric shock.

- ▶ Only use the appliance in enclosed spaces.
- ▶ Never expose the appliance to intense heat or humidity.
- ▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

△ WARNING – Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ▶ Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- ▶ With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

Children may breathe in or swallow small parts, causing them to suffocate.

- ► Keep small parts away from children.
- ► Do not let children play with small parts.

⚠ WARNING – Risk of explosion!

If there is coal dust or flour in the air around the appliance, this may cause an explosion.

► Keep the area around the appliance clean during operation.

⚠ WARNING – Risk of poisoning!

Condensation water from this appliance is not suitable for drinking and may be contaminated with fluff.

▶ Do not drink or reuse the condensation water from the appliance.

Detergents and care products may result in poisoning if consumed.

- ▶ If accidentally swallowed, seek medical advice.
- ► Keep detergents and care products out of the reach of children.

⚠ WARNING – Risk of fire!

The refrigerant R290 in this appliance is environmentally friendly yet combustible and may ignite if it comes into contact with open flames or ignition sources.

► Keep naked flames and ignition sources away from the appli-



⚠ WARNING – Risk of explosion!

If there is any residual material left in the fluff filter, this may ignite during the drying process.

► Clean the fluff filter regularly.

Highly flammable objects such as lighters or matches may ignite during the drying process.

Remove all highly flammable objects from any pockets in your laundry before the drying process.

Unwashed laundry that has come into contact with solvents, oil, wax, wax remover, paint, grease or stain remover may ignite when drying is in progress.

- ► Do not place laundry in this appliance to be dried if the laundry has not been washed first.
- ► Rinse the laundry thoroughly with warm water and detergent before drying it in the machine.
- ▶ Do not use the appliance if industrial chemicals have been used to clean the laundry beforehand.

If drying is interrupted early, the laundry is not cooled sufficiently and may ignite.

- ▶ Do not interrupt the drying programme early.
- ▶ If drying is interrupted early, remove the laundry immediately and spread it out.

△ CAUTION – Risk of injury!

The covering plate may break if you stand on or climb onto the appliance.

▶ Do not stand on or climb onto the appliance.

The appliance may tip over if you sit on or lean against the open door.

- ▶ Do not sit on or lean against the appliance door.
- ▶ Do not place any objects on the appliance door.

Reaching into the drum while it is still turning may cause hand injuries.

Wait for the drum to come to a complete stop before reaching inside.

⚠ CAUTION – Risk of burns!

The rear panel of the appliance becomes hot during operation.

- ▶ Do not touch the rear panel of the appliance when it is hot.
- ► Keep children away from the rear panel of the appliance when it is hot.
- ▶ Position the appliance with the rear panel close against a wall.

1.6 Safe cleaning and maintenance

Improper repairs are dangerous.

- Never make any technical modifications to the appliance or its features.
- Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.

en Safety

- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk. An ingress of moisture can cause an electric shock.
- ▶ Before cleaning, pull out the mains plug or switch off the fuse in the fuse box.
- ► Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

⚠ WARNING – Risk of injury!

The use of non-original spare parts and non-original accessories is dangerous.

Only use the manufacturer's original spare parts and original accessories.

△ WARNING – Risk of poisoning!

Poisonous fumes may be given off if you use cleaning agents that contain solvents.

▶ Do not use cleaning agents that contain solvents.

2 Preventing material damage

ATTENTION!

The functionality of the appliance may be impaired if you use the wrong quantity of fabric softener, detergent, care product or cleaning agent.

Follow the dosage recommendations from the manufacturer.

Exceeding the maximum load capacity impairs the function of the appliance.

- Observe the maximum load capacity for each programme and do not exceed it.
- → "Programmes", Page 27 The function of the appliance may be impaired if the appliance overheats.
- Keep the ventilation opening on the appliance clear during operation.
- Make sure that the area is adequately ventilated.

Light objects such as hair and fluff may be sucked in from the ventilation opening on the appliance during operation and impair the function of the appliance.

- Keep the area around the appliance clean during operation.
- Keep light objects away from the appliance.

If you operate the appliance without a fluff guard (e.g. fluff filter, fluff collector, filter mat, etc., depending on appliance specifications), or if the fluff quard is incomplete or defective, this may result in damage to the appliance.

Do not operate the appliance without a fluff guard, or with a fluff guard that is incomplete or defective.

Foam and foam rubber may deform or melt during the drying process.

Do not dry laundry that contains foam or foam rubber.

Unsuitable cleaning products may damage the surfaces of the appli-

- ▶ Do not use harsh or abrasive detergents.
- Do not use cleaning products with a high alcohol content.
- Do not use hard scouring pads or cleaning sponges.
- Clean the appliance with nothing but water and a soft, damp cloth.
- ► Remove all detergent residue, spray residue or other residues immediately if they come into contact with the appliance.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

 Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

- Operate the appliance in a wellventilated room and keep the ventilation opening on the appliance clear.
- Spin the laundry in the washing machine before drying.
- For each drying process, use the maximum load for the programs. Programmes → Page 27

- Do not exceed the programme's maximum load capacity. Programmes → Page 27
- Āfter drying, clean the lint screen.
 → "Cleaning the fluff filter",
 Page 34
- Deactivate Wi-Fi on the appliance if it is not being used.
 - → "Deactivating Wi-Fi on the appliance", Page 45

3.3 Energy saving mode

If you do not use the appliance for a brief period, it automatically switches to energy-saving mode. All displays go out and \circlearrowleft flashes.

Energy-saving mode ends when you use the appliance again.

If you do not use the appliance for an extended period, it automatically switches to standby mode.

4 Installation and connection

4.1 Unpacking the appliance

ATTENTION!

Objects remaining in the drum that are not designed for operation with the appliance may cause material damage and damage to the appliance.

- Remove these objects, along with all supplied accessories, from the drum before starting the appliance.
- Remove any packaging and protective covers completely from the appliance.
 - → "Disposing of packaging", Page 11
- 2. Check the appliance for visible damage.
- 3. Open the door. → Page 33

- Remove any accessories from the drum.
- 5. Close the door.

4.2 Contents of package

After unpacking all parts, check for any damage in transit and completeness of the delivery.

ATTENTION!

If the appliance is operated with incomplete or defective accessories, the appliance may not be able to operate properly, or this may result in material damage or damage to the appliance.

- Do not operate the appliance with incomplete or defective accessories.
- Replace the accessories in question before operating the appliance.
 - → "Accessories", Page 32

The delivery consists of the following:

- Tumble dryer
- Accompanying documents
- Wool basket with insert

 → "Wool basket". Page 42
- Allergen filter with packaging
 → "Allergen filter", Page 38
- Water outlet hose with connection adapter, fixing material and elbow.

 → "Water outlet hose" Page 14

→ "Water outlet hose", Page 14

4.3 Requirements for the installation location

ATTENTION!

If the appliance is tilted at an angle greater than 40°, residual water may leak out of the appliance and cause material damage.

► Tilt the appliance carefully.

Transport the appliance in an upright position.

If residual water in the appliance freezes, this may cause damage to the appliance.

 Do not install or operate this appliance anywhere that is liable to experience frost or outdoors.

If the appliance is operated immediately after transportation, the refrigerant contained in the appliance may result in damage to the appliance.

► Immediately after transporting the appliance, leave it to rest for two hours before putting it into operation.

Installation location	Requirements
On the floor	Place the appliance on a clean, level and firm surface. Align the appliance → Page 17.
Against a wall	Do not trap the hoses and power cord between the wall and the ap-

pliance.

4.4 Installation types

The appliance can be set up in an open cupboard either in a washerdryer stack or free-standing.


⚠ WARNING Risk of injury!

If this appliance is not correctly installed in a washer-dryer stack, the installed appliance may fall.


- Only stack the dryer on a washing machine using the connection kit from the dryer manufacturer. No other installation method is permitted.
- Do not install the appliance in a washer-dryer stack if the dryer manufacturer does not offer a suitable connection kit.
- ► Do not install appliances from different manufacturers and with varying depths and widths in a washerdryer stack.
- Do not install a washer-dryer stack on a platform; the appliances may tip over.

Notes


- In case of set up in a washer-dryer stack, please observe the requirements for the installation location. → "Requirements for the installation location", Page 12
- When installing in a cupboard, comply with the required minimum dimensions.
- When the appliance is installed in a cupboard, drying times may vary.

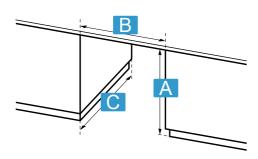

- 86 cm
- 62 cm
- 67 cm

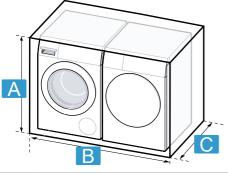

- 86 cm
- 125 cm
- 67 cm

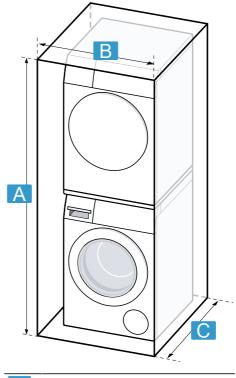

- 173 cm
- 62 cm
- 67 cm

4.5 Water outlet hose

Condensation that forms in the appliance as it dries the laundry is collected by default in the condensation

container. Use the water outlet hose to drain away excess condensation directly into the waste water system.

Note

 Operate this appliance using the water outlet hose provided.

→ Page 15

If you connect the water outlet hose, you do not have to regularly empty the condensation container.

→ "Emptying the condensation container", Page 36

Connecting the water outlet hose

If you do not want to regularly empty the appliance's condensation container, connect the water outlet hose.

ATTENTION!


When operating the appliance without the condensation hose or water outlet hose being connected properly, liquid may leak out of the connecting piece.

 Before operating the appliance, connect the condensation hose or water outlet hose properly to the connecting piece.

Requirements

- The appliance and the accessory have been unpacked. → Page 12
- The appliance is installed at the installation location. → Page 12


1. Pull out the condensation hose from the connecting piece.

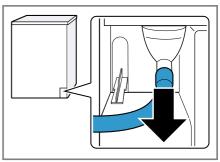


The condensation hose is connected to the connecting piece at the factory.

Note: When removing the condensation hose, liquid may leak out of the connecting piece.


2. Push the condensation hose into the holder

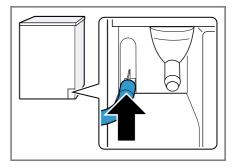

Push the water outlet hose as far as it will go into the connecting piece.

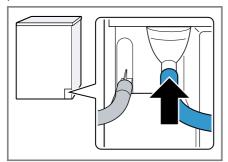

- 4. Empty the condensation container.→ Page 36
- 5. Remove the stopper from the underside ① and insert it in the recess in the top ②.

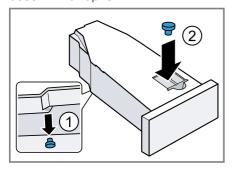

- 6. Insert the condensation container.→ Page 37
- Connect the appliance to the water drain. → Page 16

Tip: To collect condensation in the condensation container again (e.g. if you change where the appliance is located), carry out these steps in reverse order.


Water outlet connection types

ATTENTION!

In the event of a blocked or covered outlet, accumulated wastewater can flow back into the appliance.

 Before operating the appliance, ensure that the wastewater drains away quickly and eliminate any blockages.


Drainage into a siphon.

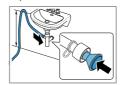

Secure the connection point with a (12-22 mm) hose clamp.
Secure the water outlet hose with a hose guide at a height of at least 80 cm and no more than 100 cm.

Note: You can use the Y-distributor → Page 32 to connect the water outlet hose of an additional appliance, such as a washing machine, to the same siphon outlet.

Drainage into a wash basin.

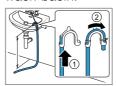


Push the water outlet hose fully through the elbow and secure it using fixing material.

Secure the elbow at a height of no more than 100 cm.

Drainage into a gully.

Push the water outlet hose fully through the el-

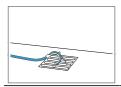


bow and secure it using fixing material. Secure the elbow to the gully.

4.6 Aligning the appliance

In order to reduce vibrations and noises, align the appliance correctly.

► To align the appliance, turn the appliance feet. Check that the appliance is level using a spirit level.

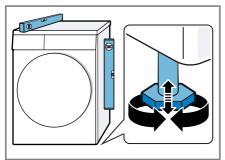

All appliance feet must stand firmly on the ground.


4.7 Connecting the appliance to the electricity supply

- 1. Insert the mains plug of the appliance's power cable in a socket nearby.
 - The connection details of the appliance can be found under Technical data → Page 58.
- 2. Check the mains plug is inserted properly.

5 Familiarising yourself with your appliance

5.1 Appliance

You can find an overview of the parts of your appliance here.

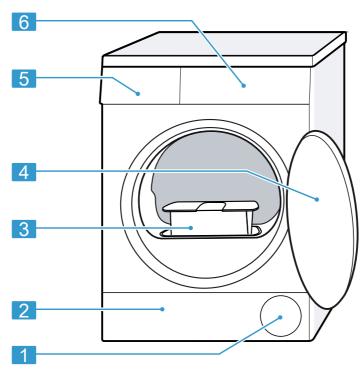


On certain models, specific details such as the colour and shape may differ from those pictured.

- Ventilation opening
- Maintenance flap on the base unit → Page 49
- Fluff filter → Page 34

- Door → Page 33
- Condensation container → Page 36
- Control panel → Page 19 6

5.2 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

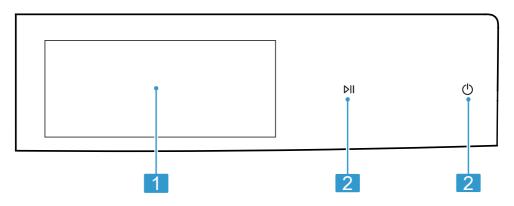

- Buttons → Page 23 and display → Page 21
- Buttons → Page 23

5.3 Operating logic

The appliance's display responds to touch and shows buttons, menus and operating instructions. You can operate the appliance by lightly pressing on the display with your finger or swiping your finger over the display.

ATTENTION!

Pressing on the display with force may cause damage.

- ▶ Do not apply heavy pressure on the display.
- Do not press on the display using pointed or sharp objects.

Navigating in the menu

If a menu shows certain symbols, you can navigate in the menu.

Press the symbol. → "Symbols for navigation", Page 19

Symbols for navigation

The symbols shown depend on the menu or message, and cause different actions.

Symbols	Action
>	Proceed in the menu
<	Go back in the menu
×	Close the menu or message

Searching through the menu

If a menu does not show all of its entries, you can search through the menu.

 Swipe your finger horizontally or vertically until the menu shows the required entry.





Navigating in the message

If a message shows certain symbols, you can navigate in the message.

- Press the symbol.
- → "Symbols for navigation", Page 19

Confirming or cancelling in the message

If the display shows a message, you can confirm or cancel an action.

- Press the button with the required action or navigate in the message. → "Navigating in the message", Page 20
 - If the display shows further information, press the required action.

Activating or deactivating the setting

If a menu shows certain symbols or colours for a setting, you can activate or deactivate the setting.

Requirement: The menu shows the respective setting.

- → "Searching through the menu", Page 19
- Press the setting.
 - → "Symbols for settings", Page 20
 - → "Colours for settings", Page 20

Symbols for settings

The symbols depend on the menu and show activated or deactivated settings.

Symbols	Setting
	Activated
	Deactivated

Colours for settings

The colours depend on the menu and show activated settings or settings that can be activated.


Colour	Setting
White	Can be activated
Red	Activated
Grey	Cannot be activated

Changing a setting value

If a menu shows a scale for a setting, you can change the setting value.

Requirement: The setting is activated.

- → "Activating or deactivating the setting", Page 20
- Press on the scale or wipe over the scale with your finger.
 - → "Colours for settings", Page 20

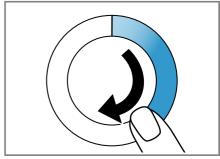


The display shows the set value.


6 Display

The display shows the current settings, options or relevant information.

6.1 Programme menu

The programme menu is the main menu of the display. In this menu, you can adjust important settings for the operation of the appliance or navigate to other menus.

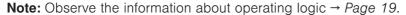

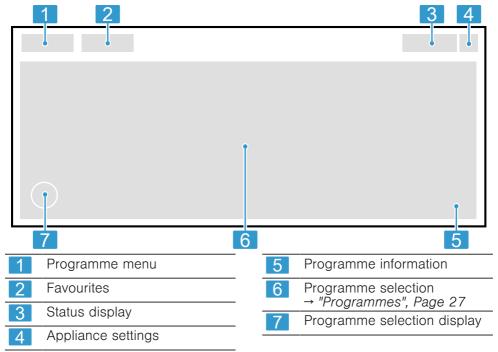

6.2 Messages on the display

Display	Description
01h 25min ¹	Expected programme duration or programme time remaining in hours and minutes.
01:25 ¹	Program end time → "Buttons", Page 26
¹ Example	

en Display

Display	Description
"冷凝水盒已满, 干衣效果和时间将 受影响。 请倒空冷 凝水盒"	Empty and insert the condensation container. → Page 36
"绒毛收集器已满, 烘干效率受到影响。请清洁并用温水冲洗绒毛收集器 (双层)"	Clean the fluff filter → Page 34.
"清新水盒已空,请 重新加水"	Fill the water tank for the crease-removal function. → Page 41
"筒内温度较高,自动冷却已经激活。 机器可以正常使用"	The cooling process cools the laundry independently of the programme status for a few minutes while the drum is rotating, in order to avoid damage to the laundry. The cooling process can be cancelled by opening the door. Note: Do not change the set programme.
"自清洁中"	The automatic self-cleaning function rinses the appliance's heat exchanger. Note: Do not remove the condensation container and do not interrupt the programme.
◎ 设置	Change the basic settings. → Page 47
্ ি	 Lights up: The appliance is connected to your home network via Wi-Fi. Flashes: The appliance is trying to connect to your home network via Wi-Fi.
	→ "Home Connect ", Page 44
	Settings that are not available on the appliance have been set via the Home Connect app. You can find more information in the Home Connect app.
程序已结束	Programme status: Programme end
¹ Example	

7 Buttons

Below is an overview of the buttons and their setting options.

Button	Selection	Description
DII	StartPause	Start or pause the programme.
⊗ 终止	Cancel	Cancel the programme. → "Cancelling the pro- gramme", Page 34
<u>:</u>	Open the menu	Open the menu for additional settings.
(mains switch)	 Switch on Standby mode Restart the appliance 	Switch on the appliance or put it in standby mode. If the control panel does not respond, press and hold ⊕ for approximately 5 seconds to restart the appliance. → "The display and buttons do not respond.", Page 54
○☆ 童锁	ActivateDeactivate	Activate or deactivate the childproof lock. Disable the control panel to prevent unwanted or accidental operation. If the childproof lock is activated and the appliance has been switched off, the childproof lock remains activated. → "Childproof lock", Page 38
☆ 收藏	Store	Save your individual programme settings. → "Saving programme settings", Page 33
收藏	Call up	Call up your individual programme settings. → "Saving programme settings", Page 33

Button	Selection	Description
超干储藏	ActivateDeactivate	The dryness level defines how damp or dry the laundry is after the programme ends. → "Dryness level", Page 37
全干即穿	ActivateDeactivate	The dryness level defines how damp or dry the laundry is after the programme ends. → "Dryness level", Page 37
微干挂烫	ActivateDeactivate	The dryness level defines how damp or dry the laundry is after the programme ends. → "Dryness level", Page 37
① 5件衬衣	ActivateDeactivate	Adjust the set programme with crease-removal function 除皱祛味. Observe the programme description. → "Programmes", Page 27 Suitable for dry shirts and blouses that have not been worn for long or at all. Suitable for 2 to 5 items of laundry.
⊕ 1套西服	■ Activate ■ Deactivate	Adjust the set programme with crease-removal function 除皱祛味. Observe the programme description. → "Programmes", Page 27 Suitable for dry suits or skirts that have not been worn for long or at all and that are labelled "Dry clean only". Suitable for one suit or two items of laundry.

en Buttons

Button	Selection	Description
② 预约	Up to 24 hours	Set the programme end time. The programme duration is already included in the set number of hours. Once the programme has started, the programme duration is displayed.
4)静音	ActivateDeactivate	Activate or deactivate operating signals and information signals.
□ 手机互联	ActivateDeactivate	Activate or deactivate remote start. → Page 45

8 Programmes

You can dry your fabrics using either an automatic programme or a timed programme.

8.1 Automatic programmes

Automatic programmes are programmes in which humidity sensors measure the residual moisture in the laundry during the drying cycle. The programme only ends once the set dryness level is reached. Each automatic programme has a dryness level → Page 37. The dryness level defines how dry or damp the laundry is after the programme ends.

Tips

- Select the dryness level according to the type of fabric or the desired drying result.
- The laundry's care labels provide you with additional information about programme selection.

Description	Max. load
	(kg)
Dry hard-wearing, heat-resistant fabrics made of cotton or linen.	9.0
Dry items made of synthetic materials or blended fabrics.	3.5
Dry items made of cotton and synthetics.	3.0
Polo shirts, skirts and trousers made of cotton and synthetics.	1.0
polo shirt and trousers or skirt corresponds to the maximum load capacity for the programme.	
Dry duvet covers, pillowcases and sheets made of cotton.	3.5
Note: The drum movement is optimised for drying large items of laundry.	
Dry large and delicate fabrics made from silk and viscose, e.g. Lyocell. Suitable for sheets, duvet covers and pillow cases.	1.5
Note: The drum movement is optimised for drying large items of laundry.	
Dry delicate items made of satin, synthetics or blended fabrics.	2.0
	Dry hard-wearing, heat-resistant fabrics made of cotton or linen. Dry items made of synthetic materials or blended fabrics. Dry items made of cotton and synthetics. Polo shirts, skirts and trousers made of cotton and synthetics. Note: A school uniform consisting of a polo shirt and trousers or skirt corresponds to the maximum load capacity for the programme. Dry duvet covers, pillowcases and sheets made of cotton. Note: The drum movement is optimised for drying large items of laundry. Dry large and delicate fabrics made from silk and viscose, e.g. Lyocell. Suitable for sheets, duvet covers and pillow cases. Note: The drum movement is optimised for drying large items of laundry. Dry delicate items made of satin, synthet-

Programme	Description	Max. load (kg)
羽绒服	 Dry down-filled items of laundry, such as jackets, bedspreads or eiderdowns. Notes Dry large items of laundry, such as blankets or sleeping bags, separately. Once the programme has ended, shake the items of laundry to distribute the stuffing and eliminate any pockets of moisture. The drum movement is optimised for drying down-filled textiles and large items of laundry. 	1.5
干衣除菌	Dry hard-wearing, heat-resistant fabrics made of cotton or linen. Also suitable for hygienically treating dry hard-wearing, heat-resistant fabrics made of cotton or linen. Note: Particularly suitable for strict hygiene requirements.	4.0
除螨 深层过滤	Kill and remove mites from dry hard-wearing and heat-resistant fabrics made of cotton and linen.	3.0
冲锋衣	Dry weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics.	1.5
浴巾	Dry hard-wearing, heat-resistant towels and dressing gowns made of cotton or linen.	6.0
夜间烘	Dry hard-wearing, heat-resistant fabrics made of cotton or linen. Suitable for quiet drying.	9.0
除皱祛味	 Reduce creasing and airborne odours. → Page 40 To adjust the programme with crease-removal function, press the corresponding button. → Page 23 Notes To prevent creasing, remove the laundry after the programme ends. The laundry is not cleaned. 	-

Programme	Description	Max. load (kg)
洗烘互联	After you have washed your laundry in the washing machine, the dryer recommends a suitable programme for drying the laundry. Note: The washing machine must be compatible with Home Connect. The washing machine and dryer must be connected to your home network and registered in your Home Connect app. The selectable programme settings depend on the selected programme.	_

8.2 Timed programmes

Timed programmes are programmes with a defined or adjustable programme duration. The programme ends once this time has elapsed, even if the laundry is still not dry, for example. Timed programmes are suitable for drying individual items of laundry or thin fabrics.

Tip: The laundry's care labels provide you with additional information about programme selection.

Programme	Description	Max. load (kg)
羊毛舒展	Dry machine-washable items made of wool or containing wool. Note: The laundry becomes fluffier but not	0.5
	dry. Remove laundry once the programme has ended and allow it to dry.	
羊毛 挂架	Dry items made of wool or containing wool. Note	One item of laundry
	■ Dry these items only using the wool basket. → Page 42	
运动鞋 挂架	 Dry sports and leisure shoes. Notes Dry shoes only using the basket for woollens. → Page 42 Do not dry leather shoes or shoes with leather parts. 	One pair of shoes

Programme	Description	Max. load
		(kg)
冷风 深层过滤	 Fluff/loosen all fabric types except for wool and silk. This programme is suitable for fluffing dry laundry only. Also suitable for freshening up or airing dry clothing that has hardly been worn. Notes To remove allergens, use the allergen filter. → Page 38 This programme is suitable for drying using the wool basket. → Page 42 	3.0
冷风护理 30'	 Dry all types of fabric except for wool and silk. For fluffing or airing clothing that has hardly been worn. Also suitable for drying individual items of laundry. The programme duration is 30 minutes. Note To remove allergens, use the allergen filter. → Page 38 	3.0
热风定时	Dry all types of fabric except for wool and silk. Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry. Note ■ This programme is suitable for drying using the wool basket. → Page 42 If you are using the wool basket, you can also dry fabrics made from wool using this programme.	3.0
快烘30'	Dry thin items made from synthetic fabrics. The programme duration is 30 minutes.	1.0
蚕丝被	Warm dry cotton blankets with silk filling or reduce the moisture of cotton blankets with silk filling. Suitable for fabrics that are slightly damp due to the change in season or because they have been stored for a long time. Notes The laundry is not dried, only heated.	10.0

Programme	Description	Max. load (kg)
	If you have problems placing a large blanket into the drum, fold the blanket first.	
洗烘互联	After you have washed your laundry in the washing machine, the dryer recommends a suitable programme for drying the laundry. Note: The washing machine must be compatible with Home Connect. The washing machine and dryer must be connected to your home network and registered in your Home Connect app. The selectable programme settings depend on the selected programme.	_

9 Accessories

Use original accessories. These have been made especially for your appliance.

	Use	Order number
Y-distributor	Connect the water outlet hose of an additional appliance to the same siphon outlet.	15000490
Appliance care product	Spare part for the intensive appliance care function.	00311829
Filter bag	Spare part for the allergen filter for removing allergens when airing laundry.	WTZPFRK
Allergen filter	Allergen filter for removing allergens when airing laundry.	WTZPFSK

10 Laundry

10.1 Preparing the laundry

ATTENTION!

Objects remaining in the laundry may damage the laundry and the drum.

 Remove all items from any pockets in your laundry before using the appliance.

Note

The appliance and fabrics are protected when you prepare your laundry.

- Brush off sand and soil
- Sort the laundry according to colour and textiles and observe the care labels
- Close all zips, hook and loop fasteners, hooks and eyes
- Remove curtain fittings and lead strips

- Load the laundry unfolded into the drum
- Spin the laundry before drying
- Dry woollen items, sports shoes and soft toys in the wool basket → "Wool basket", Page 42

11 Basic operation

11.1 Switching on the appliance

Note: If you switch the appliance on the first time after you have connected it to the electrical system, the switch-on process takes up to one minute.

Requirement: The appliance has been correctly installed and connected. → *Page 12*

► Press ①.

The switch-on process takes a few seconds.

 After a few seconds, the appliance displays the start animation and the programme overview.

Note: The lighting for the drum goes out automatically.

11.2 Setting a programme

Requirement: The display shows the programme menu.

- 1. Search through the menu. → Page 19
- 2. Press the required programme. → "Programmes", Page 27
- ✓ The display shows the programme settings.
- 3. Adjust the programme settings. → "Buttons", Page 23 Observe the information about operating logic → Page 19. The programme settings are not saved permanently for the programme.

11.3 Saving programme settings


Requirement: A programme is set. → Page 33

▶ Press ☆ 收藏.


To call up the saved programme, press 收藏 in the programme menu → Page 21.

11.4 Opening the door

1. Grip under the door handle and pull on the door.

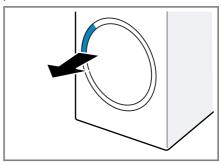

2. Open the door.

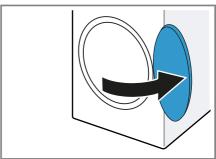

11.5 Loading laundry

Note: To prevent creasing, note the maximum load for the programmes. → "Programmes", Page 27

Requirements

- The laundry is prepared and sor-
 - → "Laundry", Page 32
- The drum is empty.
- 1. Open the door. → Page 33
- 2. Place the laundry in the drum.
- 3. Close the door.

Ensure that there is no laundry trapped in the door.

11.6 Starting the programme

Requirement: A programme is set.

- → Page 33
- ▶ Press DI.
- ✓ The display shows the programme duration or the programme end time.
- After the programme has ended, the display shows: "程序已结束".

Note: When "筒内温度较高,自动冷却 已经激活。 机器可以正常使用" is shown on the display, the appliance cools the laundry.

When "筒内温度较高,自动冷却已经 激活。 机器可以正常使用" goes out, the laundry has cooled down.

11.7 Adding laundry

After the programme starts, you can remove or add laundry at any time.

1. Press DI.

The cooling process starts automatically after approximately 30 seconds and cools down the laundry while the drum is rotating. If you want to avoid or cancel the cooling process, open the door. → Page 22

- 2. Open the door. → Page 33
- 3. Add or remove laundry.
- **4.** Close the door.
- 5. Press DI.

11.8 Cancelling the programme

- 1. Press ⊗ 终止.
- 2. Open the door. → Page 33
- 3. Remove the laundry. → Page 34

11.9 Unloading the laundry

1. Open the door. → Page 33

2. Remove the laundry from the drum.

11.10 Put the appliance into standby mode

► Press ①.

11.11 Fluff filter

During drving, fluff from the laundry is collected in the fluff filter. The fluff filter protects the appliance from fluff.


Cleaning the fluff filter

If the drying programme has finished or the display shows a notification while the appliance is in operation. clean the fluff filter.


Note: If you do not clean the appliance as described, the appliance's functionality may be impaired.

Requirements


- The display shows the following after drying: "程序已结束"
- or the display shows the following during operation: "绒毛收集器已 满,烘干效率受到影响。请清洁并用 温水冲洗绒毛收集器(双层)".
- 1. Open the door.
- 2. Remove the fluff from the door.

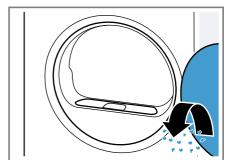

3. Remove the two-part fluff filter.

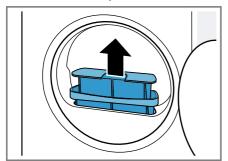


4. Remove the fluff from the recess.

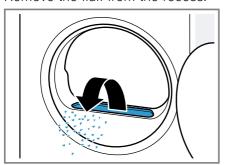


Ensure that no fluff falls into the air channel.


5. Disconnect the two-part fluff filter.

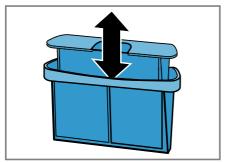


6. Open the two fluff filters.

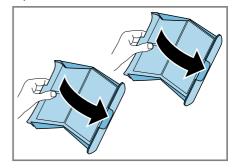


7. Remove the fluff.

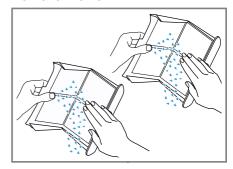


8. Clean the two fluff filters thoroughly under warm, running water and then dry them off.

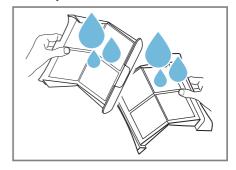

9. Close the two fluff filters and put them together.

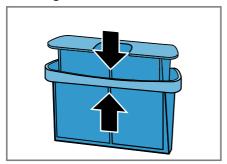

10. Insert the two-part fluff filter.

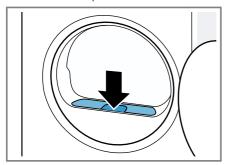

11. Close the door.

11.12 Condensation container

Condensation that forms in the appliance as it dries the laundry is collected by default in the condensation container.

Note: Operate this appliance using the water outlet hose provided.

→ Page 15

If you connect the water outlet hose, you do not have to regularly empty the condensation container.


→ "Emptying the condensation container", Page 36

Emptying the condensation container


If the drying programme has finished or the display shows a notification while the appliance is in operation, empty the condensation container.

Requirements

- The display shows the following after drying: "程序已结束"
- or the display shows the following during operation: "冷凝水盒已满,干衣效果和时间将受影响。 请倒空冷凝水盒".
- **1.** Pull out the condensation container, keeping it level.

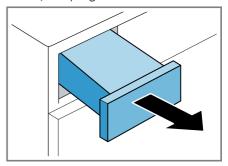

2. Empty the condensation container.

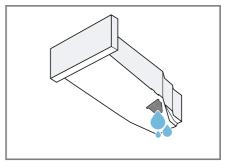


Check the condensation container filter regularly and clean the filter if it is dirty. → *Page 52* Make sure that you insert the con-

Make sure that you insert the condensation container before operating the appliance. → *Page 37*

Inserting the condensation container

 Push the condensation container in as far as it will go.

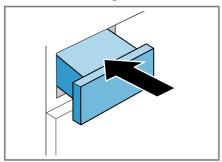

12 Dryness level

Each automatic programme has a specified dryness level. The dryness level defines how dry or damp your laundry is after the programme ends.

•	, 0
Dryness level	Description
超干储藏	For multi-layered, thick laundry that does not dry readily.
全干即穿	For normal, single- layered laundry.
微干挂烫	For normal, single-layered laundry. The laundry is still slightly damp after the programme ends. To prevent creasing after drying, iron the laundry or hang it up.

12.1 Changing the dryness level

For some automatic programmes, you can change the dryness level so that your laundry will be drier or more damp.

- 1. Set an automatic programme. → Page 27
- ▼ The display shows the specified dryness level.
- **2.** Press the specified dryness level.
- 3. Press on the scale or swipe over the scale with your finger to set the required dryness level.
- ✓ The display shows 全干, 超干 or 微 干.

12.2 Adjusting the dryness level

If the laundry feels too damp after it has been dried to a particular dryness level, you can adjust the dryness level.

- 1. Set an automatic programme. → Page 27
- ▼ The display shows the specified dryness level.
- 2. Press the specified dryness level.
- 3. Set the required dryness level.
- 4. Press on the scale and swipe over the scale with your finger to adjust the dryness level.
- ▼ The display shows "0", "+1", "+2" or "+3".

13 Childproof lock

Secure your appliance against being operated unintentionally using the controls.

13.1 Activating the childproof lock

- 1. Press on: to activate the childproof lock.
- 2. Press C 章锁.
- ✓ The display shows a message.
- The control elements are locked.
- ▼ The childproof lock also remains activated when the appliance is in standby mode and in the event of a power cut.

13.2 Deactivating the childproof lock

Requirement: To deactivate the childproof lock, the appliance must be switched on.


- 1. Press on the display.
- 2. Press and hold 屏幕中文字区域 for approx. 3 seconds.

14 Allergen filter


The allergen filter removes allergens such as pollen and animal hair when the laundry is aired. Use the allergen filter if you have strict hygiene requirements.

14.1 Inserting the allergen fil-

1. Take the accessories out of the packaging.

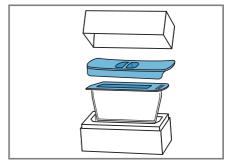


2. Slide the filter cover onto the filter bag.

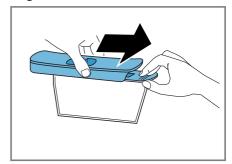


3. Open the door. → Page 33

4. Remove the two-part fluff filter.

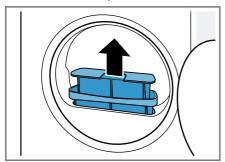


5. Remove the fluff from the recess.

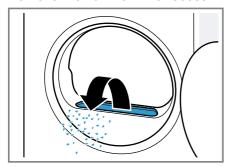


Ensure that no fluff falls into the air channel.

6. Insert the allergen filter.

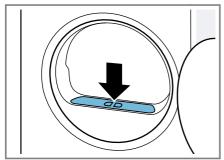

Note

If you remove the fluff filter or the allergen filter from the appliance, keep it stored in the supplied packaging.

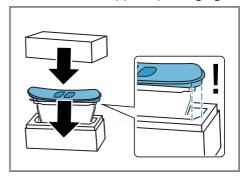

14.2 Starting a programme with the allergen filter

Note: The allergen filter is only suitable for airing laundry. If you want to dry your laundry, remove the allergen filter from the appliance and insert the fluff filter → Page 34 before drying.

Requirements


- The laundry is prepared.
 - → Page 32
- The laundry is sorted.
- The allergen filter has been inserted. → Page 38
- 1. Load the dry laundry unfolded into the drum.
- 2. Set a programme to air the laundry. → Page 29
- 3. Start the programme. → Page 34
- ✓ After the programme has ended, the display shows: "程序已结束".
- 4. Remove the laundry. → Page 34

Note: Change the filter bag for the allergen filter regularly. → Page 40


14.3 Cleaning and caring for the allergen filter

If the filter bag is dirty, it will be less effective at removing allergens. Change the filter bag for the allergen filter regularly, after approximately 10 uses.

- 1. Open the door. → Page 33
- 2. Remove the allergen filter.

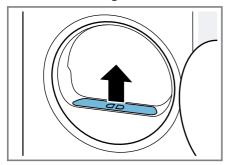

3. Pull the filter cover from the filter bag.

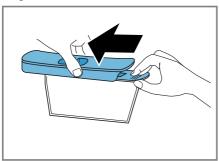

Dispose of the filter bag with your household waste.

The filter bag is manufactured from environmentally friendly materials. You can order the

→ "Accessories", Page 32 as a spare part from the customer service.


Do not use any cleaned filter bags.

5. Clean the filter cover under warm, running water or in the dishwasher.



Do not dispose of the filter cover. Use the filter cover for a new filter bag.

6. Slide the filter cover onto the new filter bag.

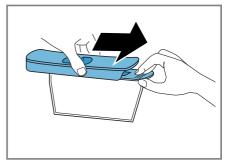

Before operating the appliance, ensure that the fluff filter \rightarrow *Page 34* is inserted for drying or the allergen filter \rightarrow *Page 38* is inserted for airing.

15 Crease-removal function

In order to reduce creasing and airborne odours, such as cigarette smoke, you can use a programme

with a crease-removal function for any dry laundry that has not been worn for long or at all.

15.1 Starting a programme with the crease-removal function

Note

Wash items of laundry that have traces of sweat, perfume or deodorant before wearing them again. Do not use dryer cleaning sets. Do not use a programme with the crease-removal function for the following fabrics:

- Wool, leather and viscose
- Fabrics with parts made from metal, wood or plastic
- Waxed jackets and oilskin jackets

Requirement: The laundry is placed in the appliance. → Page 33

- 1. Set a programme with crease-removal function. → Page 27
- 2. If required, adjust the set programme with crease-removal function. → Page 23
- 3. Start the programme. → Page 34 If the water tank is empty, the display shows: "清新水盒已空,请重新 加水".
 - → "Filling the water tank", Page 41
 - The average programme duration of the crease-removal function is approx. 45 minutes and may be longer or shorter depending on the ambient temperature.
- After the programme has ended, the display shows: "程序已结束".
- 4. Remove the laundry. → Page 34 The results of the crease-removal function may vary depending on the type of fabric, the amount of laundry and the selected programme.

- Remove the laundry immediately after the programme has ended to prevent creasing.
- 5. Hang up the items of laundry and pull them into shape.

15.2 Filling the water tank

Your appliance removes the creases from rarely worn clothing using cold mains water. If the display shows a notification while the appliance is in operation, fill the water tank.

ATTENTION!

Operating the appliance with water that is dirty or too hot may result in damage to the appliance.


- Only fill the water tank with cold drinking water.
- ► Never use condensed water, distilled water, additives or descaler for the crease-removal function.

Requirements

- A programme with the crease-removal function has been started. → Page 41
- The display shows: "清新水盒已 空,请重新加水".
- The condensation container → Page 36 is removed from the appliance.

en Wool basket

 Add approx. 180 ml cold mains water through the front opening, using the water jug provided.

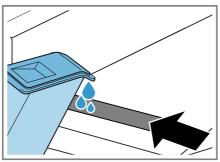

Observe the mark for filling the water tank next to the front opening. If "清新水盒已空,请重新加水" does not go out on the display, align the appliance correctly.

→ "Aligning the appliance",
Page 17

- ✓ "清新水盒已空,请重新加水" goes out on the display.
- Insert the condensation container.→ Page 37
- 3. Start the programme. → Page 34


16 Wool basket

Use the wool basket to gently dry delicate fabrics, soft toys or sports shoes in a stationary position.


16.1 Inserting the wool basket

Open the door.
 Ensure that the drum is empty.

Insert the feet of the wool basket into the holes from the door opening.

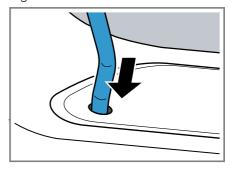

Insert the tab on the front of the wool basket into the upper hooks.

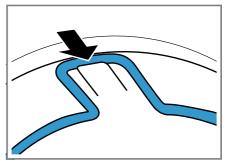

16.2 Starting a programme with the wool basket

ATTENTION!


If items of laundry in the wool basket touch the rotating drum or the ribs of the drum, the laundry may cause material damage and damage to the appliance.

Place the items of laundry in the insert or wool basket such that they do not touch the drum or the ribs of the drum.

Requirement: The wool basket is inserted into the appliance.

→ Page 42

1. Place the laundry into the wool basket, either directly or using the insert. → Page 43

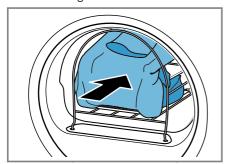

- 2. Close the door.
- 3. Set a programme that is suitable for drving with the wool basket.

Observe the programme description. → Page 29

4. If required, adjust the duration of the programme.

Observe the recommended programme duration for items of laundry in the wool basket:

Laundry item	Programme duration in hours:minutes
Thin woollen pullover	Approx. 1:20
Thick woollen pullover	Approx. 1:30 - 3:00
Skirt	Approx. 1:00 - 1:30
Trousers	Approx. 1:00 - 1:30
Gloves	Approx. 0:30
Sports shoes	Approx. 1:30/ max. 2:00 with airing

Tip: Increase the programme duration for thick or multi-layered items of laundry.

5. Start the programme. → Page 34

6. Remove the wool basket once the programme has ended.

16.3 Examples of how to use the wool basket

ATTENTION!

If items of laundry in the wool basket touch the rotating drum or the ribs of the drum, the laundry may cause material damage and damage to the appliance.

► Place the items of laundry in the insert or wool basket such that they do not touch the drum or the ribs of the drum

Trousers or skirt

Use

Place the items of laundry unfolded into the insert.

Note: Spin the laundry before drying.

Pullover

Example



Example

Use


Sports shoes



Lift the tongues of the shoes. Remove the insoles or heel cushions. Place a rolled-up hand towel in the wool basket to create an inclined surface. Place the shoes on the towel with the heels facing down.

Note: Do not use the insert. Do not dry leather shoes or shoes with leather parts.

Soft toys

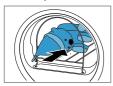

Place the soft toy in the wool basket.

Note: Do not use the insert. If you place numerous or small soft toys in the wool basket, make sure they do not fall out.

17 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of

Home Connect services in your country. You can find information about this at: www.home-connect.cn.

The Home Connect app guides you through the entire login process. Follow the instructions in the Home Connect app to configure the settings.

Tip: Please also follow the instructions in the Home Connect app.

Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app. → "Safety", Page 4
- Operating the appliance on the appliance itself always takes priority.
 During this time it is not possible to operate the appliance using the Home Connect app.

17.1 Setting up the Home Connect app

1. Install the Home Connect app on your mobile device.



 Start the Home Connect app and set up access for Home Connect.
 The Home Connect app guides you through the entire login process.

You can also use Home Connect via the WeChat mini programme.

17.2 Setting up Home Connect

Requirements

- The Home Connect app has been installed on your mobile device.
- The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.
- 1. Press :
- 2. Press 🖾 设置.
- 3. Press **手机互联**.
- 4. Press 晶御智能助手.
- 5. Follow the instructions on the display.
- 6. Follow the instructions in the Home Connect app.

17.3 Activating Wi-Fi on the appliance

Note: When Wi-Fi is activated, the energy consumption increases in comparison to the values specified in the consumption value table.

- 1. Press : .
- 2. Press ② 设置.
- **3.** Press **〒机互联**.
- 4. Press Wi-Fi设置栏上的开启按钮,设 置为开.
- ✓ Wi-Fi is activated.

17.4 Deactivating Wi-Fi on the appliance

- 1. Press:
- 2. Press ② 设置.
- 3. Press **〒 11 互联**.
- 4. Press Wi-Fi设置栏上的关闭按钮.设 置为关.
- Wi-Fi is deactivated.

Note: The connection is automatically re-established when the Wi-Fi is switched back on.

17.5 Installing the software update

Note: If a software update is available, a message appears in the Home Connect app.

- ▶ To install the software update, follow the instructions in the Home Connect app.
- The control panel is partially locked during the installation.
- ✓ In the event of a malfunction, installation may take up to 40 minutes. Do not reset the network settings or the appliance to the factory settings.

17.6 Resetting the appliance network settings

- 1. Press : .
- 2. Press 🟵 设置.
- 3. Press 🗧 手机互联.
- 4. Press 网络重置.
- 5. Press 继续.
- ▼ The network settings are reset.

17.7 Remote start

Enable the appliance for remote start via the Home Connect app.

Note

Remote start will be deactivated in the following circumstances:

- The appliance door is opened.
- □ 手机互联 is pressed.
- Following a power cut.

Activating remote start

Requirements

- The appliance door is closed.
- The refresher tank is not empty.
- 1. Press : .
- 2. Press ☐ **手机互联**.

- 3. Press DII.
- ✓ □ 手机互联 appears and the appliance is enabled for remote start via the Home Connect app.

Deactivating remote start

Note: You can deactivate remote start on the appliance or in the Home Connect app.

- 1. Press : .
- 2. Press □ 手机互联.
- ✓ 🗇 **手机互联** goes out.

17.8 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the Wi-Fi communication module installed).
- Securify certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous reset to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.

Note: Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

18 Basic settings

You can configure the basic settings for your appliance to meet your needs.

Note: You can also adjust the the basic settings in the Home Connect app.

18.1 Overview of the basic settings

Basic setting	Description
快速保养	Run the basic appliance care programme. → Page 47
深度保养	Run the intensive appliance care programme. → Page 47
结束音	Set the volume of the signal at the end of the pro- gramme.
按键音	Set the volume of the audible sig- nal emitted when the buttons are pressed.
设置亮度	Set the display brightness.
语言	Select the language.
智能排序	Activate or deactivate automatic programme sorting.
开始菜单	Select the pre- ferred start menu.
Wi-Fi	Activate or deactivate Wi-Fi.

Basic setting	Description
网络重置	Reset the network settings. → Page 45
晶御智能助手	Set up Home Connect.
开机向导	Start a video that helps you to operate the appliance.
恢复出厂设置	Restore the appliance to the factory settings.
演示模式	Start the demo mode.
错误信息	Display fault messages.

18.2 Changing the basic settings

- 1. Press: .
- 2. To call up the basic settings, press 设设置。
- 3. Select the required basic setting. → Page 46
- 4. Adjust the basic setting.
- 5. To exit the basic settings, press 返 回键.

19 Appliance care

The appliance offers cleaning programmes for basic and intensive appliance care.

19.1 Preparing for appliance care

Preparing the appliance for the appliance care programme

Prepare the appliance before running the appliance care programme.


Requirements

- The drum is empty.
- The appliance is in standby mode.
- **1.** Clean the fluff filter \rightarrow Page 34.
- 2. Pull out the condensation container horizontally and empty it. → Page 36

Preparing the condensation container for the appliance care programme

If you drain the condensation from the appliance using the drain hose, prepare the condensation container before running the appliance care programme.

1. Remove the stopper from the recess in the top ① and insert it in the underside 2.

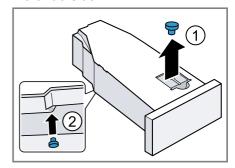

2. Clean the filter in the condensation container.

19.2 Calling up the appliance care programme

Requirement: The appliance care programme is ready. → Page 47

- 1. Press (I).
 - The switch-on process takes a few seconds.
- ✓ After a few seconds, the appliance displays the start animation and the programme overview.
- 2. Press :

- **3.** Press the required cleaning programme:
 - 快速保养
 - 深度保养

19.3 Running the basic appliance care programme

To remove light dirt deposits in the appliance, you can run the basic appliance care programme.

Notes

- The basic appliance care programme runs for approximately 1 hour.
- After a lengthy period of use, the appliance reminds you to run the basic appliance care programme. After the programme has ended, the display shows a notification.

Requirements

- The appliance care programme is ready. → Page 47
- The basic appliance care programme is called up. → Page 47
- Pour approx. 1.5 litres of hot mains water into the condensation container.
 - Hold the filled condensation container level so that no liquid spills out.
- 2. Insert the condensation container so that it locks into place.
- 3. Press DI.
- The appliance care programme starts and a signal tone sounds.
- ▼ "程序已结束" appears on the display and a signal tone sounds once the appliance care programme has ended.
- **4.** Pull out the condensation container horizontally and empty it.
- If you drain the condensation using the drain hose, remove the stopper from the underside of the condens-

- ation container and insert it into the recess in the top of the condensation container. → Page 47
- Insert the condensation container so that it locks into place.
- Put the appliance into standby mode. → Page 34

19.4 Running the intensive appliance care programme

You can run the intensive appliance care programme to remove any stubborn dirt deposits in the appliance and odours after a downtime of more than one month.

Notes

- The intensive appliance care programme runs for approximately 4 hours and must not be cancelled.
- When you run the intensive appliance care programme, you need the original appliance care product → Page 32.

Starting the intensive appliance care programme

Requirements

- The appliance care programme is ready. → Page 47
- The intensive appliance care programme is called up. → Page 47
- Pour a bottle of the appliance care product and approx. 1.5 litres of hot mains water into the condensation container.
 - Hold the filled condensation container level so that no liquid spills out.
- 2 Insert the condensation container so that it locks into place.
- 3. Press DII.
- The appliance care programme starts and a signal tone sounds.

- ✓ After around 3 hours, the appliance pauses the appliance care programme and the remaining programme duration flashes on the display.
- 4. Pull out the condensation container horizontally and empty it.
- 5. Pour approx. 1.5 litres of hot mains water into the condensation container.
- **6.** Carefully swivel the condensation container horizontally and empty it to rinse out any remaining appliance care product.

Continuing the intensive appliance care programme

- 1. Pour approx. 1.5 litres of hot mains water into the condensation container
 - Hold the filled condensation container level so that no liquid spills out.
- 2. Insert the condensation container so that it locks into place.
- 3. Press DI.
- ▼ The appliance care programme continues.
- ✔ "程序已结束" appears on the display and a signal tone sounds once the appliance care programme has ended.
- 4. Pull out the condensation container horizontally and empty it.
- 5. If you drain the condensation using the drain hose, remove the stopper from the underside of the condensation container land insert it into the recess in the top of the condensation container. → Page 47
- **6.** Insert the condensation container so that it locks into place.
- 7. Put the appliance into standby mode. → Page 34

20 Cleaning and servicina

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.


20.1 Base unit

The base unit is the accessible area at the bottom of the appliance in which you will find the heat exchanger.

Opening the base unit


Requirements

- The appliance has cooled down for 30 minutes.
- The appliance door is closed.
- 1. Open the maintenance flap.

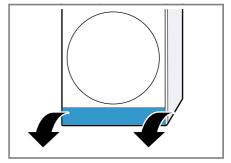


If you place a cloth beneath the maintenance flap, you can collect the remaining water from the base unit.

- en Cleaning and servicing
- 2. Open the lever for the heat exchanger cover.

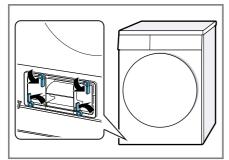

3. Pull out the heat exchanger cover by the handle.

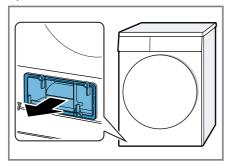


Cleaning the base unit

You can remove any visible dirt in the base unit.


1. Open the base unit → Page 49.

2. Use a soft brush to clean the heat exchanger cover.

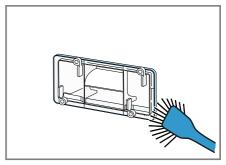


Make sure that you remove all dirt from the seal.


3. Pull the insert out horizontally.

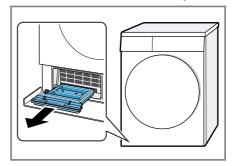


4. Clean the insert under running water and dry it off.

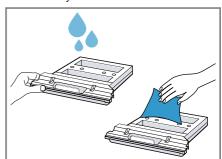

5. Clean the opening with a soft, damp cloth.

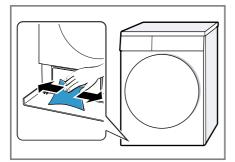

6. Slide the insert in horizontally as far as it will go.

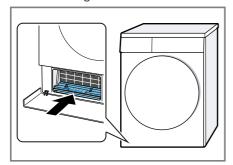


7. Close the base unit \rightarrow Page 51.

Closing the base unit


Requirement: The base unit is open.

→ "Opening the base unit", Page 49


 Insert the heat exchanger cover by the handle.

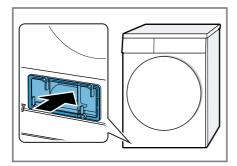

2. Close the lever for the heat exchanger.

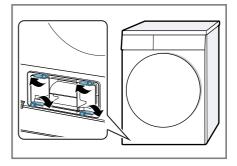

3. Close the maintenance flap.

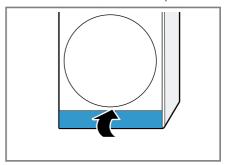

20.2 Moisture sensor

The moisture sensor in this appliance measures how damp the laundry is during the drying cycle. The appliance changes the duration of the automatic programme depending on the residual moisture in the laundry.

Cleaning the moisture sensor

Over time, residue from limescale, detergents and care products can build up on the moisture sensor. Clean the moisture sensor regularly.

ATTENTION!


Hard or rough objects may damage the moisture sensor.

 Do not use hard or rough objects, abrasive cleaning products or steel wool for cleaning.

en Cleaning and servicing

Note: If you do not clean the appliance as described, the appliance's functionality may be impaired.

- 1. Open the door.
- 2. Clean the moisture sensor with a sponge.

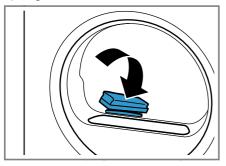


20.3 Condensation container filter

During drying, fluff from the laundry gets into the condensation. The filter in the condensation container protects the appliance from fluff.


Clean the filter for the condensation tank.

The filter is cleaned automatically when the condensation container is emptied. Check the filter regularly and clean the filter if it is dirty.

- Empty the condensation container.
 → Page 36
- 2. Remove the filter.

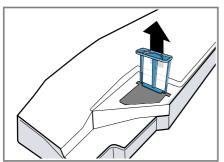

- 3. Clean the filter under warm, running water or in the dishwasher.
- 4. Slide in the filter as far as it will go.

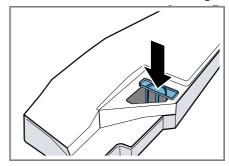

Insert the condensation container.
 → Page 37

21 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.



WARNING

Risk of electric shock!

Improper repairs are dangerous.

- ▶ Never make any technical modifications to the appliance or its features.
- Repairs to the appliance should only be carried out by trained specialist staff.
- Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

Fault

Cause and troubleshooting

"筒内温度较高,自动 冷却已经激活。 机器可 以正常使用" and the drum rotates.

Not a fault. The cooling process is active. No action required.

Note: Do not change the programme during the cooling process. The cooling process takes up to 10 minutes.

"冷凝水盒已满, 干衣 效果和时间将受影响。 请倒空冷凝水盒" and programme terminated.

The condensation container is full.

Empty the condensation container. → Page 36

The water outlet hose is not connected correctly, or is kinked or trapped.

 Check the installation of the water outlet hose. → Page 14

Water outlet hose is blocked

Rinse the water outlet hose with tap water.

The filter for the condensation tank is soiled.

- Clean the filter for the condensation container. → Page 52
- A foreign object is in the base unit.
- 1. Open the base unit. → Page 49
- 2. Remove any foreign objects.
- 3. Close the base unit. → Page 51

Dirt in the appliance.

- ► Run the intensive appliance care programme.
 - → Page 47

	
Fault	Cause and troubleshooting
"绒毛收集器已满,烘干效率受到影响。请清洁并思思力的流域。	Fluff filter is soiled. ► Clean the fluff filter. → Page 34
洁并用温水冲洗绒毛收 集器(双层) "	The allergen filter is dirty. ► Clean and care for the allergen filter. → Page 40
"自清洁中"	Not a fault. The automatic self-cleaning function rinses the appliance's heat exchanger. No action required.
	Note: Do not pull out the condensation container and do not interrupt the programme.
"清新水盒已空,请重 新加水"	The water tank for the crease-removal function is empty. ► Fill the water tank. → Page 41
The display and buttons do not respond.	 Software fault. 1. To restart the appliance, press and hold of for approximately 5 seconds. 2. If the fault occurs again, disconnect the appliance from the power supply for at least 30 seconds. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
Home Connect is not working properly.	 Different causes are possible. 1. Reset the appliance network settings. → Page 45 2. Set up Home Connect again. → Page 45 Foo to www.home-connect.cn.
Water overflows when filling the water tank.	The water tank is completely full. No action required.
	Note: The overflowing water is harmless. Do not pour any more water into the water tank.
	The water tank filter is soiled. • Clean the water tank filter.
The programme does not start.	Childproof lock is activated. ► Deactivate the childproof lock. → Page 38
	⑤ 预约 is activated.► Check whether ⑤ 预约 is activated. → Page 26
The length of the programme changes during the drying cycle.	Not a fault. The programme sequence is optimised electronically. No action required.
The drying time is too long.	Fluff filter is soiled. ► Clean the fluff filter. → Page 34
	The ambient temperature is lower than 15 °C.

Fault	Ocuse and translate heating	
Fault	Cause and troubleshooting	
The drying time is too long.	 Ensure that the ambient temperature is above 15 °C. 	
	The ambient temperature is greater than 30 °C. ► Ensure that the appliance is only operated in a well ventilated location.	
	The air circulation at the appliance's installation location is insufficient. Ventilate the appliance's installation location.	
	Insufficient condensation for the automatic self-cleaning function when permanently drying small loads of laundry or when permanently using the crease-removal function.	
	Regularly dry a load weighing more than 3 kg of damp laundry until the programme ends.	
	The appliance's ventilation opening is blocked.Ensure that the ventilation opening of the appliance is kept clear.	
	Heat exchanger is soiled. ► Run the basic appliance care programme → Page 47.	
The crease-removal function takes too long.	A low ambient temperature extends the duration of the crease-removal function. No action required.	
Humming, whirring or pumping noises.	Not a fault. The compressor, compressor ventilation or condensation pump is active. No action required.	
The laundry is too damp.	The selected programme is unsuitable for the type of fabric. ► Set a time programme for subsequent drying. → Page 29	
	The load is too large. ► Observe the programme's maximum load capacity. → Page 27	
	 After the end of the programme, warm laundry feels damper than it actually is. 1. Remove the laundry from the drum as soon as the drying programme has finished. 2. Spread the items of laundry for cooling. 	
	The selected dryness level is unsuitable. ► Change the dryness level. → Page 37	
	The dryness level is not adjusted.	

en Troubleshooting

Fault	Cause and troubleshooting	
The laundry is too	 Adjust the dryness level. → Page 37 	
damp.	The load is too small. ► Set a time programme for subsequent drying. → Page 29	
	The moisture sensor is dirty. ► Clean the moisture sensor. → Page 51	
	The appliance has interrupted the drying process due to the condensation container being full. ► Empty the condensation container. → Page 36	
Creasing.	The selected programme is unsuitable for the type of fabric. ► Set a suitable programme. → Page 27	
	The load is unsuitable. ► Observe the programme's maximum load capacity. → Page 27	
	Prepare the laundry. → Page 32	
	The laundry lies in the drum for too long after drying.1. Remove the laundry from the drum as soon as the drying programme has finished.2. Spread the items of laundry for cooling.	
	Easy Care fabrics have been dried for too long. ► Change or adjust the dryness level. → Page 37	
	The crease-reduction function is not activated. ► Activate the crease-reduction function. → Page 23	
Water is leaking from the appliance.	Appliance is not correctly aligned. ► Align the appliance. → Page 17	
	The seal for the heat exchanger cover is dirty. ► Clean the seal for the heat exchanger cover. → Page 50	
	Water outlet hose is not connected correctly. ► Check the installation of the water outlet hose. → Page 14	
	The lever for the heat exchanger cover is not closed correctly. ► Ensure that the lever for the heat exchanger cover is closed correctly. → Page 51	

Fault	Cause and troubleshooting
Condensation collects in the condensation container despite the	Not a fault. The remaining volume of condensation may remain in the condensation container. No action required.
water outlet hose being connected.	Water outlet hose is not connected correctly. ► Check the installation of the water outlet hose. → Page 14
Odours have formed in the appliance.	Stubborn dirt in the appliance or an extended appliance downtime of more than one month. ► Run the intensive appliance care programme. → Page 47

22 Transportation, storage and disposal

22.1 Disposing of old appliance

Valuable raw materials can be reused by recycling.

⚠ WARNING Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from openina.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

⚠ WARNING Risk of fire!

The refrigerant R290 used in this appliance is environmentally friendly. It is however flammable and may ignite if appliances are not disposed of properly.

- Dispose of the appliance properly.
- Do not damage the tubing of the refrigerant circuit.
- 1. Unplug the appliance from the mains.
- 2. Cut through the power cord.
- 3. Dispose of the appliance in an environmentally friendly manner. Information about current disposal methods are available from your specialist dealer or local authority.

23 Customer Service

Detailed information on the warranty period and terms of warranty in your country is available from our aftersales service, your retailer or on our website.

If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

23.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

You can find the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) on the appliance's rating plate.

Depending on the model, the rating plate is located:

- On the inside of the door.
- On the inside of the maintenance
- On the rear of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

24 Technical data

Appliance height	84.2 cm
Appliance width	59.7 cm
Appliance depth	62.7 cm
Appliance depth with door closed	65.3 cm

Appliance depth with door open	112.4 cm
Weight	54.9 kg
Maximum load	10.0 kg
Mains voltage	220 V, 50 Hz
← Minimum installation protection	10 A
Nominal power	1000 W
Permissible operating conditions in accordance with GB/T 23118	 Ambient temperature 0–40 °C, not freezing Relative humidity less than 80% at 25 °C, noncondensing
Length of the power cord	145 cm

GB 17625.1 Electromagnetic compatibility – Limits – Part 1: Limits for harmonic current emissions (equipment input current ≤16 A per phase) GB 4706.20 Safety of household and similar electrical appliances – Particular requirements for tumble dryers		
hold and similar electrical appli- ances – Particu- lar requirements	L L r e	compatibility – Limits – Part 1: Limits for har- monic current emissions equipment input current ≤16 A
	f 6 8	nold and similar electrical appli- ances – Particu-

25 Applicable standard

GB 4706.1	Household and similar electrical appliances – Safety – Part 1: General requirements
GB 4343.1	Electromagnetic compatibility requirements for household appliances, electric tools and similar apparatus – Part 1: Emission

Name and content of hazardous substances in products

	Hazardous substance					
Component name	Lead (Pb)	Mer- cury (Hg)	Cad- mium (Cd)	Hexava- lent chro- mium (Cr(VI))	Polybromi- nated biphe- nyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCB	х	0	0	0	0	0
Display	х	0	0	0	0	0
Controller	Х	0	0	0	0	0
Power cord and connect wiring harness	х	0	0	0	0	0
Pumps and drives	х	0	0	0	0	0
Housing	0	0	0	0	0	0
Door and its constituent parts	х	0	0	0	0	0
Drum-system and its constituent parts	х	0	0	0	0	0
Water supply components (exempted dryer)	х	0	0	0	0	0

This table was developed according to the provisions of SJ/T 11364.

o The content of such hazardous substance in all homogeneous materials of such component is below the limit required by GB/T 26572.

x The content of such hazardous substance in a certain homogeneous materials of such component is beyond the limit required by GB/T 26572.









Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- · Expert tips & tricks for your appliance
- · Warranty extension options
- Discounts for accessories & spare-parts
- Digital manual and all appliance data at hand
- Easy access to Bosch Home Appliances Service

Free and easy registration – also on mobile phones: **www.bosch-home.com/welcome**



Looking for help? You'll find it here.



博世家电官方微信公众号

Expert advice for your Bosch home appliances, help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you:

www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

总经销商: 博西家用电器(中国)有限公司 地址:

中国江苏省南京市鼓楼区清江南路18号3幢

客户服务热线: 400 885 5888

客户服务电子邮箱:

careline.china@bshg.com

制造商: 博西华家用电器有限公司

地址:

安徽省滁州市滁州经济技术开发区世纪大道1号www.bosch-home.cn

