



Fridge-freezer

KMC85...

[en] Information for Use



You can find additional information and explanations online. Scan the QR code on the title page.



Table of contents

1.1 General information	ΙĊ
1.3 Restriction on user group 3 8.1 Super cooling	
1.4 Safe transport	
1.5 Safe installation	
1.6 Safe use	
1.7 Damaged appliance	
2 Preventing material damage 8 9.2 Temperature alarm	
3 Environmental protection and 10 Refrigerator compartment	
saving energy	
3.1 Disposing of packaging	17
3.2 Saving energy 8 10.2 Chill zones in the refrigerator	
4 Installation and connection 9 compartment	1 /
4.1 Scope of delivery	
4.2 Criteria for the installation loc- ation	18
11.21 dily dillolling the heezel	
to the state of th	76
4.4 Preparing the appliance for 11.3 Tips for storing food in the the first time	1 2
4.5 Connecting the appliance to 11.4 Tips for freezing fresh food	
the electricity supply	
5 Familiarising yourself with -18 °C	19
your appliance 11 11.6 Defrosting methods for	
5.1 Appliance	19
5.2 Control panel 12 12 Defrosting	19
6 Features	
6.1 Shelf 13 compartment	19
6.2 Freezer tray	
6.3 Storage container 14 partment partment	19
6.4 Fruit and vegetable contain- 13 Cleaning and servicing	19
er	
6.5 Door tray	
7 Basic operation	
7.1 Switching on the appliance 14 13.3 Removing the fittings	۷
7.2 Operating tips	つ 1
7.3 Switching off the appliance 15 ponents	/ '

17 Technical data	27
16.1 Product number (E-Nr.) and production number (FD)	27
16 Customer Service	26
15.2 Disposing of old appliance	26
·	

Safety en



1 Safety

Observe the following safety instructions.

1.1 General information

operation 26

14.2 Conducting an appliance

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:

- for chilling and freezing food and for making ice cubes.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 2000 m above sea level.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Children above the age of three years old and younger than eight years old may load and unload the the fridge-freezer.

1.4 Safe transport

The heavy weight of the appliance may result in injury when lifted.

▶ Do not lift the appliance on your own.

1.5 Safe installation

Incorrect installation is dangerous.

- ► Connect and operate the appliance only in accordance with the specifications on the rating plate.
- ► Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ► The protective conductor system of the domestic electrical installation must be properly installed.
- ► Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.
- ► When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.

▶ Never let the power cord come into contact with heat sources.

⚠ WARNING – Risk of explosion!

If the appliance's ventilation openings are closed off, a leak in the refrigeration circuit may result in a flammable mixture of gas and air.

► Keep ventilation openings in the appliance casing or in the integrated casing clear of obstruction.

It is dangerous to use an extended power cord and non-approved adapters.

- ► Do not use extension cables or multiple socket strips.
- Only use adapters and power cords approved by the manufacturer.

▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

Portable multiple socket strips or portable power supply units may overheat and cause a fire.

► Do not place portable multiple socket strips or power supply units on the back of the appliance.

1.6 Safe use

⚠ WARNING – Risk of electric shock!

An ingress of moisture can cause an electric shock.

- ▶ Only use the appliance in enclosed spaces.
- ▶ Never expose the appliance to intense heat or humidity.
- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

⚠ WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ► Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ► Keep small parts away from children.
- Do not let children play with small parts.

If the cooling circuit is damaged, flammable refrigerant may escape and explode.

- ► To accelerate the defrosting process, do not use any other mechanical devices or means other than those recommended by the manufacturer.
- ▶ If food is stuck to the freezer compartment, loosen it with a blunt object such as the handle of a wooden spoon.

Products which contain flammable propellants and explosive substances may explode, e.g. spray cans.

► Do not store products which contain flammable propellants (e.g. spray cans) or explosive substances in the appliance.

⚠ WARNING – Risk of fire!

Electrical devices within the appliance may cause a fire, e.g. heaters or electric ice makers.

► Do not operate electrical devices within the appliance.

Containers that contain carbonated drinks may burst.

► Do not store containers that contain carbonated drinks in the freezer compartment.

Injury to the eyes caused by escaping flammable refrigerant and hazardous gases.

▶ Do not damage the tubes of the refrigerant circuit or the insulation.

The appliance may tip.

▶ Do not stand or support yourself on the base, runners or doors.

⚠ WARNING – Risk of cold burns!

Contact with frozen food and cold surfaces may cause burns by refrigeration.

- ► Never put frozen food straight from the freezer compartment into your mouth.
- ► Avoid prolonged contact of the skin with frozen food, ice and surfaces in the freezer compartment.

To prevent food from being contaminated, you must observe the following instructions.

- ▶ If the door is open for an extended period of time, this may lead to a considerable temperature increase in the compartments of the appliance.
- ► Regularly clean the surfaces that may come into contact with food and accessible drain systems.
- ► Store raw meat and fish in suitable containers in the refrigerator so that they do not touch or drip on other food.
- ▶ If the fridge/freezer is empty for an extended period of time, switch off the appliance, defrost it, clean it and leave the door open to prevent the formation of mould.

Metal or metal-style parts in the appliance may contain aluminium. If acidic food comes into contact with aluminium in the appliance, aluminium foil ions may pass into the food.

▶ Do not consume soiled food.

1.7 Damaged appliance

If the appliance or the power cord is damaged, this is dangerous.

- ► Never operate a damaged appliance.
- ► Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ► Call customer service. → Page 26

Improper repairs are dangerous.

- ► Repairs to the appliance should only be carried out by trained specialist staff.
- ► Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.

⚠ WARNING – Risk of fire!



If the tubes are damaged, flammable refrigerant and harmful gases may escape and ignite.

- Keep naked flames and ignition sources away from the appliance.
- Ventilate the room.
- ► Switch off the appliance. → Page 15
- ► Unplug the mains plug from the mains or switch off the circuit breaker in the fuse box.
- ► Call customer service. → Page 26

2 Preventing material damage

ATTENTION

The high weight of the appliance or, if not rolling freely, the appliance's castors may damage the floor when the appliance is moved.

- ► Transport the appliance using a sack truck.
- Use floor protection when moving the appliance, and do not move it in a zigzag fashion.

When the appliance door is closed, an open door pillar may damage the appliance.

- ► Never open the door pillar manually.
- ▶ If the door pillar has been opened, close it before closing the appliance door.

Using the appliance, base, runners or doors as a seat or climbing surface may damage the appliance.

- ▶ Do not stand or lean on the appliance, base, runners or doors. Contamination with oil or fat may cause plastic parts and door seals to become porous.
- ► Keep plastic parts and door seals free of oil and grease.

Metal or metal-style parts in the appliance may contain aluminium. When aluminium comes into contact with acidic foods, it corrodes and discolours.

 Only store packaged food in the appliance.

If you clean fittings and accessories in the dishwasher, this may cause them to become deformed or discolour.

 Never clean fittings and accessory in the dishwasher

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

 Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

Selecting the installation location

- Keep the appliance out of direct sunliaht.
- Install the appliance as far away as possible from heating elements, cookers and other heat sources:
 - Maintain a 30 mm clearance to electric or gas cookers.
 - Maintain a 300 mm clearance to oil or solid-fuel cookers.
- Never cover or block the external ventilation openings.

Saving energy during use

Note: The arrangement of the fittings does not affect the energy consumption of the appliance.

- Open the appliance only briefly and then close it carefully.
- Never cover or block the interior ventilation openings or the exterior ventilation openings.
- Transport purchased food in a cool bag and place in the appliance quickly.
- Allow warm food and drinks to cool down before storing them.
- Thaw frozen food in the refrigerator compartment to utilise the low temperature of the food.

- Always leave some space between the food and to the back panel.
- Vacuum the external ventilation arilles when they are dusty.

4 Installation and connection

4.1 Scope of delivery

After unpacking all parts, check for any transport damage and for completeness of delivery.

If you have any complaints, contact your dealer or our after-sales service → Page 26.

The delivery consists of the following:

- Free-standing appliance
- Equipment and accessories¹
- Installation instructions
- User manual
- Customer service directory
- Warranty enclosure²
- Energy label
- Information on energy consumption and noises

4.2 Criteria for the installation location

⚠ WARNING Risk of explosion!

If the appliance is in a space that is too small, a leak in the refrigeration circuit may result in a flammable mixture of gas and air.

 Only install the appliance in a space with a volume of at least 1 m³ per 8 g refrigerant. The

volume of refrigerant is indicated on the rating plate.

→ "Appliance", Fig. 1 /3 Page 11



The weight of the appliance ex works may be up to 120 kg depending on the model.

The subfloor must be sufficiently stable to bear the weight of the appliance.

The surface must be level.

This refrigerator is intended for use at ambient temperatures of 10 °C to 43 °C.

The appliance is fully functional within the permitted room temperature. If the appliance is operated at colder room temperatures, the appliance will not be damaged up to a room temperature of 5 °C.

4.3 Installing the appliance

► Install the appliance in accordance with the enclosed installation instructions.

4.4 Preparing the appliance for the first time

- **1**. Remove the informative material
- 2. Remove the protective foil and transit bolts, e.g. remove the adhesive strips and carton.
- **3.** Clean the appliance for the first time. → Page 20

4.5 Connecting the appliance to the electricity supply

1. Insert the appliance plug of the power cord into the appliance.

² Not in all countries

Depending on the appliance specifications


en Installation and connection

- 2. Insert the mains plug of the appliance's power cable in a socket nearby.
 - The connection data of the appliance can be found on the rating plate.
- → "Appliance", Fig. 1/3
 Page 11
- **3.** Check the mains plug is inserted properly.
- ▼ The appliance is now ready for use.

5 Familiarising yourself with your appliance

5.1 Appliance

You can find an overview of the parts of your appliance here.

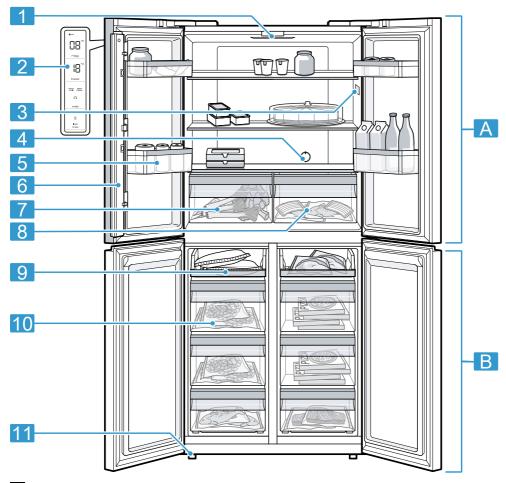

Deviations between your appliance and the diagrams may differ with regard to their features and size.

- Refrigerator compartment → Page 17
- Freezer compartment → Page 18

- Lighting
- Control panel → Page 12
- Rating plate → Page 27

en Familiarising yourself with your appliance

- Temperature controller (storage container)
- Door tray for large bottles

 → Page 14
- Door pillar with condensation protection → Page 8
- Fruit and vegetable container

 → Page 14


5.2 Control panel

You can use the control panel to configure all functions of your appliance

- 8 Storage container → Page 14
- 9 Freezer tray → Page 13
- Frozen food container

 → Page 21
- 11 Screw foot

and to obtain information about the operating status.

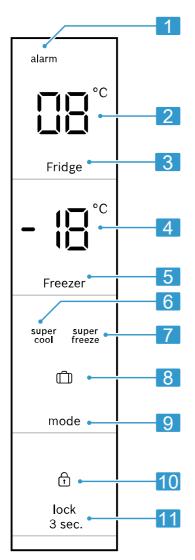

alarm lights up when the alarm is switched on.

- Displays the set temperature for the refrigerator compartment in °C.
- Fridge sets the temperature of the refrigerator compartment.
- Displays the set temperature for the freezer compartment in °C.
- Freezer sets the temperature of the freezer compartment.
- super cool lights up when Super 6 cooling is switched on.
- super freeze lights up when Super freezing is switched on.
- lights up when holiday mode is switched on.
- mode is used to select an additional function.
- 10 d lights up when the button lock is activated.
- lock 3 sec. switches the button 11 lock for the control panel on or off.

6 Features

The features of your appliance depend on the model.

6.1 Shelf

To vary the shelf as required, you can remove the shelf and re-insert it elsewhere

→ "Removing the shelf", Page 20

6.2 Freezer tray

You can freeze smaller quantities of food quickly on the freezer tray, e.g. berries, pieces of fruit, herbs and veaetables.

Distribute the frozen items evenly on the freezer tray and leave to freeze for approx. 10 to 12 hours. Then

place in a freezer bag or a freezer box.

6.3 Storage container

The temperatures in the storage container are lower than in the refrigerator compartment. Temperatures below 0 °C may occur occasionally. In order to reach temperatures close to 0 °C in the storage container, set the refrigerator compartment temperature from 2 °C to 4 °C and turn the temperature control to the storage setting $\ensuremath{\mathsc{C}}$ $\ensuremath{\mathsc{C}}$.

Use the lower temperatures in the storage container to store highly perishable food, e.g. fish, meat and sausages.

6.4 Fruit and vegetable container

Store fresh fruit and vegetables loose in the fruit and vegetable container. Cover any chopped fruit and vegetables, or store in air-tight packaging. Condensation may form in the fruit and vegetable container depending on the food and quantity stored. Remove the condensation with a dry cloth.

To ensure that the quality and aroma are retained, store fruit and vegetables that are sensitive to cold outside of the appliance at temperatures of approx. 8 °C to 12 °C, e.g. pineapple, bananas, citrus fruits, cucumbers, courgettes, peppers, tomatoes and potatoes.

6.5 Door tray

To adjust the door tray as required, you can remove the door tray and reinsert elsewhere.

→ "Removing door tray", Page 20

7 Basic operation

7.1 Switching on the appliance

- Electrically connect the appliance.
 → Page 9
- ▼ The appliance begins to cool.
- A warning signal sounds, the temperature display (freezer compartment) flashes and "alarm" lights up because the freezer compartment is still too warm.
- **2.** Switch off the warning tone using **alarm**.
- "alarm" goes out as soon as the set temperature has been reached.
- 3. Set the required temperature. → Page 15

7.2 Operating tips

- Once you have switched on the appliance, the set temperature is only reached after several hours.
 Do not put any food in the appliance until the set temperature has been reached.
- When closing the door, make sure that the door is not blocked by stored items.
- When you close the door, a vacuum may be created. The door is then difficult to open again. Wait a moment until the vacuum is offset.
- The temperature in the appliance varies due to the following conditions:
 - How often the appliance is opened
 - Load capacity
 - Temperature of newly stored food
 - Ambient temperature
 - Direct sunlight

7.3 Switching off the appliance

► Disconnect the appliance from the power supply. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

7.4 Setting the temperature


Setting the refrigerator compartment temperature

► Press Fridge repeatedly until the temperature display (refrigerator compartment) shows the required temperature setting.

The recommended temperature in the refrigerator compartment is 4 °C.

Setting the storage container temperature

- Select one of the options:
 - For storing meat and fish, turn the temperature controller to the left-hand storage setting \bowtie .
 - ► For storing beverages, turn the temperature controller to the middle storage setting 11.
 - ► For storing fruit and vegetables, turn the temperature controller to the right-hand storage setting AS 1830

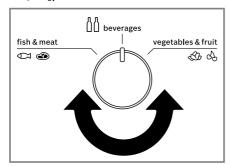

Tip: Fruit, vegetables, drinks and snacks may freeze below 0 °C. Only use the left-hand storage setting for meat and fish.

Setting the freezer compartment temperature

Press Freezer repeatedly until the temperature display (freezer compartment) shows the required temperature setting.

The recommended temperature in the freezer compartment is -18 °C.

7.5 Keylock

The keylock prevents the appliance from being operated accidentally or incorrectly while running.

Switching on the keylock

- Press and hold lock 3 sec. for three seconds.

Switching off the keylock

- Press and hold lock 3 sec. for three seconds.

8 Additional functions

Find out which additional functions can be used for your appliance.

8.1 Super cooling

With Super cooling, the refrigerator compartment cools as cold as possible.

Switch on Super cooling before placing large quantities of food in the refrigerator compartment.

Note: When Super cooling is switched on, increased noise may occur.

Switching on Super cooling

- ► Press **mode** repeatedly until "super cool" lights up.
- ✓ "SU" lights up in the temperature display (refrigerator compartment).

Note: After approx. 6 hours, the appliance switches to normal operation.

Switching off Super cooling

- ► Press **mode** repeatedly until "super cool" goes out.
- ▼ The previously set temperature is displayed.

8.2 Super freezing

With Super freezing, the freezer compartment cools as cold as possible. Switch on Super freezing four to six hours before placing food weighing 2 kg or more into the freezer compartment.

In order to utilise the freezer capacity, use Super freezing.

→ "Prerequisites for freezing capacity", Page 18

Note: When Super freezing is switched on, increased noise may occur.

Switching on Super freezing

- Press mode repeatedly until "super freeze" lights up.
- ✓ "SU" lights up on the temperature display (freezer compartment).

Note: After approx. 56 hours, the appliance switches to normal operation.

Switching off Super freezing

- ▶ Press **mode** repeatedly until "super freeze" goes out.
- ▼ The previously set temperature is displayed.

8.3 Holiday mode

If you are going to be away for a long time, you can switch on energy-saving holiday mode on the appliance.

CAUTION

Risk of harm to health!

The refrigerator compartment heats up while the holiday mode is

switched on. The increased temperature may cause bacteria to increase and spoil the food.

When the holiday mode is switched on, do not store any food in the refrigerator compartment.

The appliance automatically sets the temperatures.

Refrigerator com- 14 °C partment

Freezer compart- Temperature rement

mains unchanged

Switching on holiday mode

► Press **mode** repeatedly until is 🗅 highlighted.

Switching off holiday mode

- Press mode.
- ▼ The previously set temperature is displayed.

9 Alarm

9.1 Door alarm

If the appliance door is open for a while, the door alarm switches on. A warning tone sounds and "alarm" flashes.

Switching off the door alarm

- Close the appliance door or press any touch field on the control panel.
- ✓ The warning tone is switched off.
- ✓ "alarm" goes out.

9.2 Temperature alarm

If the freezer compartment becomes too warm, the temperature alarm is switched on.

A warning tone sounds and the set temperature (freezer compartment) and "alarm" flash.

△ CAUTION Risk of harm to health!

During the thawing process, bacteria may multiply and spoil the frozen food.

- Do not refreeze food after it has been defrosted or started to de-
- Refreeze food only after cooking.
- ▶ These items should no longer be stored for the maximum storage period.

The temperature alarm can be switched on in the following cases:

- The appliance is switched on. Do not store any food until the appliance has reached the set temperature.
- Large quantities of fresh food are being placed inside. Switch on Super freezing before placing large quantities of food in the appliance.
- The freezer compartment door is open for too long. Check whether the frozen food has defrosted or thawed.

Switching off the temperature alarm

- ► Press any touch field.
- ▼ The warning tone is switched off.
- ▼ The temperature display (freezer) compartment) briefly indicates the warmest temperature reached in the freezer compartment. The temperature display (freezer compartment) then indicates the set temperature again.
- ✓ From this time on, the warmest temperature is measured again and saved.
- ✓ "alarm" lights up until the set temperature is reached again.

10 Refrigerator compartment

You can keep meat, sausage, fish, dairy products, eggs, prepared meals and pastries in the refrigerator compartment.

The temperature can be set from 2 °C to 8 °C.

The refrigerator compartment can also be used to store highly perishable foods in the short to medium term. The lower the selected temperature, the longer the food remains fresh

10.1 Tips for storing food in the refrigerator compartment

- Only store food when fresh and undamaged.
- Store food covered or in air-tight packaging.
- To avoid impeding the circulation of air and to prevent food from freezing, do not place food so that it has direct contact with the back wall
- Allow hot food and drinks to cool down first before placing in the appliance.
- Observe the best-before date or use-by date specified by the manufacturer.

10.2 Chill zones in the refrigerator compartment

The air circulation in the refrigerator compartment creates different chill zones.

Coldest zone

The coldest zone is in the storage container.

Tip: Store highly perishable food such as fish, sausages and meat in the coldest zone.

Warmest zone

The warmest zone is at the very top of the door.

Tip: Store food that does not spoil easily in the warmest zone, e.g. hard cheese and butter. Cheese can then continue to release its aroma and the butter will still be easy to spread.

11 Freezer compartment

You can store frozen food, freeze food and make ice cubes in the freezer compartment.

The temperature can be set from -16 °C to -24 °C.

Long-term storage of food should be at -18 °C or lower.

The freezer compartment can be used to store perishable food long-term. The low temperatures slow down or stop the spoilage.

11.1 Freezing capacity

The freezing capacity indicates the quantity of food that can be frozen right through to the centre within a specific period of time.

Information on freezing capacity can be found on the rating plate.

→ "Appliance", Fig. 1 / 3 Page 11

Prerequisites for freezing capacity

- **1.** Approx. 24 hours before placing fresh food in the appliance, switch on Super freezing.
 - → "Switching on Super freezing", Page 16
- **2.** First, place the food on the freezer tray.

11.2 Fully utilising the freezer compartment volume

Learn how to store the maximum amount of frozen food in the freezer compartment.

- **1.** Remove all fittings from the freezer compartment. → *Page 20*
- 2. Stack food directly on the floor of the freezer compartment.

11.3 Tips for storing food in the freezer compartment

- Store food in air-tight packaging.
- Do not bring food which is to be frozen into contact with frozen food.
- Place the food over the whole area of the freezer tray or the frozen food containers.
- To ensure that the air can circulate freely in the appliance, push the frozen food containers in as far as they will go.

11.4 Tips for freezing fresh food

- Freeze fresh and undamaged food only.
- Freeze food in portions.
- Cooked food is more suitable than food that can be eaten raw.
- Vegetables: Wash, chop up and blanch before freezing.
- Fruit: Wash, pit and perhaps peel, possibly add sugar or ascorbic acid solution.
- Food that is suitable for freezing includes baked items, fish and seafood, meat, game, poultry, eggs without shells, cheese, butter and quark, ready meals and leftovers.
- Food that is unsuitable for freezing includes lettuce, radishes, eggs in shells, grapes, raw apples and

pears, yoghurt, sour cream, crème fraîche and mayonnaise.

Packing frozen food

If you select suitable packaging material and the correct type of packaging, you can determine the product quality and prevent freezer burn.

- **1.** Place the food in the packaging.
- 2. Squeeze out the air.
- 3. Pack food airtight to prevent it from losing flavour and drying out.
- 4. Label the packaging with the contents and the date of freezing.

11.5 Shelf life of frozen food at -18 °C

Food	Storage time
Fish, sausages, pre- pared meals and baked goods	up to 6 months
Poultry, meat	up to 8 months
Vegetables, fruit	up to 12 months

11.6 Defrosting methods for frozen food

⚠ CAUTION Risk of harm to health!

During the thawing process, bacteria may multiply and spoil the frozen food.

- Do not refreeze food after it has been defrosted or started to defrost.
- Refreeze food only after cooking.
- ► These items should no longer be stored for the maximum storage period.
- Defrost animal-based food, such as fish, meat, cheese, quark, in the refrigerator compartment.

- Defrost bread at room temperature.
- Prepare food for immediate consumption in the microwave, in the oven, or on the hob.

12 Defrosting

12.1 Defrosting in the refrigerator compartment

The refrigerator compartment in your appliance defrosts automatically.

12.2 Defrosting in the freezer compartment

The fully automatic NoFrost system ensures that the freezer compartment remains frost-free. Defrosting is not required.

13 Cleaning and servicinq

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully. Customer Service must clean inaccessible points. Cleaning by customer service can give rise to costs.

13.1 Preparing the appliance for cleaning

- 1. Disconnect the appliance from the power supply. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
- 2. Take out all of the food and store it in a cool place. Place ice packs (if available) onto the food.
- 3. Remove all fittings and accessories from the appliance.
 - → Page 20

- en Cleaning and servicing
- **4.** Remove the fruit and vegetable container cover.

13.2 Cleaning the appliance

An ingress of moisture can cause an electric shock.

 Do not use steam- or high-pressure cleaners to clean the appliance.

Liquid in the lighting or in the controls can be dangerous.

► The rinsing water must not drip into the lighting or controls.

ATTENTION

Unsuitable cleaning products may damage the surfaces of the appliance.

- ► Do not use hard scouring pads or cleaning sponges.
- ▶ Do not use harsh or abrasive detergents.
- ► Do not use cleaning products with a high alcohol content.
- ▶ Do not use stainless-steel cleaning agents on the outside of the appliance.

If you clean fittings and accessories in the dishwasher, this may cause them to become deformed or discolour.

- ► Never clean fittings and accessory in the dishwasher.
- Prepare the appliance for cleaning.
 → Page 19
- Clean the outside of the appliance, the inside of the appliance, the fittings, the accessories and the door seals with a dish cloth, lukewarm water and a little pH-neutral detergent.

 
- **3.** Dry thoroughly with a soft, dry cloth.
- **4.** Insert the fittings and install the removable appliance parts.
- Electrically connect the appliance.
 → Page 9
- 6. Putting the food into the appliance.

13.3 Removing the fittings

If you want to clean the fittings thoroughly, remove these from your appliance.

Removing the shelf


► Lift the shelf at the front ①, pull it out and remove it ②.





Removing door tray


► Lift the door tray and remove it.

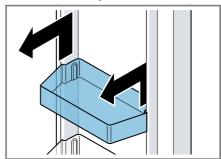

Removing the storage container


1. Pull out the storage container as far as it will go.

2. Lift the storage container at the front 1) and remove it 2).

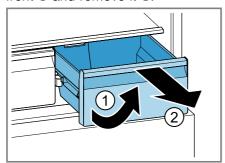

Removing the fruit and vegetable container


- 1. Pull out the fruit and vegetable container as far as it will go.
- 2. Lift the fruit and vegetable container at the front o and remove it (2)

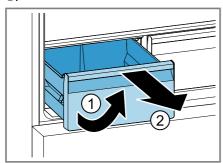

Removing the freezer tray


1. Pull out the freezer tray as far as it will go.

2. Lift the freezer tray at the front ① and remove it 2.

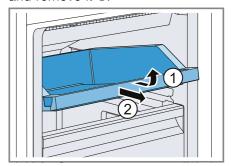

Removing the frozen food container

- **1.** Take out the frozen food container as far as it will go.
- 2. Lift the frozen food container at the front 1) and remove it 2).

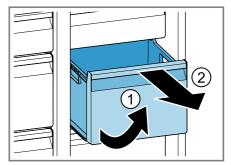


13.4 Removing appliance components

If you want to clean your appliance thoroughly, you can remove certain components from your appliance.


Removing the shelf above the fruit and vegetable container

► Lift the shelf above the fruit and vegetable container at the front ① and remove it ②.

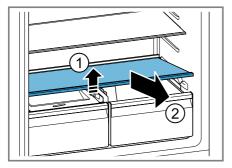

Removing the fruit and vegetable container cover

- 1. Pull out the fruit and vegetable container as far as it will go.
- 2. Lift the fruit and vegetable container cover slightly ①, pull it forwards ② and remove it ③.

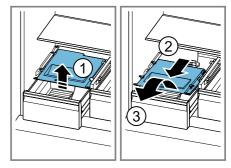

14 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

⚠ WARNING

Risk of electric shock!

Improper repairs are dangerous.

- ► Repairs to the appliance should only be carried out by trained specialist staff.
- ► Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.

Fault

Cause and troubleshooting

The appliance is not cooling, the displays and lighting are lit.

Showroom mode is switched on.

- **1.** Disconnect the appliance from the mains. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
- **2.** Reconnect the appliance after five minutes.
- Wait at least 30 seconds and then press mode for 15 seconds.
- ▼ 11 appears briefly on the control panel.
- **4.** After a short time, check whether your appliance is cooling.

Fault The LED lighting does

Cause and troubleshooting

Different causes are possible.

► Call customer service.

The customer service number can be found in the enclosed customer service directory.

The refrigeration unit is switching on more frequently and for longer.

The appliance has been opened frequently.

► Do not open appliance door unnecessarily.

External ventilation openings are covered up.

► Remove any obstructions from in front of the external ventilation openings.

Not a fault. Modern refrigeration machines switch on more frequently and have different power levels to cool more efficiently.



- Remove any obstructions from in front of the external ventilation openings.
- Install the appliance as far away as possible from heating elements, cookers and other heat sources.
 Avoid prolonged exposure of the appliance to direct sunlight.
- Only open the appliance door as briefly as necessary.
- Allow hot food and drinks to cool down first before storing in the appliance.

A layer of frost forms on the back wall of the refrigerator compartment. Not a fault. Modern refrigeration machines ensure a more even temperature in the refrigerator compartment. The back wall of the refrigerator compartment is defrosted automatically at regular intervals.



- Only open the appliance door as briefly as necessary.
- ► Pack the food airtight or cover it.
- Allow hot food and drinks to cool down first before storing in the appliance.
- Always leave some space between the food and the interior walls.

Fault	Cause and troubleshooting
"E" or "d" appears on the temperature dis- play.	 The electronics have detected a fault. Switch off the appliance. → Page 15 Disconnect the appliance from the mains. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Reconnect the appliance after five minutes. If the message still appears on the display, call Customer Service. The customer service number can be found in the enclosed customer service directory.
A warning signal sounds and "alarm" flashes. The door alarm is switched on.	The appliance door is open. ► Close the appliance door.
A warning tone sounds and the temperature display (freezer compartment) and "alarm" flash. The temperature alarm is switched on.	 Different causes are possible. 1. Press any touch field. ✓ The alarm is switched off. 2. After several hours, check whether the set freezer compartment temperature has been reached again.
	 External ventilation openings are covered up. Remove any obstructions from in front of the external ventilation openings.
	 Larger quantities of fresh food have been put in. Switch on Super freezing before placing a larger amount of food in the appliance. → "Switching on Super freezing", Page 16
The temperature differs greatly from the setting.	 Different causes are possible. 1. Switch off the appliance. → Page 15 2. Switch the appliance back on after five minutes. → Page 14 If the temperature is too warm, check the temperature again after a couple of hours. If the temperature is too cold, check the temperature again on the following day.
The appliance hums, bubbles, buzzes, gargles, clicks or crackles.	Not a fault. A motor is running, e.g. refrigerating unit, fan. Refrigerant flows through the pipes. The motor, switches or solenoid valves are switching on or off. Automatic defrosting is running. No action required.

Fault

The appliance makes noises.



Cause and troubleshooting

The appliance is not level.

 Align the appliance using a spirit level and the screw feet.

The appliance is not free-standing.

► Observe the minimum clearances for the appliance.

Fittings wobble or stick.

Check the removable fittings and, if required, replace these.

Bottles or containers are touching.

Move the bottles or containers away from each other.

Super freezing is switched on. No action required.

14.1 Power failure

During a power failure, the temperature in the appliance rises; this reduces the storage time and the quality of the frozen food.

On the website for your appliance, the technical data provides you with the storage times for frozen food in the event of a fault.

Notes

- Open the appliance as little as possible during a power failure and do not place any other food in the appliance.
- Check the quality of the food immediately after a power failure.
 - Dispose of any frozen food that has defrosted and is hotter than 5 °C.
 - Cook or fry slightly thawed frozen food, and then either consume it or freeze it again.

14.2 Conducting an appliance self-test

Your appliance has an appliance selftest which displays faults that can be eliminated by your customer service.

- Disconnect the appliance from the power supply.
 Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
- Electrically reconnect the appliance after 5 minutes. → Page 9
- Within the first two minutes after switching on, press and hold mode for 10 seconds until an audible signal sounds.
- ▼ The appliance self-test starts.
- ✓ If, at the end of the appliance selftest, 2 audible signals sound and the temperature display indicates the set temperature, the temperature sensors on your appliance are OK. The appliance switches to normal operation.
- If, at the end of the appliance selftest, 5 audible signals sound, inform customer service.

15 Storage and disposal

15.1 Taking the appliance out of operation

- 1. Disconnect the appliance from the power supply.
 - Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
- 2. Remove all of the food.
- **3.** Clean the appliance. \rightarrow *Page 20*
- 4. ATTENTION Objects jammed between the door and the housing may damage the door hinge.
 - Open the door until it remains open by itself.
 - ► Do not insert any objects between the door and the housing.

To guarantee the ventilation inside the appliance, leave the appliance open.

15.2 Disposing of old appliance

Valuable raw materials can be reused by recycling.

⚠ WARNING

Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- Leave shelves and containers inside the appliance to prevent children from climbing in.
- ► Keep children away from the redundant appliance.

⚠ WARNING Risk of fire!

If the tubes are damaged, flammable refrigerant and harmful gases may escape and ignite.

- ▶ Do not damage the tubes of the refrigerant circuit or the insulation.
- 1. Unplug the appliance from the mains.
- **2.** Cut through the power cord.
- 3. Dispose of the appliance in an environmentally friendly manner. Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with **European Directive** 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

16 Customer Service

Function-relevant genuine spare parts according to the corresponding Ecodesign Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.

Note: Under the terms of the manufacturer's warranty applicable to the location, the use of Customer Service is free of charge. The minimum dura-

tion of the warranty (manufacturer's warranty for private consumers) in the European Economic Area is 2 years according to the terms of warranty applicable to the location. The terms of warranty do not affect other rights or claims held by yourself under local legislation.

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.

If you contact Customer Service, you will require the product number (E-Nr.) and the production number (FD) of vour appliance.

You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website.

16.1 Product number (E-Nr.) and production number (FD)

You can find the product number (E-Nr.) and the production number (FD) on the appliance's rating plate.

→ "Appliance", Fig. 1 /3 Page 11

Make a note of your appliance's details and the Customer Service telephone number to find them again auickly.

17 Technical data

Refrigerant, cubic capacity and further technical specifications can be found on the rating plate.

→ "Appliance", Fig. 1 / 3 Page 11 This product contains a light source from energy efficiency class G. The light source is available as a spare part and should only be replaced by trained specialist staff.

You can find more information about vour model online at https:// eprel.ec.europa.eu/1. This web address is linked to the official FU EPREL product database. Please then follow the instructions on searching for the model. The model identifier is made up of the characters before the slash in the product number (E-Nr.) on the rating plate. Alternatively, you can also find the model identifier in the first line of the EU energy label.

¹ Only applies to countries in the European Economic Area



Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- · Expert tips & tricks for your appliance
- · Warranty extension options
- · Discounts for accessories & spare-parts
- · Digital manual and all appliance data at hand
- Easy access to Bosch Home Appliances Service

Free and easy registration – also on mobile phones: **www.bosch-home.com/welcome**



Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you:

www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

BSH Hausgeräte GmbH

Carl-Wery-Straße 34 81739 München, GERMANY www.bosch-home.com

A Bosch Company

Valid within Great Britain: Imported to Great Britain by BSH Home Appliances Ltd. Grand Union House Old Wolverton Road Wolverton, Milton Keynes MK12 5PT United Kingdom



9001884233 (050519)