



## Washer dryer

WNC554A0TC

[en]

User manual and installation instructions

## Further information and explanations are available online:



#### **Table of contents**

1 Safety	. 4 . 4 . 4
ance	10
2 Preventing material damage	11
3 Environmental protection and saving energy	<b>12</b> 12 12
4 Installation and connection	12 13 13 14 15 16
5 Before using for the first time 5.1 Starting an empty washing cycle	<b>17</b> 17
6 Familiarising yourself with your appliance	18 18 18 19
7 Display	21

8 Buttons	<b>2</b> 4
9 Programmes	27
10 Accessories	31
11.2 Care symbols on the care	<b>31</b> 31
12 Detergents and care products	32
<ul><li>13.2 Setting a programme</li><li>13.3 Saving the programme set-</li></ul>	<b>32</b> 32 33
13.4 Opening the door	33 33 34 34
<ul><li>13.9 Cancelling the drying programme</li></ul>	34 34 34
<b>14 Dryness level</b> 14.1 Changing the dryness level	<b>35</b>
15 Childproof lock	35
	35
15.2 Deactivating the childproof lock	35

<ul><li>16 Intelligent dosing system</li><li>16.1 Pouring liquid detergent and fabric softener into the dispensers</li><li>16.2 Using the manual dosing</li></ul>		22 Customer Service	
compartment	36	23 Technical data	55
penser	37	23.1 Information regarding Free and Open Source Software	56
amount	37	24 Declaration of Conformity	56
17.1 Setting up Home Connect 17.2 Deactivating Wi-Fi on the			
appliance	38		
pliance	38		
date	38		
network settings	38		
18 Basic settings	39		
18.1 Overview of the basic settings	39		
18.2 Changing the basic set- tings	39		
<b>19 Cleaning and servicing</b> 19.1 Cleaning the drum and	40		
cleaning fluff	40		
drawer			
<ul><li>19.3 Cleaning the drain pump</li><li>19.4 Cleaning the rubber gasket</li></ul>			
<b>20 Troubleshooting</b> 20.1 Emergency release			
21 Transportation, storage and disposal	54		
21.1 Removing the appliance 21.2 Inserting the transit bolts 21.3 Using the appliance again 21.4 Disposing of old appliance	54 54 54		



### 1 Safety

Observe the following safety instructions.

#### 1.1 General information



- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

#### 1.2 Intended use

Only use this appliance:

- for washing machine-washable fabrics and hand-washable wool in accordance with the care label.
- with tap water and commercially available detergents and care products suitable for washing machines.
- for drying and freshening up fabrics that are washed with water and suitable for dryers.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 4000 m above sea level.

#### 1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Keep children under the age of 3 years and pets away from the appliance.

Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to a approved low power radio-frequency devices.

The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved.

The said legal communications means radio communications is operated in compliance with the Telecommunications Act. The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

#### 1.4 Safe installation

#### **⚠** WARNING – Risk of electric shock!

Incorrect installation is dangerous.

- ► Connect and operate the appliance only in accordance with the specifications on the rating plate.
- Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ► The protective conductor system of the domestic electrical installation must be properly installed. The installation must have a sufficiently large cross section.
- ► When using a residual current circuit breaker, only use a type with the \( \sigma \) mark.
- ► Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ► Never connect the appliance to a circuit that is regularly switched on and off by the energy supplier.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.
- ► When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with hot appliance parts or heat sources.
- Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

#### 

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- Only use adapters and power cords approved by the manufacturer.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

#### **⚠** WARNING – Risk of injury!

The heavy weight of the appliance may result in injury when lifted.

▶ Do not lift the appliance on your own.

#### **⚠** WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ► Keep packaging material away from children.
- ► Do not let children play with packaging material.

#### **△** CAUTION – Risk of injury!

The appliance may vibrate or move when in use.

- ▶ Place the appliance on a clean, even, solid surface.
- ► Align the appliance using the appliance feet and a spirit level. If hoses and power cords have been laid incorrectly, this causes a tripping hazard.
- ► Lay hoses and power cords in such a way that there is no risk of tripping.

If the appliance is moved by holding onto protruding components, such as the appliance door, the parts may break off.

▶ Do not move the appliance by holding onto protruding parts.

#### **△** CAUTION – Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

- ▶ Do not touch the sharp edges on the appliance.
- Wear protective gloves when installing and transporting the appliance.

#### 1.5 Safe use

#### 

If the appliance or the power cord is damaged, this is dangerous.

- ► Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box and turn off the water tap.
- ► Call customer services. → Page 55

An ingress of moisture can cause an electric shock.

- ► Only use the appliance in enclosed spaces.
- ▶ Never expose the appliance to intense heat or humidity.
- ▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

#### **△** WARNING – Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ► The appliance must not be set up behind a lockable door, a sliding door or a door with a hinge on the side opposite to the appliance, which prevents appliance from opening fully.
- ▶ With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

When spinning larger, waterproof items of laundry, imbalances may arise and lead to injuries.

▶ Do not wash and spin larger items of laundry, such as blankets or mattress covers, in the appliance.

#### 

Children may breathe in or swallow small parts, causing them to suffocate.

- ► Keep small parts away from children.
- ► Do not let children play with small parts.

#### **⚠** WARNING – Risk of explosion!

If there is coal dust or flour in the air around the appliance, this may cause an explosion.

► Keep the area around the appliance clean during operation.

#### **⚠** WARNING – Risk of poisoning!

Detergents and care products may result in poisoning if consumed.

- ▶ If accidentally swallowed, seek medical advice.
- ► Keep detergents and care products out of the reach of children.

### **⚠** WARNING – Risk of explosion!

Highly flammable objects such as lighters or matches may ignite during the drying process.

Remove all highly flammable objects from any pockets in your laundry before the drying process.

Unwashed laundry may ignite during drying.

- ▶ Do not dry laundry in this appliance if the laundry has not been washed first.
- ▶ If laundry has been contaminated with substances such as cooking oil, acetone, alcohol, petrol, kerosene, stain-remover, turpentine, wax and wax-remover, wash it in hot water with an additional quantity of detergent before drying it in the appliance.
- ► Rinse the laundry thoroughly with warm water and detergent before drying it in the machine.
- ▶ Do not use the appliance if industrial chemicals have been used to clean the laundry beforehand.

Laundry that has been pretreated with flammable cleaning agents that contain solvents may cause an explosion in the appliance.

► Rinse pretreated laundry thoroughly with water before washing.

#### 

If drying is interrupted early, the laundry is not cooled sufficiently and may ignite.

- ▶ Do not interrupt the drying programme early.
- ▶ If drying is interrupted early, remove the laundry immediately and spread it out.

#### **△** CAUTION – Risk of injury!

The covering plate may break if you stand on or climb onto the appliance.

- ▶ Do not stand on or climb onto the appliance.
- The appliance may tip over if you sit on or lean against the open door.
- ▶ Do not sit on or lean against the appliance door.
- ▶ Do not place any objects on the appliance door.

Reaching into the drum while it is still turning may cause hand injuries.

▶ Wait for the drum to come to a complete stop before reaching inside.

#### **△** CAUTION – Risk of scalding!

When you wash at high temperatures, the detergent solution gets hot.

▶ Do not touch the hot detergent solution.

#### **△** CAUTION – Risk of chemical burns!

If the detergent drawer is opened, detergent and care products may spray out from the appliance. Contact with eyes or skin may cause irritation.

- ► Rinse eyes and/or skin thoroughly with clean water if they come into contact with detergents or care products.
- ► If accidentally swallowed, seek medical advice.
- ► Keep detergents and care products out of the reach of children.

#### 1.6 Safe cleaning and maintenance

#### 

Improper repairs are dangerous.

- Never make any technical modifications to the appliance or its features.
- Repairs to the appliance should only be carried out by trained specialist staff.
- ► Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

An ingress of moisture can cause an electric shock.

- ▶ Before cleaning, pull out the mains plug or switch off the fuse in the fuse box.
- ▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

#### **⚠** WARNING – Risk of injury!

The use of non-original spare parts and non-original accessories is dangerous.

Only use the manufacturer's original spare parts and original accessories.

#### **⚠** WARNING – Risk of poisoning!

Poisonous fumes may be given off if you use cleaning agents that contain solvents.

► Do not use cleaning agents that contain solvents.

## 2 Preventing material damage

#### **ATTENTION!**

The functionality of the appliance may be impaired if you use the wrong quantity of fabric softener, detergent, care product or cleaning agent.

- Follow the dosage recommendations from the manufacturer.

  Exceeding the maximum load capacity impairs the function of the appliance
- Observe the maximum load capacity for each programme and do not exceed it.
- → "Programmes", Page 27
  Foam and foam rubber may deform or melt during the drying process.
- Objects such as foam rubber (latex foam), shower caps, waterproof textiles, rubberised items and clothing or cushions with sponge rubber padding must not be dried in the appliance.

The appliance is secured for transportation using transit bolts. Transit bolts which have not been removed may result in material damage and damage to the appliance.

- Before starting up the appliance, remove the transit bolts completely and keep them in a safe place.
- Before transport, fit the transit bolts fully in order to prevent damage in transit.

Material damage may be caused if the water inlet hose is connected incorrectly.

 Tighten the screw connections on the water inlet until they are handtight.

- Connect the water inlet hose directly to the water tap, without any additional connecting elements such as adapters, extensions or valves.
- Make sure that the valve housing for the water inlet hose does not come into contact with its surroundings and is not subjected to any external forces.
- ► Ensure that the inner diameter of the water tap is at least 17 mm.
- Make sure that the length of the thread on the connection to the water tap is at least 10 mm.

If the water pressure is too high or too low, the appliance may not be able to operate properly.

- Ensure that the water pressure in the water supply system is at least 100 kPa (1 bar) and max. 1000 kPa (10 bar).
- ► If the water pressure exceeds the maximum value specified, a pressure-reducing valve must be installed between the drinking water connection and the hose set of the appliance.
- Do not connect the appliance to the mixer tap of an unpressurised hot-water boiler.

Modified or damaged water hoses may result in material damage and damage to the appliance.

- Never kink, crush, modify or cut through water hoses.
- Only use the water hoses supplied with the appliance or genuine spare hoses.
- Never re-use water hoses that have been used before.

Operating the appliance using water that is dirty or too hot may lead to material damage and damage to the appliance.

 Only operate the appliance with cold mains water. Unsuitable cleaning products may damage the surfaces of the appliance.

- Do not use harsh or abrasive detergents.
- ▶ Do not use cleaning products with a high alcohol content.
- Do not use hard scouring pads or cleaning sponges.
- Clean the appliance with nothing but water and a soft, damp cloth.
- Remove all detergent residue, spray residue or other residues immediately if they come into contact with the appliance.

## 3 Environmental protection and saving energy

#### 3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

 Sort the individual components by type and dispose of them separately.

#### 3.2 Save energy and conserve resources

If you follow these instructions, your appliance will use less electricity and less water.

- Choose programs with low temperatures and longer wash times and use maximum load capacity.
- Add detergent based on the laundry's degree of soiling.
- Reduce the washing temperature for lightly and normally soiled laundry.
- Set the maximum spin speed if you want to dry the laundry in the appliance afterwards.

#### 3.3 Energy saving mode

If you do not use the appliance for a brief period, it automatically switches to energy-saving mode. All displays go out and  $\Phi$  flashes.

Energy-saving mode ends when you use the appliance again.

If you do not use the appliance for an extended period, it automatically switches to standby mode.

#### 4 Installation and connection

#### 4.1 Unpacking the appliance

#### **ATTENTION!**

Objects remaining in the drum that are not designed for operation with the appliance may cause material damage and damage to the appliance.

- Remove these objects, along with all supplied accessories, from the drum before starting the appliance.
- Remove any packaging and protective covers completely from the appliance.
  - → "Disposing of packaging", Page 12
- 2. Check the appliance for visible damage.
- 3. Open the door. → Page 33
- **4.** Remove any accessories from the drum.
- 5. Close the door.

#### 4.2 Contents of package

After unpacking all parts, check for any damage in transit and completeness of the delivery.

#### **ATTENTION!**

If the appliance is operated with incomplete or defective accessories, the appliance may not be able to operate properly, or this may result in material damage or damage to the appliance.

- Do not operate the appliance with incomplete or defective accessories.
- Replace the accessories in question before operating the appliance.
  - → "Accessories", Page 31

**Note:** The appliance has undergone a function test at the factory. This may cause water stains in the appliance, which the first wash cycle removes.

The delivery consists of the following:

- Washer dryer
- Accompanying documents
- Transit bolts
- Cover capsWater inlet best
- Water inlet hose
   → "Connecting the water inlet
  hose", Page 15

### 4.3 Requirements for the installation location

### ⚠ WARNING Risk of electric shock!

The appliance contains live parts. Touching live parts is dangerous.

Do not operate the appliance without a cover cap.

### MARNING Risk of injury!

When using the appliance on a base, the appliance may tip over.

Always secure the feet of the appliance to a base using the manufacturer's fixing brackets → Page 31 before using the appliance for the first time.

#### **ATTENTION!**

If residual water in the appliance freezes, this may cause damage to the appliance.

 Do not install or operate this appliance anywhere that is liable to experience frost or outdoors.

If the appliance is tilted at an angle greater than 40°, residual water may leak out of the appliance and cause material damage.

- ► Tilt the appliance carefully.
- Transport the appliance in an upright position.

### Installation loca- Requirements tion

#### Base



Secure the appliance with fixing brackets

→ Page 31.


### Wooden joist



Place the appliance on a water-resistant wooden board (minimum thickness of 30 mm) which is screwed tightly to the floor.


#### Installation loca- Requirements tion

#### Kitchen unit

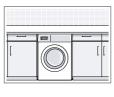

Only install the appliance underneath a continuous worktop that is securely connected to adjacent cabinets. Required niche width: 60 cm.

#### Against a wall

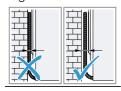


Do not trap the power cord or the hoses between the wall and the appliance.

#### 4.4 Removing the transit bolts


The appliance is secured for transportation using transit bolts on the rear of the appliance.

**Note:** Keep the transit bolt screws and the sleeves in a safe place for future transport.


1. Pull the hose out of the holders.

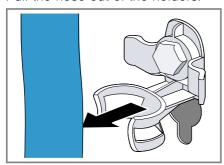


2. Unscrew 1 and remove 2 all of the screws for the 4 transit bolts using a WAF 13 wrench.

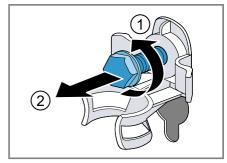


3. Remove the power cable from the holder.

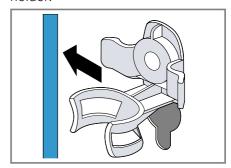

4. Remove the 4 sleeves.

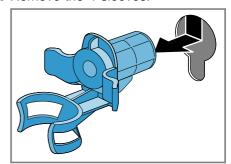

**5.** Insert the 4 cover caps ① and push them downwards ②.

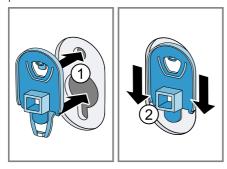


**Note:** To install the transit bolts to transport the appliance, perform these steps again in the reverse order.

## 4.5 Connecting the appliance Connecting the water inlet hose


#### **ATTENTION!**

Material damage may be caused if the water inlet hose is connected incorrectly.

- Tighten the screw connections on the water inlet until they are handtight.
- 1. Connect the water inlet hose.

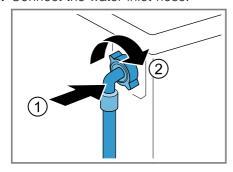

2. Connect the water inlet hose to a tap (26.4 mm = 3/4").

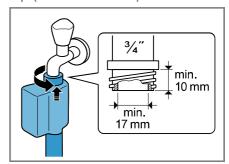

Open the water tap carefully and check that the connection points are tight.

#### Water outlet connection types

This information is intended to help you to connect this appliance to the water outlet.

#### **ATTENTION!**

When draining, the water outlet hose is subject to water pressure and may come loose from the installed connection point.

- ► Secure the water outlet hose against unintentional loosening. In the event of a blocked or covered outlet, accumulated wastewater can flow back into the appliance.
- Before operating the appliance, ensure that the wastewater drains away quickly and eliminate any blockages.

**Note:** Observe the draining heights. The draining heights are: minimum: 60 cm, maximum: 100 cm



Secure the connection point with a (24–40 mm) hose clamp.


#### Sink



Fix and secure the water outlet hose with an elbow.

→ "Accessories", Page 31

### Plastic pipe with rubber sleeve

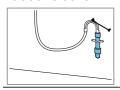

Fix and secure the water outlet hose with an elbow.

→ "Accessories", Page 31

### Connecting the appliance to the electricity supply


**Note:** Your electrical domestic installation for this appliance must comply with the local legal provisions and safety regulations, and should include a residual current circuit-breaker.

- Insert the mains plug of the appliance's power cable in a socket nearby.
  - The connection details of the appliance can be found under Technical data  $\rightarrow$  *Page 55*.
- **2.** Check the mains plug is inserted properly.


#### 4.6 Aligning the appliance

In order to reduce noise and vibration and to prevent the appliance from moving, align the appliance correctly.

 Use a WAF 17 wrench to loosen the lock nuts in a clockwise direction.

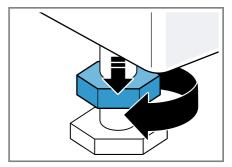


2. To align the appliance, turn the appliance feet. Check that the appliance is level using a spirit level.

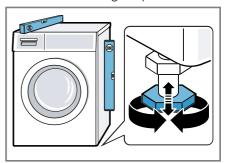

All appliance feet must stand firmly on the ground.

3. Use a WAF 17 wrench to tighten the lock nuts against the housing until they are hand-tight.

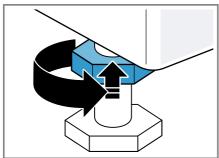

In doing so, hold the foot tight and do not adjust its height.

## 5 Before using for the first time

Prepare the appliance for use.


## 5.1 Starting an empty washing cycle

Your appliance was inspected thoroughly before leaving the factory. To remove any residual water, run the first wash cycle without any laundry.


- 1. Press 0.

  The switch-on process takes a few seconds.
- 2. Set the 槽潔淨 programme.
- 3. Close the door.
- 4. Pull out the detergent drawer.

**5.** Pour approx. 1 litre of water into the manual dosing compartment.

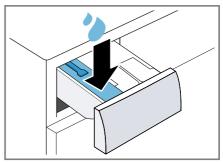

Add washing powder containing oxygen bleach to the manual dosing compartment.

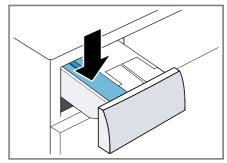


To prevent foaming, use only half of the amount of detergent recommended by the detergent manufacturer for light soiling. Do not use detergent suitable for woollens or delicates.

- 7. Push in the detergent drawer.
- 8. Start the programme. → Page 34
- Start the first wash cycle or press
   to put the appliance in standby mode.
  - → "Basic operation", Page 32

### 6 Familiarising yourself with your appliance

#### 6.1 Appliance

You can find an overview of the parts of your appliance here.

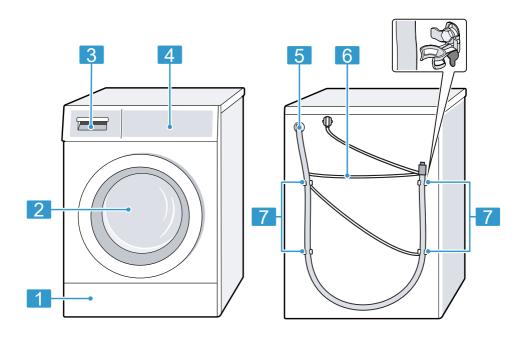


On certain models, specific details such as the colour and shape may differ from those pictured.

1	Maintenance flap for the drain pump
2	Door → Page 33
3	Detergent drawer → Page 18
4	Control panel → Page 19
5	Water outlet hose → Page 15
6	Power cord → Page 16
7	Transit bolts

#### 6.2 Detergent drawer

**Note:** Observe the manufacturer's instructions on the use and dosage of the detergent and care product and the information in the programme descriptions.

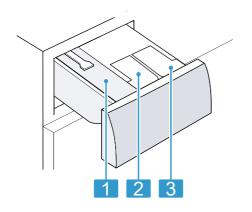

- Manual dosing compartment


  → "Using the manual dosing
  compartment", Page 36
- 2 ⊗ / O: Dispenser for fabric softener or liquid detergent → "Intelligent dosing system", Page 35
- O: Dispenser for liquid detergent

  → "Intelligent dosing system",

  Page 35

#### 6.3 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

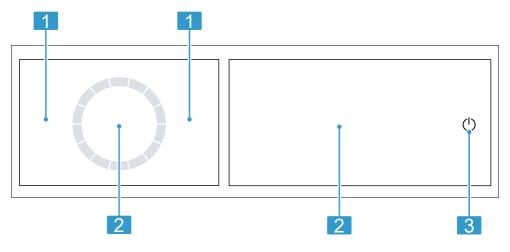


- 1 Programmes → Page 27
- Buttons → Page 24 and display → Page 21
- 3 Buttons → Page 24

#### 6.4 Operating logic

Some areas of the display are buttons and respond to touch. You can activate, deactivate or change set-

tings by pressing the buttons. The activated settings are highlighted brightly on the display.

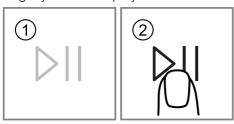

#### **ATTENTION!**


Pressing on the display with force may cause damage.

- Do not apply heavy pressure on the display.
- ▶ Do not press on the display using pointed or sharp objects.


### Displaying or hiding additional buttons

Some buttons are hidden for a reduced display. If you display these additional buttons on the display, you can activate or deactivate the corresponding settings.

1. To display the additional buttons, briefly press 更多.

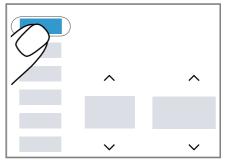

 The display shows all additional buttons.

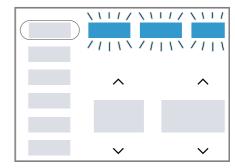

2. To hide the additional buttons, briefly press 更多 again.

#### Changing a setting value

If you activate certain settings, the display shows selection buttons and you can change the setting value.

Press the selection buttons → Page 24.

The display shows the setting value.

### 7 Display

The display shows the current settings, options or relevant information.



Example: Display

Display	Description
0:40 1	Expected programme duration or programme time remaining in hours and minutes.
8h <sup>1</sup>	Program end time  → "Buttons", Page 24
7.0 <sup>1</sup>	Recommendation for the maximum load capacity for the selected program in kg.
Ø - 1400 ©	Set spin speed in rpm. → Page 24 Ø: No spin cycle, draining only
₩ - 90	Set temperature in °C. → Page 24 (cold)
End	Programme status: Programme end
₩	Programme status: Crease and odour reduction
<b>©</b>	Programme status: Crease-reduction function
+1 +2 +3	Additional rinse cycles are activated. → Page 25
-\overline{\chi} +	The dryness level is activated. → Page 35
-\(\hat{\chi}\)- ++	The dryness level is activated. → Page 35
<u>*</u>	The "Orange" stain type is activated.
9	The "Red wine" stain type is activated.
,B	The "Cooking fat/cooking oil" stain type is activated.
<sup>1</sup> Example	

Display	Description
<b>(</b>	Change the basic settings. → Page 39
<b>©</b>	Flashes: Drum cleaning is required. Run the 槽潔淨 programme for cleaning and caring for the drum and the outer tub.  → "Cleaning the drum and cleaning fluff", Page 40
<u></u>	<ul> <li>Lights up: The appliance is connected to your home network via Wi-Fi.</li> <li>Flashes: The appliance is trying to connect to your home network via Wi-Fi.</li> </ul>
Lý.	→ "Home Connect ", Page 37
₽	Settings that are not available on the appliance have been set via the Home Connect app.  You can find more information in the Home Connect app.
0	<ul> <li>Lights up: The intelligent dosing system for liquid detergent is activated.</li> <li>Flashes: The fill level of the dispenser is below the minimum level. → Page 36</li> </ul>
	O (liquid detergent)
<b>◊</b> ⊗	<ul> <li>Lights up: The intelligent dosing system for liquid detergent or fabric softener is activated.</li> <li>Flashes: The fill level of the dispenser is below the minimum level. → Page 36</li> </ul>
	<ul><li>♦ (liquid detergent)</li><li>♦ (fabric softener)</li></ul>
50 ml <sup>1</sup>	Basic dosage for detergent or fabric softener. → Page 37
+1 +2	The treatment for reducing airborne odours and creasing is activated. → Page 25 Intensity of treatment:  +1: Normal +2: Intensive
:	Flashes: The voltage control system has paused the programme due to impermissible voltage drops or voltage surges.  → ": flashes and the programme is paused.", Page 48  Note: The programme continues when the voltage is permissible again.
<del>&amp;</del>	The appliance has detected too much foam.  → " or heavy foam build-up.", Page 48
<sup>1</sup> Example	

Display	Description
©	<ul> <li>Lights up: The door is locked.</li> <li>To add laundry, the door can be unlocked.</li> <li>→ "Adding laundry", Page 34</li> <li>To open the door, you can cancel the programme.</li> <li>→ "Cancelling the washing programme", Page 34</li> <li>Flashes: The door is not closed.</li> </ul>
Х	<ul><li>No water pressure.</li><li>The water pressure from the tap is too low.</li></ul>
	The detergent drawer has not been pushed in fully.  → "□", Page 48
E:351	Error code, error display, signal. → Page 46
<sup>1</sup> Example	

#### 8 Buttons

The selection of programme settings and options to change these depend on the programme that is set as well as the programme status.

Button	Selection	Description
ψ	<ul><li>Switch on</li><li>Standby mode</li><li>Restart the appliance</li></ul>	Switch on the appliance or put it in standby mode. If the control panel does not respond, press and hold ⊕ for approximately 5 seconds to restart the appliance. → "The display and buttons do not respond.", Page 49
<b>\$</b>	Multiple selection	To change a setting, press the ∧ or ✓ selection button until the display shows the required setting.
^	<del>※</del> - 90	Adjust the temperature. Set temperature in °C.
<b>^</b>	Ø - 1400	Adjust the spin speed or deactivate the spin cycle. Set spin speed in rpm. If Ø is selected, the water is drained and the spin cycle is deactivated. The laundry stays wet inside the drum.
DII	<ul><li>Start</li><li>Cancel</li><li>Pause</li></ul>	Start, cancel or pause the programme.
預約	Up to 24 hours	Set the programme end time. The programme duration is already included in the set number of hours. Once the programme has started, the programme duration is displayed.
更多	<ul> <li>Displaying or hiding additional buttons</li> </ul>	<ul> <li>If you briefly press the button, you can display or hide additional buttons.</li> <li>→ "Displaying or hiding additional buttons", Page 20</li> </ul>
更多	Multiple selection	→ "Basic settings", Page 39
超省時	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate or deactivate a shorter programme duration.  Note: Energy consumption increases. The washing result is not affected by this.

Button	Selection	Description
加洗清	■ +1 ■ +2 ■ +3	Activate or deactivate up to three additional rinse cycles. Recommended for particularly sensitive skin or in regions with very soft water.
童鎖3秒	<ul><li>Activate</li><li>Deactivate</li></ul>	→ "Childproof lock", Page 35
最愛	<ul><li>Store</li><li>Adjust</li></ul>	Press the button for approx. 3 seconds to save your customised programme settings.  → "Saving the programme settings", Page 33 If you briefly press the button, you set your saved programme with individual programme settings.
熱風除菌	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate or deactivate gentle pretreatment of dry laundry with hot air up to 65 °C for increased hygiene demands.  After the fabrics have been pretreated with hot air, they are washed at low temperatures.
防皺	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate or deactivate the crease-reduction function. To reduce creasing, warm air is supplied after the end of the programme and the laundry is moved in the drum.
清新除味	■ +1 ■ +2	Once you have set the programme 清新除味, you can select the intensity:  Use the normal intensity level for air-based odours. +1  Use the intensive intensity level for air-based odours and for removing mites. +2
去漬洗	Multiple selection	Select the type of stain. The temperature, drum movement and soaking time are all adjusted to suit the type of stain.
i-DOS 1	<ul><li>Activate</li><li>Deactivate</li><li>Setting the basic dosage amount</li></ul>	Briefly press the button to activate or deactivate the intelligent dosing system for liquid detergent <b>O</b> . Press and hold the button for approx. 3 seconds to set the basic dosage. → Page 37

#### en

Button	Selection	Description
i-DOS 2	<ul> <li>Activate</li> <li>Deactivate</li> <li>Adapting the dispenser</li> <li>Setting the basic dosage amount</li> </ul>	Briefly press the button to activate or deactivate the intelligent dosing system for fabric softener ⊕ or liquid detergent o.  Press the button for approximately 3 seconds to adapt the contents of the ⊕/o dispenser or set the basic dosage.  → "Intelligent dosing system", Page 35
單烘	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate or deactivate drying without washing beforehand.
洗烘	<ul><li>Activate</li><li>Deactivate</li></ul>	Activate washing with subsequent drying.
<b>^</b>	■ ☆ + ■ ☆ ++	The dryness level defines how damp or dry the laundry is after the programme ends.
遠端遙控	<ul><li>Activate</li><li>Deactivate</li><li>Opening the Home Connect settings</li></ul>	Activate or deactivate remote start.  → Page 38

### 9 Programmes

**Note:** The laundry's care labels provide you with additional information about programme selection.

→ "Care symbols on the care labels", Page 32

Programme	Description	Max. load (kg) Wash- ing	Max. load (kg) Dry- ing
羊毛	Hand- or machine-washable items that are made from wool or contain wool.  To prevent the laundry from shrinking, the drum moves the items very gently with long pauses.  Use a detergent that is suitable for wool.  Programme setting:  Max. 40 °C  Max. 800 rpm	2.0	1.0
脫水	Spin the laundry and drain the water. Do not use fabric softener. Programme setting: Max. 1400 rpm	_	_
APP	Select additional programmes directly via the Home Connect app. A description of the programmes can be found in the Home Connect app.  Note: Your appliance must be connected to your home network and registered in your Home Connect app. → Page 37	_	_
智慧洗	Wash hard-wearing items made from cotton or synthetic fabrics.  The degree of soiling and the type of fabric are automatically detected. The washing process is adapted.  Note: The temperature and spin speed cannot be adjusted in this programme and are set automatically.  The maximum temperature is 40 °C.  The maximum spin speed is 1400 rpm.	6.0	_1

<sup>&</sup>lt;sup>1</sup> Drying not possible

<sup>&</sup>lt;sup>2</sup> Washing not possible

<sup>&</sup>lt;sup>3</sup> 超省時 activated

down Wash	pillows, duvets or clothing stuffed with and fillings with synthetic fibres.	2.0	0.0
Do no Note: air froi fore yo Progra  Max	large items separately. detergent that is suitable for down or res. caringly. t use fabric softener. To prevent excessive foaming, remove in laundry items by rolling them up below wash them. Imme setting: 60 °C 1200 rpm		2.0
After of is rem Use the Use th	and care for the drum. → Page 40 deaning, the residual water in the drum oved by supplying hot air. is programme in the following cases: ore using the appliance for the first time ou regularly wash at temperatures of °C or lower raprolonged period of non-use erature settings: °C: Antibacterial programme with high peratures. °C: Antibacterial programme. Rinse the drum to remove hair and fluff.	_2	_1
bleach gen bl ment. Halve ing. Do no Do no	ashing powder containing oxygen  1. Add washing powder containing oxy- each to the manual dosing compart- → Page 18 the amount of detergent to avoid foam- t use fabric softener. It use liquid detergent or detergent that ended for woollens or delicates.		

Drying not possible Washing not possible 超背時 activated

Programme	Description	Max. load (kg) Wash- ing	Max. load (kg) Dry- ing
	<b>Note:</b> The drum cleaning indicator flashes to remind you if you have not used a programme at 60 °C or higher for a long time.		
除菌烘	Kill bacteria in textiles made of cotton or textiles filled with down.  Note: The laundry is not dried or cleaned.	_2	3.0
清新除味	Reduce creases and airborne odours in suits, shirts, down-filled fabrics, outdoor clothing and items made of cotton, cashmere or silk.  Tip: To prevent creasing, remove the laundry immediately after the programme has ended.  Notes  The laundry is not dried or cleaned.  If you use the programme often without washing in between, this may cause odours in the appliance.	_2	1.0
隨心控時	Wash items made from cotton, linen or synthetic fabrics. Short programme for items of lightly to normally soiled laundry.  Note: If you only want to dry the laundry and not wash it, press 單烘. Programme setting:  Max. 40 °C  Max. 1200 rpm	2.0	7.0
洗烘 45'	Wash and dry items made from cotton, linen or synthetic fabrics. Suitable for thin or light shirts, t-shirts or sports textiles. Short programme for small items of lightly soiled laundry.  Note: If you only want to wash the laundry and not dry it, press 洗烘.  Programme setting:  Max. 40 °C  Max. 1400 rpm	2.0	1.0

<sup>&</sup>lt;sup>1</sup> Drying not possible <sup>2</sup> Washing not possible <sup>3</sup> 超省時 activated

Programme	Description	Max. load (kg) Wash- ing	Max. load (kg) Dry- ing
棉質衣物	Wash hard-wearing items made from cotton or linen. Suitable for heavily soiled laundry. Also suitable as a short programme for normally soiled laundry when you activate 超省時. Tip: Energy- and time-optimised programme using hybrid technology. Programme setting:  Max. 90 °C  Max. 1400 rpm	10.0 5.0 <sup>3</sup>	7.0
混合衣物	Wash items made from cotton, linen or synthetic fabrics. Suitable for lightly soiled laundry.  Tip: Energy- and time-optimised programme using hybrid technology.  Programme setting:  Max. 60 °C  Max. 1400 rpm	4.0	2.5
制服	Wash school uniforms made from cotton or synthetic fabrics. Suitable for stains from day-to-day school life.  Tip: Energy- and time-optimised programme using hybrid technology.  Programme setting:  Max. 60 °C  Max. 1400 rpm	3.0	2.0

Washing not possible
3 超省時 activated

#### 10 Accessories

Use original accessories. These have been made especially for your appliance.

**Tip:** Some accessories are available in other colours. Contact customer service. → *Page 55* 

	Use	Order num- ber
Water inlet hose extension	Extend the water inlet hose for cold water or AquaStop (approx. 2.50 m).	WMZ2381
Water outlet hose extension	Extend the water outlet hose (2.20 m).	11057910
Fixing brackets	Improves the stability of the appliance.	WMZ2200
Elbow	Secure the water outlet hose in place.	00655300
Platform	Install the appliance at a raised height so that it can be easily loaded and unloaded.	WMZ20530 W

#### 11 Laundry

#### 11.1 Preparing the laundry

### **⚠** WARNING Risk of explosion!

Fillings made of polyamide, polyester, polyethylene, polypropylene or polystyrene can leak out of openings in items of laundry, melt during the drying process and cause an explosion in the appliance.

Do not dry items of laundry with fillings made of polyamide, polyester, polyethylene, polypropylene or polystyrene in the appliance.

#### ATTENTION!

Objects remaining in the laundry may damage the laundry and the drum.

 Remove all items from any pockets in your laundry before using the appliance.

#### Note

The appliance and fabrics are protected when you prepare your laundry.

- Brush off sand and soil
- Sort the laundry according to colour and textiles and observe the care labels
- Close all zips, hook and loop fasteners, hooks and eyes
- Tie cloth belts, cloth straps and cords together
- Remove curtain fittings and lead strips
- Wash small or particularly delicate items in a mesh washing bag
- Wash large and small items of laundry together
- Wash laundry with fresh stains immediately
- Pretreat laundry with dried stains and wash several times
- Load the laundry unfolded into the drum
- Spin the laundry before drying

Before loading the drum, any laundry that has been pre-treated with chlorine bleach should be rinsed several times

### 11.2 Care symbols on the care labels

#### Washing care symbols

Symbol	Recommended programme
95 60 40 30	Cottons (normal)
<u>607 407 1307</u>	Easy Care (gentle)
<u>40</u> <u>30</u>	Delicates/Silk for washing by hand (particularly gentle)
LA LANGE	Woollens (hand wash)
×	(not suitable for machine- washing)

#### Drying care symbols

<b>Symbol</b>	Fabrics
	Items made from cotton and linen, e.g. towels, bed linen, underwear
	Items made from syn- thetic, blended or delicate fabrics, e.g. functional garments, shirts
Ø	Do not tumble dry items made from silk, nylon, air- impermeable and rubber- coated fabrics, synthetic curtains

## 12 Detergents and care products

You can protect your appliance and your laundry by selecting and using the correct detergents and care products.

The manufacturer's instructions for use and dosage can be found on the packaging.

#### **Notes**

- When using liquid detergents, only use liquid detergents that are selfflowing
- Do not mix different liquid detergents
- Do not mix detergent and fabric softener
- Do not use products that have expired or are highly congealed
- Do not use products containing solvents, caustic agents or volatile substances
- Do not use chlorine bleach
- Do not use dyes regularly as fixing salt can damage stainless steel
- Do not use color-bleaching agents in the appliance
- Do not pour vinegar into the dispensers → Page 36 of the intelligent dosing system

#### 13 Basic operation

### 13.1 Switching on the appliance

**Note:** If you switch the appliance on the first time after you have connected it to the electrical system, the switch-on process takes up to one minute.

**Requirement:** The appliance has been correctly installed and connected. → *Page 12* 

► Press U.

The switch-on process takes a few


seconds.

 An audible function test is carried out.

**Note:** The lighting for the drum goes out automatically.

#### 13.2 Setting a programme

Press the required programme.
 → "Programmes", Page 27

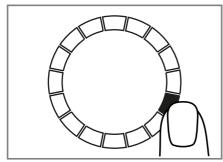

- The display shows the programme settings.
- 2. Adjust the programme settings. → "Buttons", Page 24

Observe the information about operating logic → Page 19.

The programme settings are not

saved permanently for the programme.

## 13.3 Saving the programme settings

You can save your individual programme settings as favourites.

**Requirement:** A programme is set. → *Page 33* 


► Press and hold 最愛 for approx. 3 seconds.

Press 最愛 to call up the saved programme.


**Note:** To overwrite the saved programme, repeat the steps above.

#### 13.4 Opening the door

**1.** Press on the edge of the door.

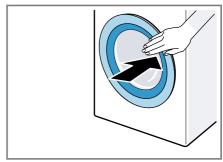

2. Open the door.

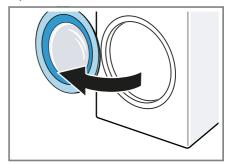

#### 13.5 Loading laundry

**Note:** To prevent creasing, note the maximum load for the programmes. → "Programmes", Page 27

#### Requirements

- The laundry is prepared and sorted.
  - → "Laundry", Page 31
- The drum is empty.
- 1. Open the door. → Page 33
- 2. Place the laundry in the drum.
- 3. Close the door.

Ensure that there is no laundry trapped in the door.

#### 13.6 Starting the programme

**Note:** If the intelligent dosing system is activated, make sure that the dispensers have been filled  $\rightarrow$  *Page 36* and the basic dosage has been set  $\rightarrow$  *Page 37*.

#### Requirements

- A programme is set. → Page 33
- The door is closed.
- ► Press III.
- The drum rotates and load detection takes place. This can take up to 2 minutes, after which water enters the drum.
- The display shows the programme duration or the programme end time
- After the programme has ended, the display shows: "End".

**Note:** If you do not remove the laundry once the programme has ended, the crease-reduction function starts after 15 minutes and takes approx. 30 minutes. The display shows *⊕*. Press any button on the display to cancel the crease-reduction programme and to remove the laundry.

#### 13.7 Adding laundry

After the programme starts, you can remove or add laundry depending on the programme status.

1. Press III.

During the washing cycle, the appliance pauses. → Page 21 During the drying cycle, the appliance checks whether it is possible to add laundry.

**Note:** If you want to add laundry, follow the instructions on the display.

→ "Display", Page 23

- 2. Open the door. → Page 33
- 3. Add or remove laundry.
- 4. Close the door.
- 5. Start the programme. → Page 34

## 13.8 Cancelling the washing programme

- 1. Press III.
- 2. Open the door. → Page 33

The appliance door remains locked for safety reasons if the temperature and water levels are high.

- If the temperature is high, start the 智慧洗 programme.
- If the water level is high, start the 脱水 programme or select a suitable programme for draining.
   → "Programmes", Page 27
- 3. Remove the laundry. → Page 34

## 13.9 Cancelling the drying programme

▶ Press III

The cooling process starts automatically after approx. 30 seconds and cools down the laundry for a few minutes while the drum is rotating. The door is then unlocked automatically.

#### 13.10 Unloading the laundry

- 1. Open the door. → Page 33
- **2.** Remove the laundry from the drum.

## 13.11 Put the appliance into standby mode

1. Press (b.

- 2. Turn off the tap.
- Cleaning the rubber gasket.
   → Page 45

**Note:** Leave the appliance door and the detergent drawer open to dry.

#### 14 Dryness level

In some programmes, a dryness level is predefined. The dryness level defines how dry or damp your laundry is after the programme ends.

Dryness level	Description
<b>☆</b> ++	For multi-layered, thick laundry that does not dry readily.
- <u>`</u> Ċ-+	For normal, single- layered laundry.

### 14.1 Changing the dryness level

For some programmes, you can change the dryness level so that your laundry will be drier or more damp.

- Set a washing and drying programme or a drying programme.
   → Page 27
- ▼ The display shows the specified dryness level.
- Press ➤ repeatedly until the display shows your required dryness level.

#### 15 Childproof lock

Secure your appliance against being operated unintentionally using the controls.

### 15.1 Activating the childproof lock

- Press and hold 童鎖3秒 for approx. 3 seconds.
- ▼ The control elements are locked.
- The childproof lock also remains activated when the appliance is in standby mode and in the event of a power cut.

#### 15.2 Deactivating the childproof lock

**Requirement:** To deactivate the childproof lock, the appliance must be switched on.

► Press and hold **童鎖3秒** for approx. 3 seconds.

## 16 Intelligent dosing system

The appliance's intelligent dosing system is activated at the factory and automatically doses liquid detergent and fabric softener for any programmes in which intelligent dosing is possible.

**Note:** You can use the buttons → *Page 24* to deactivate the intelligent dosing system, e.g. in order to manually dose washing powder → *Page 36*.


# 16.1 Pouring liquid detergent and fabric softener into the dispensers

If you are using the intelligent dosing system or if the appliance displays a notification during operation of the appliance, fill the dispensers.

#### **Notes**

- Only pour suitable liquid detergent and fabric softener into the dispensers. → Page 32
- If you add more liquid detergent or fabric softener to the dispenser, use the same product.
- If you want to replace the liquid detergent or fabric softener in the dispenser with another product, clean the detergent drawer beforehand → Page 40.
- If you are using the intelligent dosing system, do not add additional detergent or fabric softener into the compartment for manual dosing. This is to prevent overdosing or foam formation.
- 1. Pull out the detergent drawer.

 Open the lid and pour liquid detergent O and fabric softener ⊗ into the relevant dispensers
 → Page 18.

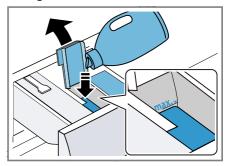

Do not exceed the marking for the maximum fill level when filling.

**Note:** You can also use both dispensers for liquid detergent. Adapt the dispenser for this. → *Page 37* 

3. Close the lid.

**Note:** To prevent the liquid detergent or fabric softener from drying out, close the lids immediately after filling.

4. Push in the detergent drawer.

## 16.2 Using the manual dosing compartment

If you are not using the intelligent dosing system, if intelligent dosing is not possible for a programme, or if you want to add additional care product, e.g. stain remover or starch, use the manual dosing compartment.

**Note:** Observe the information about detergents and care products → *Page 32*.

- 1. Pull out the detergent drawer.
- Pour laundry detergent or care product into the manual dosing compartment → Page 18.
- 3. Push in the detergent drawer.

## 16.3 Adapting the ⊗/◊ dispenser

The %/O dispenser can dose fabric softener % or liquid detergent O. When it leaves the factory, the dispenser is set for fabric softener. If you want to automatically dose a second liquid detergent, adapt the dispenser.

#### **Notes**

- If you adapt the contents of the dispenser, the basic dosage for this dispenser is reset.
- If you use both dispensers for liquid detergent, you must set a dispenser which is to be used during washing.
  - → "Buttons", Page 24
- Press and hold i-DOS 2 for approx.
   seconds.
- Press i-DOS 2 repeatedly until the display shows O (liquid detergent) or (fabric softener).
- 3. Wait briefly to save the setting.

## 16.4 Setting the basic dosage amount

To allow for intelligent dosing, set the basic dosage amount for the dispenser. The basic dosage amount corresponds to the dosage recommendation from the detergent manufacturer on the packaging. Set the basic dosage amount that corresponds to the dosage recommendation for 4.5 kg of normally soiled laundry. In doing so, note the water hardness.

**Tip:** You can also set the basic dosage amount in the Home Connect app.

- Press and hold i-DOS 1 for approx.
   3 seconds.
- The display shows the set basic dosage amount.
- **2.** To adjust the setting, press  $\wedge/\vee$ .
- **3.** Wait briefly to save the setting.

**Note:** To set the basic dosage amount for the other dispenser, repeat the steps with **i-DOS 2**.

#### 17 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of Home Connect services in your country. You can find information about this at: www.home-connect.com.

The Home Connect app guides you through the entire login process. Follow the instructions in the Home Connect app to configure the settings.

**Tip:** Please also follow the instructions in the Home Connect app.

#### Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app. → "Safety", Page 4
- Operating the appliance on the appliance itself always takes priority.
   During this time it is not possible to operate the appliance using the Home Connect app.

#### 17.1 Setting up Home Connect

**Requirement:** The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.

1. Scan the following QR code.



You can install the Home Connect app and connect your appliance via the QR code.

**2.** Follow the instructions in the Home Connect app.

## 17.2 Deactivating Wi-Fi on the appliance

- 1. Press and hold 遠端遙控 for approx. 3 seconds.
- 2. Press 遠端遙控 repeatedly until the display shows "on".
- 3. Press II to deactivate the Wi-Fi.
- ▼ The display shows "oFF".

**Note:** To exit the Home Connect settings, press and hold 遠端遙控 for approx. 3 seconds.

## 17.3 Activating Wi-Fi on the appliance

- 1. Press and hold 遠端遙控 for approx. 3 seconds.
- 2. Press 遠端遙控 repeatedly until the display shows "oFF".
- 3. Press II to activate the Wi-Fi.
- ✓ The display shows "on".

#### **Notes**

- If the Wi-Fi is activated, the display alternately shows "on" and the signal strength of the Wi-Fi connection.
- To exit the Home Connect settings, press and hold 遠端遙控 for approx. 3 seconds.

## 17.4 Installing the software update

**Note:** If a software update is available, a message appears in the Home Connect app.

- ► To install the software update, follow the instructions in the Home Connect app.
- The control panel is partially locked during the installation.
- In the event of a malfunction, installation may take up to 40 minutes. Do not reset the network settings or the appliance to the factory settings.

## 17.5 Resetting the appliance network settings

- 1. Press and hold 遠端遙控 for approx. 3 seconds.
- 2. Press 遠端遙控 repeatedly until the display shows "rES".
- Press and hold II for approx.
   seconds.
- ▼ The network settings are reset.

#### 17.6 Remote start

Enable the appliance for remote start via the Home Connect app.

#### Note

Remote start will be deactivated in the following circumstances:

- The appliance door is opened.
- Following a power cut.

### Activating remote start

#### Requirements

- The appliance door is closed.
- The detergent drawer has been pushed in.
- ► Press 遠端遙控.
- 遠端遙控 lights up and the appliance is enabled for remote start via the Home Connect app.

#### **Deactivating remote start**

- ► Press 遠端遙控.
- ✓ 遠端遙控 goes out.

#### 17.7 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the Wi-Fi communication module installed).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous reset to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.


**Note:** Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

#### 18 Basic settings

You can configure the basic settings for your appliance to meet your needs.

**Note:** You can also adjust the basic settings in the Home Connect app.

## 18.1 Overview of the basic settings

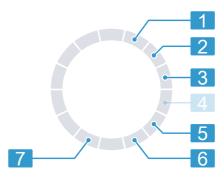

Programme selector with programme positions

- Set the volume of the signal at the end of the programme: 0 (off) to 4 (very loud)
- Set the volume of the signal tone emitted when the buttons are pressed:
  0 (off) to 4 (very loud)
- 3 Set the display brightness: 1 (low) to 4 (very high)
- Activate (on) or deactivate (oFF) the reminder to clean the drum.
- Display the number of finished programmes (PC).
- Restore the appliance to the factory settings (rES).

## 18.2 Changing the basic settings

- To call up the basic settings, press and hold 更多 for approx. 3 seconds.
- ✓ The display shows <sup>⑤</sup>.
- Use the programme selector to select the required basic setting.
   → Page 39
- 3. Adjust the basic setting:
  - To change the value, press ✓ or ∧.
  - To reset the appliance to the factory settings, press and hold Il for approx. 3 seconds.
- **4.** To save the changes, switch off the appliance.

#### 19 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

## 19.1 Cleaning the drum and cleaning fluff

Clean the drum if you have carried out 20 washing cycles at a temperature of 40 °C or lower, if ③ flashes, or if you have not used the appliance for a prolonged period, but at least once a year. Also clean the drum if you find fluff on the laundry after drying.

## **△** CAUTION Risk of injury!

Permanently washing at low temperatures and a lack of ventilation for the appliance may damage the drum and cause injury.

 Regularly run a programme for cleaning the drum or wash at temperatures of at least 60 °C. Leave the appliance to dry after every operation with the door open, and leave the detergent drawer to dry.

#### Tip

- You can get our tested and approved machine care and machine cleaner products online at https://www.bosch-home.com/store or from customer service.
- ► Run the 槽潔淨 programme without laundry but with washing powder that contains oxygen bleach or a cleaning agent for caring for the inside of the appliance.

**Note:** If you only want to clean fluff, you can do this without washing powder or cleaning agent.

### 19.2 Cleaning the detergent drawer

If you want to replace the liquid detergent or fabric softener in the dispenser with another product or if the detergent drawer is dirty, clean the detergent dispenser.

#### **ATTENTION!**

The pump unit contains electrical components. Electrical components may be damaged if they come into contact with liquids.


- Do not clean the pump unit in the dishwasher and do not immerse it in water.
- Protect the electrical connection on the rear against water, detergent and fabric softener residue.

#### Note


Scan the QR code to see an animation of the process.




- Put the appliance into standby mode. → Page 34
- 2. Pull out the detergent drawer.
- **3.** Press down on the insert and remove the detergent drawer.

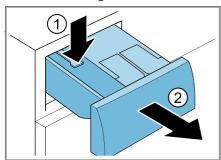


4. Remove the pump unit.

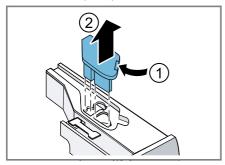


5. Unclip the detergent drawer cover and remove it.

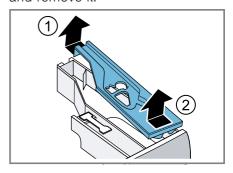


6. Empty the detergent drawer.

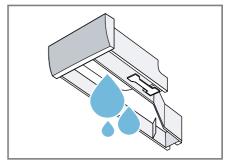


7. Clean the pump unit with a damp cloth.

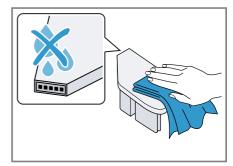


 Clean the detergent drawer and the cover with a soft, damp cloth or hand shower.

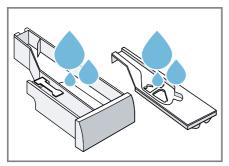

**9.** Dry the detergent drawer, cover and pump unit and reinsert them.

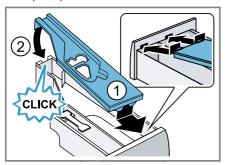

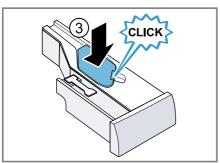

**10.** Clean the housing of the detergent drawer in the appliance.




11. Push in the detergent drawer.

#### 19.3 Cleaning the drain pump


Clean the drain pump regularly, at least once a year, as well as in the event of faults, e.g. blockages or rattling noises.

#### **Emptying the drain pump**


- 1. Turn off the tap.
- 2. Put the appliance into standby mode. → Page 34
- **3.** Disconnect the appliance's mains plug from the power supply.
- **4.** Open and remove the maintenance flap.

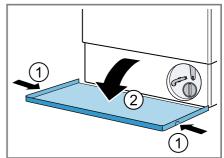

**5.** Slide a suitable receptacle under the opening for draining the detergent solution.

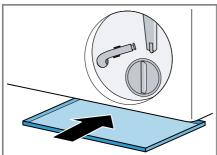


**6.** Take the drain hose out of the holder.

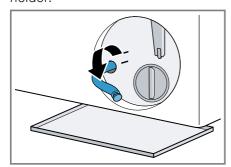


- ► Do not touch the hot detergent solution.


To allow the detergent solution to flow out into the container, remove the sealing cap.

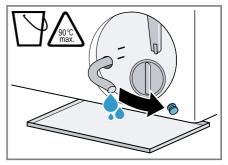

8. Once emptied, press firmly on the locking cap.

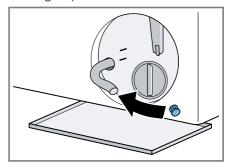


**9.** Insert the drain hose into the holder.

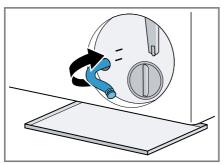

#### Cleaning the drain pump


**Requirement:** The drain pump is empty. → *Page 42* 

- 1. Since water may remain in the drain pump, unscrew the pump cap carefully.
  - The filter insert in the pump housing may become stuck due to coarse particles of dirt.
     Loosen the dirt and remove the filter insert.

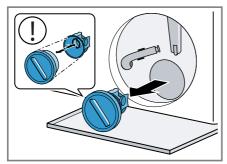


The pump cap is comprised of two parts which can be taken apart for cleaning.


Clean the interior, the thread on the pump cap and the pump housing.

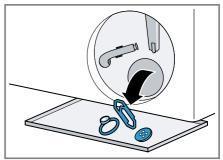


**3.** Ensure that both impellers can turn.

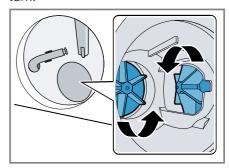

- 4. Insert the pump cap.
  - Ensure that the parts of the pump cap are correctly assembled.

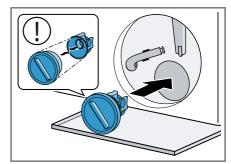


5. Screw the pump cap as far as it will go.

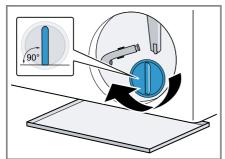

The handle on the pump cap must be in a vertical position.

**6.** Insert and close the maintenance flap.

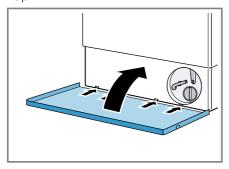

#### 19.4 Cleaning the rubber gasket


Clean the rubber gasket regularly.

1. Open the door. → Page 33

2. Remove any foreign objects and fluff from the rubber gasket.



**3.** Remove any blockages from the intake opening.

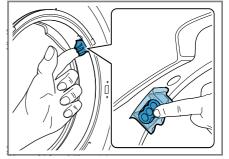

**4.** Clean the outside and the inside of the rubber gasket with a damp cloth and wipe dry.

#### 20 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

#### ⚠ WARNING

#### Risk of electric shock!

Improper repairs are dangerous.

- ► Never make any technical modifications to the appliance or its features.
- Repairs to the appliance should only be carried out by trained specialist staff.
- ► Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

Fault	Cause and troubleshooting				
The display goes out and $\circlearrowleft$ flashes.	Energy-saving mode is active  Press III.				
E:36 -10 / E:30 -80 The detergent solution is not being pumped out.	The water outlet hose is connected too high, is kinked or trapped, or has been extended impermissibly.  ► Check the installation of the water outlet hose.  → Page 15				
	Drain pipe or water outlet hose is blocked.  • Clean the drain pipe and the water outlet hose.				
	The drain pump is blocked or the pump cover is not installed correctly.  • Check that the pump cover is installed correctly.  • Clean the drain pump.				
	<ul> <li>Detergent dosage is too high.</li> <li>If intelligent dosing is activated, reduce the basic dosage. → Page 37</li> <li>If you dose manually, reduce the amount of deter-</li> </ul>				
E:36 -25 -26	gent for the next washing cycle with the same load.  Drain pump is blocked.  Clean the drain pump.				

Fault	Cause and troubleshooting				
E:10 -00 -10 -20	<ul> <li>The pump for the intelligent dosing system is blocked.</li> <li>1. Clean the detergent drawer. → Page 40</li> <li>2. If the fault persists, call customer service. → Page 55</li> </ul>				
	<b>Note:</b> Until the fault is rectified, you can deactivate the intelligent dosing system and dose manually. → Page 24				
H:32	The appliance has interrupted the spin cycle because the laundry is unevenly distributed.  • Redistribute the laundry in the drum.				
E:30 -10 / H:95 / 停	The tap is turned off.  ► Turn on the tap.				
	The water inlet hose is kinked or jammed.  ► Check the installation of the water inlet hose.  → Page 15				
	The filters in the water inflow are blocked.  Clean the filters in the water inflow.  Scan the QR code to see an animation of the process.				
	The water pressure is low.  ► Check whether the tap has sufficient water pressure.				
E:30 -20	<ul> <li>Critical malfunction.</li> <li>► Turn off the water tap.</li> <li>With this error message, the appliance starts a draining process.</li> <li>1. Wait approx. 5 minutes until the draining process ends.</li> <li>2. Restart the appliance.  If required, start the draining process again.</li> <li>3. If the fault persists, call customer service.  → Page 55</li> </ul>				
	Detergent dosage is too high.  If you dose manually, reduce the amount of detergent for the next washing cycle with the same load.				

Fault	Cause and troubleshooting					
E:30 -20	Additional water has been added.  ► Do not add any extra water to the appliance while it is operating.					
All other error codes.	<ul> <li>Malfunction</li> <li>1. To restart the appliance, press and hold ⊕ for approximately 5 seconds.</li> <li>2. If the fault occurs again, disconnect the appliance from the power supply for at least 30 seconds. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.</li> <li>3. If the fault persists, call customer service. → Page 55</li> <li>Please specify the exact error message when calling. If possible, document the fault with photos and videos.</li> </ul>					
回	The detergent drawer has not been pushed in fully.  Push in the detergent drawer.  The pump unit is not inserted correctly.  Check that the pump unit is inserted correctly.					
: flashes and the programme is paused.	→ Page 40  The appliance has detected fluctuations in the power supply.  No action required. If the power supply is stable, the programme continues to run as normal.					
or heavy foam build-up.	<ul> <li>Detergent dosage is too high.</li> <li>Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the compartment for manual dosing (not for outdoor clothing, sportswear or items stuffed with down).</li> <li>If intelligent dosing is activated, reduce the basic dosage. → Page 37</li> <li>If you dose manually, reduce the amount of detergent for the next washing cycle with the same load.</li> </ul>					
© flashes.	The door is not completely closed.  1. Ensure that there is no laundry trapped in the door.  2. Close the door.					
©	Drum cleaning is required.  ► Clean the drum. → Page 40					

Fault	Cause and troubleshooting					
The programme is paused or has ended,	Not a fault. The cooling process is active. No action required.					
but the drum is rotating.	<b>Note:</b> Do not change the programme during the cooling process. The cooling process takes up to 10 minutes.					
The display and buttons do not respond.	<ol> <li>Software fault.</li> <li>To restart the appliance, press and hold \( \Delta\) for approximately 5 seconds.</li> <li>If the fault occurs again, disconnect the appliance from the power supply for at least 30 seconds. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.</li> </ol>					
Home Connect is not working properly.	<ul> <li>Different causes are possible.</li> <li>1. Reset the appliance network settings. → Page 38</li> <li>2. Set up Home Connect again. → Page 38</li> <li>► Go to www.home-connect.com.</li> </ul>					
Il cannot be operated.	Not a fault. The drying phase is active. No remedial action possible.					
i-DOS 1/i-DOS 2 cannot be pressed.	The selected programme or programme progress does not allow intelligent dosing.  ► Use the manual dosing compartment. → Page 36					
The programme does not start.	Childproof lock is activated.  ► Deactivate the childproof lock. → Page 35					
	預約 is activated.  ► Check whether 預約 is activated. → Page 24					
	The detergent drawer has not been pushed in fully.  Push in the detergent drawer.					
The programme is paused or has been interrupted, but the	The temperature is too high. ▶ Start the 智慧洗 programme or wait until the temperature has dropped.					
door will not open.	Water level is too high.  ► Start the 脱水 programme or a suitable draining programme. → Page 27					
The door cannot be opened due to a power cut.	The door is locked.  ► Open the door using the emergency release.  → Page 54					
Drum jerks after the programme starts.	Not a fault. An internal motor test is started. No action required.					

Fault	Cause and troubleshooting				
Drum rotates, water does not flow in.	Not a fault. Load detection is active for up to 2 minutes. No action required.				
No water is visible in the drum.	Not a fault. Water is below the visible area. No action required.				
The spin cycle runs several times.	Not a fault. The appliance eliminates an imbalance by repeatedly redistributing the laundry. No action required.				
The appliance is vibrating, 'wandering'	Appliance is not correctly aligned.  ► Align the appliance. → Page 16				
and making loud noises during the spin cycle.	The appliance feet are not fixed.  ► Secure the appliance's feet. → Page 16				
	Transit bolts have not been removed.  ▶ Remove the transit bolts.				
High spin speed not reached.	The appliance is using a reduced spin speed to eliminate an imbalance.  No action required.				
The programme duration changes during the wash cycle.	Not a fault. The programme sequence is optimised electronically, another rinse cycle is switched on due to heavy foam build-up, or an imbalance is eliminated. No action required.				
The drying time is too long.	The ambient temperature is higher than 30 °C.  ► Ensure that the ambient temperature is below 30 °C.				
	The air circulation at the appliance's installation location is insufficient.  • Ventilate the appliance's installation location.				
	Fluff has accumulated in the drum.  ► Start the 槽潔淨 programme without any laundry or detergent.				
Water intake during the drying phase.	Not a fault. The drying phase requires water. No action required.				
Spinning during the drying phase.	Not a fault. Thermal spinning is active. No action required.				
Whooshing, hissing, whirring or sucking noises.	Not a fault. Water is pumped in, detergent and fabric softener is dosed, function tests are performed, the process fan is active, or detergent solution is pumped out.  No action required.				

Fault	Cause and troubleshooting				
Banging noises, rattling in the drain pump.	A foreign object is in the drain pump.  Clean the drain pump.				
Insufficient cleaning or detergent residues on the laundry.	Detergents may contain water-insoluble substances that deposit on the laundry.  ▶ Start the 智慧洗 programme or brush out the laundry after drying.				
	<ul> <li>The detergent in the dispenser is unsuitable or thickened.</li> <li>1. Check whether the detergent is suitable. → Page 32</li> <li>2. Check whether the detergent in the dispenser has thickened.</li> <li>3. If the detergent is unsuitable or has thickened, empty it out and clean the dispenser. → Page 40</li> </ul>				
	The basic dosage is not correctly adjusted.  ▶ Set the basic dosage. → Page 37				
Fluff on the laundry.	Fluff has accumulated in the drum. ▶ Start the 槽潔淨 programme without any laundry or detergent.				
The laundry is too wet after the spinning cycle.	A low spin speed is selected.  ► Start the 脱水 programme.  ► The next time you run a wash cycle, set a higher spin speed.				
	The appliance is using a reduced spin speed to eliminate an imbalance.  1. Redistribute the laundry in the drum.  2. Start the 脫水 programme.				
The laundry is too damp.	The selected programme is unsuitable for the type of fabric.  ► Set a suitable programme for subsequent drying.  → Page 27				
	The load is too large.  ► Observe the programme's maximum load capacity.  → Page 27				
	After the end of the programme, warm laundry feels damper than it actually is.  1. Remove the laundry from the drum as soon as the drying programme has finished.  2. Spread the items of laundry for cooling.				
	The selected dryness level is unsuitable.				

Fault	Cause and troubleshooting				
The laundry is too	► Change the dryness level. → Page 35				
damp.	The load is too small.  ► Set a suitable programme for subsequent drying.  → Page 27				
	The laundry has not been spun sufficiently.  Always select the highest possible spin speed for the washing programme in question.				
Creasing.	The selected programme is unsuitable for the type of fabric.  ▶ Set a suitable programme. → Page 27				
	<ul><li>A high spin speed is selected.</li><li>▶ The next time you run a wash cycle, set a lower spin speed.</li></ul>				
	The load is unsuitable.  ► Observe the programme's maximum load capacity.  → Page 27				
	Prepare the laundry. → Page 31				
	<ul><li>The laundry lies in the drum for too long after drying.</li><li>1. Remove the laundry from the drum as soon as the drying programme has finished.</li><li>2. Spread the items of laundry for cooling.</li></ul>				
	Easy Care fabrics have been dried for too long.  ► Change the dryness level. → Page 35				
Water is leaking out at the water inlet hose.	The water inlet hose is not correctly connected or is damaged.  ► Check the installation of the water inlet hose.  → Page 12  Replace the water inlet hose if it is damaged.				
Water is leaking out at the water outlet hose.	The water outlet hose is not connected correctly or is damaged.  ► Check the installation of the water outlet hose.  → Page 12  Replace the water outlet hose if it is damaged.				
Water is leaking from below the door.	Dirt on the door or seal causes leaks.  Clean the door and the seal.				

Fault	Cause and troubleshooting			
Odours have formed in the appliance.	<ul> <li>Humidity and detergent residue may promote the formation of bacteria.</li> <li>Clean the drum. → Page 40</li> <li>If you are not using the appliance, leave the door and detergent drawer open so that residual water can evaporate.</li> </ul>			


#### 20.1 Emergency release

#### Releasing the door

**Requirement:** The drain pump is empty.

- **1. ATTENTION!** Escaping water may cause material damage.
- ► Do not open the door if you can see water through the glass.

Pull the emergency unlock downwards with a tool and release.

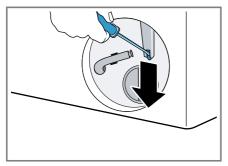

- ▼ The door lock is released.
- 2. Insert the maintenance flap and lock it into place.
- 3. Close the service flap.

## 21 Transportation, storage and disposal

#### 21.1 Removing the appliance

- 1. Turn off the tap.
- 2. Empty the water inlet hose.
- 3. Put the appliance into standby mode. → Page 34
- 4. Unplug the appliance's mains plug.
- 5. Drain the water.
- 6. Detach the hoses.
- 7. Empty the dispensers.

### 21.2 Inserting the transit bolts

Secure the appliance before transportation using transit bolts in order to prevent transport damage.

**1.** Use a screwdriver to remove the 4 cover caps.



Keep the cover caps.

2. Insert the 4 transit bolts.

## 21.3 Using the appliance again

- ► For further information, see

  → "Installation and connection",
  Page 12 and
  - → "Starting an empty washing cycle", Page 17.

## 21.4 Disposing of old appliance

Valuable raw materials can be reused by recycling.

## ⚠ WARNING Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

 The appliance must not be set up behind a lockable door, a sliding door or a door with a hinge on the

- side opposite to the appliance, which prevents appliance from opening fully.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.
- Unplug the appliance from the mains.
- 2. Cut through the power cord.
- Dispose of the appliance in an environmentally friendly manner.
   Information about current disposal methods are available from your specialist dealer or local authority.

#### 22 Customer Service

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.

If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) of your appliance.

You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website.

Please visit: https://www.boschhome.com.tw/specials/rohs for Taiwan Restriction of the use of certain Hazardous Substances (RoHS) information.

# 22.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

You can find the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) on the appliance's rating plate. Depending on the model, the rating plate is located:

- On the inside of the door.
- On the inside of the maintenance flap.
- On the rear of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

#### 23 Technical data

84.8 cm
59.8 cm
61.6 cm
65.4 cm
114.2 cm
84.8 kg
10.0 kg
220 V, 60 Hz
12 A
2000 W
<ul> <li>Minimum: 100 kPa (1 bar)</li> <li>Maximum: 1000 kPa (10 bar)</li> </ul>

Length of the water inlet hose	150 cm
Length of the water outlet hose	150 cm
Length of the power cord	201 cm

## 23.1 Information regarding Free and Open Source Software

This product includes software components that are licensed by the copyright holders as free or open source software.

The applicable licence information is stored on your home appliance. You can also access the applicable licence information via your Home Connect app: "Profile -> Legal information -> Licence Information". You can download the licence information on the brand product website. (Please search on the product website for your appliance model and additional documents). Alternatively, you can request the relevant information from oss-

request@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany.

The source code will be made available to you on request.

Please send your request to oss-request@bshg.com or BSH Hausger-äte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany.
Subject: "OSSREQUEST"
The cost of performing your request will be charged to you. This offer is

The cost of performing your request will be charged to you. This offer is valid for three years from the date of purchase or at least as long as we offer support and spare parts for the relevant appliance.

## 24 Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the essential requirements and other relevant provisions of Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at www.bosch-home.com among the additional documents on the product page for your appliance.

( (

2.4 GHz band (2400-2483.5 MHz): Max. 100 mW 5-GHz band (5150-5350 MHz + 5470-5725 MHz): max. 180 mW

	BE	BG	CZ	DK	DE	EE	ΙE	EL	ES
	FR	HR	IT	CY	LI	LV	LT	LU	HU
	MT	NL	AT	PL	PT	RO	SI	SK	FI
	SE	NO	СН	TR	IS	UK (NI)			
5 GHz WLAN (Wi-Fi): For indoor use only.									
AL	ВА	١	ЛD	ME	MK	RS	UK		UA
5 GHz WLAN (Wi-Fi): For indoor use only.									

<sup>&</sup>lt;sup>1</sup> Depending on the appliance specifications









## Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- · Expert tips & tricks for your appliance
- · Warranty extension options
- Discounts for accessories & spare-parts
- Digital manual and all appliance data at hand
- Easy access to Bosch Home Appliances Service

Free and easy registration – also on mobile phones: **www.bosch-home.com/welcome** 



## Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you:

#### www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

#### **BSH Hausgeräte GmbH**

Carl-Wery-Straße 34 81739 München GERMANY www.bosch-home.com 博西家用電器股份有限公司

9001937776 (050425)

台北市內湖區洲子街80號11樓 0800-368-888 www.bosch-home.com.tw