

Bosch Dishwasher Quick Tips and Tricks

1

Use the 3rd rack for silverware, large utensils or other hard-to-place items.

2

Rackmatic® system lets you tilt or adjust middle rack height in 9 different positions to accommodate different sized items in the lower and middle racks. Simply pull out the middle rack, press the side levers, and adjust each side up/down to your desired position.

3


Face dishes inward. Use angled tines to help with loading. Use fold down flip tines to help fit bulkier items like large pots.

4

Clean the dishwasher filter every 2 months with normal use. Simply turn the knob and lift the filter out. Wash the filter by rinsing it with warm water and dishwashing soap.

5

Bosch recommends using Finish® detergent tabs and Jet-Dry® Rinse Aid for best results.

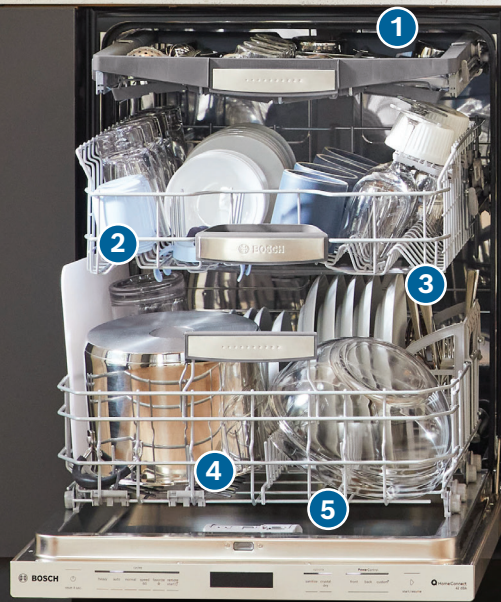

Other useful tips to get the most from your Bosch dishwasher:

- **With Bosch PrecisionWash® and the PowerControl™ spray arm**, for enhanced wash performance, there is no need to pre-rinse—simply scrape food off and place dishes in the dishwasher.
- **Set your water heater temperature** between 120 and 125 degrees F. If too high, the soap will not activate and perform properly.
- **Start your dishwasher** by pressing the “On/Off” button and selecting a cycle and option if desired, and then press “Start”. Always ensure nothing is blocking the spray arms before starting a wash cycle.
- **Bosch dishwashers offer enhanced drying options like AutoAir® and CrystalDry™, or PureDry®,** for energy-efficient drying that is safe on plastics. With no exposed heating element, PureDry® whisks moisture away from dishes as they cool. You may see condensation on the tub walls, which is normal.
- **Clean dishwasher surfaces** with a damp cloth and mild soap. Do not use abrasives or bleach-based cleaners.



Need Assistance?

For additional assistance or questions, check out our Owner Support Resources at: [bosch-home.com/us/owner-support](https://www.bosch-home.com/us/owner-support)

For complete product information, refer to the Owner Manual available online at: [bosch-home.com/us/owner-support/get-support/owner-manuals](https://www.bosch-home.com/us/owner-support/get-support/owner-manuals)

Can't find what you're looking for?

Reach the Bosch Customer Support Team at **1-800-944-2904**

