


Brief and handy: everything your dishwasher needs.

Before using for the first time, still read the installation and operating instructions!

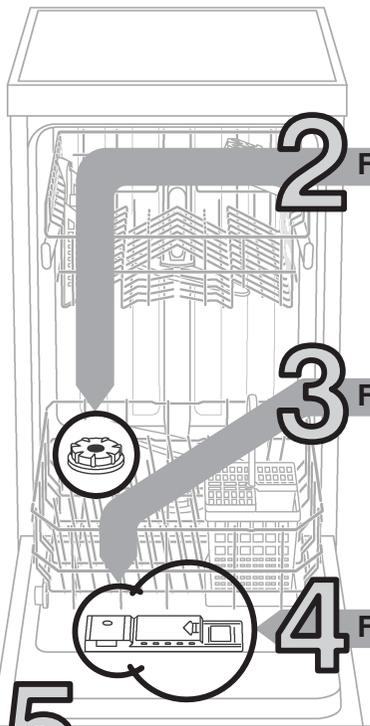

1

Set the water softening system * Quickly sorted

Find out the **water hardness** at your water utility company and **enter** below


Read off the set value

°dH	°fH	°Clarke	mmol/l	Set value on the appliance
0-6	0-11	0-8	0-1,1	0
7-11	12-16	9-11	1,2-2,0	1
12-16	17-29	12-20	2,1-2,9	2
17-21	30-37	21-26	3,0-3,7	3
22-35	38-62	27-44	3,8-6,2	4

* only before using the dishwasher for the first time or if the water hardness changes


and then set the value

- Identify setting from the following water hardness table.
- Set the water hardness switch to the appropriate level.

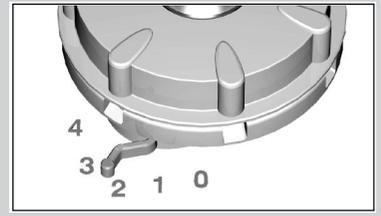

2 Fill with salt


Dissolves limescale (not required for set value 0!)

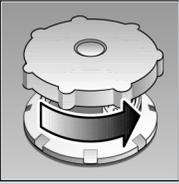


Unscrew the lid.



Only before using the dishwasher for the first time pour approx. 1 l / 1 1/4 pt water into the salt opening.

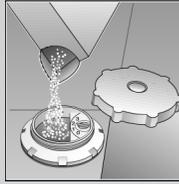

Pour in max. 1.5 kg / 3 lb 5 oz salt (never detergent!)

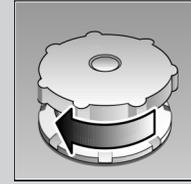


Screw on the lid. Switch on dishwasher immediately.

3 Fill with rinse aid

Everything is sparkling clean ...


Refill whenever level indicator is light!

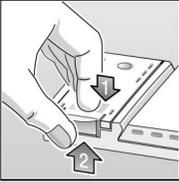

Press mark 1, lift up lid 2.




Pour in **rinse aid**.

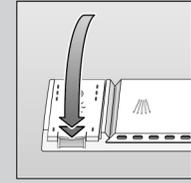

Close the lid. **CLICK!**


4 Fill with detergent

Very dirty dishes, a lot of detergent ...

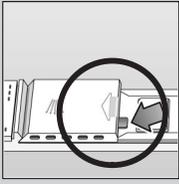


If required, open the lid (press the pin).

Warning, combination products are not suitable for all programmes, follow manufacturer's instructions.

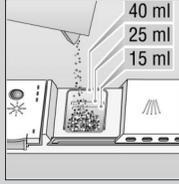

Pour in **detergent**.

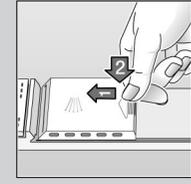

Push the lid shut, press. **PLOP!**

5 Turn on the tap Switch on the appliance

6 Select programme

Rotate programme selector to right only!

Quick, economical or intensive

Overview of programmes

The max. possible number of programmes is indicated in this overview. The appropriate programmes for your appliance can be found on the fascia.

The programme data is based on laboratory measured values in compliance with European standard EN 50242. Deviations are possible in practice.

	Intensive 65°	Normal 65°	Eco 65°	Prerinse
Duration in minutes	117	110	99	17
Power consumption in kWh	1,40	1,30	1,10	0,12
Water consumption in litres	22	19	16	4



7 Start programme Off we go

Switch on the main switch. Programme selector rotates in a clockwise direction and indicates the progress of the programme.

8 Switch off the appliance Everything o.k.


When the programme has ended (programme selector is back in the 12 o'clock position), switch off the main switch. Turn off the tap.

Maintenance and care


For perfect rinsing results

Filters


Check and, if required, clean:

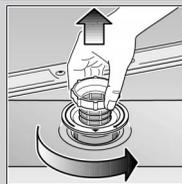


Rotate filter cylinder, remove filter system

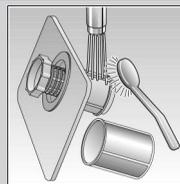

Rinse under running water

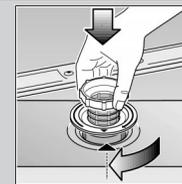


Insert

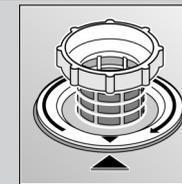


Screw on filter system. NOTE MARK!

Spray arms


Remove blockages/deposits

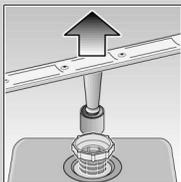


Pull up lower arm

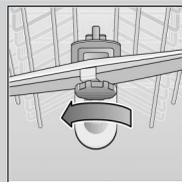


Unscrew upper arm

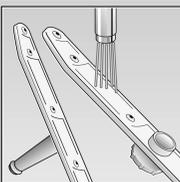

Clean under running water (if required, use a toothpick)

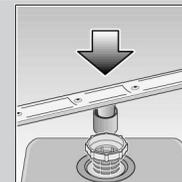

Insert lower arm

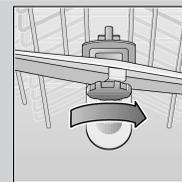

Screw on upper arm

Troubleshooting

Dealing with problems correctly ...

Fault	Possible causes	Remedial action	Fault	Possible causes	Remedial action
Residual water in the appliance	Programme not yet finished	Wait until the programme finishes (programme selector is back in the 12 o'clock position) or cancel programme (see below).	Plastic parts/utensil parts discoloured ...	Detergent with lower bleaching effect Insufficient detergent	Use detergent containing chlorine bleach. Follow manufacturer's instructions.
Programme does not continue	Programme interrupted Door is open	Continue the programme (see Interrupting the programme). Close the door, switch on the main switch again.	Milky deposits on the utensils (removable) ...	Rinse aid dosage too high (visible streaking) Rinse aid dosage too low	Reduce or increase dosage according to instructions.
Appliance does not run/stops	No/insufficient water check whether	Turn on the water supply. Supply fittings unobstructed and not calcified. Supply hose kink-free.	Glasses cloudy/dull ...	Water too hard Glasses not dishwasher-proof Detergent unsuitable	Refill with salt/adjust water softening system. Use dishwasher-proof glasses. Use glass-friendly detergents.
Utensils are not clean	Utensils close together/on top of each other Insufficient detergent Unsuitable programme Spray arms blocked	Arrange utensils according to instructions. Follow manufacturer's instructions. Select more intensive programme. Re-arrange obstacles (e.g. large spoons).	Rust on the cutlery ...	Cutlery not rust-resistant	Use dishwasher-proof cutlery.
Sand or gritty residue on the utensils	Filters loose Filters dirty Spray arm nozzles blocked Insufficient water	Clean filters (see above), attach correctly (MARK). Clean filters (see above). Clean spray arms (see above). See "Appliance does not run".			

Further information can be found in the operating instructions ...
Self-help is worthwhile!

Interrupting the programme

- Switch off the main switch.
- To continue the programme, switch on the main switch again.

Cancelling the programme

- Switch off the main switch.
- Rotate the programme selector in a clockwise direction to "Dry" and switch on the main switch again.
- Wait until the Drain programme has finished and the programme selector is back in the 12 o'clock position.
- Start a new programme or switch off the appliance.

Arrange utensils

Arrange dishwasher-proof utensils (having removed any ash, wax, grease, ink, sticky labels; remove, large remnants of jam, dairy products and food) according to the operating instructions and check that the spray arms can rotate freely.