




PIA...B...  
Hob

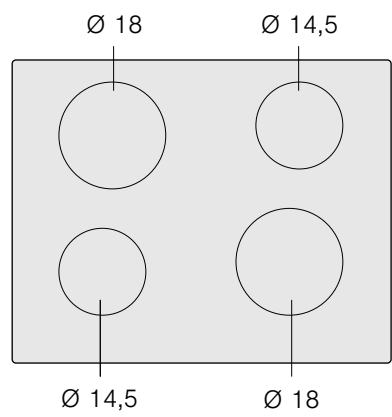

PIA..B...




|        | g*      | b*      |
|--------|---------|---------|
| Ø 14,5 | 1.400 W | 1.800 W |
| Ø 18   | 1.800 W | 2.500 W |

\*  IEC 60335-2-6

|                                                                                   |           |
|-----------------------------------------------------------------------------------|-----------|
| <b>INSTALLATION INSTRUCTIONS .....</b>                                            | <b>4</b>  |
| <b>Assembly .....</b>                                                             | <b>4</b>  |
| Important notes .....                                                             | 6         |
| Preparation of assembly kitchen units, figures 1/2/3/4 .....                      | 6         |
| Installing the appliance, figures 5/7 .....                                       | 7         |
| Changing the intensity of the 13 / 16 / 20 Amp connection current, figure 8 ..... | 7         |
| Uninstalling the appliance .....                                                  | 7         |
| <b>INSTRUCTION MANUAL .....</b>                                                   | <b>8</b>  |
| <b>Safety precautions .....</b>                                                   | <b>8</b>  |
| Elements that may damage the appliance .....                                      | 9         |
| <b>Protecting the environment .....</b>                                           | <b>10</b> |
| Environmentally-friendly disposal .....                                           | 10        |
| Energy-saving advice .....                                                        | 10        |
| <b>Induction cooking .....</b>                                                    | <b>10</b> |
| Advantages of induction cooking .....                                             | 10        |
| Cookware .....                                                                    | 10        |
| <b>Getting to know your appliance .....</b>                                       | <b>11</b> |
| The control panel .....                                                           | 11        |
| The hotplates .....                                                               | 11        |
| Residual heat indicator .....                                                     | 11        |
| <b>Programming the hob .....</b>                                                  | <b>12</b> |
| Turning the hob on and off .....                                                  | 12        |
| Set the hotplate .....                                                            | 12        |
| Cooking guidelines table .....                                                    | 12        |
| <b>Childproof lock .....</b>                                                      | <b>13</b> |
| Activating and deactivating the childproof lock .....                             | 13        |
| Childproof lock .....                                                             | 13        |
| <b>Powerboost function .....</b>                                                  | <b>14</b> |
| To activate .....                                                                 | 14        |
| To deactivate .....                                                               | 14        |
| <b>Time programming function .....</b>                                            | <b>14</b> |
| Turning off a hotplate automatically .....                                        | 14        |
| The timer .....                                                                   | 14        |
| <b>Automatic time limitation .....</b>                                            | <b>15</b> |
| <b>Basic settings .....</b>                                                       | <b>15</b> |
| Accessing the basic settings .....                                                | 16        |
| <b>Care and cleaning .....</b>                                                    | <b>16</b> |
| Hob .....                                                                         | 16        |
| Hob frame .....                                                                   | 16        |
| <b>Fixing malfunctions .....</b>                                                  | <b>16</b> |
| Normal noise while the appliance is working .....                                 | 17        |
| <b>After-sales service .....</b>                                                  | <b>17</b> |
| <b>Tested dishes .....</b>                                                        | <b>18</b> |

# INSTALLATION INSTRUCTIONS

## Assembly

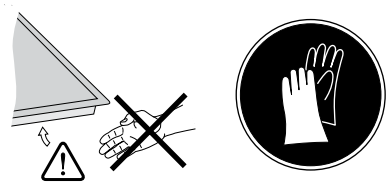

1

| A        | B        |
|----------|----------|
| min. 40  | min. 200 |
| min. 200 | min. 40  |

2



a

55 min. 65 E


b

55 min. 5 E


# 3

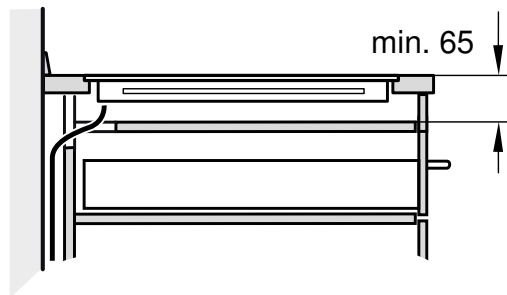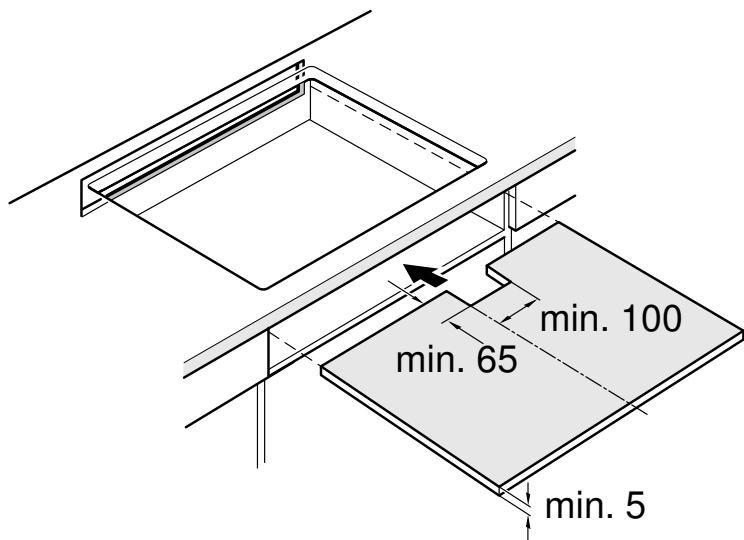



# 4a

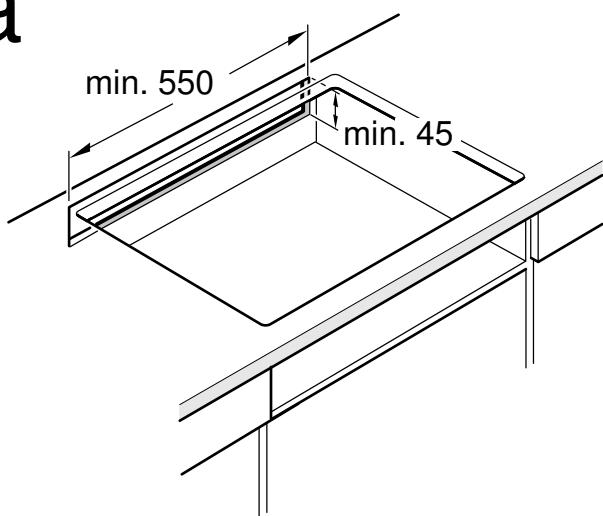




# 4b

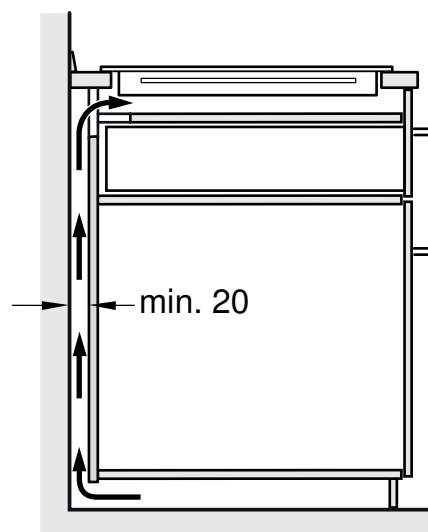


# 5

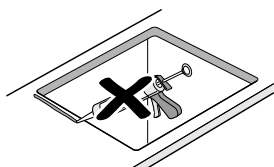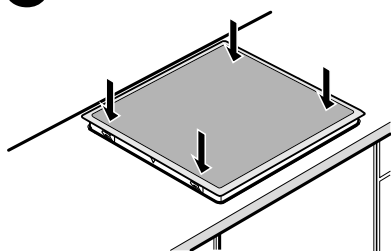


# 6

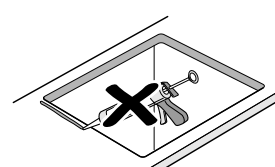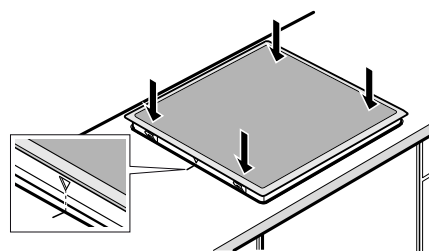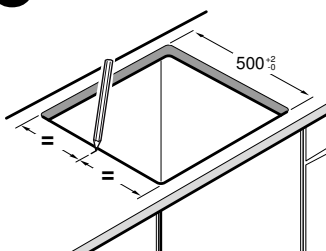

# 7

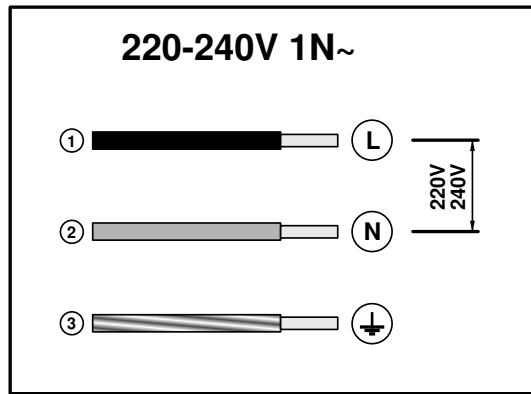

# 8

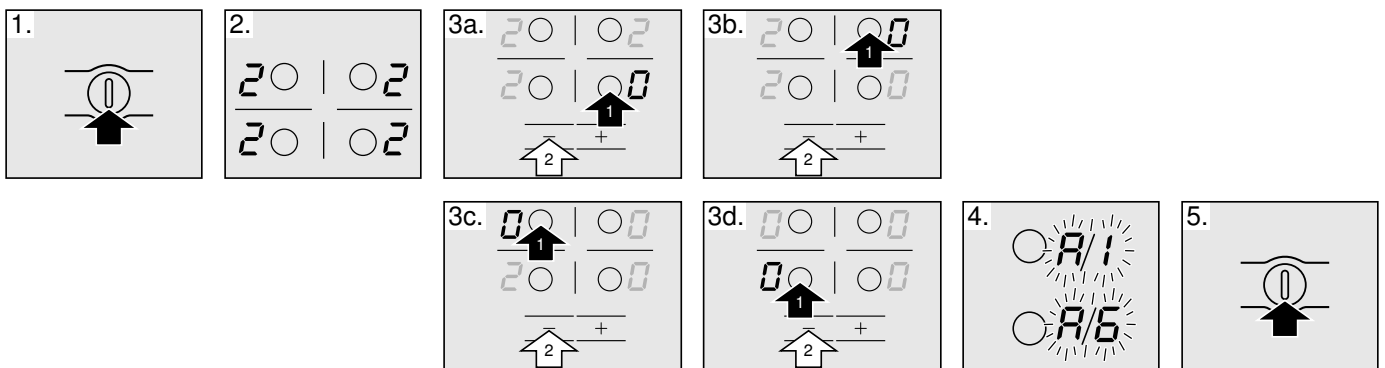

## Important notes

**Safety:** Safety in use is only guaranteed if the technical installation of the hob has been carried out correctly and in accordance with the assembly instructions. The installation technician shall be liable for any damage caused as a result of unsuitable installation.

**Electric connection:** Only by an authorised specialist technician. The guidelines set out by the local electricity provider must be observed.

**Type of connection:** The appliance falls under protection class I and can only be used in combination with a grounding conductor connection.

The manufacturer accepts no responsibility for any malfunction or damage caused by incorrect electrical installations.

**Installation:** The appliance must be connected to a fixed installation and the means of disconnecting it from the fixed installation must be installed according to the installation instructions.

**Built-in assembly under worktop:** The induction hobs may only be installed over a drawer, ovens with forced ventilation from the same brand and dishwashers from the same brand. Refrigerators, unventilated ovens and washing machines may not be installed beneath the hob.

**Power cable:** Do not tie the power cable or pass it along sharp edges. If there is an oven installed below, pass the cable along the rear corners of the oven to the connection box. It must be positioned so that it does not touch any of the hot parts of the hob or the oven.

**Hob:** flat, horizontal, stable. Follow the hob manufacturer's instructions.

**Warranty:** an unsuitable installation, connection or assembly will invalidate the product warranty.

**Note:** Any change to the appliance's interior, including changing the power cable, must only be performed by specially trained members of the Technical Assistance Service.

## Preparation of assembly kitchen units, figures 1/2/3/4

**Built-in kitchen units:** Minimum temperature resistance of 90°C.

**Gap:** Remove any shavings after performing cutting work.

**Cut surfaces:** Seal with heat resistant material.

### Assembly over drawer, figure 2a

Metal objects stored inside the drawer could become very hot due to the air recirculating from the hob ventilation system. If this occurs, an intermediate support is recommended.

Intermediate support: A wooden panel can be used (**figure 3**) or you may order a suitable accessory from our Technical Assistance Service. The reference code for this accessory is 686002.

Worktop: Must have a minimum thickness of 20 mm.

The distance between the top of the working surface and the top of the drawer must be 65 mm.

Assembly over oven, figure 2b

Hob: must have a minimum thickness of 30 mm.

**Note:** If the distance between the hob and oven must be increased, refer to the installation instructions for the oven.

Ventilation: The distance between the oven and the hob must be at least 5 mm.

Installation above the dishwasher

An intermediate accessory must be installed. The accessory may be ordered from our Technical Assistance Service. The reference code for this accessory is 686002.

Worktop: Must have a minimum thickness of 20 mm and maximum thickness of 40 mm.

The space between the top of the working surface and the top of the dishwasher must be:

- 60 mm if installed over a compact dishwasher.
- 65 mm if installed over a full-size dishwasher.

Ventilation, figure 4

Ventilating the hob requires:

- An opening on the upper part of the kitchen unit's rear wall (figure 4a).
- A separation between the rear part of the kitchen unit and kitchen wall (figure 4b).

Installing the appliance, figures 5/7

**Note:** Wear protective gloves to fit the hob. The non-visible surfaces may have sharp edges.

Fit the hob into place, (figure 5).

Connect the appliance to the mains to check its operation.

- Voltage, see specifications plate.
- Connect based on the connection drawing only (figure 7).
  1. Brown
  2. Blue
  3. Yellow and green

Position the hob in the gap available on the worktop with a depth of 500 mm, (figure 6)

1. Mark the centre of the gap in the worktop.
2. Fit the hob into place.
3. Align the marks of the hob frame with those of the worktop.
4. Insert the hob.

Changing the intensity of the 13 / 16 / 20 Amp connection current, figure 8

Before using the hob for the first time, the intensity of the hob connection must be tested.

Follow the steps below to change the current of the hob:

1. Turn on the hob with the main switch. Do not place any pans on the hotplates
2. Within the following 60 seconds, adjust all hotplates to the desired power level according to the required connection current (see table).

| Power level | Connection current in amperes |
|-------------|-------------------------------|
| 1           | 20 A                          |
| 2           | 16 A                          |
| 3           | 13 A                          |

3. Turn off all the hotplates in sequence, starting from the lower right and continuing counter-clockwise.
  4. The selected connection current is indicated in the display of the right-hand lateral hotplates.
  5. Turn off the hob with the main switch.
- The selected connection current will have been properly saved.

Uninstalling the appliance

Disconnect the appliance from the mains.

Push the hob upwards from below to remove it.

Caution!

Damage to the appliance! Do not try to remove the appliance by prying it out from above.

# INSTRUCTION MANUAL

Additional information on products, accessories, replacement parts and services can be found at [www.bosch-home.com](http://www.bosch-home.com) and in the online shop [www.bosch-eshop.com](http://www.bosch-eshop.com)

## Safety precautions

Please read this manual carefully. Please keep the instruction and installation manual as well as the appliance certificate in a safe place for later use or for subsequent owners.

Check the appliance after removing it from the packaging. If it has suffered any damage in transport, do not connect the appliance, contact the Technical Assistance Service and provide written notification of the damage caused, otherwise you will lose your right to any type of compensation.

This appliance must be installed according to the installation instructions included.

This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors.

Do not use covers. These can cause accidents, due to overheating, catching fire or materials shattering, for example.

Do not use inappropriate child safety shields or hob guards. These can cause accidents.

This appliance is not intended for operation with an external clock timer or a remote control.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

We advise that you exercise caution using or standing near an induction hob while it is in operation, if you wear a pacemaker or a similar medical device. Consult your doctor or the device manufacturer concerning its conformity or any possible incompatibilities,

### **Risk of fire!**

- Hot oil and fat can ignite very quickly. Never leave hot fat or oil unattended. Never use water to put out burning oil or fat. Switch off the hotplate. Extinguish flames carefully using a lid, fire blanket or something similar.
- The hotplates become very hot. Never place combustible items on the hob. Never place objects on the hob.
- The appliance gets hot. Do not keep combustible objects or aerosol cans in drawers directly underneath the hob.
- The hob switches off automatically and can no longer be operated. It may switch on unintentionally at a later point. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

### **Risk of burns!**

- The hotplates and surrounding area (particularly the hob surround, if fitted) become very hot. Never touch the hot surfaces. Keep children at a safe distance.
- The hotplate heats up but the display does not work. Switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Metal objects on the hob quickly become very hot. Never place metal objects (such as knives, forks, spoons and lids) on the hob.
- After each use, always turn off the hob at the main switch. Do not wait until the hob turns off automatically after the pan is removed.

## Risk of electric shock!

- Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Cracks or fractures in the glass ceramic may cause electric shocks. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

## Malfunction risk!

The hob is equipped with a fan in the lower section. If there is a drawer under the hob it should not be used to store small objects or paper, since they could damage the fan or interfere with the cooling if they are sucked into it.

There should be a minimum of 2 cm between the contents of the drawer and fan intake.

## Risk of injury!

- When cooking in a bain marie, the hob and cooking container could shatter due to overheating. The cooking container in the bain marie must not directly touch the bottom of the water-filled pot. Only use heat-resistant cookware.
- Sauce pans may suddenly jump due to liquid between the pan base and the hotplate. Always keep the hotplate and saucepan bases dry.

## Elements that may damage the appliance

### Caution!

- Rough pan bases may scratch the hob.
- Avoid leaving empty pots and pans on the hotplate. Doing so may cause damage.
- Do not place hot pans on the control panel, the indicator area, or the hob frame. Doing so may cause damage.
- Hard or pointed objects dropped on the hob may damage it.
- Aluminium foil and plastic containers will melt if placed on the hotplate while it is hot. The use of laminated sheeting is not recommended on the hob.

### Overview

The following table presents the most common damage caused:

| Damage    | Cause                                                 | Measure                                                                  |
|-----------|-------------------------------------------------------|--------------------------------------------------------------------------|
| Stains    | Food spillage                                         | Immediately remove spilt food using a glass scraper.                     |
|           | Unsuitable cleaning products                          | Only use cleaning products specifically designed for glass-ceramic hobs. |
| Scratches | Salt, sugar and sand                                  | Do not use the hob as a tray or working surface.                         |
|           | Pans with rough bottoms may scratch the glass ceramic | Check pans.                                                              |
| Fading    | Unsuitable cleaning products                          | Only use cleaning products specifically produced for glass-ceramic hobs. |
|           | Contact with pans                                     | Lift pots and pans before moving them around.                            |
| Chips     | Sugar, substances with a high sugar content           | Immediately remove spilt food using a glass scraper.                     |

# Protecting the environment

## Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

## Energy-saving advice

- Always use the correct lid for each pan. Cooking without a lid uses a lot more energy. Use a glass lid to provide visibility and avoid having to lift the lid.

- Use pans with flat bases. Bases that are not flat use a lot more energy.
- The diameter of the pan base must match the size of the hotplate. Please note: pan manufacturers usually provide the diameter for the top of the pan, which is usually larger than the diameter of the pan base.
- Use a small pan for small amounts of food. A large pan which is not full uses a lot of energy.
- Use little water when cooking. This saves energy and preserves all the vitamins and minerals in vegetables.
- Select the lowest power level to maintain cooking. If the power level is too high, energy is wasted.

# Induction cooking

## Advantages of induction cooking

Induction cooking represents a radical change from the traditional method of heating; the heat is generated directly in the pan. It therefore offers a number of advantages:

- Time savings for cooking and frying; since the pan is heated directly.
- Energy is saved.
- Care and cleaning are simpler. Foods that have spilt do not burn as quickly.
- Heat and safety control; the hob supplies or cuts off power as soon as the control knob is turned on. The induction hotplate stops supplying heat if the pan is removed without having previously switched it off.

## Cookware

Only ferromagnetic pans are suitable for induction cooking; these may be made from:


- enamelled steel
- cast iron
- special stainless steel induction pans.

To determine whether a pan is suitable, check to see if a magnet will stick to its base.


There are other types of cookware for induction whose base is not entirely ferromagnetic.



When using large cookware on a smaller ferromagnetic area, only the ferromagnetic zone heats up, so heat might not be uniformly distributed.

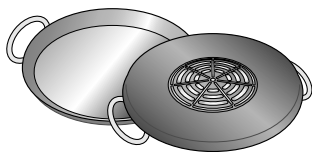

Pans with aluminium areas inserted in the base reduce the ferromagnetic area, so less heat may be supplied and the pan may be difficult to detect or not be detected at all.

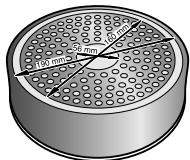

For good cooking results, the diameter of the cookware's ferromagnetic area should match the size of the hotplate. If cookware is not detected on a hotplate, try it on the next smaller hotplate down.

## Unsuitable pans

Never use diffuser hobs or pans made from:

- common thin steel
- glass
- earthenware
- copper
- aluminium

## Characteristics of the pan base

The characteristics of the pan base may affect the uniformity of the cooking results. Pans made from materials which help diffuse heat, such as stainless steel sandwich pans, distribute heat uniformly, saving time and energy.

## Absence of pan or unsuitable size

If no pan is placed on the selected hotplate, or if it is made of unsuitable material or is not the correct size, the power level displayed on the hotplate indicator will flash. Place a suitable pan on the hotplate to stop the flashing. If this takes more than 90 seconds, the hotplate will switch off automatically.

## Empty pans or those with a thin base

Do not heat empty pans, nor use pans with a thin base. The hob is equipped with an internal safety system. However, an empty pan may heat up so quickly that the "automatic switch off" function may not have time to react and the pan may reach very high temperatures. The base of the pan could melt and damage the glass on the hob. In this case, do not touch the pan and switch the hotplate off. If it fails to work after it has cooled down, please contact the Technical Assistance Service.


## Pan detection

Each hotplate has a minimum limit for detecting pans, which varies depending on the material of the pan being used. You should therefore use the hotplate that is most suitable for the diameter of your pan.

# Getting to know your appliance

On *page 2*, you will find information on the dimensions and power of the hotplates.

## The control panel

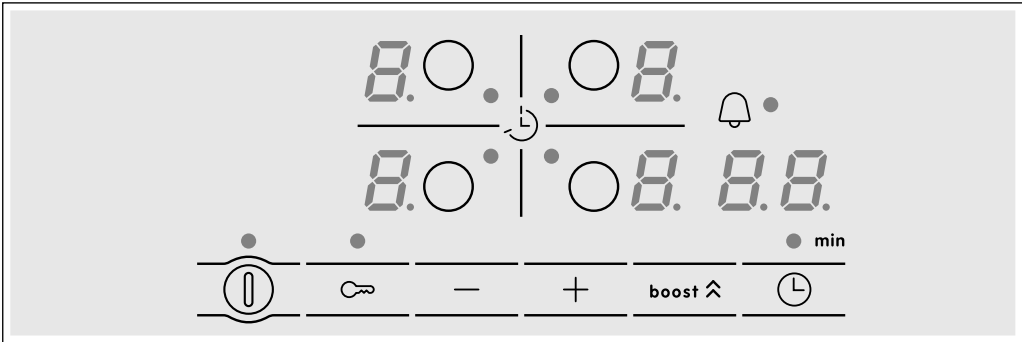

| Control panels |                       |
|----------------|-----------------------|
| ⓘ              | Main switch           |
| ○              | Select the hotplate   |
| -/+            | Select settings       |
| boost ⬆        | Powerboost function   |
| ⌚              | Time program function |
| 🔒              | Childproof lock       |

| Indicators |                       |
|------------|-----------------------|
| 0          | Functionality         |
| 1-9        | Power levels          |
| b          | Powerboost function   |
| H/h        | Residual heat         |
| 00         | Time program function |

**Control panels**  
Pressing a symbol activates its corresponding function.

**Note:** Always keep the control surfaces dry. Moisture can affect proper working.

## The hotplates

| Hotplate                                                                                |                                         |
|-----------------------------------------------------------------------------------------|-----------------------------------------|
| ○ Single hotplate                                                                       | Always use cookware of a suitable size. |
| Use only cookware suitable for induction cooking; see the section on suitable cookware. |                                         |

## Residual heat indicator

The hob has a residual heat indicator for each hotplate to show those which are still hot. Avoid touching them when this indicator is lit.

Although the hob is switched off, the indicator *h* or *H* will remain on for as long as the hotplate is hot.

If the pan is removed before the hotplate is turned off, the indicator *h* or *H* and the selected power level will appear alternately.

# Programming the hob

This section will show you how to program the hotplates. The table contains power levels and cooking times for several dishes.

## Turning the hob on and off

The hob is turned on and off using the main switch.

To turn on: press the  symbol. A beep sounds. The indicator located next to the main switch and the  indicators of the hotplates light up. The hob is ready for use.

To turn off: press the  symbol until the indicators go out. All hotplates are turned off. The residual heat indicator will remain lit until the hotplates have cooled down sufficiently.

### Notes

- The hob switches off automatically when all the hotplates are switched off for more than 20 seconds.
- The settings are memorised for 4 seconds after the hob has been turned off. If the hotplate is switched back on within this time then the previous settings will be applied.

## Set the hotplate

Select the required power level with the + and - symbols.

Power level 1 = minimum power.

Power level 9 = maximum power.

Each power level has an intermediate setting. This is marked with a dot.

### Select the required hotplate and power level


The hob must be switched on.

1. Select the hotplate with the  symbol.

2. Within the next 10 seconds, press the + or - symbol. The basic setting appears:

+ symbol, power level 9

- symbol, power level 4

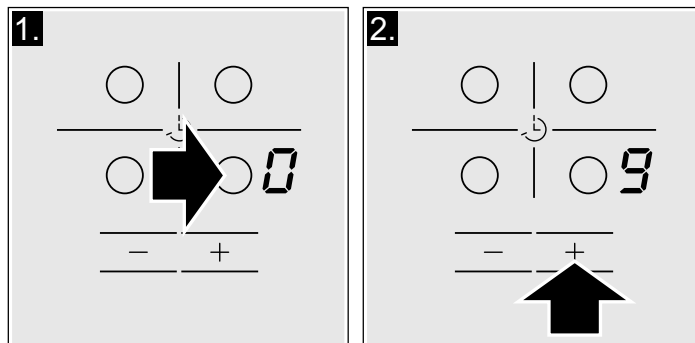

The power level has been changed.

### Changing the power level

Select the hotplate and press the + or - symbol until the required power level comes on.

### To switch off the hotplate

Select the hotplate and then press the + or - symbol until  symbol appears.

The hotplate turns off and the residual heat indicator appears.

### Notes

- If no pan has been placed on the hotplate, the selected power level flashes. After a certain time has elapsed, the hotplate switches off.
- If a pan has been placed on the hotplate before switching on the hob, it will be detected within 20 seconds of pressing the main switch and the hotplate will be selected automatically. Once detected, select the power level within the next 20 seconds or the hotplate will switch off. If more than one pan is placed on the hob, only one will be detected when switching it on.

## Cooking guidelines table

The table below contains some examples.

Use power level 9 to begin cooking.

When heating purées, creams and thick sauces, stir frequently.

|                                 | Power level |
|---------------------------------|-------------|
| <b>Melting</b>                  |             |
| Chocolate, chocolate coating    | 1-1.        |
| Butter, honey, gelatin          | 1-2         |
| <b>Heating and keeping warm</b> |             |
| Stew (e.g., lentils)            | 1-2         |
| Milk**                          | 1-2.        |
| Sausages heated in water**      | 3-4         |
| <b>Defrosting and heating</b>   |             |
| Frozen spinach                  | 3-4         |
| Frozen goulash                  | 3-4         |

\* Uncovered cooking

\*\* Uncovered

\*\*\* Turn frequently

|                                                                          | Power level |
|--------------------------------------------------------------------------|-------------|
| <b>Slow cooking, simmering</b>                                           |             |
| Potato dumplings*                                                        | 4.-5.       |
| Fish*                                                                    | 4-5         |
| White sauces (e.g., bechamel)                                            | 1-2         |
| Whipped sauces (e.g., Bearnaise, Hollandaise)                            | 3-4         |
| <b>Boiling, steaming, sautéing</b>                                       |             |
| Rice (with a double amount of water)                                     | 2-3         |
| Rice pudding                                                             | 1.-2.       |
| Potatoes                                                                 | 4-5         |
| Pasta*                                                                   | 6-7         |
| Soups                                                                    | 3.-4.       |
| Vegetables                                                               | 2.-3.       |
| Greens, frozen foods                                                     | 3.-4.       |
| Cooked in a pressure cooker                                              | 4.-5.       |
| <b>Stewing</b>                                                           |             |
| Meat roll                                                                | 4-5         |
| Stew                                                                     | 4-5         |
| Goulash                                                                  | 3.-4.       |
| <b>Bake / Fry with a little oil**</b>                                    |             |
| Steaks, chops (plain or breaded)                                         | 6-7         |
| Beefsteak (3 cm thick)                                                   | 7-8         |
| Chicken breast (2 cm thick)***                                           | 5-6         |
| Hamburgers, meatballs (3 cm thick)***                                    | 4.-5.       |
| Plain fish and fish fillet                                               | 5-6         |
| Breaded fish and fish fillet                                             | 6-7         |
| Prawns and shrimps                                                       | 7-8         |
| Frozen meals (e.g., stir-fries)                                          | 6-7         |
| Pancakes                                                                 | 6-7         |
| Omelette                                                                 | 3.-4.       |
| <b>Frying**</b> (150-200 g per serving with 1-2 l. of oil)               |             |
| Frozen foods (e.g., French fries, chicken nuggets)                       | 8-9         |
| Frozen croquettes                                                        | 7-8         |
| Meat (e.g., chicken pieces)                                              | 6-7         |
| Fish, vegetables or mushrooms, breaded or battered, e.g., baby mushrooms | 6-7         |
| Confectionery products (e.g., fritters, fruit in batter)                 | 4-5         |
| * Uncovered cooking                                                      |             |
| ** Uncovered                                                             |             |
| *** Turn frequently                                                      |             |

## Childproof lock

The hob can be protected against being accidentally turned on, to ensure that children do not switch on the hotplates.

### Activating and deactivating the childproof lock

The hob should be turned off.

To activate: press the symbol  for approximately 4 seconds. The indicator next to the symbol  lights up for 10 seconds. The hob is locked.

To deactivate: press the symbol  for approximately 4 seconds. The lock is now deactivated.

### Childproof lock

With this function, the childproof lock automatically activates when a hob is switched off.

#### Activating and deactivating

All of the relevant information on the automatic childproof lock connection can be found in the *Basic settings* chapter.

# Powerboost function

The Powerboost function can be used to heat large amounts of water more quickly than the power level 9.

All the hotplates have this function.

## To activate

The hob must be switched on, but no hotplate should be working.

1. Select a hotplate.
2. Press the **boost** symbol.

The **b** indicator lights up

The function should be activated.

**Note:** If any hotplate is switched on when the Powerboost function is working, **b** and 9 will flash on the hotplate display; the power level 9 will then be set 9. The Powerboost function will be deactivated.

## To deactivate

1. Select a hotplate.
2. Press the symbol **boost**.

The **b** indicator will no longer appear and the hotplate will return to the power level 9.

The function will be deactivated.

**Note:** In certain circumstances, the Powerboost function may turn off automatically in order to protect the electronic components inside the hob.

# Time programming function

This function may be used in two different ways:

- to automatically switch off a hotplate.
- as a timer.


## Turning off a hotplate automatically

The hotplate turns off automatically once the selected time has elapsed.

### Programming the cooking time.

The hob must be switched on:

1. Select the required hotplate and power level.
2. Press the  $\odot$  symbol. The  $\bullet$  indicator on the hotplate lights up.  $\odot$  is displayed on the time program function display.
3. Press the + or - symbol. The basic setting appears:
  - + symbol: 30 minutes.
  - symbol: 10 minutes.

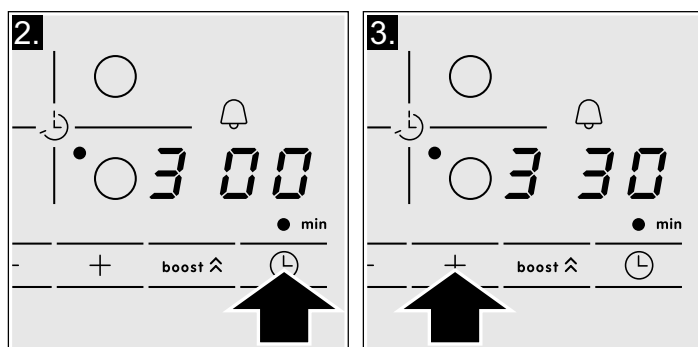

4. Press the + or - symbol until the required cooking time appears.

After a few seconds, the cooking time begins to count down.

**Note:** The same cooking time can be automatically programmed for the all the hotplates. The programmed time passes independently for each of the hotplates.

The *Basic settings* chapter provides information on automatically programming the cooking time.

### Changing or cancelling the time

Select the hotplate. Press the  $\odot$  symbol and change the cooking time with the + or - symbols, or set to  $\odot$ .

### Once the time has elapsed

The hotplate switches off. A beep sounds and in the time program function display  $\odot$  appears for 10 seconds. The  $\bullet$  indicator on the hotplate lights up. Pressing the  $\odot$  symbol turns off the indicators and stops the beeping.

### Notes

- If cooking times have been programmed for various hotplates, the time programming function always displays the time for the selected hotplate.
- Any cooking time can be programmed for up to 99 minutes.

## The timer

The timer can be set for periods of up to 99 minutes. It is independent of the other settings. This function does not automatically switch off a hotplate.

### How to program

1. The timer can be selected in two different ways:
  - If you have selected the hotplate: press the  $\odot$  symbol twice.
  - If you have not selected the hotplate: press the  $\odot$  symbol.

The  $\bullet$  indicator next to the  $\odot$  symbol lights up.  $\odot$  is displayed on the time program function display.

2. Press the + or - symbol. The basic setting appears.
  - + symbol: 10 minutes.
  - symbol: 5 minutes.

3. Set the desired time using the + or - symbols. After a few seconds, the time will start to elapse.

### Changing or cancelling the time

Press the  $\odot$  symbol various times until the  $\bullet$  indicator next to the  $\odot$  symbol lights up. Change the time or set to  $\odot$  with the + or - symbols.

### Once the time has elapsed

A warning signal sounds.  $\odot$  is displayed on the time program function display. After 10 seconds the indicators turn off.

Pressing the  $\odot$  symbol turns off the indicators and stops the beeping.

# Automatic time limitation

If the hotplate remains in use for a long time and no changes are made in the settings, the automatic time limitation function is triggered.

The hotplate stops heating. The **F, B** symbol and the residual heat indicator **h/H** flash alternately in the display.

The indicator goes out when any symbol is pressed. The hotplate can now be reset.

When the automatic time function is used, it is governed by the selected power level (from 1 to 10 hours).

## Basic settings

The device has several basic settings. These settings may be adapted to the user's individual needs.

| Indicator                                                                          | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <b>Childproof lock</b><br> Deactivated.*<br> Activated.                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|    | <b>Audible signals</b><br> Confirmation and error signals deactivated.<br> Only error signal activated.<br> Only confirmation signal activated.<br> All signals activated.*                                                                                                                                                          |
|  | <b>Automatic programming of cooking time.</b><br> Switched off.*<br> Automatic shut-off time.                                                                                                                                                                                                                                                                                                                                                                                                          |
|  | <b>Duration of the time program function warning signal</b><br> 10 seconds*.<br> 30 seconds.<br> 1 minute.                                                                                                                                                                                                                                                                                                          |
|  | <b>Power-Management function</b><br> = Deactivated.*<br> = 1,000 W. minimum power.<br> = 1,500 W.<br> = 2,000 W.<br>etc.<br> or  = maximum power of hob.** |
|  | <b>Hotplate time selection</b><br> Unlimited: the last hotplate programmed remains selected.*<br> Limited: The hotplate will only remain selected for 10 seconds.                                                                                                                                                                                                                                                                                                                                      |
|  | <b>Return to basic settings</b><br> Personal settings.*<br> Return to factory settings.                                                                                                                                                                                                                                                                                                                                                                                                                |


\*Factory settings

\*\*The maximum power of the hob depends on the configuration of the installation's connection current. To not exceed this maximum value, the hob includes a series of components that automatically control the power, distributing it between the hotplates in use as required.

## Accessing the basic settings


The hob should be turned off.

1. Turn on the hob.
2. Within the next 10 seconds, press the symbol  for approximately 4 seconds.

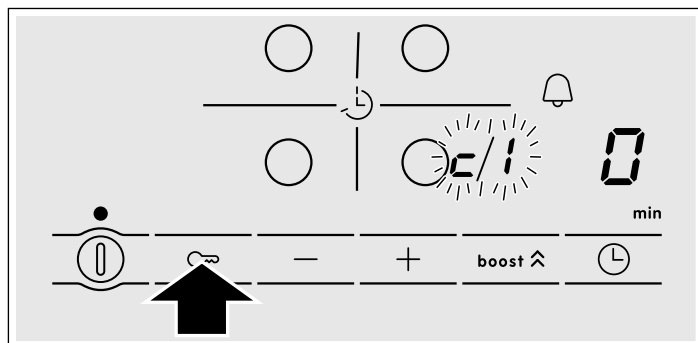

In the display, the settings  and  light up alternately with  as the default setting.

3. Press the  symbol several times until the required function appears.
4. Then select the required setting with the + and - symbols.

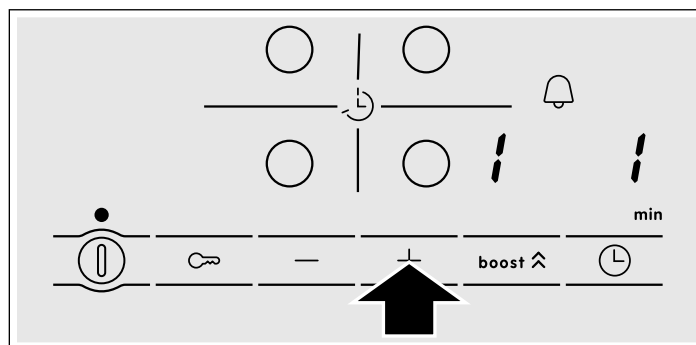

5. Press the symbol  for approximately 4 seconds.  
The settings will have been correctly saved

### Quit

To leave the basic settings, turn off the hob at the main switch.

## Care and cleaning

The advice and warnings contained in this section aim to guide you in cleaning and maintaining the hob, so that it is kept in the best possible condition

### Hob

#### Cleaning

Clean the hob after each use. This prevents food remains left on the surface from burning. Wait until the hob is cool enough before attempting to clean it.

Only use cleaning products specifically designed for hobs. Follow the instructions provided on the packaging.

Do not use:

- Undiluted washing-up liquid
- Dishwasher detergent
- Abrasive products

- Corrosive products such as oven sprays or stain removers
- Sponges that may scratch
- High-pressure or steam cleaners

The best way to remove stubborn stains is to use a glass scraper. Follow the manufacturer's instructions.

Suitable glass scrapers can be obtained through the Technical Assistance Service or from our online shop.

### Hob frame

In order to avoid damage to the hob frame, follow the indications below:

- Use only slightly soapy hot water
- Do not use sharp or abrasive products
- Do not use a glass scraper

## Fixing malfunctions

Malfunctions are usually due to small details. Before calling the Technical Assistance Service you should bear in mind the following advice and warnings.

| Indicator                                          | Malfunction                                                                                                                                                               | Solution                                                                                                                                                                                                                                                                             |
|----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| none                                               | The electric power supply has been cut off.<br><br>The appliance has not been correctly connected following the connection diagram.<br><br>Electronic system malfunction. | Use other electrical appliances to check whether there has been a power cut.<br><br>Check that the appliance has been connected correctly according to the connection diagram.<br><br>If none of the above checks resolve the malfunction, contact the Technical Assistance Service. |
| The indicators flash                               | The control panel is damp or an object is resting on it.                                                                                                                  | Dry the control panel area or remove the object.                                                                                                                                                                                                                                     |
| The indicator - flashes on the hotplate indicators | A fault has occurred in the electronic system.                                                                                                                            | Briefly cover the control panel with your hand to confirm the malfunction.                                                                                                                                                                                                           |

\* If the warning persists call the Technical Assistance Service.

**Do not rest hot pans on the control panel.**

| Indicator                                                 | Malfunction                                                                                              | Solution                                                                                                                             |
|-----------------------------------------------------------|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| <i>E</i> + number / <i>d</i> + number / <i>E</i> + number | Electronic system malfunction.                                                                           | Unplug the hob from the mains. Wait about 30 seconds before plugging it in again.*                                                   |
| <i>F0</i> / <i>F9</i>                                     | There is an internal operating error.                                                                    | Unplug the hob from the mains. Wait about 30 seconds before plugging it in again.*                                                   |
| <i>F2</i>                                                 | The electronic system has overheated and the corresponding hotplate has been switched off.               | Wait until the electronic system has cooled down sufficiently. Then press any symbol on the hob. *                                   |
| <i>F4</i>                                                 | The electronic system has overheated and all hotplates have been switched off.                           |                                                                                                                                      |
| <i>F5</i> + power level and beep                          | There is a hot pan on the control panel. It is highly likely that the electronic system will overheat.   | Remove that pan. The malfunction indicator will switch off shortly afterwards. You can carry on cooking.                             |
| <i>F5</i> and beep                                        | There is a hot pan on the control panel. The hotplate has switched off to protect the electronic system. | Remove that pan. Wait a few seconds. Press any control panel. When the malfunction indicator switches off, you can carry on cooking. |
| <i>U1</i>                                                 | Incorrect supply voltage, outside normal operating limits.                                               | Contact your electricity board.                                                                                                      |
| <i>U2</i> / <i>U3</i>                                     | The hotplate has overheated and has switched off in order to protect its hob.                            | Wait until the electronic system has cooled down sufficiently before switching it back on.                                           |

\* If the warning persists call the Technical Assistance Service.

**Do not rest hot pans on the control panel.**

## Normal noise while the appliance is working

Induction heating technology is based on the creation of electromagnetic fields that generate heat directly at the base of the pan. Depending on how the pan has been manufactured, certain noises or vibrations may be produced such as those described below:

### A deep humming sound as in a transformer

This noise is produced when cooking on a high power level. It is caused by the amount of energy transferred from the hob to the pan. The noise disappears or becomes faint when the power level is lowered.

### A low whistling sound

This noise is produced when the pan is empty. The noise disappears when water or food is added to the pan.

### A crackling sound

This noise occurs in pans which are made from different materials superimposed on one another. It is caused by the vibrations that occur in the adjoining surfaces of the different superimposed materials. The noise comes from the pan. The amount of food and cooking method can vary noise intensity.

## A high-pitched whistling sound

This noise is produced mainly in pans made from different materials superimposed on one another, and it occurs when such pans are heated at maximum power on two hotplates at the same time. The whistling disappears or becomes fainter as soon as the power level is lowered.

### Noise from the fan

For proper use of the electronic system, the temperature of the hob must be controlled. To do this, the hob has a fan which turns on when a high temperature is detected. The fan may also work by inertia after the hob has been switched off, if the temperature detected is still too high.

### Rhythmic sounds similar to the hands of a clock

This noise is only produced when 3 or more hotplates are working and disappears or is reduced when one of the hotplates is switched off.

The noises described are normal, they are part of induction heating technology and not a sign of malfunction.

## After-sales service

Our after-sales service is there for you if your appliance should need to be repaired. We are committed to find the best solution also in order to avoid an unnecessary call-out.

### E number and FD number:

Please quote the E number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate bearing these numbers can be found on the appliance certificate.

Please note that a visit from an after-sales service engineer is not free of charge, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

### To book an engineer visit and product advice

|           |                                                                                                                                     |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------|
| <b>GB</b> | 0344 8928979<br>Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply. |
| <b>IE</b> | 01450 2655<br>0.03 € per minute at peak. Off peak 0.0088 € per minute.                                                              |

Rely on the professionalism of the manufacturer. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your appliances.

# Tested dishes

This table has been prepared for assessment institutions to provide controls for our appliances.

The data in the table refers to our Schulte-Ufer cookware accessories (4 piece cookware set for the HEZ 390042 induction hob) with the following measurements:

- Saucepan Ø 16 cm, 1.2 l for hotplates of Ø 14.5 cm
- Pot Ø 16 cm, 1.7 l for hotplates of Ø 14.5 cm
- Pot Ø 22 cm, 4.2 l for hotplates of Ø 18 cm
- Frying pan Ø 24 cm, for hotplates of Ø 18 cm

| Tested dishes                                                                                                      | Hotplate  | Preheating  |                              | Cooking |                            |       |
|--------------------------------------------------------------------------------------------------------------------|-----------|-------------|------------------------------|---------|----------------------------|-------|
|                                                                                                                    |           | Power level | Time (Min:S)                 | Cover   | Power level                | Cover |
| Melting chocolate                                                                                                  |           |             |                              |         |                            |       |
| Cookware: saucepan                                                                                                 |           |             |                              |         |                            |       |
| Chocolate coating (e.g. Dr. Oetker brand, dark 55%, 150 g.)                                                        | Ø 14.5 cm | -           | -                            | -       | 1 - 1.                     | No    |
| Heating lentil stew and keeping it heated                                                                          |           |             |                              |         |                            |       |
| Cookware: Pot                                                                                                      |           |             |                              |         |                            |       |
| Initial temperature 20 °C                                                                                          |           |             |                              |         |                            |       |
| Lentil stew*                                                                                                       |           |             |                              |         |                            |       |
| Amount 450 g.                                                                                                      | Ø 14.5 cm | 9           | 1:30 without stirring        | Yes     | 1.                         | Yes   |
| Amount: 800 g.                                                                                                     | Ø 18 cm   | 9           | 2:30 without stirring        | Yes     | 1.                         | Yes   |
| Canned lentil stew, e.g. Erasco lentils with chorizo                                                               |           |             |                              |         |                            |       |
| Amount 500 g.                                                                                                      | Ø 14.5 cm | 9           | 1:30 stir after approx. 1:00 | Yes     | 1.                         | Yes   |
| Amount 1 kg.                                                                                                       | Ø 18 cm   | 9           | 2:30 stir after approx. 1:00 | Yes     | 1.                         | Yes   |
| Making bechamel sauce                                                                                              |           |             |                              |         |                            |       |
| Cookware: Saucepan                                                                                                 |           |             |                              |         |                            |       |
| Milk temperature: 7 °C                                                                                             |           |             |                              |         |                            |       |
| Ingredients: 40 g of butter, 40 g of flour, 0.5 l of milk (3.5% fat) and a pinch of salt                           | Ø 14.5 cm |             |                              |         |                            |       |
| 1. Melt butter, mix in flour and salt and heat everything together                                                 |           | 1           | approx. 3:00                 | No      |                            |       |
| 2. Add milk and bring the sauce to a boil, stirring continuously                                                   |           | 7           | approx. 5:20                 | No      |                            |       |
| 3. Keep the bechamel sauce at a boil for two more minutes, stirring continuously                                   |           |             |                              |         | 1                          | No    |
| Cooking rice pudding                                                                                               |           |             |                              |         |                            |       |
| Cookware: Pot                                                                                                      |           |             |                              |         |                            |       |
| Milk temperature: 7 °C                                                                                             |           |             |                              |         |                            |       |
| Heat milk until it begins to bubble. Change the recommended heating level and add rice, sugar and salt to the milk |           |             |                              |         |                            |       |
| Ingredients: 190 g. of short-grain rice, 23 g. of sugar, 750 ml. of milk (3.5% fat) and a pinch of salt            | Ø 14.5 cm | 8.          | approx. 6:30                 | No      | 2 stir after approx. 10:00 | Yes   |
| Ingredients: 250 g. of short-grain rice, 30 g. of sugar, 1 l. of milk (3.5% fat) and a pinch of salt               | Ø 18 cm   |             |                              |         |                            |       |
| Cooking rice*                                                                                                      |           |             |                              |         |                            |       |
| Cookware: Pot                                                                                                      |           |             |                              |         |                            |       |
| Water temperature 20 °C                                                                                            |           |             |                              |         |                            |       |
| Ingredients: 125 g of short-grain rice, 300 g of water and a pinch of salt                                         | Ø 14.5 cm | 9           | approx. 2:30                 | Yes     | 2                          | Yes   |
| Ingredients: 250 g of short-grain rice, 600 g of water and a pinch of salt                                         | Ø 18 cm   | 9           | approx. 2:30                 | Yes     | 2.                         | Yes   |

\*Recipe according to DIN 44550

\*\*\*Recipe according to DIN EN 60350-2

| Tested dishes                                                                                                     | Hotplate | Preheating  |                                                 | Cooking |             |       |
|-------------------------------------------------------------------------------------------------------------------|----------|-------------|-------------------------------------------------|---------|-------------|-------|
|                                                                                                                   |          | Power level | Time (Min:S)                                    | Cover   | Power level | Cover |
| Pan-frying pork sirloin                                                                                           |          |             |                                                 |         |             |       |
| Cookware: Frying pan                                                                                              |          |             |                                                 |         |             |       |
| Sirloin initial temperature: 7 °C                                                                                 | Ø 18 cm  | 9           | 1:30                                            | No      | 7           | No    |
| 2 pieces of sirloin (total weight approx. 200 g, 1 cm thick)                                                      |          |             |                                                 |         |             |       |
| Frying crêpes**                                                                                                   |          |             |                                                 |         |             |       |
| Cookware: Frying pan                                                                                              | Ø 18 cm  | 9           | 1:30                                            | No      | 7           | No    |
| 55 ml of crêpe batter                                                                                             |          |             |                                                 |         |             |       |
| Frying frozen potato chips                                                                                        |          |             |                                                 |         |             |       |
| Cookware: Pot                                                                                                     | Ø 18 cm  | 9           | Until the temperature of the oil reaches 180 °C | No      | 9           | No    |
| Ingredients: 1.8 kg of sunflower oil, for cooking: 200 g of frozen potato chips (e.g. McCain 123 Frites Original) |          |             |                                                 |         |             |       |

\*Recipe according to DIN 44550

\*\*\*Recipe according to DIN EN 60350-2



**Robert Bosch Hausgeräte GmbH**

Carl-Wery-Straße 34

81739 München

Germany

**[www.bosch-home.com](http://www.bosch-home.com)**



9000884164

01  
940515