



Register your new Bosch now:  
[www.bosch-home.com/welcome](http://www.bosch-home.com/welcome)



**Washing machine**



**BOSCH**

**en** Instruction Manual and Installation Instructions

## Your new washing machine

You have chosen a Bosch washing machine.

Please take a few minutes to read and become familiar with the advantages of your washing machine.

To meet the high quality demands required by Bosch, every washing machine that leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website [www.bosch-home.com](http://www.bosch-home.com) or contact our after-sales service centres.

If the operating and installation instructions describe different models, any differences will be pointed out at the relevant points in the text.



Read these operating and installation instructions before switching on the washing machine.

## Display rules

### **Warning!**

This combination of symbol and signal word indicates a possibly dangerous situation. Not heeding the warning can cause death or injuries.

### **Caution!**

This signal word indicates a possibly dangerous situation. Not heeding the caution can cause property and/or environmental damage.

### **Note/tip**

Information about the optimum use of the appliance/any other useful information.









### **1. 2. 3. / a) b) c)**






The steps are represented by numbers or letters.




■ / -

Lists are represented by a small box or a dash.

# Contents

	<b>Intended use</b> . . . . .	<b>4</b>
	<b>Safety instructions</b> . . . . .	<b>5</b>
	Electrical safety . . . . .	5
	Risk of injury . . . . .	5
	Safety for children . . . . .	6
	<b>Environmental protection</b> . . . . .	<b>7</b>
	Packaging/used appliance . . . . .	7
	Tips on economical use . . . . .	7
	<b>Main points in brief</b> . . . . .	<b>8</b>
	<b>Getting to know the appliance</b> . . . . .	<b>9</b>
	Washing machine . . . . .	9
	Control panel . . . . .	10
	Display panel . . . . .	10
	<b>Laundry</b> . . . . .	<b>11</b>
	Prepare the laundry . . . . .	11
	Sorting laundry . . . . .	11
	Starching . . . . .	12
	Dyeing/bleaching . . . . .	12
	Soaking . . . . .	12
	<b>Detergent</b> . . . . .	<b>12</b>
	Correct selection of detergent . . . . .	12
	Saving energy and detergent . . . . .	13
	<b>Programme default settings</b> . . . . .	<b>13</b>
	°C Temperature . . . . .	13
	Spin speed . . . . .	13
	Ready in . . . . .	14
	<b>Additional programme settings</b> . . . . .	<b>14</b>
	SpeedPerfect . . . . .	14
	EcoPerfect . . . . .	15
	Easy-Iron . . . . .	15
	Water Plus . . . . .	15
	Rinse Plus . . . . .	15

	<b>Operating the appliance</b> . . . . .	<b>15</b>
	Preparing the washing machine . . . . .	15
	Select programme/switch on the appliance . . . . .	15
	Change the programme default settings . . . . .	16
	Select additional programme settings . . . . .	16
	Placing laundry into the drum . . . . .	16
	Measure and add detergent and care products . . . . .	17
	Start the programme . . . . .	18
	Childproof lock . . . . .	18
	Adding laundry . . . . .	18
	Changing the programme . . . . .	19
	Cancel the programme . . . . .	19
	Programme end during	
	Rinse Stop . . . . .	19
	Programme end . . . . .	19
	Removing laundry/switching off the appliance . . . . .	19
	<b>Sensors</b> . . . . .	<b>20</b>
	Automatic load sensing . . . . .	20
	Unbalanced load detection system . . . . .	20
	<b>Setting the signal</b> . . . . .	<b>20</b>
	<b>Cleaning and maintenance</b> . . . . .	<b>21</b>
	Machine housing/control panel . . . . .	21
	Drum . . . . .	21
	Descaling . . . . .	21
	Detergent drawer and housing . . . . .	21
	Detergent solution pump blocked . . . . .	22
	The drain hose at the siphon is blocked . . . . .	23
	Filter in the water supply blocked . . . . .	23
	<b>Faults and what to do about them</b> . . . . .	<b>24</b>
	Emergency release . . . . .	24
	Information on the display panel . . . . .	24
	Faults and what to do about them . . . . .	25

	After-sales service . . . . .	27
	Technical data . . . . .	27
	Positioning and connecting. . .	28
	Included with the appliance . . . . .	28
	Installation . . . . .	28
	Secure installation . . . . .	28
	Installation surface . . . . .	29
	Installation on a base or a wooden joist floor . . . . .	29
	Installing the appliance in a kitchenette . . . . .	29
	Removing the transport locks . . . . .	29
	Hose and cable lengths . . . . .	30
	Water connection . . . . .	31
	Water inlet . . . . .	31
	Water outlet . . . . .	32
	Levelling . . . . .	33
	Electrical connection . . . . .	33
	Before washing for the first time . . .	34
	Transportation . . . . .	34

## Intended use

- For private domestic use only.
- The washing machine is suitable for washing machine-washable fabrics and hand-washable wool in water containing detergent.
- To be operated with cold mains water and standard detergents and care products which are suitable for use in washing machines.
- When measuring out the amount of all detergents, additives, care products and cleaning agents, always follow the manufacturer's instructions.
- The washing machine may be used by children over the age of 8 years and by persons with reduced physical, sensory or mental capacity or by persons with a lack of experience or knowledge if they **are supervised** or have been **instructed** by a responsible person. Children must not carry out any cleaning or maintenance work without supervision.
- Keep children under the age of 3 years away from the washing machine.
- This appliance is intended for use up to a maximum height of 4000 metres above sea level.
- Keep pets away from the washing machine.

**Before operating the appliance:** Read the installation and operating instructions and all other information enclosed with the washing machine, and use the machine accordingly.

Retain the documents for subsequent use.



## Safety instructions

### Electrical safety



#### **Warning**

##### **Risk of death!**

There is a risk of electric shock if live components are touched.

- Never touch or hold the mains plug with wet hands.
- Only pull out the mains cable by the plug and never by the cable, as this could damage it.

### Risk of injury



#### **Warning**

##### **Risk of injury!**

- The washing machine is very heavy. Be careful when lifting/transporting the washing machine; wear protective gloves.
- If the washing machine is lifted by protruding components (e.g. the washing machine door), the components may break off and cause injuries. Do not lift the washing machine by protruding parts.
- If you climb onto the washing machine, the worktop may break and cause injuries. Do not climb onto the washing machine.

- If you lean/sit on the opened washing machine door, the washing machine may tip over and cause injuries. Do not lean on the washing machine door when it is open.
- Reaching into the drum while it is still turning may cause hand injuries. Do not reach into the drum when it is turning. Wait until the drum has stopped turning.



#### **Warning**

##### **Risk of scalding!**

When washing at high temperatures, there is a risk of scalding if you come into contact with hot detergent solution (e.g. when draining hot detergent solution into a washbasin). Do not reach into the hot detergent solution.

## Safety for children

### **Warning** **Risk of death!**

There is a risk of death or injury if children play with the washing machine.

- Do not leave children unattended near the washing machine.
- Do not let children play with the washing machine.

### **Warning** **Risk of death!**

Children may lock themselves in appliances, putting their lives at risk.

For appliances that have reached the end of their service life:

- Unplug the mains plug.
- Cut through the mains cable and remove it, along with the plug.
- Destroy the lock on the washing machine door.

### **Warning** **Risk of suffocation!**

Children may become wrapped in packaging/film or packing parts if allowed to play with them, or they may pull them over their heads and suffocate. Keep packaging, film and packaging parts out of the reach of children.

### **Warning** **Risk of poisoning!**

Detergents and care products may be poisonous if consumed.

Keep detergents and care products out of the reach of children.

### **Warning** **Eye/skin irritation!**

Detergents and care products may cause irritation if they come into contact with the eyes or skin.

Keep detergents and care products out of the reach of children.

### **Warning** **Risk of injury!**

When washing at high temperatures, the glass in the washing machine door becomes hot.

Do not let children touch the hot washing machine door.



## Environmental protection

### Packaging/used appliance



Dispose of packaging in an environmentally friendly manner.




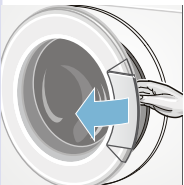
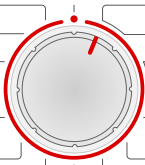

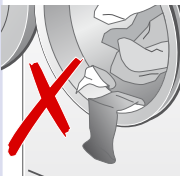
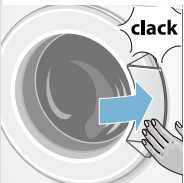
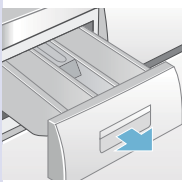
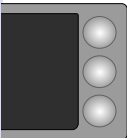
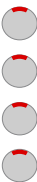



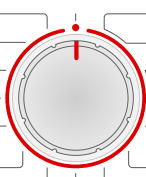

This appliance is designated according to European Directive 2012/19/EC, which governs waste electrical and electronic equipment (WEEE).

The directive provides a framework for the collection and recycling of old appliances, which is valid across the EU.

### Tips on economical use

- Always fill the appliance with the maximum amount of laundry for each programme.  
Programme overview →  
Supplementary sheet for the installation and operating instructions
- Wash normally soiled laundry without prewash.
- Refer to the care labels on the textiles for the selectable temperature. The temperatures in the machine may deviate from this for an optimum mix of energy-saving and washing results.
- If the laundry will be dried in a dryer, select the spin speed according to the dryer manufacturer's instructions.

## Main points in brief


1				
	Connect the mains plug.	Turn on the tap (for models without the AquaStop feature).	Sort the laundry.	Open the washing machine door.
2				
	Select a programme.	Load the laundry.	Do not trap any items of laundry.	Close the washing machine door.
3				
	Add detergent.	Change the programme default settings if necessary.	Select additional settings if necessary.	Press the Start button.
4				
	Programme end	Open the loading door and remove the laundry.	Turn the programme selector to ●.	Turn off the tap (for models without AquaStop).





## Getting to know the appliance


### Washing machine

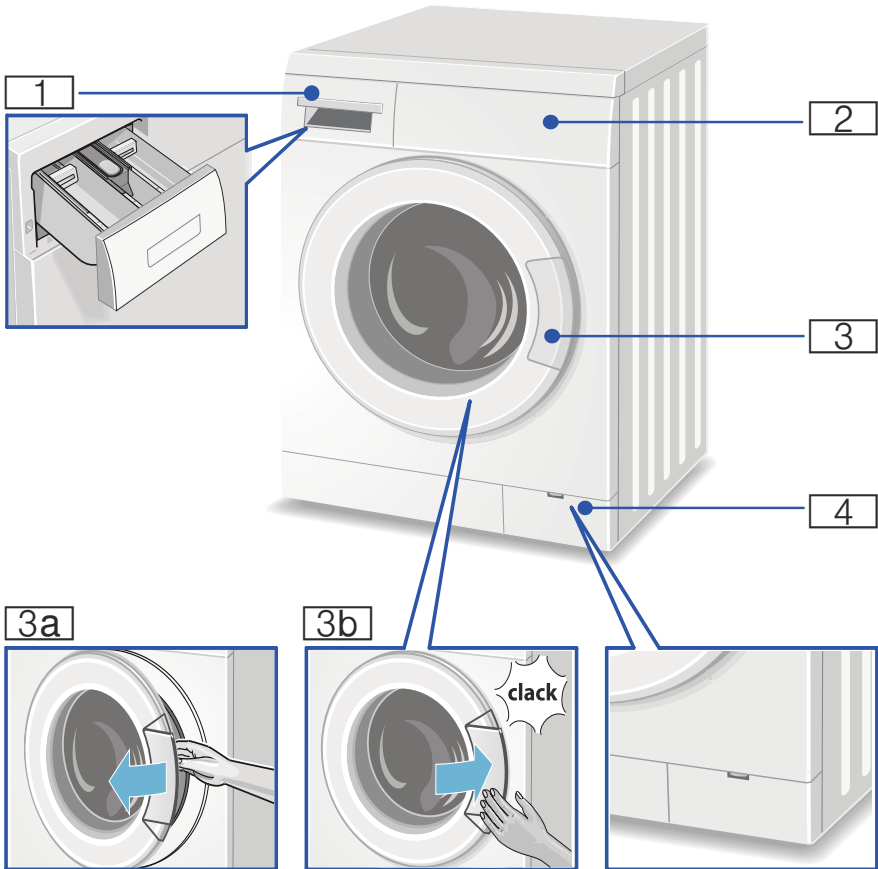

- 1 Detergent drawer → *Page 17*
- 2 Control/display panel → *Page 10*
- 3 Door with door handle
- 3a Open the loading door
- 3b Close the loading door
- 4 Service flap

## Control panel

You can find possible programme default settings and additional programme settings in the overview; these differ depending on the model.

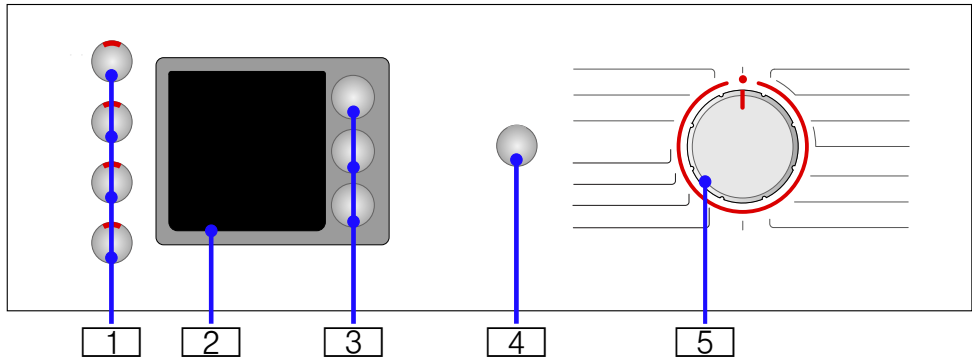

- 1

**additional programme settings** can be selected  
Overview of all additional programme settings → *Page 14*
- 2

**Display panel** for settings and information
- 3

**Programme default settings** can be changed  
Overview of all programme default settings → *Page 13*
- 4

**Start button** for starting, interrupting (e.g. to add laundry) and cancelling a programme
- 5






**Programme selector** for selecting the programme and for switching the washing machine on and off

## Display panel

**Note:** The table shows possible setting options and information in the display panel; these differ depending on the model.

Setting options and information for the selected programme (* depending on model)		
❄ - 90 °C	Temperature	in °C (degrees Celsius); ❄ = cold
🌀 ...1400* 🌀	Spin speed	in rpm (revolutions per minute); 🌀 = Rinse Stop (without final spin)
8 : 00	Programme duration	Depends on the programme selection in h:min (hours:minutes)
1 - 24 h	"Ready in" time	Programme ends after ... h (h = hours)

## Symbols for the programme sequence and information

   -	wash, rinse, spin, programme duration or end
	Open the washing machine door, add laundry → <i>Page 18</i>
	Childproof lock → <i>Page 18</i>

## Laundry

### Prepare the laundry


#### Caution!

#### Damage to the appliance/fabrics

Foreign objects (e.g. coins, paperclips, needles, nails) may damage the laundry or components in the washing machine.

You should therefore note the following tips when preparing your laundry:

- Empty any pockets.

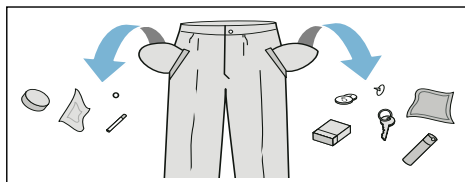




- Look out for metal items (paperclips, etc.) and remove them.
- Wash delicates in a laundry bag (tights, underwired bras, etc.).
- Close any zips; button up any cover buttons.
- Brush sand out of pockets and collars.
- Remove curtain fittings or place curtains in a laundry bag.

### Sorting laundry


Sort your laundry according to the care instructions and manufacturer's information on the care labels, depending on:

- Type of fabric/fibre.
- Colour:  
**Note:** Laundry can discolour or not be cleaned correctly. Wash white and coloured items separately. Wash new coloured items separately the first time you wash them.
- Soiling:  
Wash laundry with the same level of soiling together.  
Examples of levels of soiling:
  - **Light:** Do not prewash; if necessary, select the additional programme setting 
  - **SpeedPerfect**
  - **Normal**
  - **Heavy:** Load less laundry, select a programme with prewash
  - **Stains:** Remove/pretreat stains while they are fresh. Firstly, dab with soapy water; do not rub. Then wash the items of laundry with the appropriate programme. Stubborn or dried-in stains can sometimes only be removed by washing several times.
- Symbols on the care labels:  
The numbers in the symbols indicate the maximum washing temperature that may be used.
  - : Suitable for a normal washing process; e.g. the Cottons programme.
  - : A gentle washing process is required; e.g. the Easy-Care programme.
  - : An especially gentle washing process is required; e.g. the Delicates/Silk programme

-  : Suitable for washing by hand; e.g. the  / Wool programme.
- : Do not wash the laundry in the machine.

## Starching

**Note:** Laundry should not be treated with fabric softener.

Starching is possible in all wash programmes if liquid starch is used. Measure starch into compartment  in accordance with the manufacturer's instructions (clean first if necessary).

## Dyeing/bleaching

Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions.

Do **not** use the washing machine to bleach clothes.

## Soaking

1. Pour soaking agent/detergent into compartment **II** in accordance with the manufacturer's instructions.
2. Turn the programme selector to the **Cottons 30 °C** programme.
3. Press the **Start button** to start the programme.
4. After approx. 10 minutes, press the **Start button** again to pause the programme.
5. After the required soaking time, press the **Start button** again if the programme is to be continued or changed.

## Notes

- Load laundry of the same colour.
- No additional detergent is required; the soaking solution is used for washing.



## Detergent

### Correct selection of detergent

The care label is crucial to ensure correct detergent selection, temperature and laundry treatment. → See also [www.sartex.ch](http://www.sartex.ch)

Visit [www.cleanright.eu](http://www.cleanright.eu) to find further information on detergents, care products and cleaning agents for domestic use.

- **Standard detergent with optical brighteners**  
Suitable for heat-resistant white laundry made from linen or cotton  
Select the Cottons programme, cold – max. 90 °C.
- **Detergent for colours without bleach or optical brighteners**  
Suitable for coloured laundry made from linen or cotton  
Select the Cottons programme, cold – max. 60 °C.
- **Detergent for colours/delicates without optical brighteners**  
Suitable for coloured laundry made from easy-care fibres or synthetic fibres  
Select the Easy-Care programme, cold - max. 60 °C.
- **Detergent for delicates**  
Suitable for delicate, fine fabrics, silk or viscose  
Select the Delicates/Silk programme, cold – max. 40 °C.
- **Detergent for woollens**  
Suitable for woollen fabrics  
Select the Wool programme, cold – max. 40 °C.

## Saving energy and detergent

For light and normal soiling, you can save energy (by lowering the washing temperature), and detergent.

Saving	Soiling/note
Reduced temperature and detergent quantity as per the recommended dosage	<b>Light</b> No visible dirt or stains. Clothing has absorbed body odours, e.g.: <ul style="list-style-type: none"> <li>■ Light summer/sports clothing (worn for a few hours)</li> <li>■ T-shirts, shirts, blouses (worn for up to one day)</li> <li>■ Guest bed linen and hand towels (used for one day)</li> </ul>
	<b>Normal</b> Visible dirt or a few light stains, e.g.: <ul style="list-style-type: none"> <li>■ T-shirts, shirts, blouses (sweat-soaked, worn a few times)</li> <li>■ Towels, bedding (used for up to one week)</li> </ul>
Temperature as per the care label, and detergent quantity as per the recommended dosage for heavy soiling	<b>Heavy</b> Dirt and/or stains clearly visible, e.g. tea towels, baby items, work clothing

**Note:** When measuring the amount of all detergents/additives/care products and cleaning agents, please always check the manufacturer's instructions and information. → Page 18

## P+ Programme default settings

**Note:** You can find possible programme default settings in the overview; these differ depending on the model.

The programme default settings for all programmes are preset at the factory and are displayed in the display panel after the programme is selected.

### °C Temperature

( Temp. °C)


Depending on the programme progress, you can change the preset washing temperature (in °C) before and during the programme.

Press the temperature button repeatedly until the required temperature is displayed in the display panel.

The maximum temperature that can be set depends on the programme that has been selected.

Programme overview → Supplementary sheet for the installation and operating instructions

### Spin speed

(Spin, rpm, )

Depending on the programme progress, you can change the spin speed (in rpm; revolutions per minute) before and during the programme.

To do this, press the Spin Speed button repeatedly until the required spin speed is displayed in the display panel.

The maximum speed that can be selected depends on the model and programme that has been selected.

☒ **Rinse Stop** setting (without final spin). The laundry remains in the water after the last rinse cycle.

You can select ☒ **Rinse Stop** (without final spin) to prevent creasing if the laundry is not taken out of the washing machine immediately after the programme has ended.

Programme overview →  
Supplementary sheet for the installation and operating instructions

## 🕒 Ready in

(**Finished in**, 🕒, 🕒, 🕒)

The respective programme duration is displayed by selecting the programme.

The length of the programme is automatically adjusted when the programme is running. Changes to the programme default settings or additional programme settings also change the programme duration.

**Before starting the programme**, the programme end ("Ready in" time) can be preselected in increments of one hour (h = hours) up to a maximum of 24 hours.

1. Select the required programme.

**Note:** The programme duration is displayed in the display panel.

2. Press the **Ready in** button repeatedly until the required number of hours is displayed in the display panel.

3. Press the **Start button**.

The set "Ready in" time is now active. The selected programme starts automatically and ends after the selected number of hours. After the programme has started, the programme duration, e.g. 2:30 (hours:minutes), is displayed in the display panel.

**Note:** The programme duration is included in the selected "Ready in" time.

## Changing the preselected time:

You can change the preselected time before the start of the programme as follows:

1. Press the **Start button**.
2. Press the **Ready in** button repeatedly until the required number of hours is displayed.
3. Press the **Start button** again.

## Adding laundry while the preselected time continues running:

1. Press the **Start button**.
2. The symbols **YES** and 🕒 light up in the display panel. The washing machine door can be opened and laundry can be added.
3. Close the washing machine door.
4. Press the **Start button**. The preselected time continues to run.

## P+ Additional programme settings

**Note:** You can find possible additional programme settings in the overview; these differ depending on the model.

## ≡🕒 SpeedPerfect

(≡🕒 **Speed Perfect, Speed**)

For a shorter wash time with a comparable washing effect to the standard programme.


**Note:** Do not exceed the maximum load.

Programme overview →  
Supplementary sheet for the installation and operating instructions

## EcoPerfect

### Eco Perfect, Eco

Energy-optimised washing by reducing the temperature, while achieving a comparable result.

**Note:** The washing temperature is lower than the selected temperature. The **Hygiene/Allergy/Sensitive** programme is recommended for special hygiene requirements. If there is no Hygiene/Allergy/Sensitive programme on the programme selector, select a higher temperature or the additional  **SpeedPerfect** programme setting.

## Easy-Iron

### Easy Iron, Reduced Ironing

For a gentle final spin with subsequent fluffing. Residual moisture of the laundry is increased slightly.

## Water Plus

### Extra Water, Water Plus, Aqua Plus

Increased water level and additional rinse cycle, extended washing time. For areas with very soft water or for further enhancing the rinsing result.

## Rinse Plus

### Extra Rinse, Rinse Plus

Additional rinse cycle. For areas with very soft water or for further enhancing the rinsing result.



## Operating the appliance


**Note:** **Correctly install** and **connect** the washing machine. From → *Page 28*

Before the first wash, run a wash **without** any laundry. → *Page 34*

## Preparing the washing machine

### Notes

- Never switch on a damaged washing machine.
  - Inform the after-sales service. → *Page 27*
1. Connect the mains plug.
  2. Turn on the tap.
  3. Open the washing machine door.
  4. Check that the drum is completely drained. Drain if necessary.

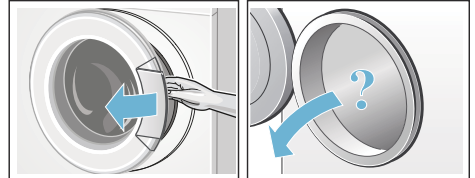

## Select programme/switch on the appliance

**Note:** If you have activated the childproof lock, you must first deactivate it before you can set a programme.

Use the programme selector to select the required programme. Can be rotated in either direction.

The machine is switched on.

The following appears on the display panel:

- The programme duration,
- The preset temperature,

- The preset spin speed.

## Change the programme default settings

You can use the displayed programme default settings or adjust them.

To do this, repeatedly press the corresponding button until the required setting is displayed. Then press the Start button to start the programme.

**Note:** All buttons are sensitive and only need to be touched lightly. If the buttons are held for longer, the appliance automatically runs through the setting options.

The settings are activated without needing to be confirmed.

They are not saved after the appliance is switched off.

Programme default settings → *Page 13*

Programme overview from →  
Supplementary sheet for the installation  
and operating instructions

## Select additional programme settings

By selecting additional settings, you can better adapt the washing process to your items of laundry.

The settings can be selected or deselected depending on the progress of the programme.

The button indicator lamps light up if a setting is activated.

The settings are not saved when the appliance is switched off.

Additional settings → *Page 14*

Programme overview from →  
Supplementary sheet for the installation  
and operating instructions

## Placing laundry into the drum




### Warning Risk of death!

Items of laundry pretreated with cleaning agents that contain solvents, e.g. stain remover/cleaning solvent, may cause an explosion after being loaded into the washing machine. Hand-rinse these items of laundry thoroughly beforehand.

### Notes

- Mix items of laundry of varying sizes. Laundry items of different sizes distribute themselves better during the spin cycle. Individual laundry items may cause an unbalanced load.
  - Observe the maximum indicated load. Overfilling adversely affects the washing result and encourages creasing.
1. Unfold pre-sorted items of laundry before placing them in the washing drum.
  2. Make sure that no items of laundry are trapped between the washing machine door and the rubber seal, and close the door.

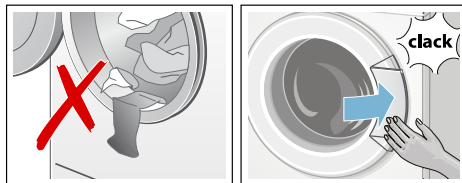

The indicator light on the Start button flashes, and the default settings for the programme appear continuously on the display panel. Changes may be made to the default settings.



## Measure and add detergent and care products

### Caution!

#### Damage to the appliance

Cleaning agents and agents for pre-treating laundry (e.g. stain removers, prewash sprays, etc.) may cause damage if they come into contact with the surfaces of the washing machine. Do not allow these agents to come into contact with the surfaces of the washing machine. If necessary, immediately wipe away spray residue and other residues/droplets with a damp cloth.

### Measuring

Measure the detergents and care products according to:

- Water hardness (ask your water supply company)
- The manufacturer's instructions on the packaging
- The amount of laundry
- Soiling → *Page 13*

### Filling



#### Warning

#### Eye/skin irritation!


Detergent and care products may run out if the detergent drawer is opened while the machine is in operation. Open the drawer carefully. Rinse eyes/skin thoroughly if they come into contact with detergents or care products. If swallowed accidentally, seek medical advice.

### Notes

- When measuring the amount of all detergents, additives, care products and cleaning agents, always follow the manufacturer's instructions.
- Dilute viscous fabric softener and fabric conditioner with a little water. This will prevent blockages.

- Pour liquid detergent into corresponding dispenser and place in the drum.


Pour the detergent and care products into the appropriate compartments:

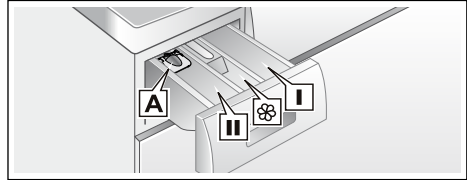

Measuring aid\* For liquid detergent

**A**

Compartment **II** Detergent for the main wash, water softener, bleach, stain remover

Dispenser  Softener, starch, Do not exceed the "max" mark

Compartment **I** Detergent for prewash


1. Pull out the detergent drawer as far as possible.
2. Add detergent and/or care products.
3. Close the detergent drawer.

### Measuring aid\* for liquid detergent

\*depending on the model

For measuring the liquid detergent, position the measuring aid as follows:

1. Pull out the detergent drawer. Press down the insert and fully remove the drawer.
2. Slide the measuring aid forward, fold it down and click it into place.
3. Reinsert the drawer.

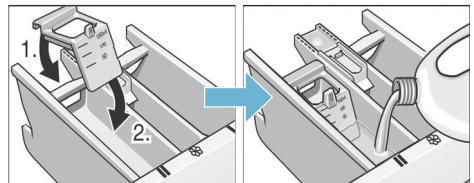


**Note:** Do not use the measuring aid for gel detergents and washing powder, or for programmes with prewash, or when the "Ready in" time has been selected.

**For models without a measuring aid,** pour the liquid detergent into the appropriate dispenser and place it in the drum.

## Start the programme


Press the **Start button** to start the programme.



The display panel shows the "Ready in" time while the programme is running, or the programme duration and the programme progress symbols when the washing programme has started. Display panel. → *Page 10*

**Note:** Press the  symbol (childproof lock) to stop the programme from being inadvertently adjusted.

## Childproof lock

To prevent the set functions of the washing machine from being accidentally changed, activate the childproof lock when the programme has started.

To **activate/deactivate** the childproof lock, press and hold the **Start button** for approx. five seconds. The  symbol appears on the display panel.

- When  lights up: The childproof lock is activated.
- When  flashes: The childproof lock is activated and the programme selector has been adjusted. To prevent the programme from stopping, turn the programme selector back to the original programme. The symbol lights up again.

**Note:** The childproof lock remains activated after the programme has ended and the appliance has been switched off. You must always deactivate the childproof lock if you want to start a new programme.

## Adding laundry




After starting the programme, you can add or remove laundry:

1. Press the **Start button** to cancel the programme.

The Start button indicator lamp flashes and the machine checks whether it is possible to add laundry.

**Note:** Do not leave the washing machine door open for too long when adding laundry, as water from the laundry may leak out.

If the following appears on the display panel:

- **Both** the **YES** and  symbols are lit up, it is possible to add laundry.
- **NO** flashes, wait until the **YES** and  light up. Do not open the washing machine door until **both** the **YES** and  symbols are lit.
- The **NO** symbol is lit up, it is not possible to add laundry. For safety reasons, the washing machine door remains locked when the water level or temperature is high, or while the drum is turning, and it is not possible to add laundry during this time.

2. To continue the programme, press the **Start button** again.

## Changing the programme

If you have started the wrong programme by mistake, you can change it as follows:


1. Press the **Start button** to cancel the programme.
2. Select a different programme.
3. Press the **Start button** again. The new programme starts from the beginning.

## Cancel the programme

1. Press the **Start button** to cancel the programme.
2. To cool the laundry: Select the **Rinse** programme.
3. Press the **Start button** again. The Rinse programme starts.

After the programme has ended, you can remove the laundry.


## Programme end during Rinse Stop


The  **Rinse Stop** (without final spin) symbol appears in the display panel, and the Start button indicator lamp flashes.

To end the programme:

1. Select the **Spin** or **Empty** programme.
2. Press the **Start button**.

## Programme end

The  symbol appears in the display panel, and the Start button indicator lamp flashes.

If the  symbol also appears in the display panel, the washing machine has detected too much foam during the wash programme and has automatically switched on a rinse cycle to remove the foam.

**Note:** Add less detergent to the next washing cycle with the same load.

## Removing laundry/switching off the appliance


1. Open the washing machine door and remove the laundry.  
**Note:** If you cannot open the washing machine door, the appliance is still locked. Wait until the programme has ended.
2. Set the programme selector to the **Off** position. The appliance is switched off.
3. Turn off the tap.

**Note:** Not required for AquaStop models.

Scope of delivery → *Page 28*

### Notes

- Do not leave any items of laundry in the drum. They may shrink in the next wash or discolour another item.
- Remove any foreign objects from the drum and the rubber seal – risk of rusting.

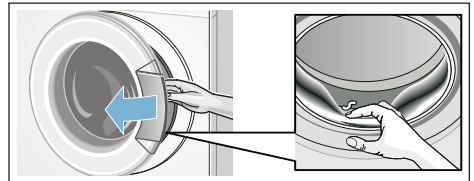

- Leave the washing machine door and detergent drawer open so that any residual water can evaporate.
- Always remove the laundry.
- Always wait until the programme has ended, as the appliance could still be locked.

## Sensors

### Automatic load sensing

The automatic load sensing function optimally adjusts the water consumption to each programme depending on the type of fabric and the load.

### Unbalanced load detection system

The automatic unbalanced load detection system detects imbalances


and ensures even distribution of the laundry by repeatedly starting and stopping drum spinning.

If the laundry is extremely unevenly distributed, the speed is reduced or the spin cycle is not performed for safety reasons.


**Note:** Place large and small items of laundry in the drum (from → *Page 25*).

## Setting the signal

### 1. Activate the setting mode for the signal volume

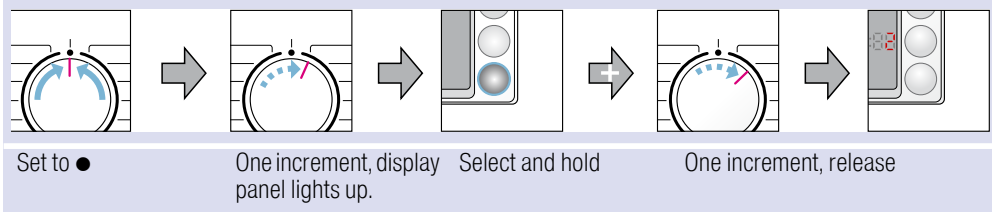

### 2. Set the volume for the button signals and information signals (depending on the model)

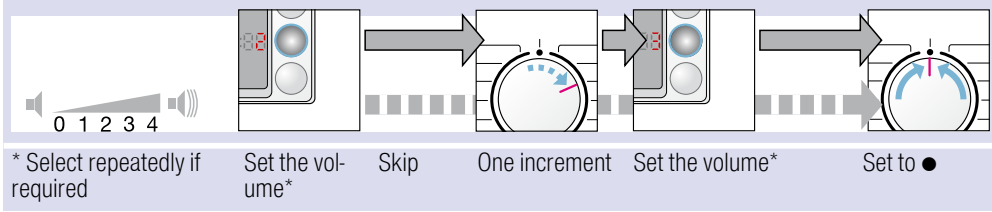



## Cleaning and maintenance

### Warning

#### Risk of death!

There is a risk of electric shock if live components are touched. Switch off the appliance and pull out the mains plug.

### Warning

#### Risk of poisoning!

Toxic vapours can be produced from cleaning agents that contain solvents, e.g. cleaning solvent. Do not use cleaning agents that contain solvents.

### Caution!

#### Damage to the appliance

Cleaning agents that contain solvents, e.g. cleaning solvent, can damage surfaces and components in the machine. Do not use cleaning agents that contain solvents.

## Machine housing/control panel

- Wipe the housing and the control panel with a soft, damp cloth.
- Do not use any abrasive cloths, scourers or cleaning agents (stainless-steel cleaners).
- Remove the detergent residue immediately.
- Cleaning with a water jet is prohibited.

## Drum

Wipe the inside of the rubber seal dry with a cloth. Leave the washing machine door open so that the drum can dry. Use chlorine-free cleaning agents; do not use steel wool.

**Note:** In order to keep the washing machine clean, run it through on the **Cottons 90 °C** programme on a regular basis.

## Descaling


**Note:** Make sure that there is no laundry in the machine.

Descaling should not be necessary if the detergent is measured out correctly. However, if it is required, follow the manufacturer's instructions for the descaling agent. Suitable descalers can be obtained via our website or from our after-sales service. → *Page 27*

## Detergent drawer and housing

If there is detergent or fabric softener residue:

1. Pull out the detergent drawer. Press down the insert and fully remove the drawer from the housing.
2. To remove the insert: Push the insert upwards from below with your finger.

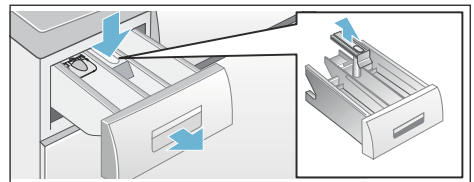

3. Clean the detergent dispenser tray and insert with water and a brush, and dry. Also remove any detergent or fabric softener residue in the housing.
4. Fit the insert and lock it in place (push the cylinder onto the guide pin).
5. Push in the detergent drawer.


**Note:** Leave the detergent drawer open so that any residual water can evaporate.

## Detergent solution pump blocked


### **Warning** **Risk of scalding!**

When washing at high temperatures, the detergent solution becomes hot. If you come into contact with the hot detergent solution, you may be scalded. Allow the detergent solution to cool down.


1. Turn off the water tap so that no more water can flow in and has to be drained via the detergent solution pump.
2. Switch off the appliance. Pull out the mains plug.
3. Open and remove the service flap.

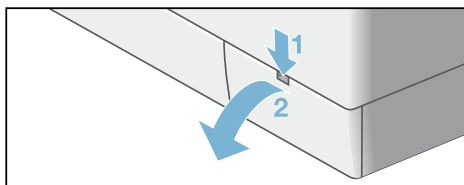


4. For models:
  - **With a drainage hose:** Remove the drainage hose from its holder and remove the sealing cap. Allow the detergent solution to flow out into a suitable container. Replace the sealing cap on the drainage hose, and place the drainage hose back in its holder.

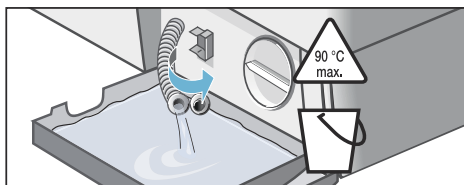


- **Without a drainage hose::** Carefully unscrew the pump cover until the detergent solution begins to flow out. When the service flap is half full, close the pump cover and drain the service flap. Repeat the above steps until all the detergent solution has completely drained out.

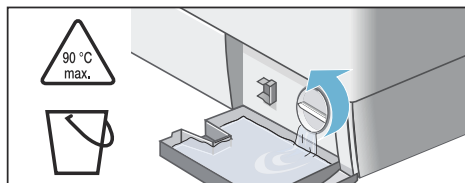

5. Carefully unscrew the pump cover; residual water may leak out. Clean the interior, pump-cover thread and pump housing. The impeller in the detergent solution pump must be able to rotate. Refit and screw on the pump cover. The handle must be in a vertical position.

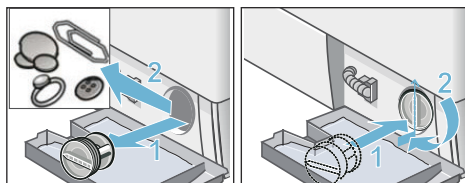


6. Put the service flap back on, lock it into place and close it.

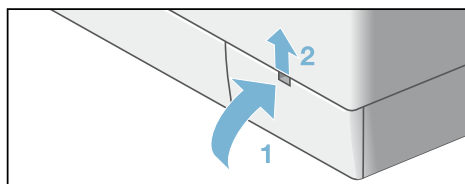

**Note:** To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment **II** and start the **Empty** programme.

## The drain hose at the siphon is blocked

1. Switch off the appliance. Pull out the mains plug.
2. Loosen the hose clamp. Carefully remove the drain hose; residual water may leak out.
3. Clean the drain hose and siphon connecting piece.

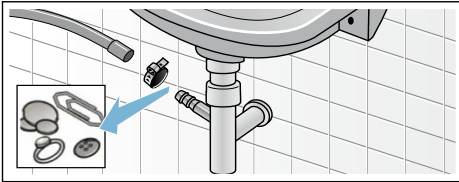

4. Re-attach the drain hose and secure the connection point using the hose clamp.

## Filter in the water supply blocked




### Warning

#### Risk of electric shock!


Do not immerse the AquaStop safety valve in water (it contains an electric valve).

First, reduce the water pressure in the supply hose:

1. Turn off the tap.
2. Select any programme (except **Rinse/Spin/Empty**).
3. Press the **Start button**. Allow the programme to run for approximately 40 seconds.
4. Set the programme selector to the **Off** position. Pull out the mains plug.
5. Clean the filter on the tap:  
Disconnect the hose from the tap.  
Clean the filter with a small brush.

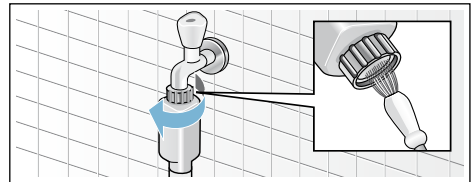

6. For standard and AquaSecure models, clean the filter on the rear of the appliance:  
Disconnect the hose from the rear of the appliance,  
Use pliers to remove the filter and then clean it.

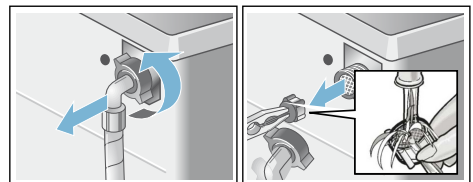

7. Connect the hose and check for leaks.

## Faults and what to do about them.

### Emergency release

E.g. in the event of a power cut

The programme continues when the power supply is restored.

However, if the laundry has to be removed, the washing machine door can be opened as follows:

#### **Warning** **Risk of scalding!**

When you are washing at high temperatures, there is a risk of scalding if you come into contact with hot detergent solution and laundry. If possible, leave it to cool down first.


#### **Warning** **Risk of injury!**

Reaching into the drum while it is still turning may cause hand injuries. Do not reach into the drum when it is turning. Wait until the drum has stopped turning.

#### **Caution!** **Water damage**

Any escaping water may cause water damage.  
Do not open the washing machine door if water can be seen through the glass.



1. Switch off the appliance. Pull out the mains plug.
2. Drain the detergent solution
3. Use a tool to pull the emergency release downwards and then release.  
The washing machine door can then be opened.

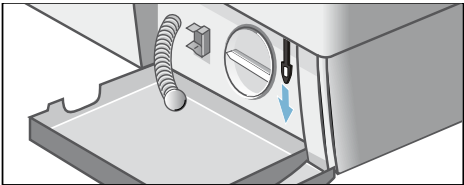





### Information on the display panel


Display	Cause/remedy
YES	■ The washing machine door is unlocked. It is possible to add laundry.
NO	■ The temperature is too high. Wait until the temperature drops. ■ The water level is too high. It is not possible to add laundry. Close the door immediately, if necessary. Press the <b>Start button</b> to continue the programme.
NO flashes	■ Wait until the <b>YES + ①</b> symbols light up. ■ Note: Do not open the washing machine door until <b>both</b> the <b>YES + ①</b> symbols light up.
F:16	■ Close the washing machine door properly; washing may be trapped.
F:17	■ Turn the tap on fully, → <i>Page 31</i> ■ Supply hose kinked/trapped, ■ The water pressure is too low. Clean the filter. → <i>Page 23</i>



Display	Cause/remedy
F:18	<ul style="list-style-type: none"> <li>■ Detergent solution pump blocked. Clean the detergent solution pump. → <i>Page 22</i></li> <li>■ The drain hose/drain pipe is blocked. Clean the drain hose on the siphon. → <i>Page 23</i></li> </ul>
F:21	<ul style="list-style-type: none"> <li>■ Motor fault. Call the after-sales service! → <i>Page 27</i></li> </ul>
F:23	<ul style="list-style-type: none"> <li>■ There is water in the base trough; the appliance is leaking. Call the after-sales service! → <i>Page 27</i></li> </ul>
	<ul style="list-style-type: none"> <li>■ Childproof lock is active; deactivate it. → <i>Page 18</i></li> </ul>
 flashes	<ul style="list-style-type: none"> <li>■ Too much foam detected, a rinse cycle has been switched on → <i>Page 19</i></li> </ul>
Other displays	<ul style="list-style-type: none"> <li>■ Switch off the appliance, wait for five seconds and then switch it on again. If the display appears again, call the after-sales service! → <i>Page 27</i></li> </ul>

## Faults and what to do about them.

Faults	Cause/remedy
Water is leaking from the appliance.	<ul style="list-style-type: none"> <li>■ Attach the drain hose correctly or replace it. → <i>Page 32</i></li> <li>■ Tighten the screw connection on the supply hose. → <i>Page 31</i></li> </ul>
The appliance is not filling with water.	<ul style="list-style-type: none"> <li>■ Has the <b>Start button</b> been pressed?</li> <li>■ Is the tap turned on? → <i>Page 31</i></li> <li>■ Could the filter be clogged? Clean the filter. → <i>Page 23</i></li> <li>■ Is the inlet hose kinked or trapped?</li> </ul>
Detergent is not being dispensed.	
The washing machine door cannot be opened.	<ul style="list-style-type: none"> <li>■ The safety function is activated. Cancel the programme? → <i>Page 19</i></li> <li>■  <b>Rinse Stop</b> (without final spin) selected?</li> <li>■ Can the door only be opened by the emergency release? → <i>Page 24</i></li> </ul>
The programme will not start.	<ul style="list-style-type: none"> <li>■ Has the <b>Start button</b> been pressed to pause the programme, or has the <b>Ready in</b> time been selected?</li> <li>■ Is the washing machine door closed?</li> <li>■ Is  (childproof lock) activated? Deactivate. → <i>Page 18</i></li> </ul>
The water is not draining.	<ul style="list-style-type: none"> <li>■  <b>Rinse Stop</b> (without final spin) selected?</li> <li>■ Clean the detergent solution pump. → <i>Page 22</i></li> <li>■ Clean the drain pipe and/or the drain hose. → <i>Page 23</i></li> </ul>
Water is not visible in the drum.	<ul style="list-style-type: none"> <li>■ Not a fault – the water is below the visible area.</li> </ul>
The spin result is not satisfactory.	<ul style="list-style-type: none"> <li>■ Not a fault – the unbalanced load detection system has interrupted the spin because the laundry is unevenly distributed. Distribute small and large items of laundry evenly in the drum.</li> </ul>
Laundry is wet/too damp.	<ul style="list-style-type: none"> <li>■ Has the additional programme setting  <b>Easy Iron</b> also been selected?</li> <li>■ Is the selected speed too low?</li> </ul>
The spin cycle runs several times.	<ul style="list-style-type: none"> <li>■ Not a fault – the unbalanced load detection system is adjusting an imbalance.</li> </ul>

Faults	Cause/remedy
The programme is taking longer than usual.	<ul style="list-style-type: none"> <li>■ Not a fault – the unbalanced load detection system is adjusting an imbalance by repeatedly distributing the laundry.</li> <li>■ Not a fault – the foam detection system is activated – a rinse cycle has been switched on.</li> </ul>
The length of the programme changes during the washing cycle.	<ul style="list-style-type: none"> <li>■ Not a fault – the programme sequence is optimised for the specific washing process. This may change the length of the programme shown in the display panel.</li> </ul>
There is residual water in the care product compartment.	<ul style="list-style-type: none"> <li>■ Not a fault – the effectiveness of the care product is not affected.</li> <li>■ If necessary, clean the insert and detergent drawer. → <i>Page 21</i></li> </ul>
There are odours or greasy deposits in the washing machine.	<ul style="list-style-type: none"> <li>■ Run the <b>Cottons 90 °C</b> programme without any laundry. Use standard detergent for this.</li> </ul>
The  symbol is flashing on the display panel. Foam may be leaking from the detergent drawer.	<ul style="list-style-type: none"> <li>■ Have you used too much detergent? Mix one tablespoon of fabric softener with 1/2 litre of water and pour into compartment <b>II</b> (not for outdoor fabrics or those made with down). Use less detergent in the next washing cycle.</li> </ul>
Loud noises, vibrations and machine “movement” during the spin cycle.	<ul style="list-style-type: none"> <li>■ Is the appliance aligned? Align the appliance? → <i>Page 33</i></li> <li>■ Are the appliance feet secured? Secure the appliance's feet. → <i>Page 33</i></li> <li>■ Have the transportation safety devices been removed? Remove the transportation safety devices.</li> </ul>
Noises during spin and drain cycles.	<ul style="list-style-type: none"> <li>■ Clean the detergent solution pump → <i>Page 22</i></li> </ul>
The display panel/indicator lamps do not work while the appliance is running.	<ul style="list-style-type: none"> <li>■ Has there been a power cut?</li> <li>■ Have the fuses blown? Switch on/replace the fuses.</li> <li>■ If the fault occurs repeatedly, call the after-sales service. → <i>Page 27</i></li> </ul>
There is detergent residue on the laundry.	<ul style="list-style-type: none"> <li>■ Some phosphate-free detergents contain water-insoluble residue.</li> <li>■ Select the <b>Rinse</b> programme or brush the laundry after washing.</li> </ul>
<b>NO</b> appears on the display panel in Pause mode.	<ul style="list-style-type: none"> <li>■ The water level is too high. It is not possible to add laundry. Close the washing machine door immediately, if necessary.</li> <li>■ Press the <b>Start button</b> to continue the programme.</li> </ul>
The <b>YES</b> symbol appears in the display panel in Pause mode.	<ul style="list-style-type: none"> <li>■ The washing machine door is unlocked. It is possible to add laundry.</li> </ul>
If you cannot rectify a fault yourself (after switching the machine off and on again) or a repair is required:	
<ul style="list-style-type: none"> <li>■ Set the programme selector to the <b>Off</b> position. The appliance is switched off.</li> <li>■ Unplug the mains plug from the socket.</li> <li>■ Turn off the tap and call the after-sales service. → <i>Page 27</i></li> </ul>	



## After-sales service

If you cannot rectify the fault yourself (Faults – what to do? → *Page 25*), please contact customer services. → Cover page

We will always find an appropriate solution to avoid unnecessary visits by engineers.

Please provide the after-sales service with the product number (E no.) and the production number (FD) of the appliance.

E-Nr. _____ FD _____	
Product number	Production number

You can find this information (\* depending on the model):

On the inside of the washing machine door\*/in the opened service flap\* and on the rear of the appliance.

### Trust the expertise of the manufacturer.

Contact us. By doing so, you can be sure that the repairs are carried out by trained service personnel using genuine spare parts.



## Technical data

### Dimensions:

850 x 600 x 590 mm

(height x width x depth)

### Weight:

68 - 75 kg (depending on model)

### Mains connection:

Mains voltage 220 - 240 V/50 Hz

Nominal current 10 A

Nominal power 2000 – 2300 W

### Water pressure:

100 - 1000 kPa (1 - 10 bar)

### Power consumption when switched off:

0.20 W


### Power consumption when ready for use (left-on mode):

1.90 W



## Positioning and connecting

### Included with the appliance

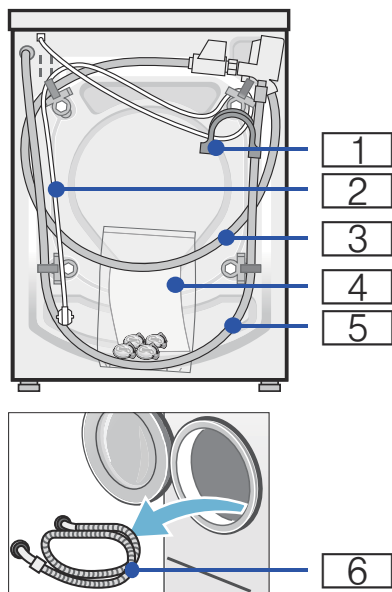

- 1 Elbow for securing the water drain hose
  - 2 Mains cable
  - 3 Water supply hose on AquaStop/  
AquaSecure models
  - 4 Bag\*:
    - Installation and operating instructions
    - After-sales service location directory\*
    - Warranty\*
    - Cover caps for openings after the transportation safety devices have been removed
    - Spanner\*
  - 5 Water drain hose
  - 6 Water supply hose on standard models
- \* depending on the model

### Notes

- Check the machine for transport damage. Never use a damaged machine. If you have any complaints, contact the retailer from whom you purchased the appliance, or our after-sales service.
- Moisture in the drum is due to the final inspection.

**In addition**, a hose clamp (24 – 40 mm diameter, available from specialist retailers) is required to connect the water drain hose to a siphon.

### Useful tools

- Spirit level for aligning
- Wrench with:
  - WAF13 for loosening the transportation safety devices and
  - WAF17 for aligning the appliance feet

## Installation

**Note:** Moisture in the drum is due to the final inspection.

## Secure installation



### Warning Risk of injury!

- The washing machine is very heavy. Be careful when lifting/transporting the washing machine; wear protective gloves.
- If the washing machine is lifted by protruding components (e.g. the washing machine door), the components may break off and cause injuries. Do not lift the washing machine by protruding parts.
- If the hose and mains cables are not laid properly, there is a risk of tripping and injury. Lay hoses and cables in such a way that there is no risk of tripping.

**Caution!****Damage to the appliance**

- Frozen hoses may crack/burst. Do not install the washing machine in areas exposed to frost and/or outdoors.

**Note:** If in doubt, have the appliance connected by a technician.

**Installation surface**

**Note:** The washing machine must be stable so that it does not move around.

- The installation surface must be firm and level.
- Soft floors/floor coverings are not suitable.

**Installation on a base or a wooden joist floor****Caution!****Damage to the appliance**

The washing machine may “wander” and tip/topple from the base during the Spin cycle.

Always secure the washing machine feet with fixing brackets.

Order no. WMZ2200, WX975600, Z7080X0

**Note:** On wooden joist floors, install the washing machine:

- In a corner, if possible,
- On a water-resistant wooden board (min. 30 mm thick) which is screwed tightly to the floor.

**Installing the appliance in a kitchenette****Warning  
Risk of death!**

There is a risk of electric shock if live components are touched.

Disconnect the appliance from the power supply.

**Notes**

- A recess width of 60 cm is required.
- Only install the washing machine underneath a continuous worktop that is securely connected to adjacent cabinets.

**Warning  
Risk of electric shock!**


If you remove the appliance covering plate for installation underneath the worktop or in a unit, you must always replace it with a metal cover\*.

\* Order no. WMZ2420, WZ10190


**Removing the transport locks****Caution!****Damage to the appliance**

- The machine is secured for transportation using transport locks. If the transport locks are not removed, the machine may become damaged when it is operated. Before using the appliance for the first time, make sure that you completely remove all four transport locks. Keep the locks in a safe place.
- To prevent transport damage from occurring if the appliance is moved at a later date, you must refit the transport locks before transporting the appliance.


**Note:** Keep the screws and sleeves screwed together in a safe place.

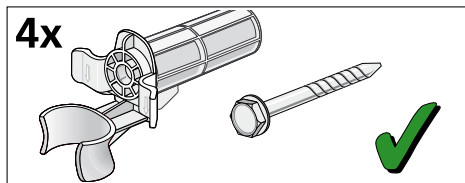


1. Take the hoses out of the holders.

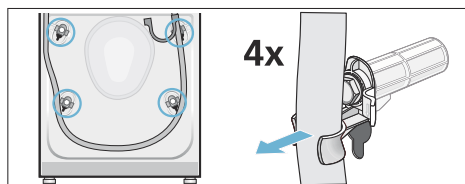

2. Remove the mains cable from the holders. Unscrew and remove all four transport lock screws. Remove the sleeves.

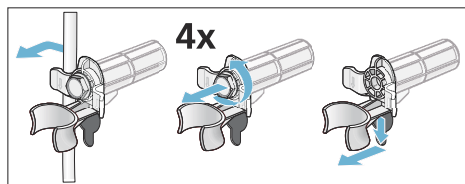


3. Fit the covers. Lock the covers firmly in place by applying pressure to the snap-in hooks.

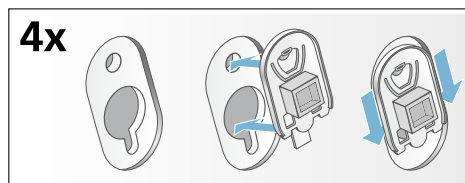


## Hose and cable lengths

### Left-hand connection

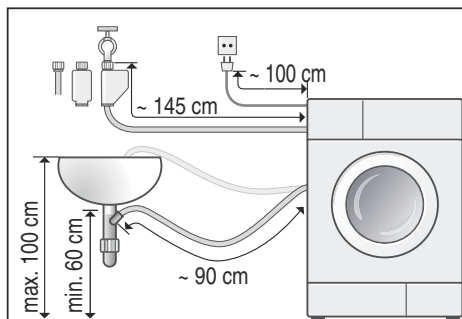

### Right-hand connection

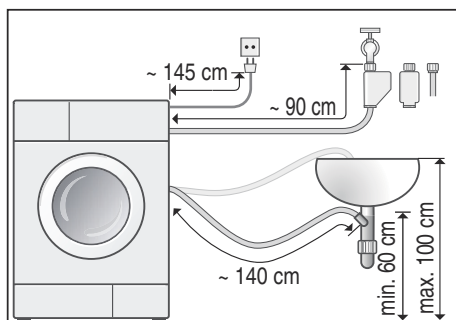

### Tip:

The following are available from specialist retailers/our after-sales service:

- Extension for the AquaStop and cold water supply hose (approx. 2.50 m). Order no. WMZ2380, WZ10130, Z7070X0
- A longer supply hose (approx. 2.20 m) for standard models. Individual component number for the after-sales service: 00353925

## Water connection



### **Warning** **Risk of death!**

There is a risk of electric shock if live components are touched.  
Do not immerse the AquaStop safety valve in water (it contains an electric valve).

### **Caution!** **Water damage**

The connection points for the water supply hose and water drain hose are under high water pressure. To prevent leaks and water damage, you must follow the instructions in this section.

Observe the following when connecting the machine:

### **Notes**

- In addition to the information listed here, the local water and electricity supplier may have special requirements.
- Only operate the washing machine using cold mains water.
- Do not connect the washing machine to the mixer tap of an unpressurised hot-water boiler.
- Do not use a used supply hose. Only use the supply hose supplied or one that was purchased from an authorised specialist retailer.
- If in doubt, have the appliance connected by a technician.

## Water inlet

### **Notes**

- Do not bend, squash, modify or cut through the water supply hose (otherwise its strength is no longer guaranteed).
- Only tighten the screw connection by hand. If the screw connections are tightened too much with a tool (pliers), the thread may be damaged.

### **Optimum water pressure in the supply network**

**At least** 100 kPa (1 bar)


**Maximum** 1000 kPa (10 bar)

- When the tap is open, the water flow rate is at least 8 l/min.
- If the water pressure is higher than this, a pressure-reducing valve must be installed.


### **Connection**

Connect the water supply hose to the tap ( $\frac{3}{4}" = 26.4 \text{ mm}$ ) and to the appliance (not necessary for AquaStop models as this is permanently installed):


#### ■ **Standard model**

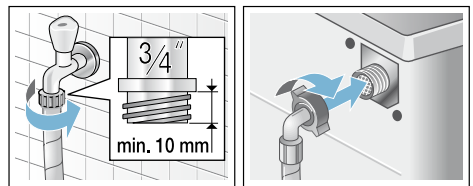

#### ■ **AquaSecure model**

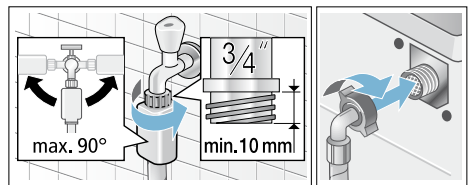

## ■ AquaStop model

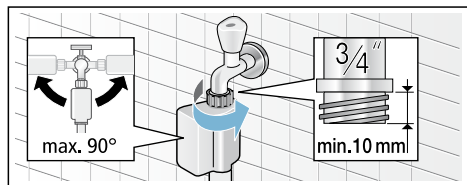

Carefully turn the tap on, and check that the connection points are not leaking.

**Note:** The screw connection is under mains water pressure.

## Water outlet

### Caution! Water damage

If the drain hose slips out of the washbasin or the connection point during draining due to high water pressure, any escaping water may cause water damage. Secure the drain hose so that it cannot slip out.

### Notes

- Do not kink the water drain hose or stretch it lengthways.
- Height difference between the installation surface and the drain: Min. 60 cm, max. 100 cm

You can lay the water outlet hose as follows:

### ■ Drainage into a washbasin

#### **Warning** **Risk of scalding!**

When washing at high temperatures, there is a risk of scalding if you come into contact with hot detergent solution (e.g. when draining hot detergent solution into a wash basin). Do not reach into the hot detergent solution.


### Caution!

#### **Damage to the appliance/fabrics**

If the end of the drain hose is immersed in the drained water, water may be sucked back into the appliance and may damage the appliance/fabrics.


Make sure that:

- The plug does not block drainage from the wash basin.
- The end of the drain hose is not immersed in the drained water.
- The water drains away quickly enough.

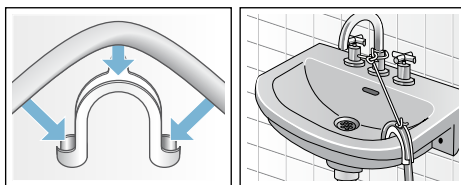

### ■ Drainage into a siphon

The connection point must be secured using a hose clamp with a diameter of 24 – 40 mm (available from specialist retailers).

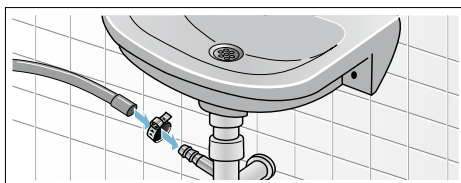




## Levelling

Align the appliance using a spirit level. Incorrect alignment may result in loud noises, vibrations and machine "movement".

1. Loosen the lock nuts using a spanner, turning it in a clockwise direction.
2. Check the alignment of the washing machine with a spirit level, and adjust it if necessary. Change the height by turning the appliance feet. All four appliance feet must stand firmly on the ground.
3. Tighten the lock nut against the housing.  
In doing so, hold the foot tight and do not adjust its height.  
The lock nuts on all four appliance feet must be screwed tightly against the housing.

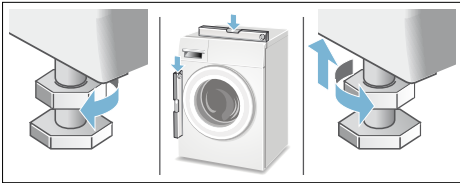

## Electrical connection




### **Warning** **Risk of death!**

There is a risk of electric shock if live components are touched.

- Never touch or hold the mains plug with wet hands.
- Only pull out the mains cable by the plug and never by the cable, as this could damage it.
- Never unplug the mains plug during operation.

Observe the following information and ensure that:

### Notes

- The mains voltage and voltage indicated on the washing machine (rating plate) are the same. The connected load and fuse required are specified on the rating plate.
- The washing machine is only connected to an alternating current supply via a properly installed earthed socket.
- The mains plug fits the socket.
- The cable cross-section is adequate.
- The earthing system is properly installed.
- If the mains cable needs replacing, only a qualified electrician may do it. Replacement mains cables are available from the after-sales service.
- Do not use multiple plugs/couplings or extension cables.
- If an earth-leakage circuit breaker is used, only a type which displays this  symbol can be fitted. Only this symbol guarantees compliance with the currently applicable regulations.
- The mains plug can be accessed at all times.
- Do not bend, squash, modify, cut through, or bring the mains cable into contact with heat sources.

## Before washing for the first time

The washing machine was thoroughly tested before leaving the factory. In order to remove any water which may be left over from the test, run the first washing cycle **without** any laundry.

### Notes

- The washing machine **must be correctly installed and connected** (from → Page 28).
- Never use a damaged machine. Inform the after-sales service. → Page 27

1. Check the washing machine.
2. Connect the mains plug.
3. Turn on the tap.
4. Switch on the appliance.
5. Close the washing machine door (do not load any laundry).
6. Select the **Cottons 90 °C** programme.
7. Open the detergent drawer.
8. Pour approximately 1 litre of water into compartment **II**.
9. Add standard detergent to compartment **II** according to manufacturer's instructions for light soiling.

**Note:** To prevent foaming, only use half the recommended amount of detergent. Do not use detergents designed for woollens or delicates.

10. Close the detergent drawer.
11. Press the **Start button**.
12. Switch off the appliance when the programme has finished.

**Your washing machine is now ready to use.**

## Transportation


e.g. when moving home

### Preparatory work:


1. Turn off the water tap.
2. Reduce the water pressure in the supply hose.
3. Drain the remaining detergent solution.
4. Disconnect the washing machine from the mains.
5. Remove the hoses.

### Installing the transport locks:

1. Remove the covers and keep them in a safe place.  
Use a screwdriver if necessary.

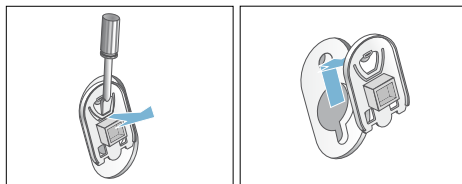

2. Insert all four sleeves.  
Clip the mains cable securely in the holders. Insert and tighten the screws.

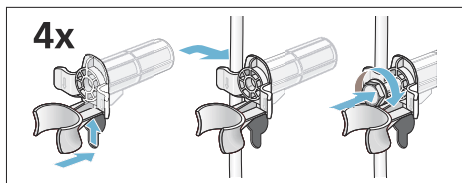

### Before switching on the appliance again:

#### Notes

- The transport locks **must** be removed.
- To prevent unused detergent from flowing straight into the drain during the next wash: Pour approx. 1 litre of water into compartment **II** and start the **Drain** programme.

This image shows a full page of blank white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page, providing a guide for writing. There are no margins, text, or other markings on the paper.

## **Aqua-Stop warranty**

Only for appliances with Aqua-Stop

In addition to warranty claims against the vendor based on the purchase agreement and to our appliance warranty, we will provide compensation under the following conditions:

1. If water damage is caused due to a fault in our Aqua-Stop system, we will compensate domestic customers for the damage caused.
2. The liability guarantee is valid for the service life of the appliance.
3. It is a prerequisite of all warranty claims that the appliance with Aqua-Stop must have been installed and connected correctly in accordance with our instructions; this also includes a correctly fitted Aqua-Stop extension (genuine accessories).

Our warranty does not cover defective feed lines or fittings leading to the Aqua-Stop connection at the tap.

4. Appliances with Aqua-Stop do not need to be supervised during operation, nor secured afterwards by turning off the tap.

The tap only needs to be turned off if you are away from home for a long period, e.g. for several weeks' holiday.



### **Advice and repair order in the event of faults**

GB 0344 892 8979 (Calls charged at local or mobile rate.)

IE 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

You can find the contact information for all countries in the attached after-sales service directory.

Robert Bosch Hausgeräte GmbH  
Carl-Wery-Straße 34  
81739 München, GERMANY



9001055318 (9508)