



**Register** your  
new device on  
MyBosch now and  
get free benefits:  
**[bosch-home.com/  
welcome](https://bosch-home.com/welcome)**



# Combi steam oven

**HSG958D.1A**

**[en]** User manual and installation instructions



You can find additional information and explanations online.  
Scan the QR code on the title page.



# Table of contents

## INFORMATION FOR USE

|    |                                                  |    |      |                                                           |    |
|----|--------------------------------------------------|----|------|-----------------------------------------------------------|----|
| 1  | Safety .....                                     | 2  | 17   | Basic settings .....                                      | 26 |
| 2  | Preventing material damage .....                 | 5  | 18   | Home Connect .....                                        | 27 |
| 3  | Environmental protection and saving energy ..... | 6  | 19   | Cleaning and servicing .....                              | 29 |
| 4  | Familiarising yourself with your appliance ..... | 6  | 20   | Cleaning function "EcoClean" .....                        | 31 |
| 5  | Operating modes .....                            | 8  | 21   | Cleaning aid .....                                        | 32 |
| 6  | Accessories .....                                | 10 | 22   | Descaling .....                                           | 33 |
| 7  | Before using for the first time .....            | 12 | 23   | Drying .....                                              | 33 |
| 8  | Basic operation .....                            | 14 | 24   | Appliance door .....                                      | 34 |
| 9  | Rapid heating .....                              | 15 | 25   | Rails .....                                               | 37 |
| 10 | Time-setting options .....                       | 16 | 26   | Troubleshooting .....                                     | 39 |
| 11 | Steam .....                                      | 17 | 27   | Disposal .....                                            | 42 |
| 12 | Meat probe .....                                 | 20 | 28   | Customer Service .....                                    | 42 |
| 13 | Dishes .....                                     | 22 | 29   | Information regarding Free and Open Source Software ..... | 42 |
| 14 | "Assist Plus" search function .....              | 24 | 30   | Declaration of Conformity .....                           | 43 |
| 15 | Favourites .....                                 | 25 | 31   | How it works .....                                        | 43 |
| 16 | Childproof lock .....                            | 25 | 32   | INSTALLATION INSTRUCTIONS .....                           | 57 |
|    |                                                  |    | 32.1 | General installation instructions .....                   | 57 |

## 1 Safety

Observe the following safety instructions.

### 1.1 General information

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

### 1.2 Intended use

This appliance is designed only to be built into kitchen units. Read the special installation instructions.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under the warranty.

Only use this appliance:

- To prepare meals and drinks.

- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 2000 m above sea level.

### 1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised.

Keep children under the age of 8 years away from the appliance and power cable.

## 1.4 Safe use

Always place accessories in the cooking compartment the right way round.

→ "Accessories", Page 10

### ⚠ **WARNING – Risk of fire!**

Combustible objects that are left in the cooking compartment may catch fire.

- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

Loose food remnants, fat and meat juices may catch fire.

- ▶ Before using the appliance, remove the worst of the food residues and remnants from the cooking compartment, heating elements and accessories.

Opening the appliance door creates a draught. Greaseproof paper may come into contact with the heating element and catch fire.

- ▶ Never place greaseproof paper loosely over accessories when preheating the appliance and while cooking.
- ▶ Always cut greaseproof paper to size and use a plate or baking tin to hold it down.

### ⚠ **WARNING – Risk of burns!**

The appliance and its parts that can be touched become hot during use.

- ▶ Caution should be exercised here in order to avoid touching heating elements.
- ▶ Young children under 8 years of age must be kept away from the appliance.

Accessories and cookware get very hot.

- ▶ Always use oven gloves to remove accessories or cookware from the cooking compartment.

When the cooking compartment is hot, any alcoholic vapours inside may catch fire. The appliance door may spring open. Hot steam and jets of flame may escape.

- ▶ Only use small quantities of drinks with a high alcohol content in food.
  - ▶ Do not heat spirits ( $\geq 15\%$  vol.) when undiluted (e.g. for marinating or pouring over food).
  - ▶ Open the appliance door carefully.
- The telescopic shelves become hot when the appliance is in use.
- ▶ Allow hot telescopic shelves to cool down before touching them.

- ▶ Only touch hot telescopic shelves with oven gloves.

### ⚠ **WARNING – Risk of scalding!**

The accessible parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
- ▶ Keep children at a safe distance.

Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.

- ▶ Open the appliance door carefully.
- ▶ Keep children at a safe distance.

If there is water in the cooking compartment when it is hot, this may create hot steam.

- ▶ Never pour water into the cooking compartment when the cooking compartment is hot.

### ⚠ **WARNING – Risk of injury!**

Scratched glass in the appliance door may develop into a crack.

- ▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the oven door, as they may scratch the surface.

The appliance and its parts that can be touched may have sharp edges.

- ▶ Take care when handling and cleaning them.
- ▶ If possible, wear protective gloves.

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- ▶ Keep your hands away from the hinges.
- Components inside the appliance door may have sharp edges.
- ▶ Wear protective gloves.

Alcoholic vapours may catch fire in the hot cooking compartment, and the appliance door may spring open and may fall off. The door panels may shatter and fragment.

→ "Preventing material damage", Page 5

- ▶ Only use small quantities of drinks with a high alcohol content in food.
- ▶ Do not heat spirits ( $\geq 15\%$  vol.) when undiluted (e.g. for marinating or pouring over food).
- ▶ Open the appliance door carefully.

### ⚠ **WARNING – Risk of electric shock!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must

be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.

- ▶ If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with hot appliance parts or heat sources.
- ▶ Never let the power cord come into contact with sharp points or edges.

▶ Never kink, crush or modify the power cord. An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ▶ Call customer service. → *Page 42*

Once the appliance has been installed, the openings in the back panel of the appliance must not be accessible to children.

- ▶ Read the special installation instructions.

#### **WARNING – Danger: Magnetism!**



Caution: Magnetism



Caution for people with pacemakers  
Permanent magnets are used in the control panel. These may impair the functionality of electronic implants, e.g. pacemakers or insulin pumps.

- ▶ Persons with electronic implants must stand at least 10 cm away from the control panel.

#### **WARNING – Risk of suffocation!**

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

### 1.5 Steam

Follow these instructions when using a steam function.

#### **WARNING – Risk of scalding!**

The water in the water tank may become very hot if you operate the appliance for long periods.

- ▶ Always empty the water tank after using the steam function.

Hot steam is generated in the cooking compartment.

- ▶ Do not reach into the cooking compartment when using steam.

Hot liquid may spill over the sides of the accessory when it is removed from the cooking compartment.

- ▶ Remove hot accessories with care and always wear oven gloves.

#### **WARNING – Risk of fire!**

Due to the hot surfaces, vapours from flammable liquids may catch fire in the cooking compartment (explosion). The appliance door may spring open. Hot steam and jets of flame may escape.

- ▶ Do not pour flammable liquids (e.g. alcoholic drinks) into the water tank.
- ▶ Only fill the water tank with water or with the descaling solution we have recommended.

### 1.6 Meat probe

#### **WARNING – Risk of electric shock!**

Using the wrong meat probe could damage the insulation.

- ▶ Only use the meat probe for this specific appliance.

#### **WARNING – Risk of injury!**

The meat probe is sharp.

- ▶ Handle the meat probe with care.

### 1.7 Cleaning function

#### **WARNING – Risk of burns!**

 The outside of the appliance gets very hot when the cleaning function is in progress.

- ▶ Never touch the appliance door.
- ▶ Allow the appliance to cool down.
- ▶ Keep children at a safe distance.

## 2 Preventing material damage

### 2.1 General

#### ATTENTION

Alcoholic vapours may catch fire in the hot cooking compartment and cause permanent damage to the appliance. The appliance door may spring open due to an explosion and it may fall off. The door panels may shatter and fragment. Due to the resulting negative pressure, the cooking compartment may become considerably deformed inwards.

- ▶ Do not heat spirits ( $\geq 15\%$  vol.) when undiluted (e.g. for marinating or pouring over food).

If there is water on the cooking compartment floor when operating the appliance at temperatures above  $120\text{ }^{\circ}\text{C}$ , this will damage the enamel.

- ▶ Do not use the appliance if there is water on the cooking compartment floor.
- ▶ Wipe away any water on the cooking compartment floor before operation.

Objects on the cooking compartment floor at over  $50\text{ }^{\circ}\text{C}$  will cause heat to build up. The baking and roasting times will no longer be correct and the enamel will be damaged.

- ▶ Do not place any accessories, greaseproof paper or foil of any kind on the cooking compartment floor.
- ▶ Only place cookware on the cooking compartment floor if a temperature under  $50\text{ }^{\circ}\text{C}$  has been set.

Using silicone moulds or any film, covers or accessories that contain silicone could damage the baking sensor. Damage may occur even if the baking sensor is not active.

- ▶ Do not use silicone moulds or any film, covers or accessories that contain silicone.
- ▶ Never place objects made of silicone in the cooking compartment.

When the cooking compartment is hot, any water inside it will create steam. The change in temperature may cause damage.

- ▶ Never pour water into the cooking compartment when it is still hot.
- ▶ Never place cookware containing water on the cooking compartment floor.

The prolonged presence of moisture in the cooking compartment leads to corrosion.

- ▶ Allow the cooking compartment to dry after use.
- ▶ Do not keep moist food in the cooking compartment for a long time with the door closed.
- ▶ Do not store food in the cooking compartment.

Take care not to trap anything in the appliance door. Fruit juice dripping from the baking tray leaves stains that cannot be removed.

- ▶ When baking very juicy fruit flans, do not pack too much on the baking tray.
- ▶ If possible, use the deeper universal pan.

Using oven cleaner in a hot cooking compartment damages the enamel.

- ▶ Never use oven cleaner in the cooking compartment when it is still warm.
- ▶ Remove all food remnants from the cooking compartment and the appliance door before you next heat up the appliance.

If the seal is very dirty, the appliance door will no longer close properly during operation. This may damage the front of adjacent kitchen units.

- ▶ Keep the seal clean at all times.
- ▶ Never operate the appliance if the seal is damaged or missing.

Sitting or placing objects on the appliance door may damage it.

- ▶ Do not place, hang or support objects on the appliance door.
- ▶ Do not place cookware or accessories on the appliance door.

With certain models, accessories may scratch the door pane when closing the appliance door.

- ▶ Always push accessories fully into the cooking compartment.

If aluminium foil comes into contact with the door pane, it could cause permanent discolouration.

- ▶ Do not allow aluminium foil in the cooking compartment to come into contact with the door pane.

### 2.2 Steam

Follow these instructions when using the steam function.

#### ATTENTION

Using cookware with rust spots may cause corrosion in the cooking compartment. Even the smallest spots of rust can cause corrosion.

- ▶ Do not use cookware with rust spots.

Dripping liquids make the cooking compartment floor dirty.

- ▶ When steaming with a perforated cooking container, always place the baking tray, the universal pan or the unperforated cooking container underneath. This will catch any liquid that drips down.

Hot water in the water tank may damage the steam system.

- ▶ Only fill the water tank with cold water.

If there is water on the cooking compartment floor when operating the appliance at temperatures above  $120\text{ }^{\circ}\text{C}$ , this will damage the enamel.

- ▶ Do not use the appliance if there is water on the cooking compartment floor.
- ▶ Wipe away any water on the cooking compartment floor before operation.

A lot of steam is produced during operation with the types of steam heating. Condensate that collects in the drip trough underneath the cooking compartment may overflow and damage adjacent units.

- ▶ Do not open the appliance door, or open it as infrequently as possible, while the appliance is in operation.

If descaling solution comes into contact with the control panel or other delicate surfaces, it will damage them.

- ▶ Remove descaling solution immediately with water.

Cleaning the water tank in the dishwasher will damage it.

- ▶ Do not clean the water tank in the dishwasher.
- ▶ Clean the water tank with a soft cloth and standard washing-up liquid.

If several steam operations are carried out one after the other without wiping out the cooking compartment floor and the condensate tray afterwards in each case, the

water collected may overflow and may damage furniture panels or bases.

- ▶ Wipe down the cooking compartment floor and the condensate tray after every steam operation.

## 3 Environmental protection and saving energy

### 3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

### 3.2 Saving energy

If you follow these instructions, your appliance will use less power.

Only preheat the appliance if the recipe or the recommended settings tell you to do so.

→ "How it works", Page 43

- ✓ Not preheating the appliance can reduce the energy used by up to 20%.

Use dark-coloured, black-coated or enamelled baking tins.

- ✓ These types of baking tin absorb the heat particularly well.

Open the appliance door as little as possible during operation.

- ✓ This maintains the temperature in the cooking compartment and eliminates the need for the appliance to reheat.

When baking multiple dishes, do so in succession or in parallel.

- ✓ The cooking compartment is heated after baking the first dish. This reduces the baking time for the subsequent cakes.

For longer cooking times, you can switch the appliance off 10 minutes before the cooking time ends.

- ✓ There is sufficient residual heat to finish cooking the dish.

Remove any accessories that are not being used from the cooking compartment.

- ✓ Accessories that are not being used do not need to be heated.

Allow frozen food to defrost before cooking.

- ✓ This saves the energy that would otherwise be required to defrost it.

Switch off the display in the basic settings.

→ "Basic settings", Page 26

- ✓ Energy is saved when the display is switched off.

**Note:** In accordance with the EU Ecodesign Directive 2023/826, this appliance is in a different state when switched off. This is referred to below as low power mode.

Even when the main function is not active, the appliance needs energy for:

- Detecting operation of the touch keys
- Monitoring door opening
- Editing the time (without display)


By definition, therefore, there is neither an "off" nor a "standby" mode, which is why the term low power mode is used. EN IEC 60350-1:2023 must be used to measure low power mode.

## 4 Familiarising yourself with your appliance

### 4.1 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

On certain models, specific details such as colour and shape may differ from those pictured.

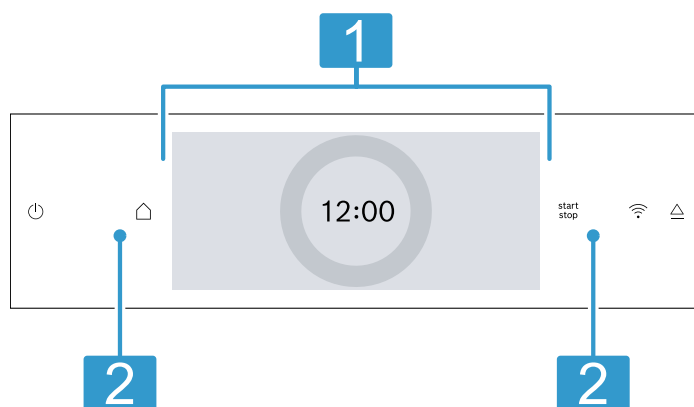

**Display with setting ring**

You can use the digital setting ring to set the appliance via the display.

- 1** You will see the current setting values, options or relevant information.  
→ "Display", Page 7

**Buttons**

- 2** You can use the buttons to directly set various functions.  
→ "Buttons", Page 7

**4.2 Buttons**

You can use the buttons to directly select various functions.

| Button                                                                             | Function                                                                                                                                            |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Switch the appliance on or off.<br>→ "Basic operation", Page 14                                                                                     |
|    | Open the "Operating modes" menu.<br>→ "Operating modes", Page 8                                                                                     |
|    | Start or pause operation.<br>→ "Basic operation", Page 14                                                                                           |
|    | Display for Home Connect. The field has no further function.<br>When the symbol lights up, the appliance is connected.<br>→ "Home Connect", Page 27 |
|  | Open the control panel to remove the water tank.<br>→ "Filling the water tank", Page 17                                                             |

**4.3 Display**

The display is divided into different areas.

**Digital setting ring**

You can use the digital setting ring on the display to change the setting values.

When you reach the minimum or maximum value available, this value remains on the display. If required, use the setting ring to turn the value back again.

**Finely tuned setting values**

To fine-tune the setting values, e.g. to set a time to the precise minute, press and hold the corresponding area in the setting ring for around 1 - 2 seconds. The finely tuned setting values are shown in dots.

**Number field**

If you press the setting ring, the  symbol for the number field appears in the ring. You can enter the values directly via the number field.

**Status indicator**

Status information is shown at the top of the display.

| Symbol                                                                             | Meaning                                                       |
|------------------------------------------------------------------------------------|---------------------------------------------------------------|
|  | Timer is activated.<br>→ "Setting the timer", Page 16         |
|  | Childproof lock is activated.<br>→ "Childproof lock", Page 25 |
|  | Wi-Fi signal strength for Home Connect.                       |

| Symbol                                                                             | Meaning                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | The more lines of the symbol are filled, the better the signal.<br>If the symbol is struck through  , there is no Wi-Fi signal.<br>If there is an "x" at the symbol  , there is no connection to the Home Connect server.<br>→ "Home Connect", Page 27 |
|   | Remote start with Home Connect is activated.<br>→ "Home Connect", Page 27                                                                                                                                                                                                                                                                                                                                                  |
|   | Remote diagnostics with Home Connect for maintenance is activated.<br>→ "Home Connect", Page 27                                                                                                                                                                                                                                                                                                                            |
|   | Access to different functions.                                                                                                                                                                                                                                                                                                                                                                                             |

**Settings area**

The settings area is in the centre of the display.

You can see current options and settings that have already been made in the settings area.

You can see other setting options to the left and right of the settings area, outside of the setting ring.

The menu and other setting options are arranged horizontally. Selection lists for functions are vertically arranged. Swipe over the display to scroll in the settings area. To select a function, press the function on the display.

→ "Setting the operating mode", Page 14

**Possible symbols in the settings area**

| Symbol                                                                              | Meaning                                          |
|-------------------------------------------------------------------------------------|--------------------------------------------------|
|  | Enter the adjustment value via the number field. |
|  | Go back one setting.                             |
|  | Reset the setting value.                         |

**Note:** A blue marking "new" or a blue dot on a function indicates that a new function, a new favourite or an update was downloaded to your appliance using the Home Connect app.

**4.4 Cooking compartment**

Various functions in the cooking compartment provide support when operating your appliance.

**Shelf supports**


The shelf supports in the cooking compartment enable you to place accessories at different heights.

→ "Accessories", Page 10

Your appliance has 5 shelf positions. The shelf positions are numbered from bottom to top.

The shelf supports are equipped with pull-out rails on one or more levels, depending on the appliance type.

You can remove the shelf supports, e.g. for cleaning.  
→ "Rails", Page 37

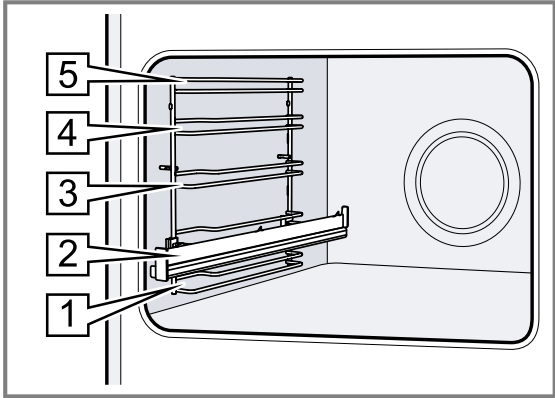

Self-cleaning surfaces

The self-cleaning surfaces in the cooking compartment are coated with a porous, matt ceramic layer and have a rough surface. When the appliance is in operation, the self-cleaning surfaces absorb splashes from roasting or grilling and break them down.

The following surfaces are self-cleaning:

- Back wall
- Ceiling
- Side walls

Use the cleaning function regularly to help retain the cleaning ability of the self-cleaning surfaces and prevent damage.

→ "Cleaning function EcoClean", Page 31

Lighting

One or more oven lights illuminate the cooking compartment.

When you open the appliance door, the light in the cooking compartment switches on. If the appliance door remains open for longer than around 18 minutes, the light switches off again.

For most operating modes, the lighting is switched on during operation. The lighting switches off again when the operation ends.

Cooling fan

The cooling fan switches on and off depending on the appliance's temperature. The hot air escapes above the door.

5 Operating modes

This is where you can find an overview of your appliance's operating modes and main functions.  
Press  to open the menu.

| Operating mode   | Use                                                                                                                                            |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Types of heating | Select finely tuned types of heating for the optimal preparation of your food.<br>→ "Types of heating", Page 9<br>→ "Basic operation", Page 14 |
| Steam            | Gently prepare food with types of steam heating.<br>→ "Steam", Page 17                                                                         |

ATTENTION

Covering the ventilation slots will cause the appliance to overheat.

- Do not cover the ventilation slots.

To cool down the appliance and remove residual moisture from the cooking compartment, the cooling fan runs for a certain time after operation.

**Note:** You can change the run-on time in the basic settings. If you frequently prepare very moist food or keep it warm in the cooking compartment, set a longer run-on time.

→ "Basic settings", Page 26


Appliance door

If you open the appliance door during operation, the operation stops. If you close the appliance door, operation resumes automatically.

Water tank

You need the water tank for the types of steam heating. The water tank is behind the control panel.

→ "Filling the water tank", Page 17

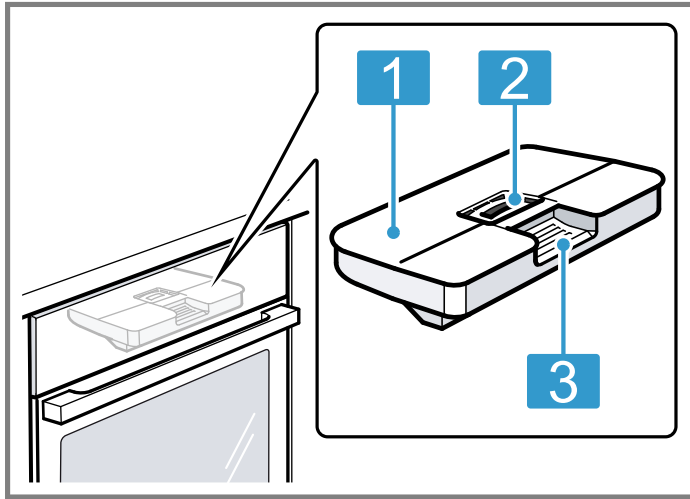

- 1 Tank cover
- 2 Opening for filling and emptying
- 3 Handle for removing and inserting

| Operating mode     | Use                                                                                                                                |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------|
| Favourites         | Use your own saved settings.<br>→ "Favourites", Page 25                                                                            |
| Dishes Assist Plus | Use programmed, recommended settings for various types of food.<br>→ "Dishes", Page 22<br>→ "Assist Plus search function", Page 24 |

| Operating mode | Use                                                                                                                                                                                |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cleaning       | Select the cleaning function for the cooking compartment.<br>→ "Cleaning function EcoClean", Page 31<br>→ "Cleaning aid", Page 32<br>→ "Descaling", Page 33<br>→ "Drying", Page 33 |
| Basic settings | Adjust the basic settings.<br>→ "Basic settings", Page 26                                                                                                                          |

## Home Connect

With Home Connect, you can connect and remotely control the oven with a mobile device, and use the full functionality of the appliance.

Depending on the appliance type, additional or more comprehensive functions are available for your appliance with the Home Connect app. You can find more information about this in the app.

→ "Home Connect", Page 27

## 5.1 Types of heating

To ensure that you always find the right type of heating to cook your food, we explain the differences and applications below.

The symbols for each type of heating help you to remember them.

When you select a type of heating, the appliance suggests a suitable temperature or setting. You can use these values or change them within the specified range.

For grill setting 3, the appliance reduces the temperature to grill setting 1 after approx. 40 minutes.

| Symbol                                                                             | Type of heating           | Temperature range                                    | What it's used for and how it works                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------------------------------------------------------------------|---------------------------|------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | 4D hot air                | 30 - 250 °C                                          | Bake or roast on one or more levels.<br>The fan distributes the heat from the ring-shaped heating element in the back wall evenly around the cooking compartment.                                                                                                                                                                                                                                                                                                                                                                                       |
|    | Top/bottom heating        | 30 - 250 °C                                          | Traditionally bake or roast on one level. This type of heating is especially good for cakes with moist toppings.<br>The heat is emitted evenly from above and below.                                                                                                                                                                                                                                                                                                                                                                                    |
|  | Hot air gentle            | 125 - 250 °C                                         | Cook selected dishes gently on one level without preheating.<br>The fan distributes the heat from the ring-shaped heating element in the back wall evenly around the cooking compartment.<br>The food is cooked in phases using residual heat. Always keep the appliance door closed when cooking. If you open the appliance door even briefly, the appliance will continue to heat without utilising any residual heat.<br>This type of heating is used to determine the energy consumption in air recirculation mode and the energy efficiency class. |
|  | Air Fry                   | 30 - 250 °C                                          | Cook until crispy, on one level with little fat. Especially suitable for food that is usually fried in oil, e.g. chips.<br>The fan circulates heat from the grill element around the food at high speed. The exhaust air is extracted more intensively from the cooking compartment.                                                                                                                                                                                                                                                                    |
|  | Top/bottom heating gentle | 150 - 250 °C                                         | Gently cook selected dishes.<br>Heat is emitted from above and below.<br>The food is cooked in phases using residual heat. Always keep the appliance door closed when cooking. If you open the appliance door even briefly, the appliance will continue to heat without utilising any residual heat.<br>This type of heating is used to measure the energy consumption in the conventional mode.                                                                                                                                                        |
|  | Circulated air grilling   | 30 - 250 °C                                          | Roast poultry, whole fish or larger pieces of meat.<br>The grill element and the fan switch on and off alternately. The fan circulates the hot air around the food.                                                                                                                                                                                                                                                                                                                                                                                     |
|  | Full-surface grill        | Grill settings:<br>1 = low<br>2 = medium<br>3 = high | Grill flat items such as steak and sausages, or make toast. Gratin-ate food.<br>The entire area below the grill element becomes hot.                                                                                                                                                                                                                                                                                                                                                                                                                    |
|  | Centre-area grill         | Grill settings:<br>1 = low<br>2 = medium<br>3 = high | Grill small quantities such as steak and sausages, or make toast. Gratin-ate small quantities of food.<br>The central area below the grill element becomes hot.                                                                                                                                                                                                                                                                                                                                                                                         |

| Symbol                                                                           | Type of heating         | Temperature range | What it's used for and how it works                                                                                                                                      |
|----------------------------------------------------------------------------------|-------------------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Pizza setting           | 30 - 250 °C       | Cook pizza or food that requires a lot of heat from below. The bottom heating element and the ring-shaped heating element in the back wall heat the cooking compartment. |
|  | Intensive heat          | 30 - 250 °C       | Prepare dishes with a crispy base. The heat is emitted from above and more intensively from below.                                                                       |
|  | Low-temperature cooking | 70 - 120 °C       | Slowly and gently cook seared, tender pieces of meat in uncovered cookware. The heat is emitted evenly from above and below at a low temperature.                        |
|  | Drying out food         | 30 - 130 °C       | Dry herbs, fruit or vegetables.                                                                                                                                          |
|  | Bottom heating          | 30 - 250 °C       | Final baking or cooking food in a bain marie. The heat is emitted from below.                                                                                            |
|  | Keeping warm            | 50 - 100 °C       | Keep cooked food warm.                                                                                                                                                   |
|  | Plate warming           | 30 - 90 °C        | Preheat cookware.                                                                                                                                                        |

## Types of steam heating

The types of steam heating can be found in the  menu under "Steam".

| Symbol                                                                             | Type of heating | Temperature range | What it's used for and how it works                                                                                                                             |
|------------------------------------------------------------------------------------|-----------------|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Defrost         | 30 - 60 °C        | Gently defrost frozen food.                                                                                                                                     |
|    | Reheating       | 80 - 180 °C       | Gently reheat plated meals and baked items. The steam ensures that the food does not dry out.                                                                   |
|  | Steam Plus      | 30 - 120 °C       | Gently steam vegetables, meat, fish and cereal. Juice fruit. Blanch food. In order to reduce the cooking time, more robust food can be steamed at above 100 °C. |
|  | Sous-vide       | 50 - 95 °C        | Cook meat, fish, vegetables and desserts in a vacuum, at low temperatures and with 100% steam.                                                                  |
|  | Proving dough   | 30 - 50 °C        | Leave the yeast dough to prove. The dough rises considerably more quickly than at room temperature. The surface of the dough does not dry out.                  |

## 5.2 Temperature

With most types of heating, you can set the current temperature in the cooking compartment to approx. 30 °C in the display during heating and read the set temperature one above the other.

When you are preheating the appliance, the optimal time to place the food in the cooking compartment is as soon as the displayed temperature in the cooking compartment and the set temperature are the same.

**Note:** Due to thermal inertia, the temperature that is displayed may differ slightly from the actual temperature inside the cooking compartment.

### Residual heat indicator


When the appliance is switched off, a red line around the control ring indicates the residual heat in the cooking compartment. The further the temperature drops, the darker the ring. The ring goes out completely at approx. 60 °C.







# 6 Accessories

Use original accessories. These have been made especially for your appliance.

**Note:** Accessories may become deformed if they get hot. Deformation has no effect on function. As the accessory cools down, it will regain its original shape.

The accessories supplied may differ depending on the appliance model.
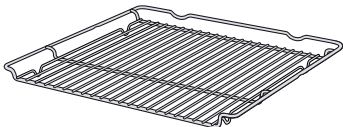
| Accessories | Use                                                                                                                                                                                                                                                                      |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Wire rack   |  <ul style="list-style-type: none"> <li>■ Cake tins</li> <li>■ Ovenproof dishes</li> <li>■ Cookware</li> <li>■ Meat, e.g. roasting joints or steak</li> <li>■ Frozen meals</li> </ul> |
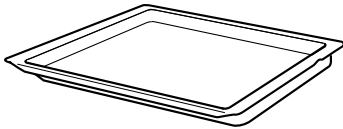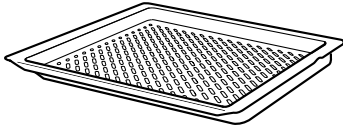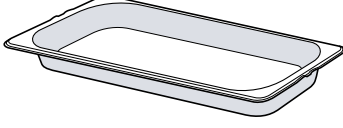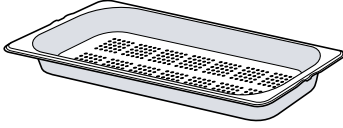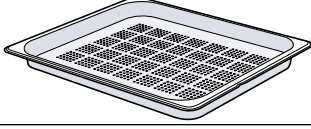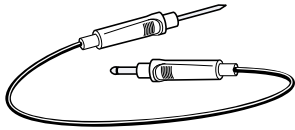
| Accessories                                 | Use                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Universal pan                               |  <ul style="list-style-type: none"> <li>Moist cakes</li> <li>Baked items</li> <li>Bread</li> <li>Large roasts</li> <li>Frozen meals</li> <li>Catch dripping liquids, e.g. fat when grilling food on the wire rack or water when cooking with steam.</li> </ul> |
| Air Fry & Grill Tray, enamelled, perforated |  <ul style="list-style-type: none"> <li>Bake until crispy, for food that is usually fried in oil, e.g. chips.</li> <li>Grilling food.</li> </ul> <p>Do not use the enamelled Air Fry &amp; Grill tray as a steaming tray.</p>                                  |
| Steam container, solid, size M              |  <p>Cooking:</p> <ul style="list-style-type: none"> <li>Rice</li> <li>Pulses</li> <li>Cereals</li> </ul> <p>Do not place the steam container on the wire rack.</p>                                                                                             |
| Steam container, perforated, size M         |  <ul style="list-style-type: none"> <li>Steaming vegetables.</li> <li>Juicing berries.</li> <li>Defrosting.</li> </ul> <p>Do not place the steam container on the wire rack.</p>                                                                               |
| Perforated steam container, size XL         |  <p>Steaming large quantities of food.</p>                                                                                                                                                                                                                    |
| Meat thermometer                            |  <p>High-precision roasting or cooking.<br/>→ "Meat probe", Page 20</p>                                                                                                                                                                                      |

## 6.1 Information on accessories

Some accessories are only suitable for certain types of heating.

### Steam container

The steam containers are suitable for steam-only types of heating up to 120 °C. The steam containers are not suitable for higher temperatures or other types of heating. The containers become permanently discoloured and deformed.

## 6.2 Locking function


The locking function prevents the accessories from tilting when they are pulled out. You can pull out the accessories approximately halfway without them tipping. The accessories must be inserted into the cooking compartment correctly for the tilt protection to work properly.

## 6.3 Sliding accessories into the cooking compartment


Always slide the accessory into the cooking compartment the right way round. This is the only way to ensure that accessories can be pulled out approximately halfway without tipping.

1. Turn the accessories so that the notch  is at the rear and is facing downwards.
2. Insert the accessory between the two guide rods for a shelf position.


Wire rack      Insert the wire rack with the open side facing the appliance door and the curved lip – facing downwards.

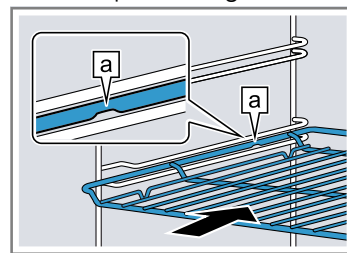

Tray  
E.g. universal pan or baking tray      Slide the tray in with the sloping edge  towards the appliance door.

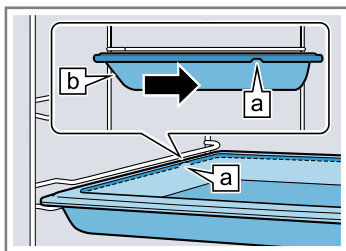


Steam container, perforated, size XL

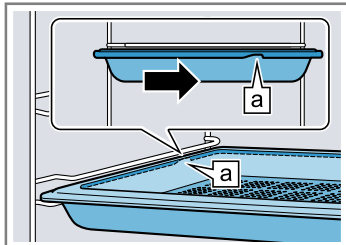

Place the accessories on the inserted pull-out rails.

Wire rack or baking tray Place the accessory so that it is inserted on the rear stop of the pull-out system.

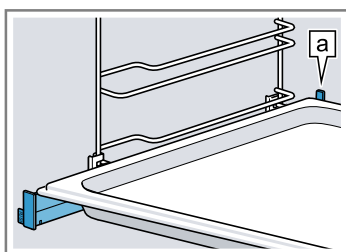

**Note:** Depending on the appliance type, the pull-out rails lock in place when they are fully pushed in or pulled out. Gently release the pull-out rails from their position.

3. Push the accessory all the way in, making sure that it does not touch the appliance door.


**Note:** Take any accessories that you will not be using out of the cooking compartment while the appliance is in operation.

### Combining accessories

You can combine the wire rack with the universal pan to catch any liquid that drips down.

1. Place the wire rack on the universal pan so that both spacers (a) are on the rear edge of the universal pan.
2. Insert the universal pan between the two guide rods for a shelf position. In so doing, the wire rack is on top of the upper guide rod.

Wire rack on universal pan

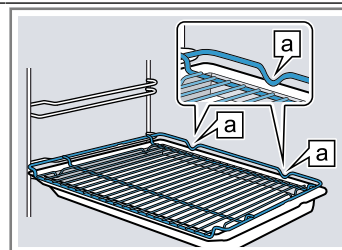

### 6.4 Other accessories

You can purchase other accessories from our customer service, specialist retailers or online.

You will find a comprehensive range of products for your appliance in our brochures and online:

[www.bosch-home.com](http://www.bosch-home.com)

Accessories are appliance-specific. When purchasing accessories, always quote the exact product number (E no.) of your appliance.

You can find out which accessories are available for your appliance in our online shop or from our customer service.

## 7 Before using for the first time

Implement the settings for the initial configuration. Calibrate the appliance. Clean the appliance and accessories.

### 7.1 Determining the water hardness before switching on the appliance for the first time

Before using the appliance for the first time, ask your water supplier about the hardness of your tap water. To ensure that the appliance can reliably remind you to descale it when required, you must set your water hardness range correctly.

#### ATTENTION

If the wrong water hardness has been set, the steam function is impaired and appliance cannot remind you to descale it at the right time.

- Set the water hardness correctly.

Using unsuitable liquids may damage the appliance.

- Do not use distilled water or other liquids.
- Only use cold, fresh tap water, softened water or non-carbonated mineral water.

Malfunctions may occur when using filtered or demineralised water. The appliance may request that you top up the water tank even though it may be full, or operation with steam is cancelled after approx. two minutes.

- If required, mix filtered or demineralised water with the bottled non-carbonated mineral water with a ratio of one to one.

#### Notes

- If you are using mineral water, set the water hardness range to "very hard". If you are using mineral water, you must only use non-carbonated mineral water.

- If your tap water is very hard, we recommend that you use softened water. If you are using only softened water, set the "softened" water hardness range.

| Setting                    | Water hardness in mmol/l | German hardness °dH | French hardness °fH |
|----------------------------|--------------------------|---------------------|---------------------|
| 0 (softened) <sup>1</sup>  | -                        | -                   | -                   |
| 1 (soft)                   | Up to 1.5                | Up to 8.4           | Up to 15            |
| 2 (medium)                 | 1.5-2.5                  | 8.4-14              | 15-25               |
| 3 (hard)                   | 2.5-3.8                  | 14-21.3             | 25-38               |
| 4 (very hard) <sup>2</sup> | Over 3.8                 | Over 21.3           | Over 38             |

## 7.2 Performing initial start-up

After connecting the appliance to the power supply, you must configure the settings for its initial start-up. It may take a few minutes for the settings to appear on the display.

1. Press  to switch the appliance on.
  - ✓ The first setting appears.
2. To change the setting as required, press a value in the list or change the value using the setting ring.
 

Possible settings:

  - Language
  - Home Connect
    - "Home Connect ", Page 27
  - Time
    - "Setting the time", Page 27
  - Water hardness
    - "Determining the water hardness before switching on the appliance for the first time", Page 12
3. Press "Next" and switch to the next setting.
4. Work through the settings and make changes as required.
  - ✓ After the last setting, a message appears on the display confirming that the initial start-up is complete.
5. To check the appliance before heating for the first time, open and close the appliance door once.

## 7.3 Cleaning the appliance before using it for the first time

Before using the appliance to cook food for the first time, you must clean the cooking compartment and accessories.

1. Remove the product information and the accessories from the cooking compartment. Remove any leftover packaging, such as polystyrene pellets, and any adhesive tape that is in or on the appliance.
2. Wipe the smooth surfaces in the cooking compartment with a soft, damp cloth.
3. Clean the accessories thoroughly using a detergent solution and a dish cloth or soft brush.

## 7.4 Calibrating the appliance before using it for the first time

The boiling point of water depends on the air pressure. During the calibration process, the appliance makes adjustments to adapt to the pressure conditions in the loc-

ation where it is installed based on the height above sea level.

### Calibrating the request in the display

When you switch on the appliance, a notification appears on the display to calibrate the appliance. You can close the notification and use your appliance as normal. However, the request appears every time the appliance is switched on until calibration is complete. Incorrect calibration impairs the steam function.

**Note:** Depending on the software status of your appliance, you must first download this function to your appliance. You can find more information in the Home Connect app.

Or calibrate your appliance manually by letting the steam function run for 30 minutes when the cooking compartment is empty.

→ "Steam", Page 17

### Calibrating the device automatically

Automatic calibration is more precise than manual calibration. The appliance runs for approx. 30 minutes in steam mode.

**Note:** Do not open the appliance door while calibration is in progress, as this will cancel the calibration process.

### Requirements

- The appliance is cleaned.
    - "Cleaning the appliance before using it for the first time", Page 13
  - The cooking compartment is cold.
  - Accessories have been removed.
1. Switch on the appliance.
  2. Select automatic in the request that appears in the display.
  3. Fill the water tank.
    - "Filling the water tank", Page 17
  4. Start the operation.
    - ✓ Calibration starts. This creates a lot of steam.
    - ✓ When the time has elapsed, a signal sounds. A notification appears on the display confirming that the operation has finished.
  5. Allow the appliance to cool down and then dry the cooking compartment floor thoroughly.
  6. Switch off the appliance.
  7. Dry the appliance.
    - "After using steam operation", Page 20

<sup>1</sup> Only set this if you will be using solely softened water.

<sup>2</sup> Also set for mineral water. Only use non-carbonated mineral water.

## Calibrating the device manually

You can also set the basic setting for height above sea level directly.

1. Switch on the appliance.
2. Select manual in the request that appears in the display.
- ✓ The basic setting for height above sea level appears in the display.
3. Set the height above sea level.  
→ *"Basic settings", Page 26*

## 7.5 Heating up the appliance before using it for the first time

Heat up the appliance before using it to cook food for the first time.

## Requirements

- The appliance is cleaned.  
→ *"Cleaning the appliance before using it for the first time", Page 13*
  - Accessories have been removed.
1. Switch on the appliance.
  2. Apply the following settings:

|                 |         |
|-----------------|---------|
| Type of heating | Hot air |
| Temperature     | Maximum |
| Duration        | 1 hour  |

→ *"Basic operation", Page 14*

3. Start the operation.
  - ▶ Ventilate the kitchen while the appliance is heating.
4. Switch off the appliance after 1 hour.
5. Once the appliance has cooled down, clean the smooth surfaces in the cooking compartment with a detergent solution and a dish cloth.

# 8 Basic operation

## 8.1 Switching on the appliance

- ▶ Press  to switch the appliance on.
- ✓ The display shows the menu.

## 8.2 Switching off the appliance

Switch your appliance off when you are not using it. The appliance will switch itself off automatically if it is not used for a certain period of time.

- ▶ Press  to switch the appliance off.
- ✓ The appliance switches off. Any functions currently in progress are cancelled.
- ✓ The time or residual heat indicator appears on the display.

## 8.3 Starting the operation

You must start each operation.

### ATTENTION

If there is water on the cooking compartment floor when operating the appliance at temperatures above 120 °C, this will damage the enamel.

- ▶ Do not use the appliance if there is water on the cooking compartment floor.
- ▶ Wipe away any water on the cooking compartment floor before operation.
- ▶ Press  to start the operation.
- ✓ The settings appear on the display.

## 8.4 Interrupting the operation

You can interrupt the operation and then continue again.

1. To interrupt the operation, press .
2. Press  again to resume the operation.

## 8.5 Setting the operating mode

After you have switched on the appliance, the menu appears on the display.

1. To scroll through the various selection options, swipe to the left or right on the display.
  - ▶ Swipe right or left to scroll through the menu and other setting options.
  - ▶ Swipe down or up to scroll through selection lists.
2. To select a function, press the function on the display.
- ✓ Depending on the function, possible setting values or other tiles are available for selection.
3. To go back to a setting if necessary, press .
4. To change the setting values, use the digital setting ring:
  - ▶ Swipe over the setting ring clockwise or anticlockwise, as required.
  - ▶ Or press a specific position on the setting ring.
  - ▶ Or, as soon as the setting ring is pressed, press the symbol that appears  and enter the value directly via the number field.
5. Press  to start the operation.
6. If the operation is ended:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use  to switch the appliance off.

**Note:** You can save your settings as "Favourites"  and use these again.

→ *"Favourites", Page 25*

## 8.6 Setting the type of heating and the temperature

1. Press "Types of heating" in the menu.
2. Press the type of heating that you want to use.
3. Use the setting ring to set the temperature or level.  
If required, you can implement additional settings:
  - → *"Rapid heating", Page 15*
  - → *"Time-setting options", Page 16*
  - → *"Steam", Page 17*
  - → *"Meat probe", Page 20*

4. Press  to start the operation.
  - ✓ The appliance starts heating.
  - ✓ The setting values and how long the appliance has already been in operation are shown on the display.
5. If the operation is ended:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use  to switch the appliance off.

**Note:** The most suitable type of heating for your food can be found in the description of the type of heating.  
→ "Types of heating", Page 9

## Changing the type of heating

When you change the type of heating, the other settings are also reset.

1. Press .
2. Press .
3. Press the type of heating that you want to use.
4. Reset the operation and use  to start.

## Changing the temperature

Once the operation has started, you can change the temperature at any time.

1. Press the temperature.
2. Change the temperature with the setting ring.
- ✓ The change is applied.

## 8.7 Displaying information

In most cases, you can call up information about the function that you have just started. The appliance automatically displays certain information, e.g. to ask you to do/confirm something or to issue a warning.

1. Press  "Info".
  - ✓ Information is displayed for a few seconds.
2. To scroll through lots of content in the message, swipe over the display.
3. If necessary, use  to exit the message.

## 8.8 Keeping warm over an extended period

You can use your appliance to keep meals warm for up to 24 hours without changing the behaviour of the appliance.

ance. Use the time functions and change the basic settings.

**Note:** If you open the appliance door during operation, the appliance stops heating. When you close the appliance door, the appliance continues to heat again. To ensure that the behaviour of the appliance is not changed during operation, only open the appliance door once the set time has elapsed.

1. Change the basic settings.
  - "Basic settings", Page 26
  - ▶ Change the "Lighting" basic setting to "Always off".
  - ▶ Change the "Clock display" basic setting to "On".
  - ▶ Change the "Signal tone" basic setting to "Very short duration".
- ✓ This will ensure that the light in the cooking compartment is always off while the appliance is in operation and when you open the appliance door. The clock display does not change. The duration of the signal tone is reduced at the end of the operation.
2. Set the required operating mode.
  - "Setting the operating mode", Page 14
  - "Setting the type of heating and the temperature", Page 14
3. Set the required cooking time depending on the operating mode.
  - "Setting the cooking time", Page 16
  - "Time-setting options", Page 16
4. Use "End time" to set the time at which the operation should end.
  - "Setting the end time", Page 16
  - "Time-setting options", Page 16
5. Place the food in the cooking compartment before the appliance starts to heat.
6. Press  to start the operation.
  - ✓ The display shows the time remaining until the operation starts. The appliance is in standby mode.
  - ✓ Once the start time has been reached, the appliance starts heating and the cooking time starts counting down.
7. When the operation has ended, remove the food from the cooking compartment. The appliance automatically switches off completely after approximately 15 to 20 minutes.

**Note:** If required, change the different basic settings again.

# 9 Rapid heating

To save time, rapid heating  can shorten the preheating time for set temperatures over 100 °C.

Rapid heating is possible for the following types of heating:

- 4D hot air 
- Top/bottom heating 
- Intensive heat 

## 9.1 Setting rapid heating

To ensure an even cooking result, do not place the food in the cooking compartment until rapid heating has come to an end.

**Note:** Do not set a cooking time until rapid heating has come to an end.

1. Set a suitable type of heating and a temperature of at least 100 °C.
  - Rapid heating automatically switches on at temperatures of 200 °C and above.
2. Press "Rapid heating".
  - ✓ The  symbol lights up red.
3. Press  to start the operation.
  - ✓ Rapid heating starts.
  - ✓ Once rapid heating has ended, a signal sounds. The  symbol changes back to white.
4. Place the food in the cooking compartment.

## Cancelling rapid heating

- ▶ Press "Rapid heating".
- ✓ The  symbol changes back to white.

## 10 Time-setting options

For an operation, you can set the cooking time and the time at which the operation should be finished. The timer runs independently of the operation.

| Time-setting option                                                                            | Use                                                                                                                                                                                  |
|------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cooking time  | If you set a cooking time, the appliance stops heating automatically once this time has elapsed.                                                                                     |
| End time      | Along with the cooking time, you can set the time at which you want the operation to end. The appliance starts up automatically so that the operation finishes at the required time. |
| Timer         | You can set the timer to run independently of the appliance during operation. It does not affect the appliance.                                                                      |

### 10.1 Setting the cooking time

You can set the cooking time for the operation up to 24 hours.

**Requirement:** An operating mode and temperature or level have been set.

1. Press  "Cooking time".
2. To set the cooking time, press the relevant time value, e.g. hour display "h" or minute display "m".
  - ✓ The selected value is marked in blue.
3. Use the setting ring to set the cooking time. If required, use  to reset the setting value.
4. Press  to start the operation.
  - ✓ The appliance starts to heat and the time counts down.
  - ✓ When the time has elapsed, a signal sounds. A message appears on the display confirming that the operation has finished.
5. Once the cooking time has elapsed:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use  to switch the appliance off.

### Changing the cooking time

You can change the cooking time at any time.

1. Press the cooking time .
2. Use the setting ring to change the cooking time.
  - ✓ The change is applied.

### Cancelling the cooking time

You can cancel the cooking time at any time.

1. Press the cooking time .
2. Reset the cooking time using .
 

**Note:** For operating modes that always require a cooking time, the appliance resets the cooking time to the preset value.

  - ✓ The change is applied.

### 10.2 Setting the end time

You can delay the time at which the cooking time for the operation is due to end by up to 24 hours.

#### Notes

- To achieve good cooking results, do not delay the time once the operation has already started.
- Food will spoil if you leave it in the cooking compartment for too long.

#### Requirements

- An operating mode and temperature or level have been set.
  - A cooking time is set.
1. Press  "End time".
  2. To set the time, press the hour display or the minute display.
    - ✓ The selected value is marked in blue.
  3. Use the setting ring to delay the time. If required, use  to reset the setting value.
  4. Press  to start the operation.
    - ✓ The display shows the time remaining until the operation starts.
    - ✓ Once the start time has been reached, the appliance starts heating and the cooking time starts counting down. For some types of heating, e.g. steaming, the cooking time only starts after a heating-up time. The heating-up time depends on the volume and temperature of the food. The end time is postponed.
    - ✓ When the time has elapsed, a signal sounds. A notification appears on the display confirming that the operation has finished.
  5. Once the cooking time has elapsed:
    - ▶ If required, you can select other settings and restart the operation.
    - ▶ When the food is ready, use  to switch the appliance off.

### Changing the end time

To achieve good cooking results, only change the set time before the operation starts and before the cooking time starts counting down.

1. Press the end time .
2. Use the setting ring to change the end time.
  - ✓ The change is applied.

### Cancelling the end time

You can delete the set end time at any time.

1. Press the end time .
2. Use  to reset the end time.
 

**Note:** For operating modes that always require a cooking time, the appliance resets the time at which the cooking time ends to the next possible time.

  - ✓ The change is applied.

### 10.3 Setting the timer

The timer runs independently during the operation. You can set the timer for up to 24 hours. The timer has its own signal so that you can tell whether it is the timer or a cooking time that has elapsed.

1. Press  in the status display.
2. Press .
3. To set the timer, press the relevant time value on the display, e.g. minute display "m" or second display "s".
  - ✓ The selected value is marked in blue.

4. Set the timer using the setting ring.  
If required, use  to reset the setting value.
  5. To start the timer, press "Start"  on the display.
- ✓ The timer counts down.
  - ✓ The timer remains visible on the display if the appliance is switched off.
  - ✓ When the appliance is switched on, the display shows the settings for the current operation. The timer is displayed in the status display.
  - ✓ Once the timer has elapsed, a signal sounds. A notification appears on the display confirming that the timer has finished.

## Changing the timer

You can change the timer at any time.

1. If the timer is running in the background, use  to select the timer beforehand.
2. Press .
3. Change the timer using the setting ring.
4. Press  to confirm.

## Cancelling the timer

You can cancel the timer at any time.

1. If the timer is running in the background, use  to select the timer beforehand.
2. Press .
3. Reset the timer using . Reset the timer using .

# 11 Steam

Food can be cooked particularly gently using steam. You can use the special types of steam heating, or use steam assistance with certain types of heating.

## WARNING – Risk of scalding!

Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.

- ▶ Open the appliance door carefully.
- ▶ Keep children at a safe distance.

## 11.1 Before using the steam function

Before using the steam function each time, make sure that your appliance is supplied with sufficient water.

## Filling the water tank

### WARNING – Risk of fire!

Due to the hot surfaces, vapours from flammable liquids may catch fire in the cooking compartment (explosion). The appliance door may spring open. Hot steam and jets of flame may escape.

- ▶ Do not pour flammable liquids (e.g. alcoholic drinks) into the water tank.
- ▶ Only fill the water tank with water or with the descaling solution we have recommended.

### WARNING – Risk of burns!


The water tank may heat up while the appliance is in operation.

- ▶ Wait until the water tank has cooled down from the previous operation.
- ▶ Remove the water tank from the tank recess.


**Requirement:** The water hardness is set correctly.

1. Press .
- ✓ The control panel pops out automatically.
2. Pull the control panel towards you with both hands and then push it upwards until it clicks into place .

3. Remove the water tank from the tank recess .

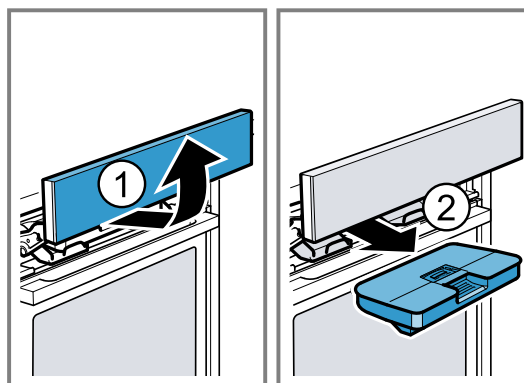


4. Press down on the water tank lid along the seal to prevent water from leaking out of the water tank.
5. Remove the cover  on the water tank.
6. Fill the water tank with water up to the "max"  mark.

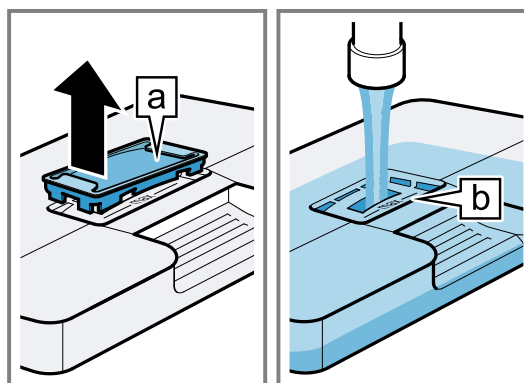

7. Put the cover back into the opening on the water tank.

8. Insert the full water tank ①. When doing so, make sure that the water tank clicks into place behind the retainers [a].

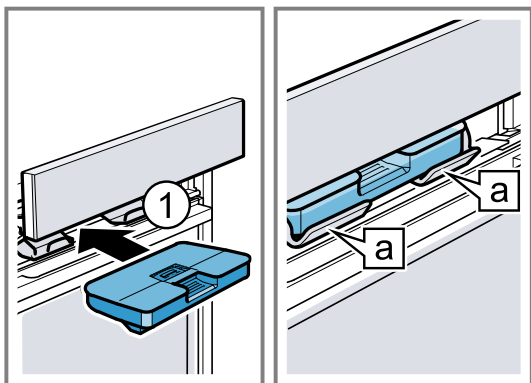

9. Slowly slide the control panel downwards and then push it away from you until it is closed completely.

## 11.2 Setting options with steam

There are various ways in which you can prepare your food with steam.

### Types of steam heating

A variety of types of steam heating are available for which hot steam is used to gently prepare food.

#### ATTENTION

A lot of steam is produced during operation with the types of steam heating. Condensate that collects in the drip trough underneath the cooking compartment may overflow and damage adjacent units.

- ▶ Do not open the appliance door, or open it as infrequently as possible, while the appliance is in operation.

### Steaming

During steaming [img alt="steaming icon"], the food is enveloped by hot steam, which helps to retain the nutrients. This cooking method also helps to retain the shape, colour and typical flavour of the food.

When temperatures between 105 °C and 120 °C are set, the cooking time is reduced. This means that even more nutrients and vitamins are retained when steaming.

### Reheating

The reheating function [img alt="reheating icon"] can be used to warm up food that has already been cooked, or bread and pastries from the day before, without affecting their quality.

### Proving dough

Dough proves considerably more quickly using the dough proving [img alt="dough proving icon"] steam heating type than at room temperature and does not dry out.

### Defrost

Use the defrost function [img alt="defrost icon"] to defrost deep-frozen and frozen products gently without affecting the quality.

### Sous-vide

Sous-vide [img alt="sous-vide icon"] is a type of low-temperature cooking during which vacuum-sealed food is cooked at low temperatures between 50 and 95 °C with 100% steam. Sous-vide is suitable for meat, fish, vegetables and desserts.

A chamber vacuum-packing machine is used to heat-seal the food in special heat-resistant cooking bags. The protective cooking bag helps retain flavour and nutrients.

#### ⚠ WARNING – Risk of scalding!

Hot water collects on the vacuum-sealing bag during cooking.

- ▶ Use an oven cloth to carefully lift the vacuuming bag so that the hot water runs off into the universal pan or the cooking container.
- ▶ Use an oven cloth to carefully remove the vacuuming bag.

**Note:** During sous-vide cooking, more condensate forms on the cooking compartment floor than with other types of heating.

#### ATTENTION

Risk of damage to kitchen units

Too much water has collected on the cooking compartment floor. The water may leak out of the appliance.

- ▶ Do not fill the water tank a second time for the sous-vide cooking.

### Added steam

When you cook with added steam, the appliance introduces steam into the cooking compartment at various intervals. This gives your food a crispy crust and a shiny surface. Meat stays juicy and tender, and only undergoes a minimum reduction in volume.

You can combine added steam with the following functions:

- Types of heating → *Page 14*
  - 4D hot air [img alt="4D hot air icon"]
  - Top/bottom heating [img alt="top/bottom heating icon"]
  - Circulated air grilling [img alt="circulated air grilling icon"]
  - Keeping warm [img alt="keeping warm icon"]
- → *"Dishes", Page 22*
- → *"Meat probe", Page 20*

### Steam jet

You can use the steam jet function to specifically add intensive steam at various intervals. This makes bread and bread rolls in particular wonderfully crispy and gives them a golden colour.

The appliance adds clouds of steam to the cooking compartment for approx. 3 to 5 minutes. Depending on the operation, you can activate the steam jet several times.

You can add the steam jet for the following functions:

- Types of heating → *Page 14*
  - 4D hot air [img alt="4D hot air icon"]
  - Top/bottom heating [img alt="top/bottom heating icon"]
  - Circulated air grilling [img alt="circulated air grilling icon"]
- → *"Meat probe", Page 20*

**Note:** Only use the steam jet when cooking compartment temperatures are above 120 °C.

## 11.3 Setting the type of steam heating

#### Note

Observe the instructions for the types of steam heating:

- → *"Types of steam heating", Page 18*

**Requirement:** The water tank has been filled. If the water tank runs dry during operation, a message appears on the display. Operation is stopped.

→ "Filling the water tank", Page 17

1. Press "Steam" in the menu.
2. Press the required type of steam heating.
3. Use the setting ring to set the temperature.
4. Press  "Cooking time".  
A cooking time must always be set for types of steam heating.
5. To change the preset cooking time, press the relevant time value, e.g. hour display "h" or minute display "m".  
✓ The selected value is marked in blue.
6. Use the setting ring to set the cooking time.  
If required, use  to reset the setting value.
7. Press  to start the operation.  
✓ The appliance starts to heat and the cooking time counts down. For some types of heating, e.g. steaming, the cooking time only starts after a heating-up time. The heating-up time depends on the volume and temperature of the food.
- ✓ When the time has elapsed, a signal tone sounds. A notification appears on the display confirming that the operation has finished.
8. Once the cooking time has elapsed:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use  to switch the appliance off.
9. Empty the water tank and dry the cooking compartment.

→ "After using steam operation", Page 20

## Changing the type of heating

When you change the type of heating, the other settings are also reset.

1. Press .
2. Press .
3. Press the type of heating that you want to use.
4. Reset the operation and use  to start.

## Changing the temperature

Once the operation has started, you can change the temperature at any time.

1. Press the temperature.
2. Change the temperature with the setting ring.
- ✓ The change is applied.

## Changing the cooking time

You can change the cooking time at any time.

1. Press the cooking time .
2. Use the setting ring to change the cooking time.
- ✓ The change is applied.

## 11.4 Setting added steam

### Requirements

- Observe the information about the respective operating mode.  
→ "Setting options with steam", Page 18
- The water tank has been filled. If the water tank runs dry during operation, a message appears on the display. The appliance continues to operate but without injecting steam into the cooking compartment.

→ "Filling the water tank", Page 17

1. Press the operating mode that you require in the menu.
2. Select the settings for the operating mode, e.g. type of heating and temperature.
3. Press  "Added steam".
4. Use the setting ring to set the steam level.

| Steam level | Added steam |
|-------------|-------------|
| 1           | Low         |
| 2           | Medium      |
| 3           | High        |

5. Press  to start the operation.  
✓ The appliance starts heating.  
✓ The setting values and how long the appliance has already been in operation are shown on the display.
6. When the food is ready, use  to switch the appliance off.
7. Empty the water tank and dry the cooking compartment.

→ "After using steam operation", Page 20

## Changing added steam

You can change or deactivate the added steam function at any time.

1. Press added steam .
2. Change or deactivate added steam using the setting ring.
- ✓ The change is applied.

## 11.5 Setting the steam jet function

### Requirements

- Observe the information about the respective operating mode.  
→ "Setting options with steam", Page 18
- The water tank has been filled. If the water tank runs dry during operation, a message appears on the display. Operation is stopped.  
→ "Filling the water tank", Page 17

1. Press the operating mode that you require in the menu.
2. Select the settings for the operating mode, e.g. type of heating and temperature.
3. Press  to start the operation.
4. Press  "Steam jet" at the desired time.  
Do not use the steam jet until the appliance has completely heated up.
5. Press "On" in the setting ring.  
✓ The appliance starts to heat the water.
6. When the water is heated up, press  "Steam jet" again.

**Note:** If rapid heating  is activated, the steam jet can only be triggered once rapid heating is complete.

- ✓ The steam jet is triggered and the appliance adds clouds of steam to the cooking compartment for approx. 3 to 5 minutes.
- ✓ When the steam jet has finished, the operation continues to run as normal. Depending on the operation, the steam jet can be triggered again if necessary.

7. When the food is ready, use  to switch the appliance off.
8. Empty the water tank and dry the cooking compartment.  
→ "After using steam operation", Page 20

## Cancelling the steam jet

You can cancel the steam jet at any time.

1. Press  "Steam jet".
2. Press "Off" in the setting ring.
- ✓ The operation continues without the steam jet.

## 11.6 After using steam operation

Dry the appliance after each steam operation.

**Note:** Traces of limescale may remain in the cooking compartment after operation with steam. The functionality of the appliance is not affected by this. You can remove traces of limescale using hot water or a cloth soaked in vinegar. Observe the information on cleaning.  
→ "Cleaning and servicing", Page 29

## Emptying the water tank

### **WARNING – Risk of burns!**

The water tank may heat up while the appliance is in operation.

- ▶ Wait until the water tank has cooled down from the previous operation.
- ▶ Remove the water tank from the tank recess.

### **ATTENTION**

Drying the water tank in the hot cooking compartment leads to damage to the water tank.

- ▶ Do not dry the water tank in the hot cooking compartment.

Cleaning the water tank in the dishwasher will damage it.

- ▶ Do not clean the water tank in the dishwasher.
- ▶ Clean the water tank with a soft cloth and standard washing-up liquid.

1. Use  to open the control panel.
2. Remove the water tank.
3. Carefully remove the lid of the water tank.

4. Empty the water tank, clean it with detergent and then rinse it thoroughly with clean water.
5. Dry all parts with a soft cloth.
6. Rub the seal on the lid until dry.
7. Leave the water tank to dry with the lid open.
8. Place the lid on the water tank and push down on it.
9. Insert the water tank and close the control panel.

## Drying the condensation tray


### **WARNING – Risk of burns!**

The appliance becomes hot during operation.

- ▶ Allow the appliance to cool down before cleaning.

**Requirement:** The cooking compartment has cooled down.

1. Open the appliance door.
2. **Note:** The condensation tray  is underneath the cooking compartment.

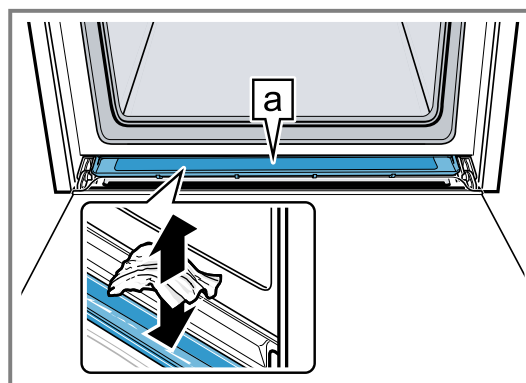

Soak up the water in the condensation tray  with a tea towel and wipe it carefully.

**Note:** You can remove the condensation tray in order to clean it.

→ "Removing the condensate tray", Page 34

## Drying the cooking compartment

Dry the cooking compartment after each steam operation.

- ▶ Dry the cooking compartment by hand or use the drying function.  
→ "Drying", Page 33

# 12 Meat probe

Cook with precision by inserting the meat probe  into the food and setting a core temperature on the appliance. The meat probe measures the core temperature inside the food. Once the set core temperature has been reached in the food, the appliance automatically stops heating.

## 12.1 Suitable types of heating with the meat probe

Only certain types of heating are suitable for use with the meat probe.

You can use the meat probe with the following types of heating:

- 4D hot air 
- Top/bottom heating 
- Hot air gentle 

- Top/bottom heating gentle 
- Circulated air grilling 
- Pizza setting 
- Intensive heat 
- Low-temperature cooking 
- Bottom heat 
- Keeping warm 
- Steaming 
- Reheating 

## 12.2 Inserting the meat probe

Use the meat probe supplied or order a suitable meat probe from our customer service.

**⚠ WARNING – Risk of electric shock!**

Using the wrong meat probe could damage the insulation.

- ▶ Only use the meat probe for this specific appliance.

**ATTENTION**

Otherwise the meat probe may be damaged.

- ▶ Do not trap the cable of the meat probe.
- ▶ To prevent the meat probe from being damaged by excessive heat, there must be a gap of a few centimetres between the grill element and the meat probe. The meat may expand during the cooking process.

**⚠ WARNING – Risk of injury!**

The meat probe is sharp.

- ▶ Handle the meat probe with care.

**Note:** If the pull-out rails are attached at level 3, you cannot insert the roasting sensor in the cooking compartment. Unhook the pull-out rails or hook them in at a different level.


→ "Rails", Page 37

1. Insert the meat probe into the food.

The meat probe has three measuring points. Ensure that at least the middle measuring point is inserted in the food.


|                     |                                                                         |
|---------------------|-------------------------------------------------------------------------|
| Thin pieces of meat | Insert the meat probe into the thickest part of the meat from the side. |
|---------------------|-------------------------------------------------------------------------|

|                      |                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------|
| Thick pieces of meat | Insert the meat probe diagonally into the meat from above, pushing it in as far as possible. |
|----------------------|----------------------------------------------------------------------------------------------|

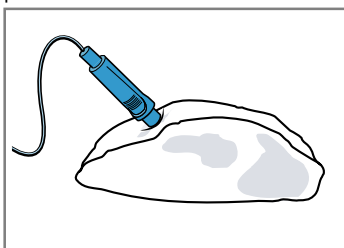


**Note:** If you want to turn the food, insert the meat probe into the side of the food so that it does not need to be removed when turning.

|         |                                                                                                                                                                                                         |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Poultry | Insert the meat probe into the thickest part of the breast, pushing it in as far as possible. The meat probe can be inserted horizontally or vertically depending on the size and shape of the poultry. |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

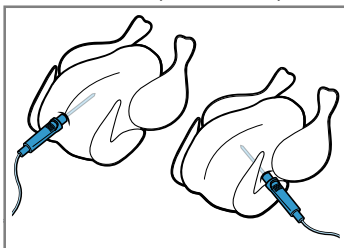

Turn the poultry and place it on the wire rack breast-side down.

|      |                                                                                                                                        |
|------|----------------------------------------------------------------------------------------------------------------------------------------|
| Fish | When cooking whole fish, insert the meat probe behind the fish's head in the direction of the spine, pushing it in as far as possible. |
|------|----------------------------------------------------------------------------------------------------------------------------------------|

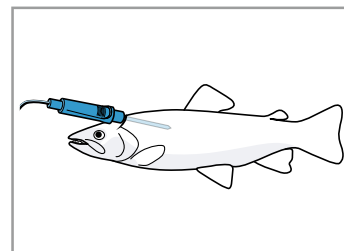

Place the fish on the wire rack in the swimming position without turning it, e.g. using half a potato as a support.

2. Place the food with the meat probe into the cooking compartment.
3. Plug the meat probe into the socket on the left-hand side of the cooking compartment.

**Note:** Do not remove the meat probe when turning the food. Once you have turned the food, check that the meat probe is correctly positioned in the food.

## 12.3 Setting the meat probe

You can set a core temperature of between 30 °C and 99 °C.

### Requirements

- The food with the meat probe is in the cooking compartment.
- The meat probe is inserted in the cooking compartment.

1. Press "Types of heating" in the menu.
2. Press the type of heating that you want to use.
3. Use the setting ring to set the cooking compartment temperature.

Set the cooking compartment temperature at least 10 °C higher than the core temperature.

Do not set the cooking compartment temperature to higher than 250 °C.

4. Press  $\text{↵}$  "Meat probe".
5. Use the setting ring to set the core temperature. If required, use  $\text{↺}$  to reset the setting value.

6. Press  $\text{start/stop}$  to start the operation.

- ✓ The appliance starts heating.
- ✓ The setting values and how long the appliance has already been in operation are shown on the display.
- ✓ Once the food reaches the core temperature, a signal sounds. A notification appears on the display confirming that the operation has finished. The appliance stops heating. With the slow cooking type of heating, the appliance continues to heat.

7. **⚠ WARNING – Risk of burns!**

The cooking compartment, accessories and meat probe become very hot.

- ▶ Always use oven gloves to remove hot accessories and the meat probe from the cooking compartment.

When the core temperature is reached:

- ▶ If required, you can select other settings and restart the operation.
- ▶ When the food is ready, use  $\text{⏻}$  to switch the appliance off.
- ▶ Pull the meat probe out of the socket in the cooking compartment.
- ▶ Pull the meat probe out of the food and remove it from the cooking compartment.

**Tips**

- You can also combine the meat probe with a different operating mode, e.g.:
  - → "Steam", Page 17
  - → "Dishes", Page 22
- You can use the meat probe even if no core temperature is set. You can read off the core temperature of the food on the display and manually end the operation, if required.

**Changing the temperature**

You can change the cooking compartment temperature and the core temperature at any time after starting the operation.

1. Press the cooking compartment temperature or core temperature.
  2. Change the temperature with the setting ring.
- ✓ The change is applied.

**Changing the type of heating**

When you change the type of heating, the other settings are also reset.

1. Press start stop.
2. Press  $\leftarrow$ .
3. Press the type of heating that you want to use.
4. Reset the operation and use start stop to start.

**12.4 Core temperatures of different foods**

This is where you can find the suggested core temperatures for different foods.

These suggestions depend on the quality and the size/shape of the food. Do not use frozen food.

| <b>Poultry</b>           | <b>Core temperature in °C</b> |
|--------------------------|-------------------------------|
| Chicken                  | 80 - 85                       |
| Chicken breast           | 75 - 80                       |
| Duck                     | 80 - 85                       |
| Duck breast, medium rare | 55 - 60                       |
| Turkey                   | 80 - 85                       |

| <b>Poultry</b> | <b>Core temperature in °C</b> |
|----------------|-------------------------------|
| Turkey breast  | 80 - 85                       |
| Goose          | 80 - 90                       |

| <b>Pork</b>                 | <b>Core temperature in °C</b> |
|-----------------------------|-------------------------------|
| Shoulder of pork            | 85 - 90                       |
| Fillet of pork, medium rare | 62 - 70                       |
| Pork loin, well done        | 72 - 80                       |

| <b>Beef</b>                        | <b>Core temperature in °C</b> |
|------------------------------------|-------------------------------|
| Tenderloin or sirloin, rare        | 45 - 52                       |
| Tenderloin or sirloin, medium rare | 55 - 62                       |
| Tenderloin or sirloin, well done   | 65 - 75                       |

| <b>Veal</b>                 | <b>Core temperature in °C</b> |
|-----------------------------|-------------------------------|
| Joint of veal or hock, lean | 75 - 80                       |
| Joint of veal, shoulder     | 75 - 80                       |
| Veal knuckle                | 85 - 90                       |

| <b>Lamb</b>                 | <b>Core temperature in °C</b> |
|-----------------------------|-------------------------------|
| Leg of lamb, medium rare    | 60 - 65                       |
| Leg of lamb, well done      | 70 - 80                       |
| Saddle of lamb, medium rare | 55 - 60                       |

| <b>Fish</b> | <b>Core temperature in °C</b> |
|-------------|-------------------------------|
| Fish, whole | 65 - 70                       |
| Fish fillet | 60 - 65                       |

| <b>Other</b>                 | <b>Core temperature in °C</b> |
|------------------------------|-------------------------------|
| Meat loaf, all kinds of meat | 80 - 90                       |
| Heating food, reheating      | 65 - 75                       |

**13 Dishes**

The "Dishes" operating mode helps you to use your appliance to prepare different meals by selecting the optimum settings automatically.

**Note:** Depending on the appliance type or the software status of your appliance, the "Assist Plus" search function takes you to the most suitable programmed dish.

→ "Assist Plus search function", Page 24

If you wish to scroll through the programmed dishes, change the "Assist Plus" basic setting accordingly. Then, instead of the "Assist Plus" search function, the "Dishes" function appears in the menu.

→ "Basic settings", Page 26

**13.1 Cookware for dishes**

The cooking result depends on the composition of the meat and the size of cookware.

You should therefore use heat-resistant cookware that is suitable for temperatures up to 300 °C. Glass or glass ceramic cookware is best. The joint should cover approx. 2/3 of the cookware base.

Cookware made from the following material is not suitable:

- Bright, shiny aluminium
- Unglazed clay
- Plastic or plastic handles

**13.2 Setting options for the dishes**

To cook the dishes perfectly, the appliance uses different settings depending on the dish.

The display shows you the settings that are used. You can adjust certain settings. Follow the instructions on the display.

**Note:** The cooking result depends on the quality and composition of the food. Use fresh and, ideally, chilled food. Use frozen food straight from the freezer.

### Tips and information about the settings

If you set a dish, the display shows relevant information for this dish, e.g.:

- Suitable shelf position
- Suitable accessory or cookware
- Added liquid
- Time for turning or stirring

When this time is reached, a signal sounds.

To call up the information, press ⓘ "Info". Some messages are displayed automatically.

### Programmes

The optimum type of heating, temperature and cooking time are preset for programmes.

To achieve an optimal cooking result, you must also set the weight, thickness or the cooking level. You can set the weight only in the intended range.

Unless otherwise indicated, set the total weight for your dish.

### Recommended settings

For the recommended settings, the optimum type of heating is preset as a fixed value.

You can adjust the preset temperature and the cooking time.

### Dishes with meat probe

You can use the meat probe  for some dishes.

You can adjust the temperature and the core temperature.

→ "Meat probe", Page 20

### Dishes with steam

For some dishes, you can select a cooking method with steam . The food is cooked gently.

Observe the information on operating with steam.

→ "Steam", Page 17

### Baking sensor

Some dishes are suitable for cooking with the baking sensor . You do not have to implement any further settings.

The baking sensor monitors the baking process in the cooking compartment. The appliance regulates the settings automatically and ends the operation once the dish is ready.

### Notes

- Do not use the baking sensor if the dish is already pre-baked. The baking result would no longer be satisfactory.
- Do not open the appliance door approx. 5 minutes after starting the operation with the baking sensor. The baking sensor mode stops. If you have to open the appliance door, restart the operation afterwards without the baking sensor or cancel the operation and set it manually. Monitor the cooking process until the food is ready.
- To achieve an optimal baking result, use dark-coloured metal baking tins.

### ATTENTION

Using silicone moulds or any film, covers or accessories that contain silicone could damage the baking sensor. Damage may occur even if the baking sensor is not active.

- ▶ Do not use silicone moulds or any film, covers or accessories that contain silicone.
- ▶ Never place objects made of silicone in the cooking compartment.

### Remaining time forecast for the operation

If your appliance is connected to Home Connect, the appliance can forecast the expected remaining time for the cooking process.

The initial remaining time appears on the display after approx. 1 minute. The remaining time is continually recalculated and updated.

**Note:** The remaining time forecast is not available for all dishes.

## 13.3 Overview of dishes

You can find out which individual dishes are available to you on the appliance when you call up the operating mode. The selection of dishes depends on the features of your appliance.

The dishes are sorted by category and food.

**Note:** In the basic settings, you can regionally specialise the displayed dishes.

→ "Basic settings", Page 26

| Category             | Food                                                                                                                                                                                                                    |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Baking sensor        | Cakes<br>Small baked items<br>Savoury cakes, pizza, quiche<br>Potato products, frozen<br><b>Note:</b> This only contains dishes for cooking with the baking sensor.                                                     |
| Cakes                | Cakes in tins<br>Cakes on a baking tray<br>Small baked items<br>Biscuits                                                                                                                                                |
| Bread, bread rolls   | Bread<br>Bread rolls                                                                                                                                                                                                    |
| Pizza, savoury cakes | Pizza<br>Savoury cakes, quiche                                                                                                                                                                                          |
| Bakes, soufflés      | Bake, savoury, fresh, cooked ingredients<br>Potato gratin, raw ingredients, 4 cm deep<br>Fresh lasagne<br>Lasagne, chilled<br>Bake, sweet, fresh<br>Fruit crumble<br>Soufflés in individual moulds<br>Yorkshire pudding |
| Poultry              | Chicken<br>Duck, goose<br>Turkey                                                                                                                                                                                        |
| Meat                 | Pork<br>Beef<br>Veal<br>Lamb<br>Game<br>Meat dishes                                                                                                                                                                     |

| Category                                   | Food                                                                                      |
|--------------------------------------------|-------------------------------------------------------------------------------------------|
| Fish.                                      | Fish, whole<br>Fish fillet<br>Fish cutlet<br>Fish dishes<br>Seafood                       |
| Frozen products                            | Pizza<br>Bakes<br>Potato products<br>Vegetables<br>Poultry, fish<br>Bread rolls           |
| Side dishes, vegetables                    | Potatoes<br>Rice<br>Cereals<br>Vegetables<br>Pulses<br>Pasta, dumplings<br>Eggs           |
| Desserts, compote                          | Yeast dumplings<br>Crème caramel<br>Rice pudding<br>Fruit compote<br>Yogurt in glass jars |
| Sous-vide                                  | Meat<br>Poultry<br>Fish.<br>Vegetables<br>Desserts                                        |
| Preserving, extracting juice, disinfecting | Preserving food<br>Extracting juice<br>Disinfecting bottles                               |
| Reheating, crisping up                     | Baked items<br>Side dishes<br>Vegetables<br>Menu                                          |
| Defrosting food                            | Fruit, vegetables                                                                         |

## 13.4 Setting a dish

1. Press "Dishes" in the menu.
2. Press the required category.
3. Press the required food.
4. Press the required dish.  
**Tip:** For some dishes, you can select a preferred cooking method.  
→ "Setting options for the dishes", Page 22
- ✓ The settings for the dish appear on the display.
5. Adjust the settings if required.  
You can adjust only certain settings depending on the dish.  
→ "Setting options for the dishes", Page 22
6. For information about the accessory and shelf position, for example, press ⓘ"Info".
7. Press  to start the operation.  
✓ The appliance starts to heat and the time counts down.  
✓ For dishes with a baking sensor, or when using a roasting sensor (depending on the appliance equipment), no cooking time is displayed. The setting values and how long the appliance has already been in operation are shown on the display. If the appliance is connected to Home Connect, the forecast time remaining is displayed.  
→ "Remaining time forecast for the operation", Page 23
- ✓ Once the dish is ready, a signal sounds. The appliance stops heating.
8. Once the cooking time has elapsed:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use ⏻ to switch the appliance off.

## 13.5 Automatic switch-off function

The automatic switch-off function  for the dishes allows you to bake and fry without any stress. When the operation has finished, the appliance automatically stops heating. To achieve an optimum cooking result, remove your dish from the cooking compartment once the operation has finished.

# 14 "Assist Plus" search function

"Assist Plus" is an intelligent search function. Enter what you wish to cook and the appliance will take you to the most suitable programmed dish or to the saved setting for your meal.

→ "Dishes", Page 22

→ "Favourites", Page 25

### Notes

- Depending on the appliance type/software status, you must first download this function to your appliance. You can find more information in the Home Connect app.
- If you wish to scroll through the programmed dishes, change the "Assist Plus" basic setting accordingly.

Then, instead of the "Assist Plus" search function, the "Dishes" function appears in the menu.

→ "Dishes", Page 22

→ "Basic settings", Page 26

## 14.1 Setting the search function

Follow the selection options and information in the "What do you want to cook?" menu.

**Requirement:** Observe the instructions on the dishes, cookware and setting options.

→ "Dishes", Page 22

1. Press "Assist Plus" in the menu.
- ✓ The display shows a search line, food categories and a list of saved favourites and recently selected dishes.

2. To select a dish directly, press a category or dish in the list.
3. To search for a dish, press the search line  and enter a dish using the keypad.  
The appliance suggests suitable dishes as you enter them.
4. If a suitable dish appears, press it.
5. Depending on the dish, settings can be adjusted if necessary .
6. For information about the accessory and shelf position, for example, press .
7. Press  to start the operation.
- ✓ The appliance starts to heat and the cooking time counts down.
- ✓ For dishes with a baking sensor, or when using a roasting sensor (depending on the appliance equipment), no cooking time is displayed. The setting values and how long the appliance has already been in operation are shown on the display. If the appliance is connected to Home Connect, the forecast time remaining is displayed.  
→ *"Remaining time forecast for the operation", Page 23*

- ✓ Once the dish is ready, a signal sounds. The appliance stops heating.  
→ *"Automatic switch-off function", Page 24*
- 8. Once the cooking time has elapsed:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use  to switch the appliance off.

## 15 Favourites

In the "Favourites", you can save your settings and use these again.

**Note:** Depending on the appliance type/software status, you must first download this function to your appliance. You can find more information in the Home Connect app.

### 15.1 Saving favourites

You can save up to 30 different operating modes as your favourites.

1. If you set an operating mode, press ☆ next to the title of the operating mode at the top of the display.
2. If required, change the title of the favourite using the keyboard on the display.
3. Press "Apply".

### 15.2 Selecting favourites

If you have saved favourites, you can use these to set the operation.

1. Press "Favourites" in the menu.
2. Press the required favourites.
3. If required, you can change the settings.
4. Press  to start the operation.
- ✓ The setting values are shown on the display.

### Note

Observe the instructions for the various operating modes:

- → *"Steam", Page 17*
- → *"Meat probe", Page 20*

### 15.3 Changing favourites

You can change, sort or delete your saved favourites at any time.

1. Press "Favourites" in the menu.
2. Press the required favourites.
3. Next to the title of the favourite, press .
4. Change the settings or the title of the favourite.
5. Confirm the change.

### Sorting favourites

1. Press "Favourites" in the menu.
2. Press and hold the required favourite and drag it to a different position.

### Deleting favourites

1. Press "Favourites" in the menu.
2. Press the required favourites.
3. Next to the title of the favourite, press ☆.
4. Confirm the deletion.

## 16 Childproof lock

You can secure your appliance to prevent children from accidentally switching it on or changing the settings.

### 16.1 Activating the childproof lock

The childproof lock can be activated regardless of whether the appliance is on or off.

1. To activate the childproof lock:
  - ▶ If the appliance is switched off, press any area on the display.
  - ▶ When the appliance is switched on, press  on the status display.

2. Press .
- ✓ A confirmation message appears on the display.
- ✓ The control panel is locked. The appliance can only be switched off using .
- ✓ When the appliance is switched on,  lights up. When the appliance is switched off,  does not light up.

### 16.2 Deactivating the childproof lock

You can deactivate the childproof lock at any time.

1. Press anywhere on the display.
2. To deactivate the childproof lock, follow the instructions on the display so that the graphic on the ring fills up completely.

✓ A confirmation message appears on the display.

## 17 Basic settings

You can configure the basic settings for your appliance to meet your needs.

### 17.1 Overview of the basic settings

Here you can find an overview of the basic settings and factory settings. The basic settings depend on the features of your appliance.

You can find more information about the individual basic settings on the display using ⓘ "Info".

| Basic settings     | Selection                                                                                                                                                                                                                               |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Language           | See selection on the appliance.                                                                                                                                                                                                         |
| Home Connect       | Connect the oven to a mobile device and remotely control it.<br>→ "Home Connect ", Page 27                                                                                                                                              |
| Clock              | Time in 24-hour format.                                                                                                                                                                                                                 |
| Display            | Selection                                                                                                                                                                                                                               |
| Brightness         | <ul style="list-style-type: none"> <li>▪ Levels 1, 2, 3, 4 and 5 <sup>1</sup></li> </ul>                                                                                                                                                |
| Clock display      | <ul style="list-style-type: none"> <li>▪ On for a limited time</li> <li>▪ On (this setting increases energy consumption)</li> <li>▪ Off <sup>1</sup></li> </ul>                                                                         |
| Clock type         | <ul style="list-style-type: none"> <li>▪ Digital <sup>1</sup></li> <li>▪ Analogue</li> </ul>                                                                                                                                            |
| Alignment          | <ul style="list-style-type: none"> <li>▪ Align the display horizontally and vertically.</li> </ul>                                                                                                                                      |
| Tone               | Selection                                                                                                                                                                                                                               |
| Button tone        | <ul style="list-style-type: none"> <li>▪ On <sup>1</sup></li> <li>▪ Off</li> </ul>                                                                                                                                                      |
| Volume             | <ul style="list-style-type: none"> <li>▪ Levels 1, 2, 3, 4 and 5 <sup>1</sup></li> </ul>                                                                                                                                                |
| Signal tone        | <ul style="list-style-type: none"> <li>▪ Very short duration (once)</li> <li>▪ Short duration (approx. 5 seconds)</li> <li>▪ Medium duration (approx. 10 seconds) <sup>1</sup></li> <li>▪ Long duration (approx. 30 seconds)</li> </ul> |
| Appliance settings | Selection                                                                                                                                                                                                                               |
| Fan run-on time    | <ul style="list-style-type: none"> <li>▪ Minimum</li> <li>▪ Recommended <sup>1</sup></li> <li>▪ Long</li> <li>▪ Very long</li> </ul>                                                                                                    |
| Pull-out system    | <ul style="list-style-type: none"> <li>▪ Not retrofitted (if shelf supports and a single set of pull-out rails are fitted) <sup>1</sup></li> <li>▪ Retrofitted (if 2 or 3 sets of pull-out rails are fitted)</li> </ul>                 |

| Appliance settings        | Selection                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Lighting                  | <ul style="list-style-type: none"> <li>▪ When cooking and when the door is opened <sup>1</sup></li> <li>▪ Only when the door is opened</li> <li>▪ Always off</li> </ul>                                                                                                                                                                                                                                                                                                  |
| Water hardness            | <ul style="list-style-type: none"> <li>▪ 4 (very hard) <sup>1</sup></li> <li>▪ 3 (hard)</li> <li>▪ 2 (medium)</li> <li>▪ 1 (soft)</li> <li>▪ 0 (softened)</li> </ul>                                                                                                                                                                                                                                                                                                     |
| Height above sea level    | <p>If calibration takes place automatically, this basic setting disappears.<br/>→ "Calibrating the appliance before using it for the first time", Page 13</p> <ul style="list-style-type: none"> <li>▪ 0 m - 300 m</li> <li>▪ 300 m - 600 m</li> <li>▪ 600 m - 900 m</li> <li>▪ 900 m - 1200 m</li> <li>▪ 1200 m - 1500 m</li> <li>▪ 1500 m - 1800 m</li> <li>▪ 1800 m - 2100 m</li> <li>▪ Height above sea level unknown <sup>1</sup> (calibration required)</li> </ul> |
| Personalisation           | Selection                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Brand logo                | <ul style="list-style-type: none"> <li>▪ Display <sup>1</sup></li> <li>▪ Do not display</li> </ul>                                                                                                                                                                                                                                                                                                                                                                       |
| Operation after switch-on | <ul style="list-style-type: none"> <li>▪ Main menu <sup>1</sup></li> <li>▪ Types of heating</li> <li>▪ Steam</li> <li>▪ Dishes</li> <li>▪ Favourites</li> </ul>                                                                                                                                                                                                                                                                                                          |
| Elapsed cooking time      | <ul style="list-style-type: none"> <li>▪ Do not display</li> <li>▪ Display <sup>1</sup></li> </ul>                                                                                                                                                                                                                                                                                                                                                                       |
| Regional dishes           | <ul style="list-style-type: none"> <li>▪ All <sup>1</sup></li> <li>▪ European dishes</li> <li>▪ British dishes</li> </ul>                                                                                                                                                                                                                                                                                                                                                |
| Dishes                    | <ul style="list-style-type: none"> <li>▪ All <sup>1</sup></li> <li>▪ No pork</li> <li>▪ Kosher only</li> </ul>                                                                                                                                                                                                                                                                                                                                                           |
| Childproof lock           | <ul style="list-style-type: none"> <li>▪ Available <sup>1</sup></li> <li>▪ Deactivated</li> </ul>                                                                                                                                                                                                                                                                                                                                                                        |
| Automatic rapid heating   | <ul style="list-style-type: none"> <li>▪ off</li> <li>▪ On <sup>1</sup></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                       |
| Assist Plus               | <ul style="list-style-type: none"> <li>▪ Browse in dishes manually</li> <li>▪ "Assist Plus" intelligent search function <sup>1</sup></li> </ul>                                                                                                                                                                                                                                                                                                                          |

<sup>1</sup> Factory setting (may vary according to model)

| Factory settings      | Selection                                                 |
|-----------------------|-----------------------------------------------------------|
| Factory settings      | <ul style="list-style-type: none"> <li>Restore</li> </ul> |
| Info                  | Display                                                   |
| Appliance information | Display technical information about the appliance.        |

## 17.2 Changing the basic settings

1. Press "Basic settings" in the menu.
2. Press the required basic settings area.
3. Press the required basic setting.
4. Press to select the required basic setting.
  - ✓ The change is applied directly for most basic settings.
5. To change additional basic settings, use < to go back and select a different basic setting.
6. To exit the basic settings, use △ to go back to the main menu or switch off the appliance using ○.
  - ✓ The changes are saved.

**Note:** Your changes to the basic settings will be retained even after a power failure.

## 17.3 Setting the time

1. Press "Basic settings" in the menu.
2. Press "Time".
3. To set the time, press the hour display or the minute display.
  - ✓ The selected value is marked in blue.
4. Use the setting ring to set the time.
  - The minutes are counted in 5-minute increments. To set it to the precise minute, press and hold the corresponding area in the setting ring for around 1-2 seconds. The minutes are shown in dots. Use the setting ring to set the minutes.
5. To exit the basic settings, use △ to go back to the main menu or switch off the appliance using ○.
  - ✓ The time is saved.

# 18 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of the Home Connect services in your country. You can find information about this at: [www.home-connect.com](http://www.home-connect.com).

The Home Connect app guides you through the entire login process. Follow the instructions, noting the information in the Home Connect app.

### Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app.
  - "Safety", Page 2
- Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.
- In networked standby mode, the appliance requires a maximum of 2 W.

## 18.2 Home Connect settings

You can adjust the Home Connect settings and network settings in your appliance's basic settings. Which settings the display shows will depend on whether Home Connect has been set up and whether the appliance is connected to your home network.

| Basic setting          | Possible settings                 | Explanation                                                                                                                                                                                                             |
|------------------------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Home Connect assistant | Start the assistant<br>Disconnect | You can connect your appliance to the Home Connect app via the Home Connect assistant.<br><b>Note:</b> If you are using the Home Connect assistant for the first time, only the "Start assistant" setting is available. |

## 18.1 Setting up Home Connect

### Requirements

- The appliance is connected to the power supply and is switched on.
  - You have a mobile device with a current version of the iOS or Android operating system, e.g. a smartphone.
  - The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.
  - The mobile device and the appliance are within range of your home network's Wi-Fi signal.
1. Scan the following QR code.



You can install the Home Connect app and connect your appliance via the QR code.

2. Follow the instructions in the Home Connect app.

| Basic setting         | Possible settings                                           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------|-------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Wi-Fi                 | On<br>Off                                                   | You can use the Wi-Fi to switch off the network connection for your appliance. When you have connected successfully once, you can deactivate the Wi-Fi and not lose your detailed data. As soon as you activate Wi-Fi again, the appliance connects automatically.<br><b>Note:</b> In networked standby mode, the appliance requires a maximum of 2 W.                                                                                                                                                                                                                                                                                                   |
| Remote control status | Monitoring<br>Manual remote start<br>Permanent remote start | During monitoring, you can only view the operating status of the appliance in the app.<br>If you convert from monitoring or permanent remote start to manual remote start, you must activate the remote start each time. You can open the appliance door within 15 minutes of having activated remote start. Remote start will not be deactivated by this. Once 15 minutes have elapsed, opening the appliance door will deactivate manual remote start.<br>For permanent remote start, you can start and operate the appliance remotely at any time. If you often operate the appliance remotely, it is helpful to set the remote start to "Permanent". |

### 18.3 Operating the appliance with the Home Connect app

You can use the Home Connect app to set and start the appliance remotely.

#### **WARNING – Risk of fire!**

Combustible objects that are left in the cooking compartment may catch fire.

- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

#### **Requirements**

- The appliance is switched off.
  - The appliance is connected to the home network and to the Home Connect app.
  - In order to be able to set the appliance via the app, the manual or permanent remote start must be selected in the "Remote control status" basic setting.
1. To activate manual remote start, press .  
You only have to confirm on the oven if you are switching from monitoring or permanent remote start to manual remote start.  
With permanent remote start, you do not need to confirm on the oven.
  2. Configure a setting in the Home Connect app and send it to the appliance.

#### **Notes**

- When you start the oven using the controls on the appliance itself, the remote start function is activated automatically. You can use the Home Connect app to adjust the settings or start a new programme.
- You can open the appliance door within 15 minutes of having activated remote start. Remote start will not be deactivated by this. Once 15 minutes have elapsed, opening the appliance door will deactivate manual remote start.

### 18.4 Software update

Your appliance's software can be updated using the software update function, e.g. for the purposes of optimisation, troubleshooting or security updates. This may lead to minor changes of visualizations and operation in the display.

To do this, you must be a registered Home Connect user, have installed the app on your mobile device and be connected to the Home Connect server.

As soon as a software update is available, you will be informed via the Home Connect app and will be able to start the software update via the app. Once the update has been successfully downloaded, you can start installing it via the Home Connect app if you are in your home network (Wi-Fi). The Home Connect app informs you once installation is successful.

#### **Notes**

- The software update consists of two steps.
  - The first step is the download.
  - The second step is the installation on your appliance.
- You can continue to use your appliance as normal while updates are downloading. Depending on your personal settings in the app, software updates can also be set to download automatically.
- Installation takes a few minutes. You cannot use your appliance during installation.
- We recommend that you install security updates as soon as possible.

### 18.5 Remote diagnostics

Customer Service can use Remote Diagnostics to access your appliance if you contact them, have your appliance connected to the Home Connect server and if Remote Diagnostics is available in the country in which you are using the appliance.

**Tip:** For further information and details about the availability of Remote Diagnostics in your country, please visit the service/support section of your local website: [www.home-connect.com](http://www.home-connect.com).

## 18.6 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the installed Wi-Fi communication module).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).

- The current software and hardware version of your appliance.
- Status of any previous resetting to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.

**Note:** Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

# Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

## 19.1 Cleaning products

In order to avoid damaging the various oven surfaces on the appliance, do not use unsuitable cleaning products.

### **WARNING – Risk of electric shock!**

An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

### **ATTENTION**

Unsuitable cleaning agents damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive cleaning products.
- ▶ Do not use cleaning products with a high alcohol content.

- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Do not use any special cleaners for cleaning the appliance while it is hot.

Using oven cleaner in a hot cooking compartment damages the enamel.

- ▶ Never use oven cleaner in the cooking compartment when it is still warm.
- ▶ Remove all food remnants from the cooking compartment and the appliance door before you next heat up the appliance.

If different cleaning agents are mixed together, there may be a chemical reaction between these.

- ▶ Do not mix cleaning agents.
- ▶ Completely remove any cleaning agent residue. Salt contained in new sponge cloths may damage surfaces.
- ▶ Wash new sponge cloths thoroughly before use.

## Suitable cleaning agents

Only use cleaning agents that are suitable for the different surfaces on your appliance.

Follow the instructions on cleaning the appliance.

→ "Cleaning the appliance", Page 30

### Appliance front

| Surface                     | Suitable cleaning agents                                                                                                                           | Information                                                                                                                                                                                              |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Stainless steel             | <ul style="list-style-type: none"> <li>■ Hot soapy water</li> <li>■ Special stainless steel cleaning products suitable for hot surfaces</li> </ul> | To prevent corrosion, remove any patches of limescale, grease, starch or albumin (e.g. egg white) from stainless steel surfaces immediately. Apply a thin layer of the stainless steel cleaning product. |
| Plastic or painted surfaces | <ul style="list-style-type: none"> <li>■ Hot soapy water</li> </ul>                                                                                | Do not use glass cleaner or a glass scraper. To avoid permanent stains, immediately remove any descaling agent that gets onto the surface.                                                               |
| Glass                       | <ul style="list-style-type: none"> <li>■ Hot soapy water</li> </ul>                                                                                | Do not use glass cleaner or a glass scraper.                                                                                                                                                             |

### Appliance door

| Range       | Suitable cleaning agents                                                                                                       | Information                                                                                                                         |
|-------------|--------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Door panels | <ul style="list-style-type: none"> <li>■ Hot soapy water</li> <li>■ Oven cleaner</li> <li>■ stainless steel scourer</li> </ul> | Do not use a glass scraper.<br><b>Tip:</b> Remove the door panels in order to clean them thoroughly.<br>→ "Appliance door", Page 34 |

| Range                               | Suitable cleaning agents                                                                                                                       | Information                                                                                                                                                                          |
|-------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Door cover                          | <ul style="list-style-type: none"> <li>Made of stainless steel: Stainless steel cleaner</li> <li>Made from plastic: Hot soapy water</li> </ul> | Do not use glass cleaner or a glass scraper.<br>Do not use stainless steel care products.<br><b>Tip:</b> Remove the door cover for thorough cleaning.<br>→ "Appliance door", Page 34 |
| Stainless steel interior door frame | <ul style="list-style-type: none"> <li>Stainless steel cleaner</li> </ul>                                                                      | Discolouration can be removed using stainless steel cleaner.<br>Do not use stainless steel care products.                                                                            |
| Door handle                         | <ul style="list-style-type: none"> <li>Hot soapy water</li> </ul>                                                                              | To avoid permanent stains, immediately remove any descaling agent that gets onto the surface.                                                                                        |
| Door seal                           | <ul style="list-style-type: none"> <li>Hot soapy water</li> </ul>                                                                              | Do not remove or scrub.                                                                                                                                                              |

## Cooking compartment

| Range                  | Suitable cleaning agents                                                                                                                           | Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enamel surfaces        | <ul style="list-style-type: none"> <li>Hot soapy water</li> <li>Vinegar solution</li> <li>Oven cleaner</li> <li>stainless steel scourer</li> </ul> | Soak any heavily soiled areas and use a brush or stainless steel scourer.<br>Leave the appliance door open to dry the cooking compartment after cleaning it.<br><b>Notes</b> <ul style="list-style-type: none"> <li>Enamel burns at very high temperatures, causing minor discolouration. The functionality of your appliance is not affected by this.</li> <li>The edges of thin trays cannot be completely enamelled and may be rough. This does not impair the corrosion protection.</li> <li>Food residues leave a white coating on the enamel surfaces. The coating does not pose a health risk. The functionality of your appliance is not affected by this. You can remove residues with lemon juice.</li> </ul> |
| Self-cleaning surfaces | -                                                                                                                                                  | Follow the instructions for self-cleaning surfaces.<br>→ "Regenerating self-cleaning surfaces in the cooking compartment", Page 31                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Shelf supports         | <ul style="list-style-type: none"> <li>Hot soapy water</li> <li>stainless steel scourer</li> </ul>                                                 | Soak any heavily soiled areas and use a brush or stainless steel scourer.<br><b>Note:</b> To clean thoroughly, detach the shelf supports.<br>→ "Rails", Page 37                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Pull-out system        | <ul style="list-style-type: none"> <li>Hot soapy water</li> </ul>                                                                                  | Use a brush to remove heavy soiling.<br>Clean the pull-out rails while they are pushed in so that you do not remove the lubricant.<br>Do not clean in the dishwasher.<br><b>Note:</b> To clean thoroughly, detach the pull-out system.<br>→ "Rails", Page 37                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Accessories            | <ul style="list-style-type: none"> <li>Hot soapy water</li> <li>Oven cleaner</li> <li>stainless steel scourer</li> </ul>                           | Soak any heavily soiled areas and use a brush or stainless steel scourer.<br>Enamelled accessories are dishwasher-safe.<br>Do not use stainless steel scourer on steam containers made from stainless steel.<br>Use a vinegar solution to remove any dirt on stainless steel steam containers caused by starchy foods (e.g. rice).                                                                                                                                                                                                                                                                                                                                                                                      |
| Water tank             | <ul style="list-style-type: none"> <li>Hot soapy water</li> </ul>                                                                                  | To remove residual detergent after cleaning, rinse thoroughly with clean water.<br>To dry the water tank after cleaning, leave the water tank to dry with the lid open. Dry the seal on the lid.<br>Do not clean in the dishwasher.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Meat probe             | <ul style="list-style-type: none"> <li>Hot soapy water</li> </ul>                                                                                  | Use a brush to remove heavy soiling.<br>Do not clean in the dishwasher.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## 19.2 Cleaning the appliance

In order to avoid damaging the appliance, you must clean your appliance only as specified, and with suitable cleaning products.

**⚠ WARNING – Risk of burns!**

The appliance and its parts that can be touched become hot during use.

- ▶ Caution should be exercised here in order to avoid touching heating elements.
- ▶ Young children under 8 years of age must be kept away from the appliance.

**⚠ WARNING – Risk of fire!**

Loose food remnants, fat and meat juices may catch fire.

- ▶ Before using the appliance, remove the worst of the food residues and remnants from the cooking compartment, heating elements and accessories.

**Requirement:** Read the information on cleaning products.

→ "Cleaning products", Page 29

1. Clean the appliance using hot soapy water and a dish cloth.

- ▶ For some surfaces, you can use alternative cleaning agents.

→ "Suitable cleaning agents", Page 29

2. Dry with a soft cloth.

**Regenerating self-cleaning surfaces in the cooking compartment**

The back panel, ceiling and side walls in the cooking compartment are self-cleaning and have a coarse surface.

**ATTENTION**

If you do not clean the self-cleaning surfaces regularly, they may become damaged.

- ▶ If dark stains are visible on the self-cleaning surfaces, use the cleaning function to clean the cooking compartment.
- ▶ If a prompt to clean appears in the display, use the cleaning function to clean the cooking compartment.
- ▶ Do not use oven cleaner or abrasive cleaning aids. If oven cleaner accidentally comes into contact with the self-cleaning surfaces, dab it off immediately using water and a sponge cloth. Do not rub.
- ▶ Use the cleaning function.

→ "Cleaning function EcoClean", Page 31

## 20 Cleaning function "EcoClean"

Use the cleaning function "EcoClean"  regularly to help retain the cleaning ability of the self-cleaning surfaces and prevent damage.

The self-cleaning surfaces in the cooking compartment are coated with a porous, matt ceramic layer and have a rough surface. When the appliance is in operation, the self-cleaning surfaces absorb splashes from roasting or grilling and break them down.

The following surfaces are self-cleaning:

- Back wall
- Ceiling
- Side walls

**ATTENTION**

If you do not clean the self-cleaning surfaces regularly, they may become damaged.

- ▶ If dark stains are visible on the self-cleaning surfaces, use the cleaning function to clean the cooking compartment.
- ▶ If a prompt to clean appears in the display, use the cleaning function to clean the cooking compartment.
- ▶ Do not use oven cleaner or abrasive cleaning aids. If oven cleaner accidentally comes into contact with the self-cleaning surfaces, dab it off immediately using water and a sponge cloth. Do not rub.

### 20.1 Cleaning recommendation

The appliance records the type and duration of the operation and, if required, recommends which cleaning function to use.

When you switch on the appliance, a notification appears on the display stating that you should use the cleaning function. Start the cleaning function as soon as possible.

You can use your appliance as normal. However, the cleaning recommendation appears on the display until you have run the cleaning function in full.

**Note:** If the appliance is prematurely contaminated, e.g. by greasy poultry or roasts, or if dark spots appear on the self-cleaning surfaces, do not wait until the notification appears on the display before you use the cleaning functions. The more often you use the cleaning function, the longer the cleaning ability of the self-cleaning surfaces is retained.

### 20.2 Preparing the appliance for the cleaning function

In order to achieve a good cleaning result, prepare the appliance carefully.

**ATTENTION**

Using oven cleaner on the self-cleaning surfaces damages the surfaces.

- ▶ Do not use oven cleaner on the self-cleaning surfaces. If oven cleaner does get onto these surfaces, dab it off immediately using water and a sponge cloth. Do not rub the surface and do not use abrasive cleaning aids.

1. Remove accessories and cookware from the cooking compartment.
2. Detach the shelf supports and remove them from the cooking compartment.  
→ "Rails", Page 37
3. Remove coarse dirt using soapy water and a soft cloth:
  - From the cooking compartment floor
  - From the inside of the appliance door
  - From the glass cover on the oven lamp
 This prevents stains that cannot be removed.
4. Remove any objects from the cooking compartment. The cooking compartment must be empty.

## 20.3 Setting the cleaning function

Ventilate the kitchen while the cleaning function is running.

### ⚠ **WARNING – Risk of burns!**

△ The outside of the appliance gets very hot when the cleaning function is in progress.

- ▶ Never touch the appliance door.
- ▶ Allow the appliance to cool down.
- ▶ Keep children at a safe distance.

**Note:** The oven light does not light up while the cleaning function is running.

### **Requirement:**

→ "Preparing the appliance for the cleaning function", Page 31

1. Press "Cleaning" in the menu.

2. Press  "EcoClean".

The duration of 1 hour cannot be changed.

You can delay the time at which the operation should be finished.

→ "Setting the end time", Page 16

3. Press .

- ✓ A notification stating that you should carry out the necessary preparatory work for the cleaning function appears on the display.

4. Confirm the notification.

- ✓ The cleaning function starts and the duration counts down.

- ✓ A signal tone sounds when the cleaning function has finished. A notification appears on the display confirming that the operation has finished.

5. Press  to switch the appliance off.

- ▶ If dark oily stains remain after the cleaning function, repeat the cleaning function.

6. .

→ "Preparing the appliance after the cleaning function", Page 32

## 20.4 Preparing the appliance after the cleaning function

1. Allow the appliance to cool down.

2. Wipe the cooking compartment with a damp cloth.

**Note:** Marks may appear on the self-cleaning surfaces. Residues of sugar and egg white in the food are not removed and stick to the surfaces. Red stains are residues from salty food – they are not rust. The stains are not hazardous to health. These marks do not impair the cleaning ability of the self-cleaning surfaces.

3. Attach the shelf supports.

→ "Rails", Page 37

# 21 Cleaning aid

The cleaning aid  is a quick alternative for occasionally cleaning the cooking compartment. The cleaning aid softens dirt by evaporating the soapy water. It is then easier to remove the dirt.

## 21.1 Setting the cleaning aid

### ⚠ **WARNING – Risk of scalding!**

If there is water in the cooking compartment when it is hot, this may create hot steam.

- ▶ Never pour water into the cooking compartment when the cooking compartment is hot.

**Note:** The oven light does not come on while the cleaning aid is running.

**Requirement:** The cooking compartment must have cooled down completely.

1. Remove any accessories from the cooking compartment.

2. **ATTENTION** – Distilled water in the cooking compartment leads to corrosion.

- ▶ Do not use distilled water.

Mix 0.4 litres water with a drop of washing-up liquid and pour into the centre of the cooking compartment floor.

3. Press "Cleaning" in the menu.

4. Press  "Cleaning aid".

The duration cannot be changed.

5. Press .

- ✓ A notification stating that you should carry out the necessary preparatory work for the cleaning aid appears on the display.

6. Confirm the message.

- ✓ The cleaning aid starts and the duration counts down.

- ✓ Once the cleaning aid has ended, a signal tone sounds. A message appears on the display confirming that the operation has finished.

7. Press  to switch the appliance off.

8. .

→ "Cleaning the cooking compartment after using the cleaning aid", Page 32

## 21.2 Cleaning the cooking compartment after using the cleaning aid

### **ATTENTION**

The prolonged presence of moisture in the cooking compartment leads to corrosion.

- ▶ After using the cleaning assistance, wipe the cooking compartment and allow it to dry completely.

1. Allow the appliance to cool down.

2. Wipe out the remaining water in the cooking compartment using an absorbent sponge cloth.

3. Clean the smooth enamel surfaces in the cooking compartment with a dish cloth or a soft brush. Remove stubborn food remnants using a stainless steel scouring pad.

4. Remove limescale with a cloth soaked in vinegar, and wipe this away with clean water.

5. Dry the cooking compartment with a soft cloth.

6. To dry the cooking compartment completely, leave the appliance door open for approx. 1 hour or use the drying function.

→ "Setting the drying process", Page 33

## 22 Descaling

Regular descaling  is necessary to ensure that your appliance continues to operate correctly. How frequently you need to run the descaling programme depends on the water hardness and how many times you have used the steam-assisted operations. The appliance indicates when only another 5 or fewer steam-assisted operations are possible. If you do not carry out descaling, you can no longer set any operation with steam.

Descaling comprises several steps and takes approximately 70 - 95 minutes:

- Descaling (approx. 55 - 70 minutes)
- First rinse cycle (approx. 8 - 12 minutes)
- Second rinse cycle (approx. 8 - 12 minutes)

For reasons of hygiene, the descaling programme must be run in full.

If descaling is interrupted, you can no longer set any operation. To ensure that the appliance is ready for operation again, carry out 2 rinse cycles.

### 22.1 Preparing descaling

#### ATTENTION

The length of time for which the descaler is left to work is based on the recommended, liquid descaler. Other descalers may damage the appliance.

- ▶ Only use the liquid descaler recommended by us for the descaling programme.

If descaling solution comes into contact with the control panel or other delicate surfaces, it will damage them.

- ▶ Remove descaling solution immediately with water.

1. Mix descaler with water to make a descaling solution:

| Descaler version       | Descaler | Water  |
|------------------------|----------|--------|
| Bottle capacity 500 ml | 200 ml   | 400 ml |
| Bottle capacity 250 ml | 500 ml   | 100 ml |

2. Open the control panel.
3. Remove the water tank and fill it with descaling solution.
4. Once the descaling solution has been poured into the water tank, slide the tank back in.
5. Close the control panel.

### 22.2 Setting the descaling programme

#### Requirement:

→ "Preparing descaling", Page 33

1. Press "Cleaning" in the menu.
2. Press  "Descaling".  
The duration cannot be changed.
3. Press .  
✓ A notification stating that you should carry out the necessary preparatory work for descaling appears on the display.
4. Confirm the message.  
✓ The descaling programme starts and the duration counts down.
- ✓ Once the first part of the descaling programme has finished, a signal tone sounds. The appliance prompts you to rinse twice.
5. To rinse the appliance, for each rinse cycle:
  - ▶ Open the control panel and remove the water tank.
  - ▶ Thoroughly rinse the water tank and fill it with fresh water.
  - ▶ Slide in the water tank and close the control panel.
- ✓ A signal tone sounds when each rinse cycle has ended.
6. Once the second rinse cycle is complete:
  - ▶ Empty and dry the water tank.  
→ "Emptying the water tank", Page 20
  - ▶ Press  to switch the appliance off.

## 23 Drying

To prevent residual moisture, dry the cooking compartment following operation with steam and after using the cleaning aid.

#### ATTENTION

If there is water on the cooking compartment floor when operating the appliance at temperatures above 120 °C, this will damage the enamel.

- ▶ Do not use the appliance if there is water on the cooking compartment floor.
- ▶ Wipe away any water on the cooking compartment floor before operation.

### 23.1 Drying the cooking compartment

You can leave the cooking compartment to dry or use the drying function.

1. Allow the appliance to cool down.
2. Remove any dirt from the cooking compartment.

3. Wipe away any water in the cooking compartment.
4. Dry the cooking compartment.
  - ▶ To dry the cooking compartment, leave the appliance door open for 1 hour.
  - ▶ To use the drying function, set "Drying function".  
→ "Setting the drying process", Page 33

### Setting the drying process

#### Requirement:

→ "Drying the cooking compartment", Page 33

1. Press "Cleaning" in the menu.
2. Press  "Drying function".  
The duration cannot be changed.
3. Press .  
✓ A notification stating that you should carry out the necessary preparatory work for the drying appears on the display.

4. Confirm the message.
- ✓ The drying process starts and the duration counts down.
- ✓ Once the drying has ended, a signal tone sounds. A message appears on the display confirming that the operation has finished.

5. Press  to switch the appliance off.
6. To dry the cooking compartment completely, leave the appliance door open for 1 to 2 minutes.

## 24 Appliance door

To clean the appliance door thoroughly, you can disassemble the appliance door.

**Note:** Wipe the condensate trough without pressure.

### 24.1 Detaching the appliance door

#### **WARNING – Risk of injury!**

Components inside the appliance door may have sharp edges.

- ▶ Wear protective gloves.

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- ▶ Keep your hands away from the hinges.

1. Open the appliance door fully.


#### 2. **WARNING – Risk of injury!**

When the hinges are not secured, they can snap shut with great force.

- ▶ Make sure that the locking levers are always either fully closed or (when detaching the oven door) fully open.


Open the locking levers on the left- and right-hand hinges.

Locking levers opened

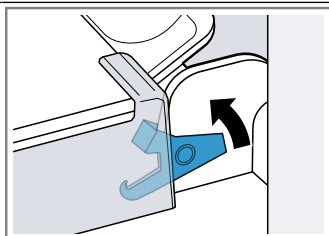

The hinge is now secured and cannot snap shut.


Locking levers closed

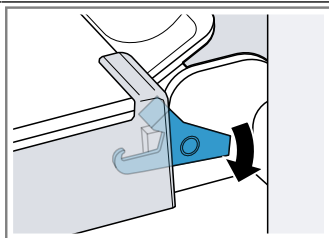

The appliance door is secured and cannot be detached.

- ✓ The locking levers are open. The hinges are now secured and cannot snap shut.

3. Close the appliance door fully ①. Grab hold of the appliance door with both hands (on the left and right) and pull it upwards and out ②.

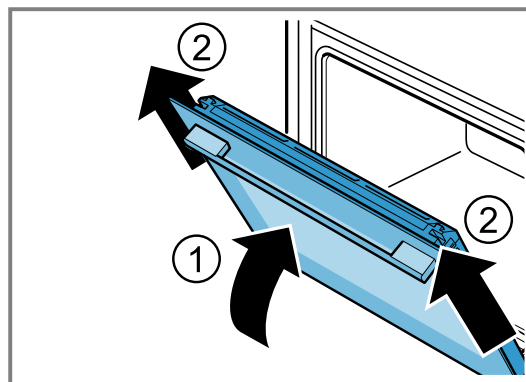

4. Carefully place the appliance door on a level surface.


### Removing the condensate tray

#### Notes


- Wipe down the condensate tray after every steam operation or before removing it.
- Do not clean the condensate tray in the dishwasher

**Requirement:** The appliance door must be removed.

1. Press on the left-hand pressure surface  ① until the hook is released.
2. Press on the right-hand pressure surface  ② until the hook is released.

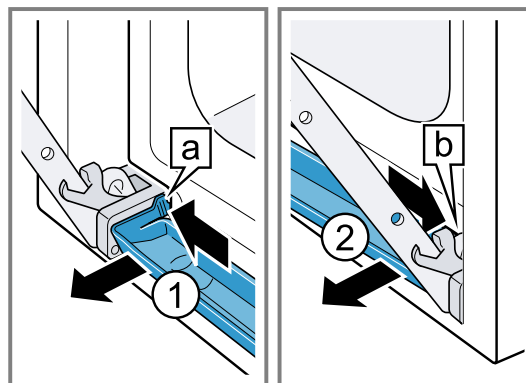


3. Tilt the condensate tray forwards slightly until the lower retaining hooks are released.
4. Use both hands to pull the condensate tray **a** upwards and out at an angle **1**.

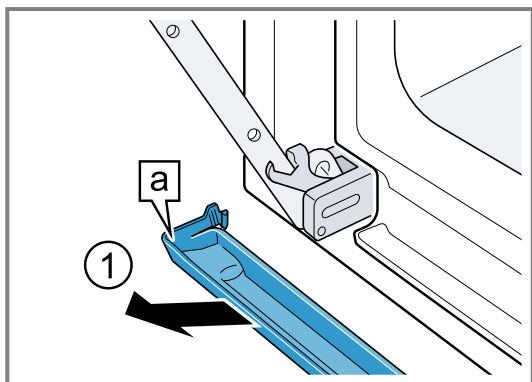


### Installing the condensate tray

1. Use both hands to insert the condensate tray **a** at an angle **1**.

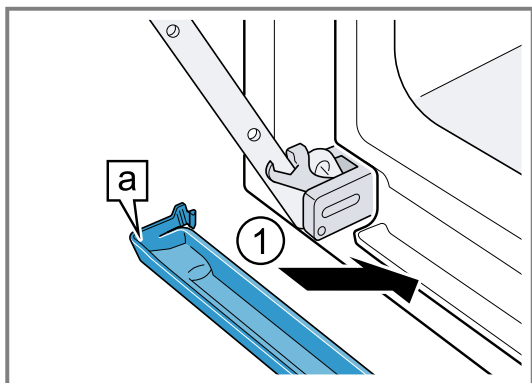

2. Snap the hooks **a** on the left and right of the condensate tray into the gap **1**.

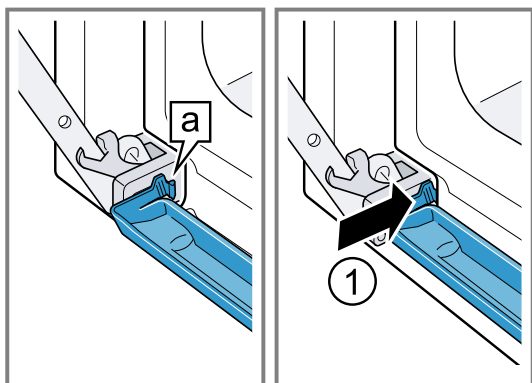

3. Push the condensate tray until the hooks on the right, left and bottom click into place.
- ✓ The condensate tray is installed horizontally.


### 24.2 Attaching the appliance door

#### ⚠ WARNING – Risk of injury!

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- Keep your hands away from the hinges.
- When the hinges are not secured, they can snap shut with great force.
- Make sure that the locking levers are always either fully closed or (when detaching the oven door) fully open.

1. Slide the appliance door straight onto the two hinges **1**. Slide the appliance door on as far as it will go.
2. Open the appliance door fully.
3. Close the locking levers on the left- and right-hand hinges **2**.

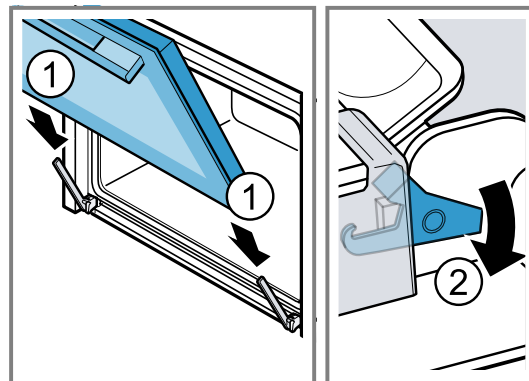

- ✓ The locking levers are closed. The appliance door is secured and cannot be detached.
- 4. Close the appliance door.


### 24.3 Removing the door panes

#### ⚠ WARNING – Risk of injury!

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.


- Keep your hands away from the hinges.
- Components inside the appliance door may have sharp edges.
- Wear protective gloves.

1. Open the appliance door fully.
2. Open the locking levers on the left- and right-hand hinges **1**.
- ✓ The locking levers are open. The hinges are now secured and cannot snap shut.
3. Close the appliance door fully **2**.

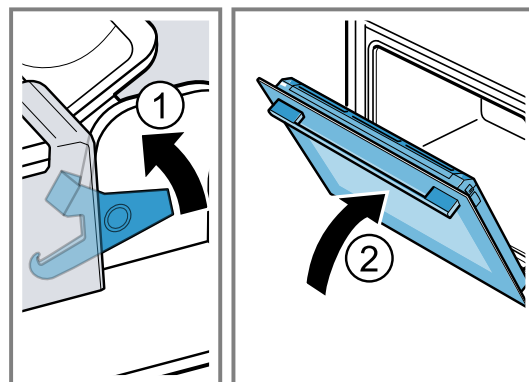


4. Push on the left- and right-hand side of the door cover from the outside **1** until it is released.

5. Remove the door cover ②.

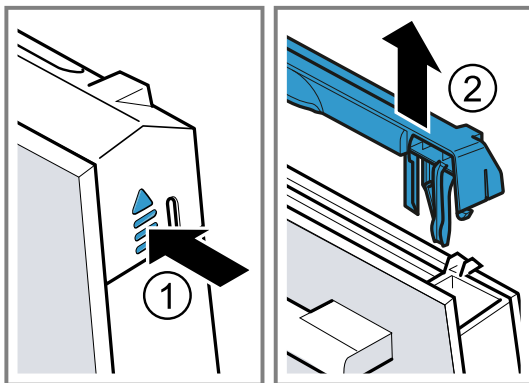


6. Lift out the inner pane ① and set it down carefully on a flat surface.

7. Lift out the intermediate pane ② and set it down carefully on a flat surface.

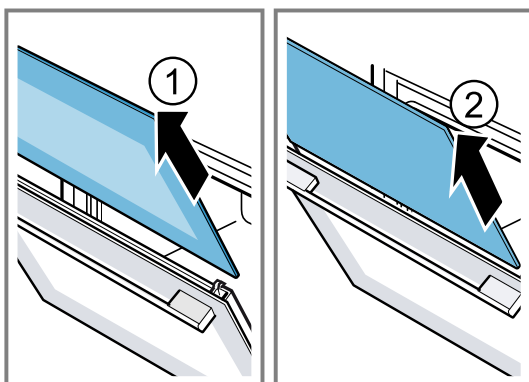


8. Open the appliance door and remove the door seal.

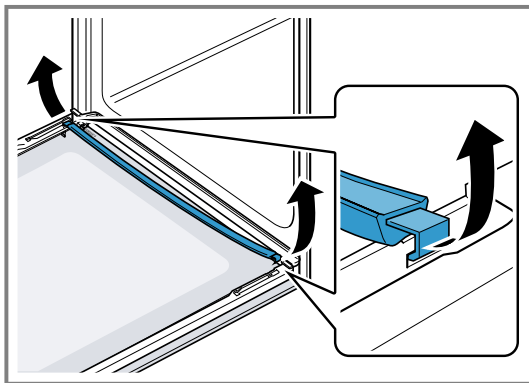

9. If necessary, you can remove the condensate trough for cleaning.

- ▶ Open the appliance door.
- ▶ Tilt the condensate trough upwards and remove it.

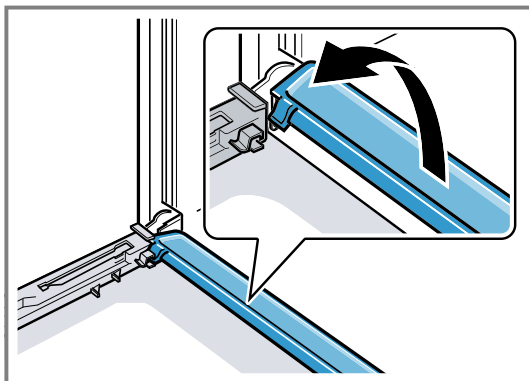

10. ⚠ **WARNING – Risk of injury!**

Scratched glass in the appliance door may develop into a crack.

- ▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the oven door, as they may scratch the surface.

Clean the removed door panels on both sides with glass cleaner and a soft cloth.

11. Clean the condensate trough with a cloth and hot soapy water.

12. Clean the appliance door.

→ "Suitable cleaning agents", Page 29

13. Dry the door panels and refit them.

→ "Fitting the door panes", Page 36

## 24.4 Fitting the door panes

⚠ **WARNING – Risk of injury!**

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.


- ▶ Keep your hands away from the hinges.

Components inside the appliance door may have sharp edges.


- ▶ Wear protective gloves.

1. Open the appliance door fully.


2. Place the condensate trough vertically into the retainer **a** and turn it downwards.

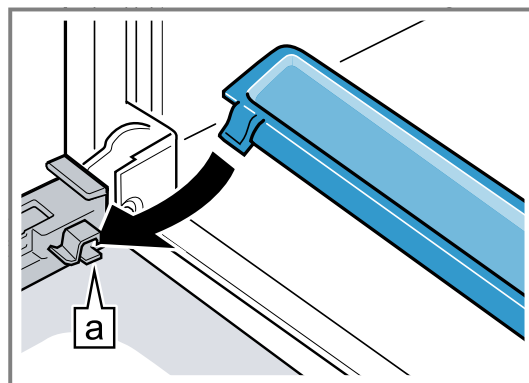


3. Slide the intermediate pane into the left- and right-hand retainers **a**.

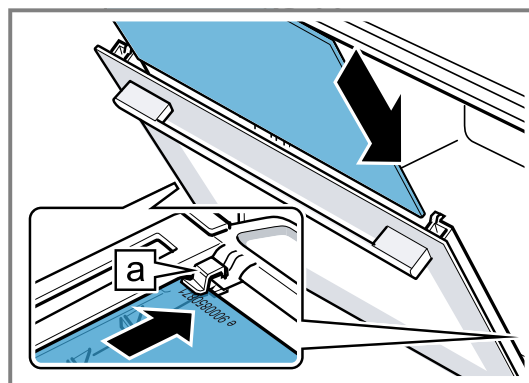


4. Push the intermediate pane upwards until it is in the left- and right-hand retainers [a].

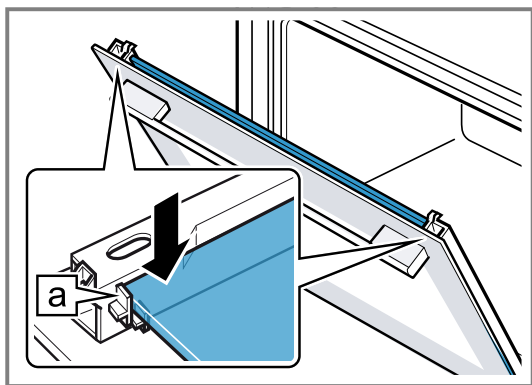


5. Open the appliance door and attach the door seal.

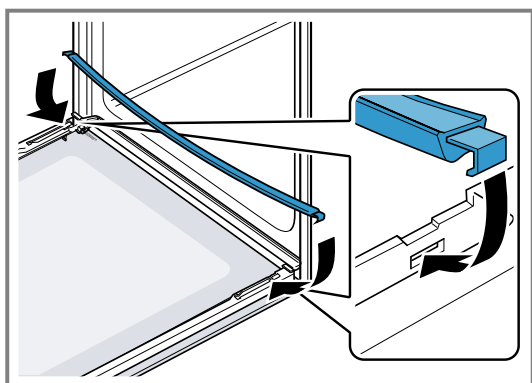


6. **Note:** When sliding the pane in, ensure that the glossy side of the pane is on the outside and the cut-outs on the left and right are at the top. Slide the inner pane into the left- and right-hand retainers [a].

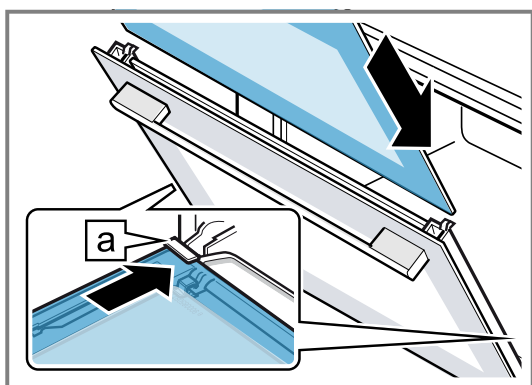

7. Push the inner pane upwards until it is in the left- and right-hand retainers [a].

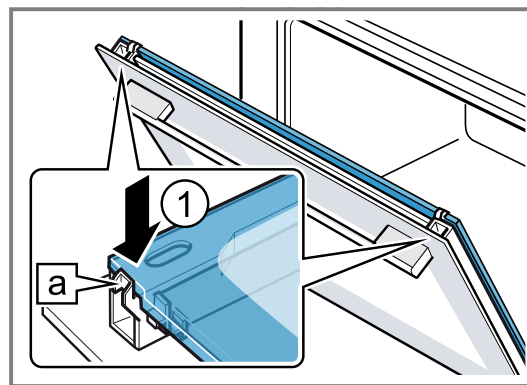

8. Put the door cover into position ① and push down on it until you hear it click into place.  
9. Open the appliance door fully.  
10. Close the locking levers on the left- and right-hand hinges ②.

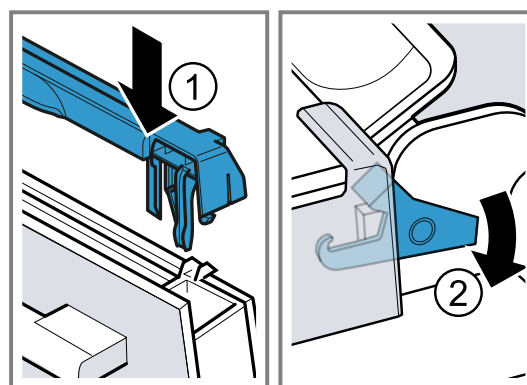

- ✓ The locking levers are closed. The appliance door is secured and cannot be detached.  
11. Close the appliance door.

**Note:** Do not use the cooking compartment again until the door panes have been correctly fitted.

## 25 Rails

To thoroughly clean the rails and the cooking compartment, or to replace the rails, you can remove the rails.

### 25.1 Detaching the rails


#### ⚠ **WARNING – Risk of burns!**

The shelf supports get very hot

- ▶ Never touch the shelf supports when hot.
- ▶ Always allow the appliance to cool down.
- ▶ Keep children at a safe distance.

1. Lift the rail forwards slightly ① and detach it ②.

2. Pull the whole rail to the front ③ and remove it.

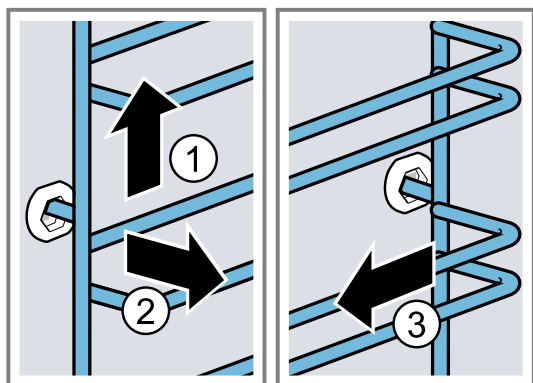

3. Clean the rail.


→ "Cleaning products", Page 29

## 25.2 Attaching the rails

### Notes

- The rails only fit on the right or left.
- For both rails, ensure that the curved rods are at the front.

1. First, push the rail into the middle of the rear socket ① until the rail rests against the cooking compartment wall, and then push this back ②.
2. Push the rail into the front socket ③ until the rail also rests against the cooking compartment wall, and then press this downwards ④.

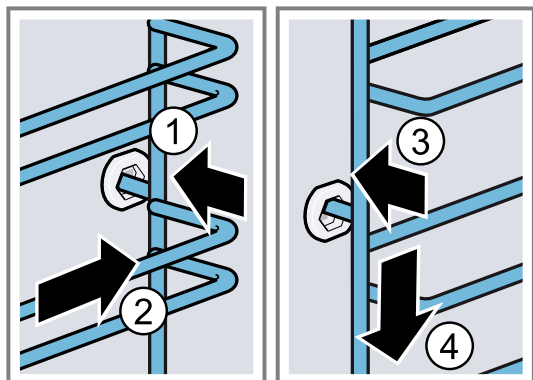

## 25.3 Removing the pull-out rail

### ⚠ WARNING – Risk of burns!

The shelf supports get very hot

- ▶ Never touch the shelf supports when hot.
- ▶ Always allow the appliance to cool down.
- ▶ Keep children at a safe distance.

### ATTENTION

The self-cleaning surfaces in the cooking compartment may be damaged by detaching and attaching the pull-out rails.


- ▶ Detach the rails before detaching or attaching the pull-out rails.

### Notes


- Depending on the appliance type, you must change the basic settings for the telescopic rails for appliances with rails and pull-out rails.  
→ "Basic settings", Page 26
- The pull-out rails can be installed at any level as required.

- If necessary, you can equip all levels with a pull-out rail.


1. Push on the side of the tab marked **PUSH** behind the rail, and push the rail to the rear.

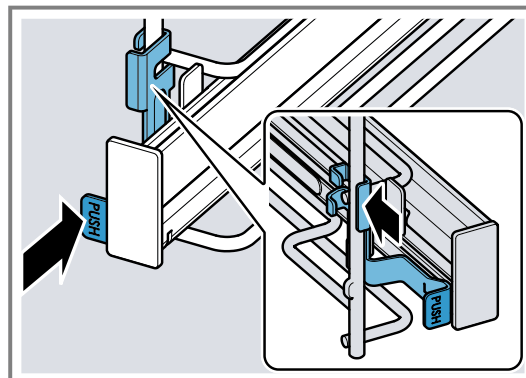


2. Press and hold **PUSH** ① and swing the rail outwards ② until the front retainer a is detached.

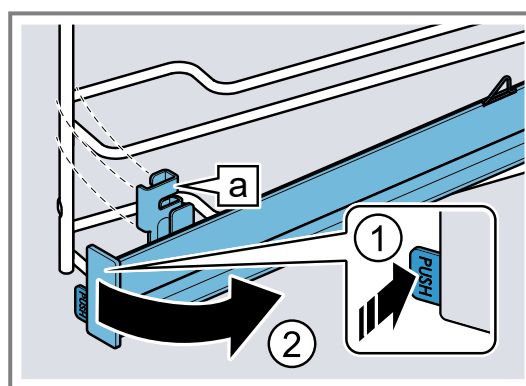

3. Pull the rail out towards the front.

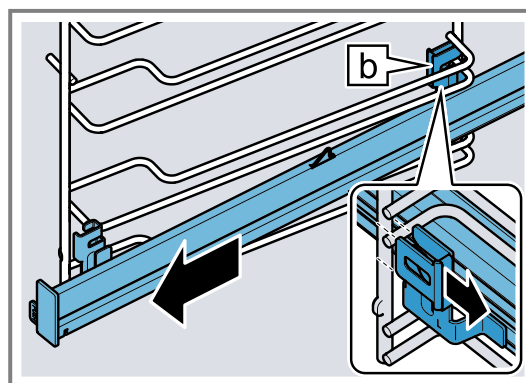

4. Remove the pull-out rail.

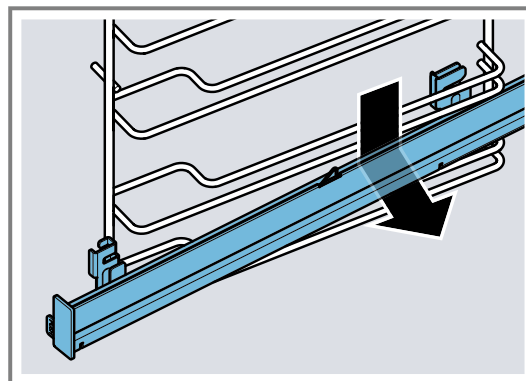

5. Clean the pull-out rail.  
→ "Cleaning products", Page 29


**Note:** Further information:




## 25.4 Attaching the pull-out rail

**Note:** The pull-out rails only fit on the right or left. Make sure when you fit them that you can pull them out towards the front.


1. Guide the pull-out rail with the rear retainer  from below behind the two guide rods for the required shelf position and keep it horizontal.

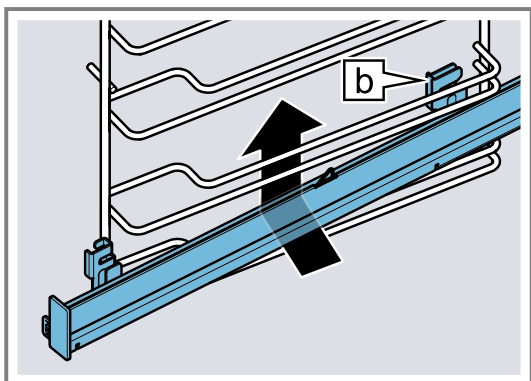


2. Guide the rail lengthways to the rear to the guide rods, and slide both retainers onto each lower rod. In doing so, use the rear retainer  to grip the vertical rod.

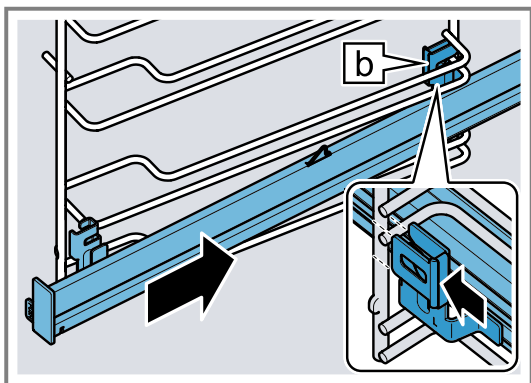

3. Press and hold **PUSH**  and swing the pull-out rail inwards  until the retainer  is attached in the lower rod.

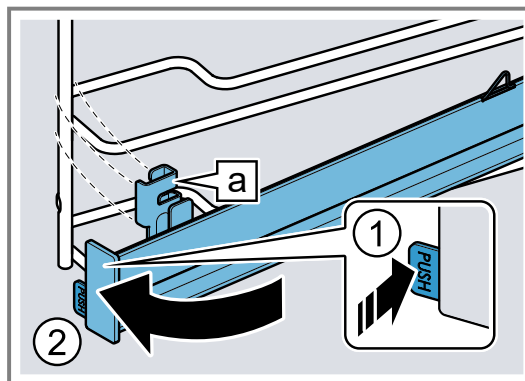

4. Release the **PUSH** tab.

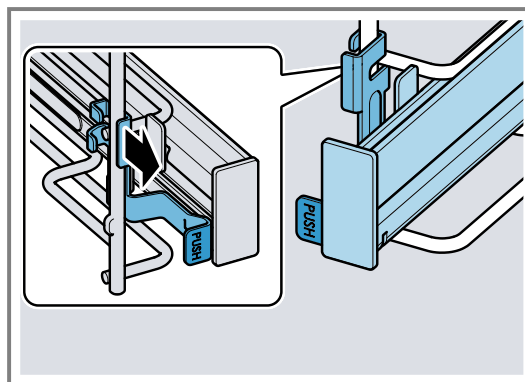

- ✓ The retainer clicks into place.
5. Pull the pull-out rail out as far as it will go and slide it back in.

**Note:** Further information:



## 26 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

### ⚠ **WARNING – Risk of injury!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ If the appliance is defective, call Customer Service.  
→ "Customer Service", Page 42

### ⚠ **WARNING – Risk of electric shock!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.

- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- ▶ If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

## 26.1 Malfunctions

| Fault                                                         | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The appliance is not working.                                 | <p>The circuit breaker in the fuse box has tripped.</p> <ul style="list-style-type: none"> <li>▶ Check the circuit breaker in the fuse box.</li> </ul> <p>There has been a power cut.</p> <ul style="list-style-type: none"> <li>▶ Check whether the lighting in your room or other appliances are working.</li> </ul> <p>Electronics fault</p> <ol style="list-style-type: none"> <li>1. Disconnect the appliance from the power supply for at least 30 seconds by switching off the fuse.</li> <li>2. Reset the basic settings to the factory settings.<br/>→ <i>"Basic settings", Page 26</i></li> </ol>                                                                                                                                                 |
| "Sprache Deutsch" appears in the display.                     | <p>There has been a power cut.</p> <ul style="list-style-type: none"> <li>▶ Configure the initial configuration settings.<br/>→ <i>"Performing initial start-up", Page 13</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| The operation does not start or is interrupted.               | <p>Different causes are possible.</p> <ul style="list-style-type: none"> <li>▶ Check the notifications that appear on the display.<br/>→ <i>"Displaying information", Page 15</i></li> </ul> <p>Malfunction</p> <ul style="list-style-type: none"> <li>▶ Call .<br/>→ <i>"Customer Service", Page 42</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Appliance does not heat up.                                   | <p>Demo mode is switched on.</p> <ol style="list-style-type: none"> <li>1. Briefly disconnect the appliance from the power supply by switching the circuit breaker in the fuse box off and then on again.</li> <li>2. Switch off demo mode in the basic settings within approx. 5 minutes.<br/>→ <i>"Changing the basic settings", Page 27</i></li> </ol> <p>There has been a power cut.</p> <ul style="list-style-type: none"> <li>▶ Open and close the appliance door once after a power failure.</li> <li>✓ The appliance is checked and is ready to use.</li> </ul>                                                                                                                                                                                     |
| The time is not displayed when the appliance is switched off. | <p>Basic setting has been changed.</p> <ul style="list-style-type: none"> <li>▶ Change the basic setting for the time display.<br/>→ <i>"Basic settings", Page 26</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Home Connect is not working properly.                         | <p>Different causes are possible.</p> <ul style="list-style-type: none"> <li>▶ Go to <a href="http://www.home-connect.com">www.home-connect.com</a>.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| The control panel cannot be opened.                           | <p>The circuit breaker in the fuse box has tripped.</p> <ul style="list-style-type: none"> <li>▶ Check the circuit breaker in the fuse box.</li> </ul> <p>There has been a power cut.</p> <ul style="list-style-type: none"> <li>▶ Check whether the lighting in your room or other appliances are working.</li> </ul> <p>Malfunction</p> <ol style="list-style-type: none"> <li>1. Call the after-sales service.<br/>→ <i>"Customer Service", Page 42</i></li> <li>2. If there is water in the water tank, empty the water tank: <ul style="list-style-type: none"> <li>▶ Open the appliance door.</li> <li>▶ Grip on the right and left below the control panel.</li> <li>▶ Slowly pull out the control panel and push it upwards.</li> </ul> </li> </ol> |
| Intense steam generation when steaming.                       | <p>The appliance is automatically calibrated.<br/>No action required.</p> <p>If the cooking times are too short, the appliance is not automatically calibrated.<br/>If a lot of steam is generated repeatedly, the appliance is recalibrated.</p> <ol style="list-style-type: none"> <li>1. Reset the appliance to the factory setting.<br/>→ <i>"Basic settings", Page 26</i></li> <li>2. Repeat the calibrations.<br/>→ <i>"Before using for the first time", Page 12</i></li> </ol>                                                                                                                                                                                                                                                                      |

| Fault                                                                                | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The appliance requests descaling without the counter appearing in advance.           | <p>The set water hardness range is too low.</p> <ol style="list-style-type: none"> <li>1. Descale the appliance.<br/>→ <i>"Descaling", Page 33</i></li> <li>2. Check the water hardness and set this in the basic settings.<br/>→ <i>"Basic settings", Page 26</i></li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| The appliance prompts you to rinse it.                                               | <p>During the descaling, the power supply is interrupted or the appliance is switched off.</p> <ul style="list-style-type: none"> <li>▶ Rinse the appliance.<br/>→ <i>"Descaling", Page 33</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| "Fill water tank" appears in the display even though the water tank has been filled. | <p>The water tank has not clicked into place.</p> <ul style="list-style-type: none"> <li>▶ Insert the water tank correctly so that it engages in the holder.<br/>→ <i>"Filling the water tank", Page 17</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                                                                                      | <p>The water tank has fallen out. Shaking has caused parts to come loose in the water tank. The water tank is leaking.</p> <ul style="list-style-type: none"> <li>▶ Order a new water tank.<br/>→ <i>"Customer Service", Page 42</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                                                                                      | <p>Malfunction</p> <ul style="list-style-type: none"> <li>▶ Do not use deionised or filtered water.<br/>→ <i>"Determining the water hardness before switching on the appliance for the first time", Page 12</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                                                                                      | <p>The sensor is defective.</p> <ul style="list-style-type: none"> <li>▶ Call .<br/>→ <i>"Customer Service", Page 42</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Buttons are flashing.                                                                | <p>Condensation has formed behind the control panel.<br/>No action required. As soon as the condensation has evaporated, the buttons no longer flash.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| "Plopping" sounds can be heard when cooking with steam.                              | <p>Water vapour requires the cold/heat effect for frozen food.<br/>No action required.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| The appliance hums during operation and after it is switched off.                    | <p>Functional test of the pump creates operating noise.<br/>No action required.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| The interior lighting does not work.                                                 | <p>Basic setting has been changed.</p> <ul style="list-style-type: none"> <li>▶ Change the basic setting for the lighting.<br/>→ <i>"Basic settings", Page 26</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|                                                                                      | <p>The LED light is defective.</p> <ul style="list-style-type: none"> <li>▶ Call .<br/>→ <i>"Customer Service", Page 42</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Maximum operating time reached.                                                      | <p>To prevent an unwanted permanent operation, the appliance automatically stops heating after several hours if the settings are unchanged. A message appears in the display.</p> <p>The point at which the maximum operating time is reached is determined by the corresponding settings for an operating mode.</p> <ol style="list-style-type: none"> <li>1. To continue operation, switch the appliance off and on again using . Reset and start the operation.</li> <li>2. If you do not need to use the appliance, press  to switch it off.</li> </ol> <p><b>Tip:</b> To prevent the appliance from switching off when you do not want it to, set a cooking time.<br/>→ <i>"Time-setting options", Page 16</i></p> |
| Error code made up of letters and numbers appears on the display, e.g. E0111.        | <p>The electronics have detected a fault.</p> <ol style="list-style-type: none"> <li>1. Switch the appliance off and on again.<br/>✓ If the fault was a one-off, the message disappears.</li> <li>2. If the message appears again, call the after-sales service. Please specify the exact error message when calling.<br/>→ <i>"Customer Service", Page 42</i></li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| The cooking result is not satisfactory.                                              | <p>Settings were unsuitable.<br/>Adjustment values, e.g. temperature or cooking time, depend on the recipe, quantity and food.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

| Fault                                   | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The cooking result is not satisfactory. | <div>▶ Next time, set lower or higher values.</div> <div><b>Tip:</b> A lot of other information about the preparation, corresponding adjustment values and recipes can be found in the Home Connect app or on our website <a href="http://www.bosch-home.com">www.bosch-home.com</a>.</div> <div></div> |

## 27 Disposal

### 27.1 Disposing of old appliance

Valuable raw materials can be reused by recycling.

1. Unplug the appliance from the mains.

2. Cut through the power cord.

3. Dispose of the appliance in an environmentally friendly manner.
- Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

## 28 Customer Service

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.


If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) of your appliance.

You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website. This product contains light sources from energy efficiency class G. These light sources are available as a spare part and should only be replaced by trained specialist staff.

### 28.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

You can find the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) on the appliance's rating plate.

You will see the rating plate with these numbers if you open the appliance door. On some appliances with steam-assisted cooking, you will find the rating plate behind the control panel.



Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

You can also display the appliance information in the basic settings.

→ "Basic settings", Page 26

## 29 Information regarding Free and Open Source Software

This product includes software components that are licensed by the copyright holders as free or open source software.

The applicable licence information is stored on your home appliance. You can also access the applicable licence information via your Home Connect app: "Profile -> Legal information -> Licence Information".<sup>1</sup> You can

download the licence information on the brand product website. (Please search on the product website for your appliance model and additional documents). Alternatively, you can request the relevant information from [oss-request@bshg.com](mailto:oss-request@bshg.com) or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany.

<sup>1</sup> Depending on the appliance specifications

The source code will be made available to you on request.  
Please send your request to [ossrequest@bshg.com](mailto:ossrequest@bshg.com) or BSH Hausgeräte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany.

Subject: „OSSREQUEST“

The cost of performing your request will be charged to you. This offer is valid for three years from the date of purchase or at least as long as we offer support and spare parts for the relevant appliance.

## 30 Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the essential requirements and other relevant provisions of Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at [www.bosch-home.com](http://www.bosch-home.com) among the additional documents on the product page for your appliance.



2.4 GHz band (2400–2483.5 MHz): Max. 100 mW

5 GHz band (5150–5350 MHz + 5470–5725 MHz): max. 200 mW

|  |    |    |    |    |    |         |    |    |    |
|--|----|----|----|----|----|---------|----|----|----|
|  | BE | BG | CZ | DK | DE | EE      | IE | EL | ES |
|  | FR | HR | IT | CY | LI | LV      | LT | LU | HU |
|  | MT | NL | AT | PL | PT | RO      | SI | SK | FI |
|  | SE | NO | CH | TR | IS | UK (NI) |    |    |    |

5 GHz WLAN (Wi-Fi): For indoor use only.

|    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|
| AL | BA | MD | ME | MK | RS | UK | UA |
|----|----|----|----|----|----|----|----|

5 GHz WLAN (Wi-Fi): For indoor use only.

### 30.1 Statement of Compliance for Great Britain

#### Product type

This statement of compliance covers the products described in this information for use whose model identifier group is seen on the title page. The full model identifier is made up of the characters before the slash in the product number (E no.) which can be found on the rating plate. Alternatively, you can also find the model identifier in the first line of the UK Energy Label.

#### Name and address of manufacturer

BSH Hausgeräte GmbH, Carl-Wery-Strasse 34, 81739 München, Germany

This statement of compliance is prepared by the manufacturer.

The manufacturer, BSH Hausgeräte GmbH deems that it has complied with

- provision 5.1-1 of ETSI EN 303 645 v2.1.1 and, where relevant, provision 5.1-2 of ETSI EN 303 645 v2.1.1;
- provision 5.2-1 of ETSI EN 303 645 v2.1.1;
- provision 5.3-13 of ETSI EN 303 645 v2.1.1.

#### Support period

BSH Hausgeräte GmbH will provide security updates that are necessary to maintain the main functions free of charge until at least 28/02/2034.

## 31 How it works

Here, you can find the ideal settings for various types of food as well as the best accessories and cookware. We have perfectly tailored these recommendations to your appliance.

**Tip:** A lot of other information about the preparation, corresponding adjustment values and recipes can be found in the Home Connect app or on our website [www.bosch-home.com](http://www.bosch-home.com).

### 31.1 General cooking tips

Take note of the following information when cooking all types of food.

- The temperature and cooking time depend on the amount of food and the recipe. Settings ranges are

specified for this reason. Try using the lower values to start with.

- The setting values apply to food placed in the cooking compartment while the cooking compartment is still cold. If you want to preheat anyway, do not place accessories into the cooking compartment until it has finished preheating.
- Remove any accessories that are not being used from the cooking compartment.

You can buy suitable accessories from customer service, from specialist retailers or online.

→ "Other accessories", Page 12

## 31.2 Baking tips

- Dark-coloured metal baking tins are most suitable for baking cakes, bread and other baked goods.
- Use wide, shallow cookware for bakes and gratins. Food takes longer to cook in deep, narrow cookware and it browns more on top.
- Silicone moulds are not suitable.
- If you are cooking bakes directly in the universal pan, place the universal pan into the cooking compartment at level 2.
- The setting values for bread dough apply to both dough placed on a baking tray and dough placed in a loaf tin.

### ATTENTION

When the cooking compartment is hot, any water inside it will create steam. The change in temperature may cause damage.

- ▶ Never pour water into the cooking compartment when it is still hot.
- ▶ Never place cookware containing water on the cooking compartment floor.

## Shelf positions

If you are using the 4D hot air type of heating, you can choose between shelf positions 1, 2, 3 and 4. You will obtain the best results if you use the following shelf positions.

| Baking on one level                               | Height |
|---------------------------------------------------|--------|
| Tall baked items and tins/dishes on the wire rack | 2      |
| Shallow baked items/baking tray                   | 3      |
| Baking on two or more levels                      | Height |
| 2 levels                                          | 3      |
| ■ Universal pan                                   | 1      |
| ■ Baking tray                                     |        |
| 2 levels                                          | 3      |
| ■ Baking tins/dishes on 2 wire racks              | 1      |
| 3 levels                                          | 5      |
| ■ Baking tray                                     | 3      |
| ■ Universal pan                                   | 1      |
| ■ Baking tray                                     |        |
| 4 levels                                          | 5      |
| ■ 4 wire racks with greaseproof paper             | 3      |
|                                                   | 2      |
|                                                   | 1      |

Use the 4D hot air heating function.

**Note:** Items that are placed in the appliance on baking trays or in baking tins/dishes at the same time will not necessarily be ready at the same time.

## 31.3 Roasting, braising and grilling tips

- The recommended settings are for fridge-temperature food and unstuffed, oven-ready poultry.
- Place the poultry onto the cookware breast-side or skin-side down.
- Turn roasting joints, grilled items or whole fish after approx.  $\frac{1}{2}$  to  $\frac{2}{3}$  of the specified time.

- The meat probe allows you to cook with absolute precision. Take note of the important information on using it correctly. → *Page 20*

## Roasting on the wire rack

Food roasted on the wire rack will become very crispy on all sides. You can roast large poultry, for example, or multiple individual pieces at the same time.

- Roast pieces of a similar weight and thickness. The grilled food will brown evenly and will remain succulent and juicy.
- Place the food to be roasted directly on the wire rack.
- To catch any liquids that drip down, place the universal pan, with the wire rack inside it, into the cooking compartment at the specified shelf height.
- Add up to  $\frac{1}{2}$  litre of water to the universal pan, depending on the size and type of food that you want to roast.  
You can make a sauce from the juices that are collected. This also means that less smoke is produced and the cooking compartment does not become as dirty.

## Roasting in cookware

If you cover the cookware when you cook your food, this will keep the cooking compartment cleaner.

### General information about roasting in cookware

- Use heat-resistant, ovenproof cookware.
- Place the cookware on the wire rack.
- Glass cookware is best.
- Follow the manufacturer's instructions for your roasting dishes.

### Roasting in uncovered cookware

- Use a deep roasting dish.
- If you do not have any suitable cookware, you can use the universal pan.

### Roasting in covered cookware

- Use a suitable lid that seals well.
- When roasting meat, there should be at least 3 cm between the food and the lid. The meat may expand.

### ⚠ WARNING – Risk of scalding!

Very hot steam may escape when the lid is opened after cooking. Steam may not be visible, depending on the temperature.

- ▶ Lift the lid in such a way that the hot steam can escape away from you.
- ▶ Keep children away from the appliance.

## Grilling

Grill food if you want it to be crispy.

The "Grill" type of heating is good for cooking thinner pieces of poultry, meat and fish such as steaks, drumsticks and burgers. It is also excellent for toasting bread.

Circulated air grilling is very well suited to cooking whole poultry and fish, as well as meat, e.g. roast pork with crackling.

- When grilling several food items, choose pieces that are of a similar weight and thickness. The grilled food will brown evenly and will remain succulent and juicy.
- Place the food to be grilled directly onto the wire rack.

- To catch any liquids that drip down, place the universal pan into the cooking compartment at least one level below the wire rack.

#### Notes

- The grill element switches on and off continuously. This is normal. The grill setting that you use determines how frequently this occurs.
- Smoke may be produced when grilling.

### 31.4 Cooking tips for steaming

Cook your food gently. The food remains particularly succulent.

In contrast to cooking with added steam, the meat does not become crispy on the outside.

- Use uncovered, heat-resistant cookware that is suitable for cooking with steam.
- The perforated steaming tray, size XL, is the best option here. To catch any liquid that drips down, slide the universal pan into the cooking compartment one level below. Alternatively, you can place a glass dish onto the wire rack.
- Cover food that you would normally cook in a bain marie with film, e.g. cling film.
- You do not need to turn the food.
- To obtain a slightly different flavour, you can sear the meat, poultry or fish before steaming. Reduce the cooking time.
- Larger food items require a longer heat-up time and a longer cooking time.
- If you are using several pieces which are the same weight, the appliance's heat-up time is increased. The cooking time remains the same.
- Open the door as infrequently as possible during steaming. Wipe the condensate drip tray after preparation.

ation. If the condensate drip tray overflows, this may cause damage to kitchen units.

- The main part of the user manual contains information on how to configure the steam settings.  
→ "Steam", Page 17

#### Vegetables on several levels

You can easily cook more than one type of food or even whole menus, e.g. broccoli and potatoes, on 2 levels.

→ Page 48

#### Rice or cereal products

- Add water or liquid in the specified ratio.  
For example, 1:1.5 means add 150 ml liquid for every 100 g rice.

### 31.5 Cooking instructions for ready meals

- The cooking result greatly depends on the quality of the food. Pre-browning and irregularities may already be present in the food before cooking.
- Do not use frozen products that are covered with a thick layer of ice. Remove any ice on the food.
- Take ready meals out of the packaging.
- If you are warming or cooking the ready meal in cookware, make sure that the cookware is heat-resistant.
- Distribute foods that are in the form of separate pieces, such as bread rolls and potato products, so that they are spread out flat and evenly on the accessory. Leave a little space between the individual pieces.
- Follow the manufacturer's instructions on the packaging.

### 31.6 List of foods

Recommended settings for a variety of foods, sorted into food categories.

#### Recommended settings for various types of food

| Food                                                 | Accessory/cook-ware                 | Height | Type of heating                                                                     | Temperature in °C/grill setting        | Steam level     | Cooking time in mins            |
|------------------------------------------------------|-------------------------------------|--------|-------------------------------------------------------------------------------------|----------------------------------------|-----------------|---------------------------------|
| Sponge cake, delicate                                | Ring-shaped tin or Loaf tin         | 2      |  | 150-170                                | -               | 60-80                           |
| Sponge cake, 2 levels                                | Ring-shaped tin or Loaf tin         | 3+1    |  | 140-160                                | -               | 60-80                           |
| Fruit tart or cheesecake with shortcrust pastry base | Springform cake tin, diameter 26 cm | 2      |  | 160-180                                | -               | 70-90                           |
| Sponge flan, 6 eggs                                  | Springform cake tin Ø 28 cm         | 2      |  | 150-160                                | -               | 50-60                           |
| Sponge flan, 6 eggs                                  | Springform cake tin Ø 28 cm         | 2      |  | <b>1.</b> 150-160<br><b>2.</b> 150-160 | <b>1</b><br>Off | <b>1.</b> 10<br><b>2.</b> 25-35 |
| Shortcrust tart with moist topping                   | Universal pan                       | 3      |  | 160-180                                | -               | 55-75                           |
| Yeast cake with moist topping                        | Universal pan                       | 3      |  | 180-190                                | -               | 30-40                           |
| Swiss roll                                           | Baking tray                         | 3      |  | 180-200 <sup>1</sup>                   | <b>1</b>        | 10-15                           |

<sup>1</sup> Preheat the appliance.

| Food                                          | Accessory/cook-ware                | Height | Type of heating                                                                                                                                                                                                                                                                                 | Temperature in °C/grill setting                             | Steam level   | Cooking time in mins                                    |
|-----------------------------------------------|------------------------------------|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|---------------|---------------------------------------------------------|
| Muffins                                       | Muffin tray                        | 3      |                                                                                                                                                                                                                | 170-190                                                     | -             | 15-20                                                   |
| Small yeast cakes                             | Baking tray                        | 3      |                                                                                                                                                                                                                | 160-180                                                     | 2             | 25-35                                                   |
| Biscuits                                      | Baking tray                        | 3      |                                                                                                                                                                                                                | 140-160                                                     | -             | 15-30                                                   |
| Biscuits, 2 levels                            | Universal pan<br>+ Baking tray     | 3+1    |                                                                                                                                                                                                                | 140-160                                                     | -             | 15-30                                                   |
| Biscuits, 3 levels                            | x 2 Baking tray<br>+ Universal pan | 5+3+1  |                                                                                                                                                                                                                | 140-160                                                     | -             | 15-30                                                   |
| Bread, 750 g                                  | Universal pan<br>or Loaf tin       | 2      |                                                                                                                                                                                                                | <b>1.</b> 210-220<br><b>2.</b> 180-190                      | 3<br>Off      | <b>1.</b> 10-15<br><b>2.</b> 25-35                      |
| Bread, 1500 g                                 | Universal pan<br>or Loaf tin       | 2      |                                                                                                                                                                                                                | <b>1.</b> 210-220<br><b>2.</b> 180-190                      | 3<br>Off      | <b>1.</b> 10-15<br><b>2.</b> 45-55                      |
| Bread, 1500 g                                 | Universal pan<br>or Loaf tin       | 2      |                                                                                                                                                                                                                | 200-210                                                     | -             | 35-45                                                   |
| Flatbread                                     | Universal pan                      | 3      |                                                                                                                                                                                                                | 220-230                                                     | 3             | 20-30                                                   |
| Bread rolls, fresh                            | Baking tray                        | 3      |                                                                                                                                                                                                                | 200-220                                                     | 2             | 20-30                                                   |
| Pizza, fresh, on a baking tray                | Baking tray                        | 3      |                                                                                                                                                                                                                | 180-200                                                     | -             | 20-30                                                   |
| Pizza, fresh, on a baking tray, 2 levels      | Universal pan<br>+ Baking tray     | 3+1    |                                                                                                                                                                                                              | 180-190                                                     | -             | 35-45                                                   |
| Pizza, fresh, thin-crust, on a pizza tray     | Pizza tray                         | 2      |                                                                                                                                                                                                              | 220-230                                                     | -             | 20-30                                                   |
| Börek                                         | Universal pan                      | 3      |                                                                                                                                                                                                              | 200-210                                                     | -             | 30-40                                                   |
| Quiche                                        | Dark coated quiche tin             | 1      |                                                                                                                                                                                                              | 200-210                                                     | -             | 25-40                                                   |
| Tarte flambée                                 | Universal pan                      | 3      |                                                                                                                                                                                                              | 240-250 <sup>1</sup>                                        | -             | 10-18                                                   |
| Bake, savoury, cooked ingredients             | Ovenproof dish                     | 2      |                                                                                                                                                                                                              | 150-170                                                     | 2             | 40-50                                                   |
| Potato gratin, raw ingredients, 4 cm deep     | Ovenproof dish                     | 2      |                                                                                                                                                                                                              | 160-190                                                     | -             | 50-70                                                   |
| Chicken, 1.3 kg, unstuffed                    | Wire rack                          | 2      |                                                                                                                                                                                                              | 200-220                                                     | -             | 60-70                                                   |
| Chicken, 1.3 kg, unstuffed                    | Wire rack                          | 2      |                                                                                                                                                                                                              | 190-210                                                     | 2             | 50-60                                                   |
| Chicken breast fillet, steaming               | Perforated steaming tray           | 3      |                                                                                                                                                                                                              | 100                                                         | -             | 15-25                                                   |
| Small chicken portions, 250 g each            | Wire rack                          | 3      |                                                                                                                                                                                                              | 200-220                                                     | 2             | 30-45                                                   |
| Goose, unstuffed, 3 kg                        | Wire rack                          | 2      |                                                                                                                                                                                                              | 160-180                                                     | -             | 120-150                                                 |
| Goose, unstuffed, 3 kg                        | Wire rack                          | 2      | <b>1.</b> <br><b>2.</b> <br><b>3.</b>  | <b>1.</b> 130-140<br><b>2.</b> 150-160<br><b>3.</b> 170-180 | 2<br>2<br>Off | <b>1.</b> 110-120<br><b>2.</b> 20-30<br><b>3.</b> 30-40 |
| Joint of pork without rind, e.g. neck, 1.5 kg | Uncovered cook-ware                | 2      |                                                                                                                                                                                                              | 180-190                                                     | -             | 110-130                                                 |
| Joint of pork without rind, e.g. neck, 1.5 kg | Uncovered cook-ware                | 2      |                                                                                                                                                                                                              | 190-200                                                     | -             | 120-140                                                 |

<sup>1</sup> Preheat the appliance.

| Food                                         | Accessory/cook-ware      | Height | Type of heating                                                                                                                                                                                                                                                      | Temperature in °C/grill setting    | Steam level     | Cooking time in mins             |
|----------------------------------------------|--------------------------|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|-----------------|----------------------------------|
| Joint of pork with rind, e.g. shoulder, 2 kg | Uncovered cook-ware      | 2      | 1. <br>2. <br>3.  | 1. 100<br>2. 170-180<br>3. 200-210 | Off<br>1<br>Off | 1. 25-30<br>2. 60-80<br>3. 20-30 |
| Fillet of beef, medium, 1 kg                 | Wire rack                | 2      |                                                                                                                                                                                     | 210-220                            | -               | 40-50                            |
| Fillet of beef, medium, 1 kg                 | Uncovered cook-ware      | 2      |                                                                                                                                                                                     | 190-200                            | 1               | 50-60                            |
| Pot-roasted beef, 1.5 kg                     | Covered cookware         | 2      |                                                                                                                                                                                     | 200-220                            | -               | 130-160                          |
| Pot-roasted beef, 1.5 kg                     | Covered cookware         | 2      |                                                                                                                                                                                     | 200-220                            | -               | 140-160                          |
| Sirloin, medium, 1.5 kg                      | Wire rack                | 2      |                                                                                                                                                                                     | 220-230                            | -               | 60-70                            |
| Sirloin, medium, 1.5 kg                      | Uncovered cook-ware      | 2      |                                                                                                                                                                                     | 190-200                            | 1               | 65-80                            |
| Burger, 3–4 cm thick                         | Wire rack                | 4      |                                                                                                                                                                                     | 3                                  | -               | 25-30 <sup>1</sup>               |
| Leg of lamb, boned, medium, 1.5 kg           | Uncovered cook-ware      | 2      |                                                                                                                                                                                     | 170-190                            | -               | 50-80                            |
| Leg of lamb, boned, medium, 1.5 kg           | Uncovered cook-ware      | 2      |                                                                                                                                                                                     | 170-180                            | 1               | 80-90                            |
| Fish, baked, whole, 300 g, e.g. trout        | Universal pan            | 2      |                                                                                                                                                                                     | 1. 170-180<br>2. 160-170           | 1<br>Off        | 1. 15-20<br>2. 5-10              |
| Fish, steamed, whole, 300 g, e.g. trout      | Perforated steaming tray | 3      |                                                                                                                                                                                     | 80-90                              | -               | 15-25                            |
| Fish fillet, plain, steamed                  | Perforated steaming tray | 3      |                                                                                                                                                                                     | 80-100                             | -               | 10-16                            |
| Cauliflower, whole, steaming                 | Perforated steaming tray | 3      |                                                                                                                                                                                   | 120                                | -               | 20-30                            |
| Sliced carrots, steaming                     | Perforated steaming tray | 3      |                                                                                                                                                                                   | 120                                | -               | 5-7                              |
| Spinach, steaming                            | Perforated steaming tray | 3      |                                                                                                                                                                                   | 100                                | -               | 2-3                              |
| Unpeeled boiled potatoes, whole              | Perforated steaming tray | 3      |                                                                                                                                                                                   | 120                                | -               | 30-35                            |
| Long-grain rice, 1:1.5                       | Shallow cookware         | 3      |                                                                                                                                                                                   | 110                                | -               | 12-17                            |
| Eggs, hard-boiled                            | Perforated steaming tray | 3      |                                                                                                                                                                                   | 100                                | -               | 9-12                             |

## Desserts

### Making crème caramel or crème brûlée

1. Use your preferred recipe to make the mixture for the crème.
2. Pour the mixture into moulds until the mixture is 2-3 cm deep.
3. Place the moulds into the perforated steaming tray (size XL).
4. Cover food that you would normally cook in a bain marie with film, e.g. cling film.
5. Use the recommended settings when configuring the appliance settings.
6. If the moulds are made from very thick material, extend the cooking time.

### Making yoghurt

1. Remove the accessories and shelves from the cooking compartment.
2. Heat 1 litre of whole milk (3.5% fat) to 90 °C on the hob and then leave it to cool down to 40 °C. It is sufficient to heat UHT milk to 40 °C.
3. Mix 150 g of chilled yoghurt into the milk.
4. Pour the mixture into small containers, e.g. cups or small jars.
5. Cover the containers with film, e.g. cling film.
6. Place the containers on the cooking compartment floor.
7. Use the recommended settings when configuring the appliance settings.
8. After making the yoghurt, leave it to cool in the refrigerator for at least 12 hours.

<sup>1</sup> Turn the dish 2/3 of the way through the cooking time.

## Recommended settings for desserts and compote


| Food          | Accessory/cook-ware | Height                    | Type of heating                                                                   | Temperature in °C | Steam level | Cooking time in mins |
|---------------|---------------------|---------------------------|-----------------------------------------------------------------------------------|-------------------|-------------|----------------------|
| Crème brûlée  | Individual moulds   | 3                         |  | 85                | -           | 20-30                |
| Crème caramel | Individual moulds   | 3                         |  | 85                | -           | 30-40                |
| Yoghurt       | Individual moulds   | Cooking compartment floor |  | 35-40             | -           | 300-360              |

## Cooking whole menus with steam

Recommended settings and further information for cooking a whole menu at once.

### Tips for cooking whole menus

- Use suitable accessories and ensure that you place them into the oven the right way round. → *Page 10*

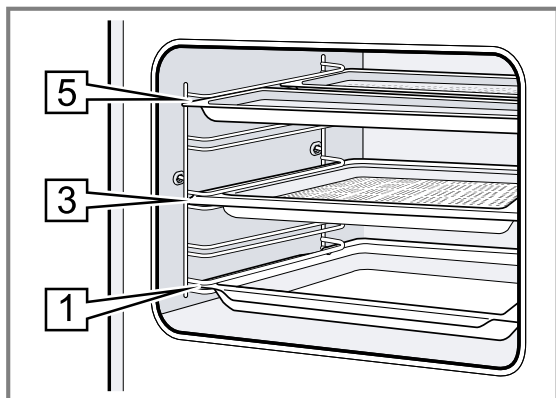

- Shelf positions:

### Recommended settings for cooking whole menus

| Food                              | Accessory/cook-ware                | Height | Type of heating                                                                     | Temperature in °C | Steam level | Cooking time in mins |
|-----------------------------------|------------------------------------|--------|-------------------------------------------------------------------------------------|-------------------|-------------|----------------------|
| Peeled boiled potatoes, quartered | Perforated steaming tray, size M   | 5+5+3  |  | 100               | -           | 1. 30                |
| Frozen salmon fillets             | +                                  |        |                                                                                     |                   |             | 2. 20                |
| Broccoli                          | Unperforated steaming tray, size M |        |                                                                                     |                   |             | 3. 10                |
|                                   | +                                  |        |                                                                                     |                   |             |                      |
|                                   | Perforated steaming tray, size XL  |        |                                                                                     |                   |             |                      |

- Steaming tray, size M: Shelf position 5
- Steaming tray, size XL: Shelf position 3
- Universal pan: Shelf position 1
- Place the food with the longest cooking time into the cooking compartment first. Add the rest of the food at the appropriate time. This means that all the food will be ready at the same time.
- Follow the cooking instructions for each of the different foods.
  - The heat-up time varies depending on the size and weight of the food.
  - The cooking time is unaffected by the quantity of food.
  - Use cookware that is steam-resistant.
  - Cover the soufflé with film, e.g. cling film.
  - Always insert the universal pan at level 1.
- The overall cooking time is extended when cooking whole meals with steam, as a little steam escapes each time the appliance door is opened and the cooking compartment has to be reheated.
- Wipe the cooking compartment and dry the condensate drip tray after using it to cook the meal.

## 31.7 Special cooking methods and other applications

Information and recommended settings for special cooking methods and other applications, e.g. low-temperature cooking.

### Low-temperature cooking

For all prime cuts which are to be cooked rare or "à point". When slow cooking at low temperatures, meat and poultry remain juicy and tender.

### Low-temperature cooking poultry or meat

**Note:** When using the low-temperature cooking type of heating, you cannot delay the start of the programme by setting an end time.

**Requirement:** The cooking compartment is cold.

- Use fresh, hygienically perfect meat. Pieces without bones and without a lot of connective tissue are most suitable.
- Place the cookware onto the wire rack at level 2 in the cooking compartment.
- Preheat the cooking compartment and cookware for approx. 15 minutes.
- Sear the meat on all sides on the hob at a very high heat.
- Immediately place the meat into the pre-warmed cookware in the cooking compartment.  
To ensure that the temperature in the cooking compartment remains constant, keep the cooking compartment door closed during low-temperature cooking.

## Tips for low-temperature cooking

Here you will find tips for achieving good results when low-temperature cooking food.

| Issue                                                | Tip                                                                                                                                                                                                                                                                          |
|------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| You want to cook a duck breast at a low temperature. | <ul style="list-style-type: none"> <li>Place the cold duck breast into a pan.</li> <li>Sear the skin side first.</li> <li>Cook the duck breast at low temperature.</li> <li>After low-temperature cooking, grill the duck breast for 3 to 5 minutes until crispy.</li> </ul> |

## Recommended settings for low-temperature cooking

| Food                                 | Accessory/<br>cookware | Height | Searing<br>time in<br>mins | Type of<br>heating                                                                 | Temperat-<br>ure in °C | Steam<br>level | Cooking time<br>in mins |
|--------------------------------------|------------------------|--------|----------------------------|------------------------------------------------------------------------------------|------------------------|----------------|-------------------------|
| Duck breast, medium rare, 300 g each | Uncovered cookware     | 2      | 6-8                        |   | 90 <sup>1</sup>        | -              | 45-60                   |
| Fillet of pork, whole                | Uncovered cookware     | 2      | 4-6                        |   | 80 <sup>1</sup>        | -              | 45-70                   |
| Fillet of beef, 1 kg                 | Uncovered cookware     | 2      | 4-6                        |   | 80 <sup>1</sup>        | -              | 90-120                  |
| Veal medallions, 4 cm thick          | Uncovered cookware     | 2      | 4                          |   | 80 <sup>1</sup>        | -              | 30-50                   |
| Saddle of lamb, boned, 200 g each    | Uncovered cookware     | 2      | 4                          |  | 80 <sup>1</sup>        | -              | 30-45                   |

## Sous-vide

Sous-vide cooking is a method of cooking in a vacuum at low temperatures between 50 and 95 °C and in 100% steam.

Sous-vide cooking is a gentle method of cooking meat, fish, vegetables and desserts.

A chamber vacuum-sealing machine is used to heat-seal the food in a special air-tight, heat-resistant vacuum-sealing bag.

The protective envelope of the vacuum-sealing bag retains the nutrients and flavours. The low temperatures and the direct transfer of heat allow precisely controlled cooking in order to achieve the desired cooking results. It is almost impossible to overcook the food.

### Sous-vide cooking tips

- Servings
  - Take into consideration the specified quantities and sizes for the food listed in the recommended settings tables. Adjust the cooking time for larger quantities and items.
  - The appliance can cook up to 2 kg of food sous-vide.
  - For vegetables and desserts, the specified quantity is for 4 people.
- You can cook on up to 2 levels. When you do this, always slide the universal pan in at level 1 to catch any drops of condensate. Insert the wire racks at the levels above accordingly.
- The quality of the cooking result is 100% influenced by the quality of the ingredients you use. Use only

| Issue                                                                  | Tip                                                                                                                                                            |
|------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| You want to serve your low-temperature cooked meat as hot as possible. | <ul style="list-style-type: none"> <li>Preheat the serving plate.</li> <li>Make sure that the accompanying sauces are very hot when you serve them.</li> </ul> |

fresh, top-quality food. This is the only way to guarantee a consistent cooking result that delivers impeccable flavour.

### Vacuum-sealing food

To ensure an even transfer of heat and an optimised cooking result, use a chamber vacuum-sealing machine that can create a 99% vacuum when vacuum-sealing food.

**Tip:** To prevent gases escaping from the food, e.g. from vegetables, vacuum-seal the food no more than one day before you cook it. The gases inhibit the transfer of heat or cause the texture of the food to change, thus altering how it cooks, as a result of the vacuum pressure.

**Note:** Do not use a core temperature probe.

- Season food with half the usual the amount of spices. Cooking in a vacuum means that the flavours cannot escape. The usual quantities of flavourings such as spices, herbs and garlic affect the taste much more and intensify it.

**Tip:** You can intensify the natural flavours of high-quality food simply by adding a small knob of butter and a little salt to the vacuum-sealing bag.

Different ingredients affect how the food cooks:

- Salt and sugar reduce the cooking time.
- Acidic ingredients such as lemon juice or vinegar make food firmer.
- Alcohol and garlic give the food an unpleasant after-taste.

<sup>1</sup> Preheat the appliance.

2. To fill the vacuum-sealing bag, fold over the edge of the bag 3 - 4 cm from the top and place the bag into a receptacle such as a measuring jug.  
When you fill the vacuum-sealing bag, make sure that there are no traces of food left on the seam area of the vacuum-sealing bag.
3. Before cooking the food, check that the vacuum in the bag is intact.  
Make sure that:
  - There is no air in the vacuum-sealing bag.
  - The heat-sealed seam is perfectly sealed.
  - There are no holes in the vacuum-sealing bag.
  - Pieces of meat or fish that have been vacuum-sealed together are not pressed directly against one another.
4. If the vacuum-sealing bag is not filled as it should be, place the food into a new bag and vacuum-seal it again.

### Preparing food for sous-vide cooking

There are germs on the surface of virtually all food.

#### ⚠ **WARNING – Risk of harm to health!**

Sous-vide cooking is a method of cooking at low temperatures and, if the instructions for use and hygiene instructions are not adhered to, it may result adverse health effects.

- ▶ Only use high-quality, perfectly fresh food.
- ▶ Wash and disinfect your hands.
- ▶ Use disposable gloves, cooking tongs or grill tongs.
- ▶ Take extra care when preparing critical food, such as poultry, eggs and fish.
- ▶ Always thoroughly rinse and peel fruit and vegetables.
- ▶ Always keep work surfaces and chopping boards clean.
- ▶ Use different chopping boards for different types of food.
- ▶ Only interrupt the cold chain briefly to prepare the food.
- ▶ Store vacuum-sealed food in the refrigerator for a maximum of 24 hours before you start the cooking process.
- ▶ Once the food is cooked, consume it immediately. Do not store it after cooking – not even in the refrigerator. It is not suitable for reheating.
- ▶ To kill the germs, dip the vacuum-sealing bag containing the uncooked food into boiling water for no more than 3 seconds.
- ✓ This minimises the germs on your ingredients and maximises hygiene, so your food is now ready for sous-vide cooking.

### Cooking food sous-vide

#### Requirements

- The food is vacuum-sealed. → *Page 49*
  - The food is prepared. → *Page 50*
1. Place the food onto the wire rack.  
To ensure that the heat is distributed evenly around the food, do not place the vacuum-sealed food items on top of one another or close together on the wire rack.
  2. To catch any drops of condensate, slide the universal pan in at level 1.
  3. **ATTENTION – Risk of damage to kitchen units**
    - ▶ Do not fill the water tank a second time for the sous-vide cooking.

Use the recommended settings when configuring the appliance settings.

The recommended settings are based on how long one tankful of water lasts. As a general rule, depending on the set temperature, the following maximum cooking times apply when the water tank is completely full:

| Temperature in °C | Max. cooking time in minutes |
|-------------------|------------------------------|
| 50                | 270                          |
| 60                | 210                          |
| 70                | 150                          |
| 80                | 120                          |
| 90                | 90                           |

#### 4. ⚠ **WARNING – Risk of scalding!**

Hot water collects on the vacuum-sealing bag during cooking.

- ▶ Use an oven cloth to carefully lift the vacuum-sealing bag so that the hot water runs off into the universal pan or the cooking container.
- ▶ Use the oven cloth to carefully remove the vacuum-sealing bag.

Once the food is cooked, allow the cooking compartment to cool and then use a sponge to wipe away the water.

5. Dry the outside of the vacuum-sealing bag and place it in a clean container.
6. Use scissors to open the vacuum-sealing bag. Place all of the food and liquid into the container.  
You can use the stock or marinade to make a sauce.
7. Prepare the food for serving.

| Food       | Cooking tips                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Meat       | <ul style="list-style-type: none"> <li>- Dab the meat with a tea towel before placing it into hot oil, in order to avoid fat spitting out of the pan.</li> <li>- Sear the meat at a very high temperature for a few seconds on each side. This gives the meat a nice crust and the flavours you would expect from frying, without overcooking it.</li> </ul>                                                                                                                      |
| Fish       | <ul style="list-style-type: none"> <li>- Season the fish and coat with hot butter.</li> <li>- To give the fish a nice crust and the flavours you would expect from frying, sear it for a few seconds on each side.</li> <li>- Fry the food for longer if has not been sufficiently well cooked during the sous-vide cooking stage.</li> <li>- Serve the fish on preheated plates and with a hot sauce or butter, as sous-vide cooking takes place at low temperatures.</li> </ul> |
| Vegetables | <ul style="list-style-type: none"> <li>- Sear the vegetables briefly to give them the flavours you would expect from frying.</li> <li>- Season the vegetables or mix them with other ingredients.</li> </ul>                                                                                                                                                                                                                                                                      |

## Recommended settings for sous-vide cooking

| Food                                              | Accessory/<br>cookware          | Type of<br>heating                                                                  | Temper-<br>ature in<br>°C | Steam level | Cooking time<br>in mins | Tips for sous-vide<br>cooking                                                                                                                                  |
|---------------------------------------------------|---------------------------------|-------------------------------------------------------------------------------------|---------------------------|-------------|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Fillet of beef, piece,<br>rare, 3-4 cm thick      | Wire rack<br>+<br>Universal pan |    | 58                        | -           | 90                      | Vacuum-seal along<br>with some butter and<br>rosemary.                                                                                                         |
| Fillet of beef, piece,<br>medium, 3-4 cm thick    | Wire rack<br>+<br>Universal pan |    | 65                        | -           | 80                      | Vacuum-seal along<br>with some butter and<br>rosemary.                                                                                                         |
| Duck breast, 300 g<br>each                        | Wire rack<br>+<br>Universal pan |    | 62                        | -           | 70                      | Cut into the layer of<br>fat, season the meat<br>side with a little salt<br>and pepper, and va-<br>cuum-seal it along<br>with a small piece of<br>orange peel. |
| Fish fillet, 2-3 cm<br>thick, e.g. salmon,<br>cod | Wire rack<br>+<br>Universal pan |    | 65                        | -           | 25                      | Vacuum-seal along<br>with some butter and<br>a little salt.                                                                                                    |
| Mushrooms,<br>quartered, 500 g                    | Wire rack<br>+<br>Universal pan |    | 85                        | -           | 20-25                   | Vacuum-seal along<br>with some butter,<br>rosemary, a little gar-<br>lic and salt.                                                                             |
| Carrots, in 0.5 cm<br>slices, 600 g               | Wire rack<br>+<br>Universal pan |    | 90                        | -           | 70-80                   | Recipe tip: Vacuum-<br>seal along with some<br>orange juice, curry<br>powder/paste and<br>butter.                                                              |
| Potatoes, peeled,<br>quartered, 800 g             | Wire rack<br>+<br>Universal pan |  | 95                        | -           | 35-45                   | Recipe tip: Vacuum-<br>seal along with some<br>butter and salt. Can<br>easily be used for<br>making dishes such<br>as salad.                                   |
| Pineapple, in 1.5 cm<br>slices, 400 g             | Wire rack<br>+<br>Universal pan |  | 85                        | -           | 70-80                   | Recipe tip: Vacuum-<br>seal along with some<br>butter, honey and<br>vanilla.                                                                                   |
| Apples, peeled, in<br>0.5 cm slices, 2-4 pcs      | Wire rack<br>+<br>Universal pan |  | 85                        | -           | 15-25                   | Recipe tip: Vacuum-<br>seal along with some<br>caramel sauce. Firm<br>apple varieties are<br>the most suitable,<br>e.g. Jonagold or<br>Boskop.                 |
| Vanilla sauce, 0.5 l                              | Wire rack<br>+<br>Universal pan |  | 82                        | -           | 15-25                   | Recipe tip: Mix 0.5 l<br>milk, 1 egg, 3 egg<br>yolks, 80 g sugar and<br>the pulp of a vanilla<br>pod, and vacuum-<br>seal.                                     |

## Air Fry

Cook food with Air Fry until crispy and with little fat. Air Fry is particularly suitable for meals that are normally fried in oil.

### Cooking tips for Air Fry

Observe this information when cooking food with Air Fry.

- Only one level can be used when cooking with Air Fry.
- You can achieve the crispiest results using the enamelled Air Fry tray. The perforated surface enables extremely good air circulation around the food. If the Air Fry tray is not included with the appliance as standard, you can obtain the Air Fry tray as an optional accessory.

- Do not preheat the oven.
- Do not use greaseproof paper. The air must circulate in the cooking compartment.
- Do not defrost frozen food.
- Cover the Air Fry tray or the universal pan evenly with the food. If possible, only distribute the food on the accessory in a single layer.
- Insert the accessory into the cooking compartment at level 3. If you use the Air Fry tray, you can insert an empty universal pan at level 1 to protect against dirt.

- Turn the food halfway through cooking. If you are cooking larger quantities, turn the food twice.

**Tip:** Do not season the food until after you have cooked it. This makes the food crispier.

Breaded vegetables are also suitable for cooking with Air Fry. To save fat, use a sprayer to spray the coating with oil. This forms a crispy crust with little fat.

### Recommended settings for Air Fry

| Food                             | Accessory/cook-ware           | Height | Type of heating                                                                     | Temperature in °C | Steam level | Cooking time in mins |
|----------------------------------|-------------------------------|--------|-------------------------------------------------------------------------------------|-------------------|-------------|----------------------|
| Chips                            | Air Fry tray or Universal pan | 3      |    | 180-200           | -           | 15-20                |
| Potato pockets, filled           | Air Fry tray or Universal pan | 3      |    | 180-200           | -           | 15-20                |
| Potato rösti, frozen             | Air Fry tray or Universal pan | 3      |    | 180-200           | -           | 15-20                |
| Chicken goujons, nuggets, frozen | Air Fry tray or Universal pan | 3      |    | 180-200           | -           | 8-12                 |
| Fish fingers                     | Air Fry tray or Universal pan | 3      |    | 180-200           | -           | 10-20                |
| Broccoli, breaded                | Air Fry tray or Universal pan | 3      |  | 180-200           | -           | 10-20                |

### Disinfection and hygiene

You can disinfect heat-resistant cookware or baby bottles that are in perfect condition. The process is equivalent to normal sterilisation by boiling.

#### Disinfecting bottles

1. Clean the bottles with a bottle brush immediately after use.
2. Wash the bottles in the dishwasher.
3. Place the bottles into the steaming tray (size XL) in such a way that they do not touch one another.
4. Start the "Disinfect" programme.
5. Dry the bottles with a clean cloth.
6. Wipe down the appliance interior after disinfecting.

#### Recommended settings for hygiene

| Food                     | Accessory/cook-ware      | Height | Type of heating                                                                     | Temperature in °C | Steam level | Cooking time in mins |
|--------------------------|--------------------------|--------|-------------------------------------------------------------------------------------|-------------------|-------------|----------------------|
| Sterilise clean cookware | Perforated steaming tray | 2      |  | 100               | -           | 15-20                |

### Proving dough

Yeast dough proves more quickly in your appliance than at room temperature and does not dry out.

**Requirement:** The cooking compartment is cold.

1. Slide the wire rack into the cooking compartment.
2. Place the dough onto the wire rack in a bowl.  
Do not cover the bowl.

### Useful information on disinfection

Please take note of the following information if you are disinfecting cookware.

- You can use your appliance to prepare jam jars or preserving jars and their lids.
- You can perform an additional processing step at the end in order to improve the jam's shelf life.
- Disinfect only heat-resistant cookware that is suitable for cooking with steam.
- Only use clean jars and lids that are in perfect condition.
- Ideally, you should wash the cookware in the dishwasher before disinfecting it.

3. Use the recommended settings when configuring the appliance settings.

The values are guide values only. The temperature and proving time are dependent on the type and quantity of the ingredients.

4. Do not open the appliance door while the dough is proving, otherwise moisture will escape.

5. Wipe the cooking compartment dry before baking in it.

### Recommended settings for proving dough

| Food                       | Accessory/cook-ware | Height | Type of heating                                                                   | Temperature in °C | Steam level | Cooking time in mins |
|----------------------------|---------------------|--------|-----------------------------------------------------------------------------------|-------------------|-------------|----------------------|
| Rich dough, e.g. panettone | Bowl on wire rack   | 2      |  | 40-45             | -           | 40-90                |
| White bread                | Bowl on wire rack   | 2      |  | 35-40             | -           | 30-40                |

### Reheating

Gently warm up food with added steam. The food tastes and looks as though it has been freshly cooked. You can even warm and crisp up baked goods from the day before.

#### Tips for reheating food

- Use uncovered, heat-resistant cookware that is suitable for cooking with steam.

- Use wide, shallow cookware. Cold cookware extends the reheating time.
- Place the cookware on the wire rack.
- Place food that you are not reheating in cookware (e.g. bread rolls) directly onto the wire rack at level 2.
- Do not cover the food.
- Do not open the cooking compartment door while the food is being reheated, otherwise large amounts of steam will escape.
- Wipe the cooking compartment and dry the condensate drip tray after using it to reheat food.

### Recommended settings for heating and reheating

| Food                                 | Accessory/cook-ware | Height | Type of heating                                                                     | Temperature in °C    | Steam level | Cooking time in mins |
|--------------------------------------|---------------------|--------|-------------------------------------------------------------------------------------|----------------------|-------------|----------------------|
| Plated meal, chilled, 1 portion      | Uncovered cookware  | 2      |    | 120-130              | -           | 15-25                |
| Pizza, cooked, chilled               | Wire rack           | 2      |  | 170-180 <sup>1</sup> | -           | 5-15                 |
| Bread rolls, baguette, baked         | Wire rack           | 2      |  | 150-160 <sup>1</sup> | -           | 10-20                |
| Pizza, cooked, frozen                | Wire rack           | 2      |  | 170-180 <sup>1</sup> | -           | 5-15                 |
| Bread rolls, baguette, baked, frozen | Wire rack           | 2      |  | 160-170 <sup>1</sup> | -           | 10-20                |

### Keeping food warm

#### Tips for keeping food warm

- Using the "Keep warm" heating function prevents condensation from forming. You will not have to wipe down the cooking compartment.
- Do not cover the food.
- Do not keep food warming for longer than 2 hours.
- Be aware that some types of food will actually continue cooking when you are keeping them warm in the oven.

The different added steam levels are suitable for keeping the following foods warm:

- Level 1: Joints and briefly roasted food

#### Recommended settings for baking on one level

| Food                 | Accessory/cook-ware            | Height | Type of heating                                                                     | Temperature in °C | Steam level | Cooking time in mins |
|----------------------|--------------------------------|--------|-------------------------------------------------------------------------------------|-------------------|-------------|----------------------|
| Victoria sponge cake | x 2<br>20 cm diameter cake tin | 2      |  | 150-160           | 1           | 25-35                |
| Rich fruit cake      | Deep, 23 cm diameter tin       | 2      |  | 140-160           | -           | 120-180              |

- Level 2: Bakes and side dishes
- Level 3: Stews and soups

## 31.8 Meals and tips for cooking for Great Britain

Recommended settings for meals with British cooking habits.

Also follow the instructions in the individual sections. This section contains only special additional information relating to British meals and cooking habits.

### Baking

<sup>1</sup> Preheat the appliance.

| Food                 | Accessory/cook-ware              | Height | Type of heating                                                                   | Temperature in °C    | Steam level | Cooking time in mins |
|----------------------|----------------------------------|--------|-----------------------------------------------------------------------------------|----------------------|-------------|----------------------|
| Rich fruit cake      | Deep, 23 cm diameter tin         | 2      |  | 130-150              | -           | 150-180              |
| Fruit pie            | 20 cm diameter plate or Pie tin  | 2      |  | 160-170              | -           | 55-70                |
| Fruit pie            | 20 cm diameter plate or Pie tin  | 2      |  | 170-190              | -           | 60-75                |
| Bread or white bread | Loaf tin, 1 x 900 g or 2 x 450 g | 2      |  | 190-200              | 2           | 30-40                |
| Bread or white bread | Loaf tin, 1 x 900 g or 2 x 450 g | 2      |  | 190-200              | -           | 40-50                |
| Scones               | Baking sheet on wire rack        | 3      |  | 180-190 <sup>1</sup> | -           | 10-14                |
| Biscuits             | Baking sheet on wire rack        | 3      |  | 140-160 <sup>1</sup> | -           | 10-25                |
| Small cakes          | 12-cup-tin                       | 3      |  | 140-160 <sup>2</sup> | -           | 20-30                |
| Pavlova              | Baking sheet on wire rack        | 3      |  | 90-100 <sup>1</sup>  | -           | 120-180              |
| Yorkshire pudding    | 12-cup-tin                       | 3      |  | 200-220 <sup>1</sup> | -           | 15-25                |

#### Recommended settings for baking on several levels

| Food                           | Accessory/cook-ware              | Height | Type of heating                                                                     | Temperature in °C    | Steam level | Cooking time in mins |
|--------------------------------|----------------------------------|--------|-------------------------------------------------------------------------------------|----------------------|-------------|----------------------|
| Victoria sponge cake, 2 levels | x 4<br>20 cm diameter cake tin   | 3+1    |  | 160-170 <sup>1</sup> | -           | 20-25                |
| Biscuits, 2 levels             | x 2<br>Baking sheet on wire rack | 3+1    |  | 140-160 <sup>1</sup> | -           | 15-30                |
| Biscuits, 3 levels             | x 3<br>Baking sheet on wire rack | 5+3+1  |  | 140-160 <sup>1</sup> | -           | 15-30                |

## Grilling

#### Recommended settings for meat

| Food                             | Accessory/cook-ware | Height | Type of heating                                                                     | Temperature in °C/grill setting        | Steam level | Cooking time in mins                        |
|----------------------------------|---------------------|--------|-------------------------------------------------------------------------------------|----------------------------------------|-------------|---------------------------------------------|
| Pork, Bacon rashers <sup>3</sup> | Wire rack           | 3      |  | 3 <sup>4</sup>                         | -           | <b>1.</b> 4-5<br><b>2.</b> 3-4 <sup>5</sup> |
| Pork, Sausages, thickness 2-4 cm | Wire rack           | 3      |  | 3 <sup>6</sup>                         | -           | 10-15 <sup>7</sup>                          |
| Pork, Belly                      | Wire rack           | 2      |  | 200-220                                | -           | 30+25                                       |
| Pork, Belly, 1 kg <sup>3</sup>   | Wire rack           | 2      |  | <b>1.</b> 170-180<br><b>2.</b> 190-200 | 1<br>Off    | <b>1.</b> 50-60<br><b>2.</b> 25-35          |

<sup>1</sup> Preheat the appliance.

<sup>2</sup> Preheat the appliance for five minutes. Do not use the rapid heating function.

<sup>3</sup> Slide the universal pan underneath the wire rack.

<sup>4</sup> Preheat the appliance for 5 minutes.

<sup>5</sup> Turn the food occasionally.

<sup>6</sup> Preheat the appliance for 3 minutes.

<sup>7</sup> Turn the food several times.

| Food               | Accessory/cook-ware | Height | Type of heating                                                                   | Temperature in °C/grill setting | Steam level | Cooking time in mins |
|--------------------|---------------------|--------|-----------------------------------------------------------------------------------|---------------------------------|-------------|----------------------|
| Pork, Gammon joint | Wire rack           | 2      |  | 180-200                         | -           | 30+25                |

### Recommended settings for poultry

| Food                                | Accessory/cook-ware | Height | Type of heating                                                                   | Temperature in °C | Steam level | Cooking time in mins |
|-------------------------------------|---------------------|--------|-----------------------------------------------------------------------------------|-------------------|-------------|----------------------|
| Chicken, whole <sup>1</sup>         | Wire rack           | 2      |  | 200-220           | -           | 20+15                |
| Chicken, whole, 1,5 kg <sup>1</sup> | Wire rack           | 2      |  | 180-190           | 2           | 65-75                |

## Roasting and braising

### Cooking tips for roasting and braising

Follow this information when frying or braising poultry or meat.

Calculating the cooking time, e.g. 20+35:

- To calculate the cooking time, assume 20 minutes per 500 g of meat. Then add an extra 35 minutes to that figure.

- For 1.5 kg, the cooking time would therefore be 95 minutes.

Cooking time range, e.g. 10-15:

- Your food will be ready within the specified range of time (in minutes).

### Recommended settings for meat

| Food                                         | Accessory/cook-ware | Height | Type of heating                                                                     | Temperature in °C | Steam level | Cooking time in mins |
|----------------------------------------------|---------------------|--------|-------------------------------------------------------------------------------------|-------------------|-------------|----------------------|
| Beef, Top side, Top rump                     | Wire rack           | 2      |    | 160-170           | -           | 30+25                |
| Beef, Top side, Top rump 1,5 kg <sup>1</sup> | Wire rack           | 2      |    | 170-180           | 1           | 100-120              |
| Lamb, Leg, bone-in                           | Wire rack           | 2      |  | 160-170           | -           | 25+25                |
| Lamb, Leg, bone-in, 1,5 kg <sup>1</sup>      | Wire rack           | 2      |  | 180-190           | 1           | 80-90                |
| Pork, Belly                                  | Wire rack           | 2      |  | 170-180           | -           | 30+25                |

### Recommended settings for poultry

| Food                                | Accessory/cook-ware | Height | Type of heating                                                                     | Temperature in °C                      | Steam level | Cooking time in mins                 |
|-------------------------------------|---------------------|--------|-------------------------------------------------------------------------------------|----------------------------------------|-------------|--------------------------------------|
| Chicken, whole <sup>1</sup>         | Wire rack           | 2      |  | 170-180                                | -           | 25+15                                |
| Chicken, whole, 1,5 kg <sup>1</sup> | Wire rack           | 2      |  | 180-190                                | 2           | 65-75                                |
| Turkey, crown                       | Wire rack           | 2      |  | 150-160                                | -           | 20+15                                |
| Turkey, crown, 3 kg <sup>1</sup>    | Wire rack           | 2      |  | 140-150                                | 2           | 100-140                              |
| Turkey, whole, 4-8 kg               | Wire rack           | 2      |  | 150-160                                | -           | 12+12 <sup>2</sup>                   |
| Turkey, whole, 7 kg <sup>1</sup>    | Wire rack           | 1      |  | <b>1.</b> 140-150<br><b>2.</b> 170-180 | 2<br>Off    | <b>1.</b> 120-150<br><b>2.</b> 30-40 |

### Recommended settings for bakes

| Food                                          | Accessory/cook-ware | Height | Type of heating                                                                     | Temperature in °C | Steam level | Cooking time in mins |
|-----------------------------------------------|---------------------|--------|-------------------------------------------------------------------------------------|-------------------|-------------|----------------------|
| Diced meat, e.g. beef, pork, lamb, 500 g meat | Covered cookware    | 2      |  | 140               | -           | 100-120              |
| Diced meat, e.g. beef, pork, lamb, 500 g meat | Covered cookware    | 2      |  | 140 <sup>3</sup>  | -           | 100-120              |

<sup>1</sup> Slide the universal pan underneath the wire rack.

<sup>2</sup> Turn the food after approx. one hour.

<sup>3</sup> Preheat the appliance.

## Recommended settings for complete meals

| Food                                    | Accessory/cook-ware | Height | Type of heating                                                                   | Temperature in °C | Steam level | Cooking time in mins     |
|-----------------------------------------|---------------------|--------|-----------------------------------------------------------------------------------|-------------------|-------------|--------------------------|
| Complete meal with Chicken <sup>1</sup> | x 2<br>Wire rack    | 4+1    |  | 180               | -           | Chicken:<br>(25+15) + 20 |
| Complete meal with Chicken, 1,5 kg      | x 2<br>Wire rack    | 4+1    |  | 180               | 1<br>Off    | 65-75                    |

## 31.9 Test dishes

The information in this section is provided for test institutes to facilitate testing of the appliance in accordance with EN 60350-1.

### Baking

- The setting values apply to food that is placed into a cold cooking compartment.
- Take note of the information on preheating in the recommended settings tables. These setting values apply without rapid heat-up.
- For baking, use the lower of the temperatures indicated first.
- Items that are placed in the appliance on baking trays or in baking tins/dishes at the same time will not necessarily be ready at the same time.
- Shelf positions when baking on 2 levels:
  - Universal pan: Shelf position 3
  - Baking tray: Shelf position 1
  - Baking tins on the wire rack:
    - First wire rack: Shelf position 3
    - Second wire rack: Shelf position 1
- Shelf positions when baking on 3 levels:
  - Baking tray: Shelf position 5
  - Universal pan: Shelf position 3
  - Baking tray: Shelf position 1
- Hot water sponge cake
  - When baking on 2 levels, place the springform tins at diagonally opposite corners of the wire racks.
  - As an alternative to a pan support, you can also use the Air Fry baking tray offered by us.

### Recommended settings for baking

| Food                            | Accessory/cook-ware                      | Height | Type of heating                                                                     | Temperature in °C                      | Steam level | Cooking time in mins            |
|---------------------------------|------------------------------------------|--------|-------------------------------------------------------------------------------------|----------------------------------------|-------------|---------------------------------|
| Shortbread                      | Baking tray                              | 3      |  | 140-150 <sup>2</sup>                   | -           | 25-40                           |
| Shortbread                      | Baking tray                              | 3      |  | 140-150 <sup>2</sup>                   | -           | 25-40                           |
| Shortbread, 2 levels            | Universal pan<br>+<br>Baking tray        | 3+1    |  | 140-150 <sup>2</sup>                   | -           | 25-40                           |
| Shortbread, 3 levels            | x 2<br>Baking tray<br>+<br>Universal pan | 5+3+1  |  | 130-140 <sup>2</sup>                   | -           | 35-55                           |
| Small cakes                     | Baking tray                              | 3      |  | 160 <sup>2</sup>                       | -           | 20-30                           |
| Small cakes                     | Baking tray                              | 3      |  | 150 <sup>2</sup>                       | -           | 25-35                           |
| Small cakes, 2 levels           | Universal pan<br>+<br>Baking tray        | 3+1    |  | 150 <sup>2</sup>                       | -           | 25-35                           |
| Small cakes, 3 levels           | x 2<br>Baking tray<br>+<br>Universal pan | 5+3+1  |  | 140 <sup>2</sup>                       | -           | 35-45                           |
| Hot water sponge cake           | Springform cake tin, diameter 26 cm      | 2      |  | 160-170 <sup>3</sup>                   | -           | 25-35                           |
| Hot water sponge cake           | Springform cake tin, diameter 26 cm      | 2      |  | 160-170 <sup>3</sup>                   | -           | 30-40                           |
| Hot water sponge cake           | Springform cake tin, diameter 26 cm      | 2      |  | <b>1.</b> 150-160<br><b>2.</b> 150-160 | 1<br>Off    | <b>1.</b> 10<br><b>2.</b> 20-25 |
| Hot water sponge cake, 2 levels | x 2                                      | 3+1    |  | 150-170 <sup>3</sup>                   | -           | 30-50                           |

<sup>1</sup> Slide the universal pan underneath the wire rack.

<sup>2</sup> Preheat the appliance for five minutes. Do not use the rapid heating function.

<sup>3</sup> Preheat the appliance. Do not use the rapid heating function.

| Food | Accessory/cook-ware                 | Height | Type of heating | Temperature in °C | Steam level | Cooking time in mins |
|------|-------------------------------------|--------|-----------------|-------------------|-------------|----------------------|
|      | Springform cake tin, diameter 26 cm |        |                 |                   |             |                      |

## Steaming

Slide the universal pan into the cooking compartment below the perforated steaming tray (size XL) if instructed to do so in the recommended settings table.

### Shelf positions

Shelf positions when steaming on one level:

- Use a maximum of 2.5 kg.

### Recommended settings for steaming

| Food                           | Accessory/cook-ware                                    | Height | Type of heating                                                                   | Temperature in °C | Steam level | Cooking time in mins |
|--------------------------------|--------------------------------------------------------|--------|-----------------------------------------------------------------------------------|-------------------|-------------|----------------------|
| Peas, frozen, two containers   | x 2<br>Steam containers, XL size<br>+<br>Universal pan | 5+3+1  |  | 100               | -           | - <sup>1</sup>       |
| Broccoli, fresh, 300 g         | Steam containers, XL size                              | 3      |  | 100 <sup>2</sup>  | -           | 9-10 <sup>3</sup>    |
| Broccoli, fresh, one container | Steam containers, XL size                              | 3      |  | 100 <sup>2</sup>  | -           | 12-13 <sup>3</sup>   |

## Grilling

### Recommended settings for grilling

| Food           | Accessory/cook-ware | Height | Type of heating                                                                     | Temperature in °C/grill setting | Steam level | Cooking time in mins |
|----------------|---------------------|--------|-------------------------------------------------------------------------------------|---------------------------------|-------------|----------------------|
| Toasting bread | Wire rack           | 5      |  | 3 <sup>4</sup>                  | -           | 4-6                  |

# 32 Installation instructions

Observe this information when installing the appliance.



mm



## 32.1 General installation instructions

Follow these instructions before you start installing the appliance.

- The safe operation of this appliance can only be guaranteed if it has been installed to a professional standard in accordance with these installation instructions. The installer

shall be liable for damages incurred as a result of incorrect installation.

- Do not use the door handle for the transport or installation.
- Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.
- Before starting up the appliance, remove any packaging material and adhesive film from the cooking compartment and the door.
- Proceed in accordance with the installation sheets for installing accessories.
- Fitted units must be heat-resistant up to 95 °C, and adjacent unit fronts up to 70 °C.

<sup>1</sup> The test is over when 85 °C is reached at the coldest spot (see IEC 60350-1).


<sup>2</sup> Preheat the appliance.

<sup>3</sup> A comparable degree of cooking between the reference sample and the main sample is achieved if the reference sample is cooked for 5 minutes (produced as described in IEC 60350-1).

<sup>4</sup> Do not preheat the appliance.

- Do not install the appliance behind a decorative door or the door of a kitchen unit. There is a risk of overheating.
- Cut-out work on the units should be carried out before installing the appliance. Remove any shavings. Otherwise, the correct operation of electrical components may be adversely affected.
- Position the appliance on a horizontal surface.
- The mains socket for the appliance must either be located in the hatched area **a** or outside of the area where the appliance is installed.

1 Any unsecured units must be secured to the wall using a standard bracket **b**.

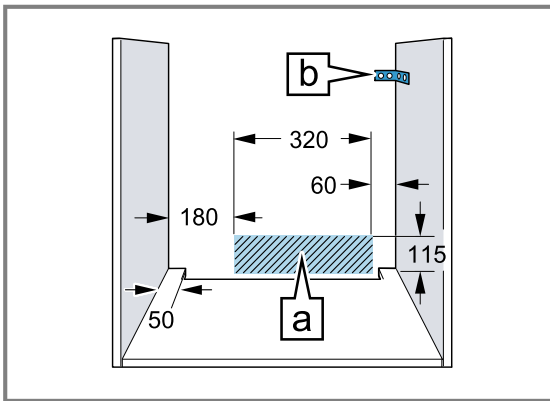

- For appliances that have a hinged switch panel, make sure that the switch panel does not hit adjacent kitchen units when you open it.
- Wear protective gloves so that you do not cut yourself. Parts that are accessible during installation may have sharp edges.
- Dimensions of the figures in mm.

**⚠ WARNING – Risk of electric shock!**

Once the appliance has been installed, the openings in the back panel of the appliance must not be accessible to children, not even through the drawers and kitchen cabinets underneath. This must be ensured through the installation. In the case of an island unit, a closed back panel is required.

**⚠ WARNING – Danger: Magnetism!**



Caution: Magnetism



Caution for people with pacemakers  
Permanent magnets are used in the control panel. These may impair the functionality of

electronic implants, e.g. pacemakers or insulin pumps.

- ▶ Persons with electronic implants must stand at least 10 cm away from the control panel.

**⚠ WARNING – Risk of fire!**

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ▶ Only use adapters and power cords approved by the manufacturer.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.


**ATTENTION**

Carrying the appliance by the door handle could break it. The door handle cannot support the weight of the appliance.

- ▶ Do not carry or hold the appliance by the door handle.


**32.2 Appliance dimensions**

You will find the dimensions of the appliance here

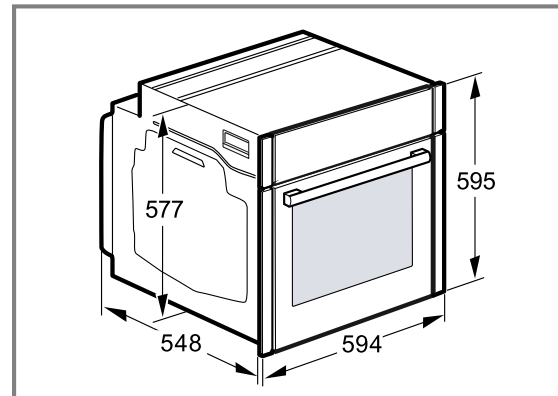

**32.3 Installation below a worktop**

Observe the installation dimensions and the installation instructions when installing below a worktop.

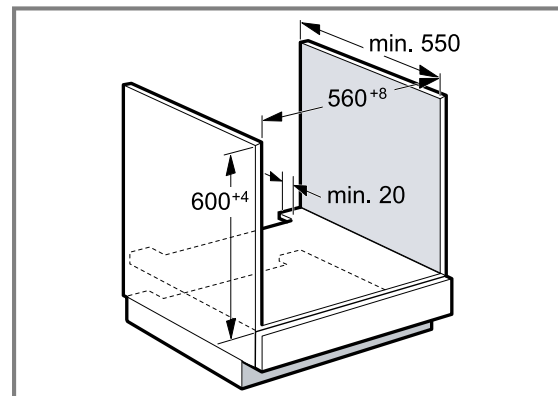


- To ventilate the appliance, the intermediate floor must have a ventilation cut-out.

- The worktop must be secured to the fitted unit.
- Observe any available installation instructions for the hob.
- Observe different national installation instructions for the hob.
- Observe the worktop depth of min. 600 mm.

- When installing under a gas hob, ensure that the appliance does not come into contact with the gas connection of the gas hob.
- If necessary, call a qualified specialist for gas installation.

### 32.4 Installation underneath a hob

If the appliance is installed under a hob, the following minimum dimensions must be adhered to (including substructure, if applicable).

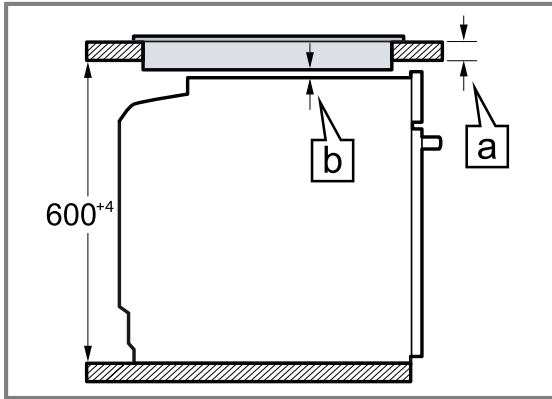


The minimum worktop thickness  $\boxed{a}$  is based on the required minimum clearance  $\boxed{b}$ .

| Hob type                   | a raised in mm | a flush in mm | b in mm        |
|----------------------------|----------------|---------------|----------------|
| Induction hob              | 37             | 38            | 5              |
| Full-surface induction hob | 47             | 48            | 5              |
| Gas hob                    | 27             | 38            | 5 <sup>1</sup> |
| Electric hob               | 27             | 30            | 2              |


### 32.5 Installation in a tall unit

Observe the installation dimensions and the installation instructions when installing in a tall unit.

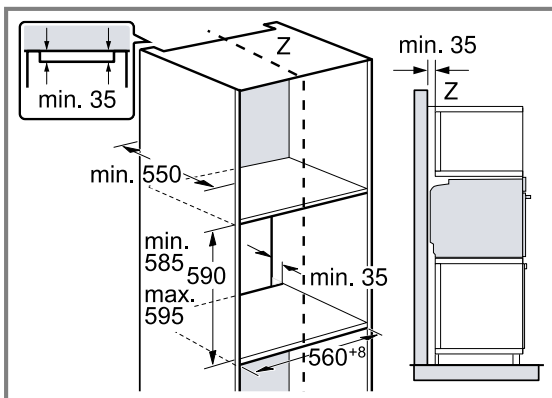

- To ventilate the appliance, the intermediate floors must have a ventilation cut-out.
- Only fit the appliance up to a height which allows accessories to be easily removed.

and the installation instructions when installing appliances on top of each other.

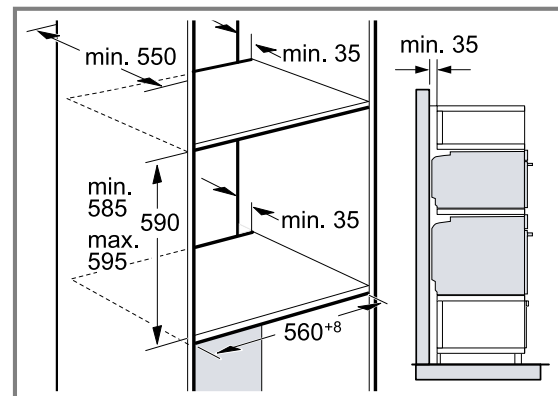


- To ventilate the appliances, the intermediate floor must have a ventilation cut-out.
- To ensure sufficient ventilation of the two appliances, there must be a ventilation opening of at least 200 cm<sup>2</sup> in the base area. To do this, trim the base panel or fit a ventilation grille.

### 32.6 Installing two appliances on top of each other

Your appliance can also be installed above or below another appliance. Observe the installation dimensions

<sup>1</sup> Observe different national installation instructions for the hob.


- Ensure that air exchange is guaranteed in accordance with the diagram.

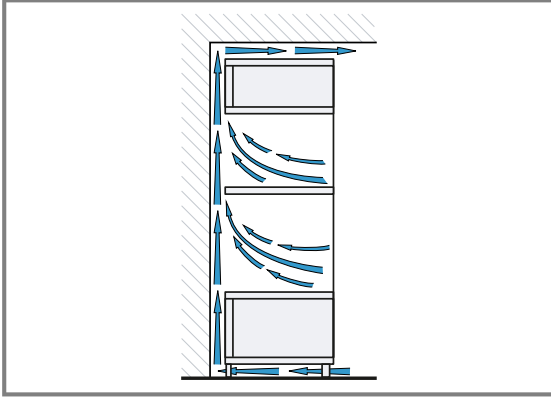

- Only fit appliances up to a height that allows accessories to be easily removed.

### 32.7 Corner installation

Observe the installation dimensions and the installation instructions when installing in a corner.

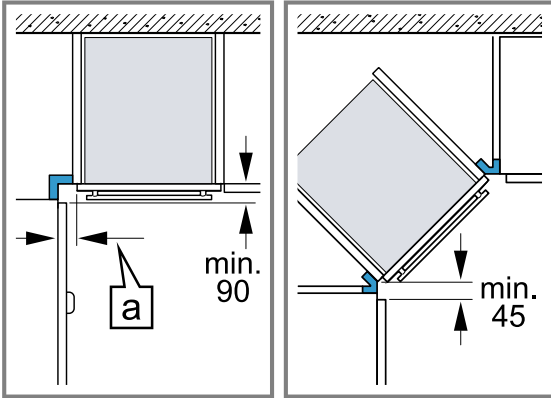


- To ensure that the appliance door can be opened, you must take the minimum dimensions into consideration when installing in a corner. The dimension **a** is dependent on the thickness of the unit front and the handle.

### 32.8 Electrical connection

In order to safely connect the appliance to the electrical system, follow these instructions.

- The appliance corresponds to protection class I and must only be operated with a protective earth connection.
- The fuse protection must correspond to the power rating specified on the appliance's rating plate and to the local regulations.
- The appliance must be disconnected from the power supply whenever installation work is being carried out.
- The appliance must only be connected using the power cable provided.

- The power cable must be plugged in at the rear of the appliance until you hear a clicking sound. A 3 m power cable can be obtained from customer service.

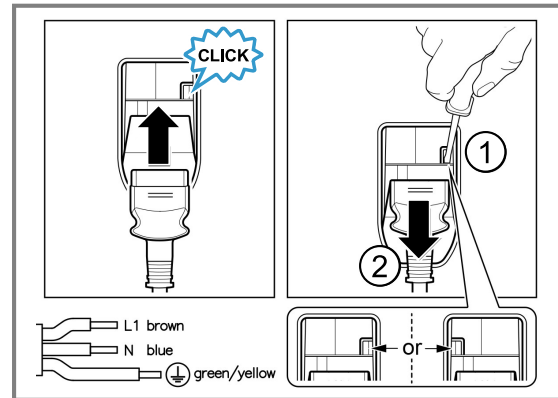

- The power cable must only be replaced with a cable from the original manufacturer. This is available from after-sales service.
- Contact protection must be guaranteed by the installation.
- If the display on the appliance remains dark, it has not been connected correctly. Disconnect the appliance from the mains and check the connection.

#### Electrically connect the appliance with the protective contact plug

**Note:** The appliance must only be connected to a protective contact socket that has been correctly installed.

- ▶ Insert the plug into the protective contact socket. When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.

#### Electrically connecting an appliance without a protective contact plug


**Note:** Only licensed specialists may connect the appliance. Damage caused by incorrect connection is not covered under the warranty.

An isolating switch must be integrated into the permanent electrical installation according to the installation regulations.


1. Identify the phase and neutral conductors in the socket.  
The appliance may be damaged if it is not connected correctly.
2. Connect the hob in accordance with the connection diagram.  
See the rating plate for the voltage.
3. Connect the wires of the mains power cable according to the colour coding:
  - ▶ Green/yellow = Protective conductor ⊕
  - ▶ Blue = Neutral conductor
  - ▶ Brown = Phase (external conductor)

### 32.9 Installing the appliance

1. Slide the appliance in fully and centre it.

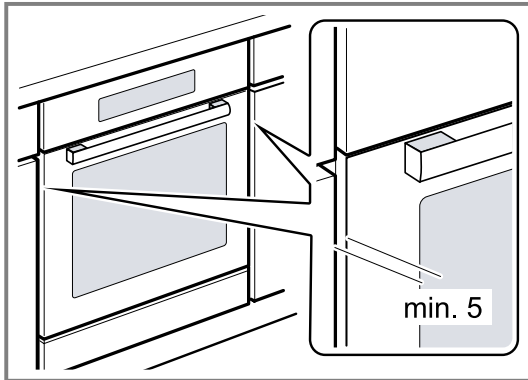


2. Screw the appliance into place.

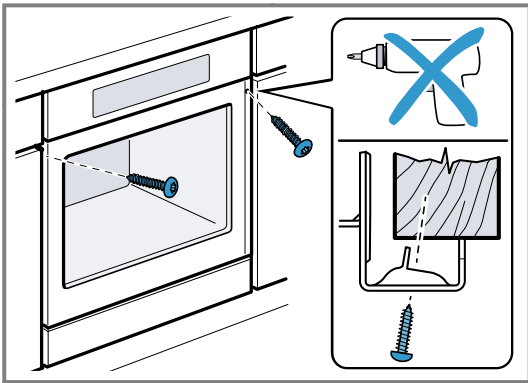

**Note:** The gap between the worktop and the appliance must not be closed by additional battens. Thermal insulation strips must not be fitted to the side panels of the surround unit.


### 32.10 For handleless kitchens with vertical bar handle strips:

1. Attach a suitable filling piece on both sides in order to cover any sharp edges and to guarantee safe installation.

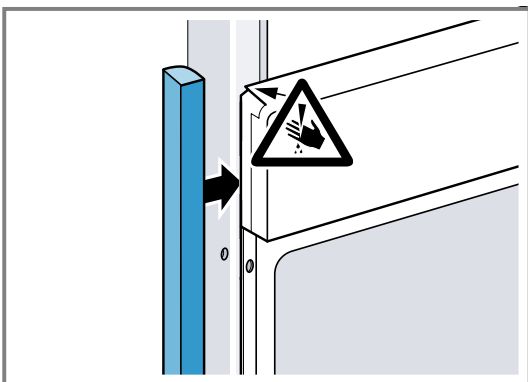


2. Secure the filling piece to the unit.

3. Pre-drill the filling piece and the unit to establish a screw connection.

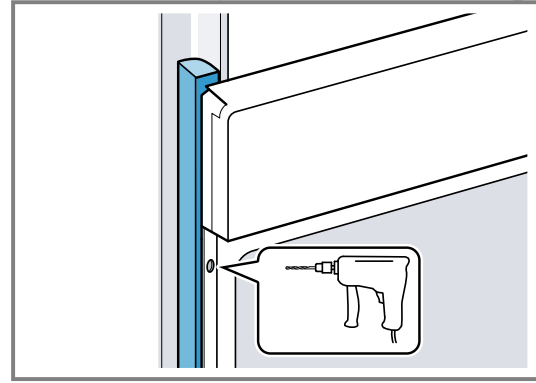

4. Secure the appliance using a suitable screw.

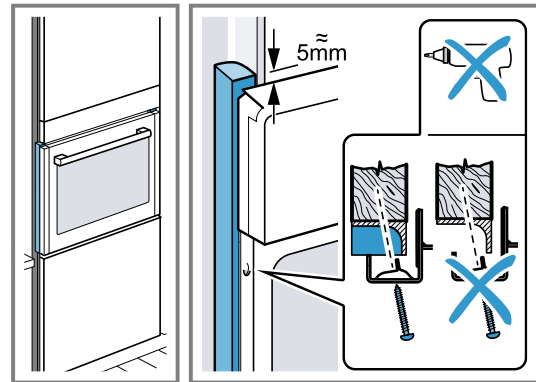

### 32.11 Removing the appliance

1. Disconnect the appliance from the power supply.
2. Undo the fastening screws.
3. Lift the appliance slightly and pull it out completely.



A series of horizontal lines for writing, starting from the top right of the pencil icon and extending across the width of the page. The lines are evenly spaced and cover the majority of the page area.



A series of horizontal lines for writing, starting from the top right of the pencil icon and extending across the width of the page. The lines are evenly spaced and cover the majority of the page area.



## Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- **Expert tips & tricks for your appliance**
- **Warranty extension options**
- **Discounts for accessories & spare-parts**
- **Digital manual and all appliance data at hand**
- **Easy access to Bosch Home Appliances Service**

Free and easy registration – also on mobile phones:  
**[www.bosch-home.com/welcome](http://www.bosch-home.com/welcome)**

**BOSCH**  
HOME APPLIANCES  
**SERVICE**

## Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems  
or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you:

**[www.bosch-home.com/service](http://www.bosch-home.com/service)**

Contact data of all countries are listed in the attached service directory.

### **BSH Hausgeräte GmbH**

Carl-Wery-Straße 34  
81739 München, GERMANY  
[www.bosch-home.com](http://www.bosch-home.com)

A Bosch Company



**9001682735** (050728) REG25

en