Invented for life

BOSCH

800 Series VeroCafe

Key Tips Before Starting

Random units receive additional quality checks, which may result in small amounts of coffee bean residue or water droplets being present upon purchase.

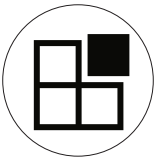

Locate all parts inside the packaging

- Easily remove and empty the **drip tray** by pulling it from the front.
- The **drip plate (grate)** is located inside the Welcome Box. Align the drip plate with the red floater on the drip tray during assembly.

Adjusting the temperature

- Adjust the brewing temperature by pressing the **Settings** button.
- Keep in mind that **beverage temperature** may be affected by the room temperature, water temperature, milk temperature (if taken directly from the fridge), and other factors.

Using the water filter

- Refer to the Water Filter section of the user manual for **instructions on preparing the filter** before use.
- Insert the water filter into the water tank with **the “ring” (marked A-B-C) facing down**. Firmly press the filter down to secure.
- Shop for Original Bosch Mavea® Water Filters (SKU TCZ7003US) on **bosch-home.com/us** or **bosch-home.ca**. Designed specifically for your appliance.

SAMPLE ONLY

Register to activate Bosch | Concierge

- Leave the sticker on your appliance. To register your appliance, simply scan the QR Code. Any time after registration, rescan the QR Code to access warranty information, owner manual, self-help resources, and more.
- Or register online at: **registerbosch.com**

Need help or have questions?
Please call Bosch Customer Support on 1-800-701-5231.

Scan the QR code for more tips

25-BOS-1897 7/25

Des technologies pour la vie

BOSCH

Série 800 VeroCafe

Conseils prédémarrage

Certaines unités sont soumises à des contrôles de qualité supplémentaires, ce qui peut entraîner la présence de petites quantités de grains de café ou de gouttes d'eau lors de l'achat.

Pour trouver toutes les pièces dans l'emballage

- Retirez et videz le plateau d'égouttement en le tirant par l'avant.
- Le **plateau d'égouttement (grille)** se trouve dans le coffret de bienvenue. Alignez le plateau d'égouttement avec le flotteur rouge pendant le montage.

Pour ajuster la température

- Ajustez la température d'infusion en appuyant sur le bouton **Paramètres**.
- Gardez à l'esprit que la **température de la boisson** peut être affectée par la température de la pièce, la température de l'eau, la température du lait (s'il se trouvait tout juste au frigo) et d'autres facteurs.

Pour utiliser le filtre à eau

- Consultez la section « Filtre à eau » du manuel de l'utilisateur pour avoir les **instructions pour préparer le filtre** avant de l'utiliser.
- Insérez le filtre à eau dans le réservoir d'eau avec **« l'anneau » (marqué A-B-C) face vers le bas**. Appuyez fermement sur le filtre pour bien le fixer.
- Achetez les filtres à eau Bosch Mavea® (SKU TCZ7003US) sur **bosch-home.com/us** ou **bosch-home.ca**. Conçus spécifiquement pour votre appareil.

EXEMPLE SEULEMENT

Enregistrez pour activer Bosch | Concierge

- Laissez l'autocollant sur votre appareil. Pour procéder à l'enregistrement de ce dernier, vous n'avez qu'à scanner le code QR qui y figure. Une fois le produit enregistré, vous pourrez scanner le code QR à nouveau, à tout moment, pour accéder aux informations sur la garantie, au manuel d'utilisation, à des ressources d'assistance et plus encore.
- Ou enregistrez-vous en ligne sur : **registerbosch.com**

Besoin d'aide ou questions?
Appelez le service à la clientèle de Bosch au 1-800-701-5231.

Scannez le code QR pour obtenir plus d'astuces