Invented for life

BOSCH

500 Series VeroCafe

Key Tips Before Starting

Random units receive additional quality checks, which may result in small amounts of coffee bean residue or water droplets being present upon purchase.

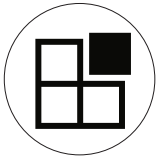

Locate all parts inside the packaging

- Open the machine from the front to remove the **drip tray**. The **drip plate (grate)** can also be taken out for cleaning and should be realigned with the red floater during reassembly.
- The flexible milk hose is located inside the Welcome Box.

Adusting the temperature

- There are 3 coffee temperature settings: **Normal, High, and Max**.
- Press the **Settings** ⚙ button.
- Use the **arrow (▲ or ▼)** keys to navigate and **press OK** to select and save the setting.

Using the water filter

- Refer to the Water Filter section of the user manual for **instructions on preparing the filter** before use.
- Insert the water filter into the water tank with **the “ring” (marked A-B-C) facing down**. Firmly press the filter down to secure.
- Shop for Original Bosch Mavea® Water Filters (SKU TCZ7003US) on **bosch-home.com/us** or **bosch-home.ca**. Designed specifically for your appliance.

SAMPLE ONLY

Register to activate Bosch | Concierge

- Leave the sticker on your appliance. To register your appliance, simply scan the QR Code. Any time after registration, rescan the QR Code to access warranty information, owner manual, self-help resources, and more.
- Or register online at: **registerbosch.com**

Need help or have questions?
Please call Bosch Customer Support on 1-800-701-5231.

Scan the QR code for more tips

Des technologies pour la vie

BOSCH

Série 500 VeroCafe

Conseils prédémarrage

Certaines unités sont soumises à des contrôles de qualité supplémentaires, ce qui peut entraîner la présence de petites quantités de grains de café ou de gouttes d'eau lors de l'achat.

Pour trouver toutes les pièces dans l'emballage

- Ouvrez l'avant de la machine pour retirer le **plateau d'égouttement**. Le **plateau d'égouttement (grille)** peut aussi être retiré pour être nettoyé. Il doit être réaligné avec le flotteur rouge pendant le montage.
- Le tuyau à lait se trouve dans le coffret de bienvenue.

Pour ajuster la température

- Il y a 3 paramètres de température pour le café : **Normal, Élevé et Max**.
- Appuyez sur le bouton ⚙ **Paramètres**.
- Utilisez les **flèches (▲ or ▼)** et **appuyez sur OK** pour sélectionner et enregistrer le paramètre.

Pour utiliser le filtre à eau

- Consultez la section « Filtre à eau » du manuel de l'utilisateur pour avoir les **instructions pour préparer le filtre** avant de l'utiliser.
- Insérez le filtre à eau dans le réservoir d'eau avec **« l'anneau » (marqué A-B-C) face vers le bas**. Appuyez fermement sur le filtre pour bien le fixer.
- Achetez les filtres à eau Bosch Mavea® (SKU TCZ7003US) sur **bosch-home.com/us** ou **bosch-home.ca**. Conçus spécifiquement pour votre appareil.

EXEMPLE SEULEMENT

Enregistrez pour activer Bosch | Concierge

- Laissez l'autocollant sur votre appareil. Pour procéder à l'enregistrement de ce dernier, vous n'avez qu'à scanner le code QR qui y figure. Une fois le produit enregistré, vous pourrez scanner le code QR à nouveau, à tout moment, pour accéder aux informations sur la garantie, au manuel d'utilisation, à des ressources d'assistance et plus encore.
- Ou enregistrez-vous en ligne sur : **registerbosch.com**

Besoin d'aide ou questions?
Appelez le service à la clientèle de Bosch au 1-800-701-5231.

Scannez le code QR pour obtenir plus d'astuces