



HBC84H500
Mikrowelle
Microwave



BOSCH

[de] Gebrauchsanleitung 2

[en] Instruction manual 25

Wichtige Sicherheitshinweise	2	Kindersicherung	12
Ursachen für Schäden	4	Kindersicherung einschalten	12
Aufstellen und Anschließen	5	Kindersicherung ausschalten	12
Ihr neues Gerät	5	Kindersicherung bei der Programmatematik	12
Bedienfeld	5	Grundeinstellungen ändern	12
Tasten	5	Grundeinstellungen	12
Funktionswähler	5	Pflege und Reinigung	12
Temperaturwähler	5	Reinigungsmittel	13
Kühlgebläse	6	Störungstabelle	13
Das Zubehör	6	Störungstabelle	13
Vor dem ersten Benutzen	6	Kundendienst	14
Uhrzeit einstellen	6	E-Nummer und FD-Nummer	14
Backofen aufheizen	6	Technische Daten	14
Zubehör reinigen	6	Acrylamid in Lebensmitteln	14
Backofen einstellen	7	Energie- und Umwelttipps	15
Heizart und Temperatur einstellen	7	Energiesparen	15
Schnellaufheizung	7	Umweltgerecht entsorgen	15
Automatische Sicherheitsabschaltung	7	Für Sie in unserem Kochstudio getestet	15
Die Mikrowelle	7	Auftauen, Erhitzen und Garen mit Mikrowelle	15
Hinweise zum Geschirr	7	Tipps zur Mikrowelle	18
Mikrowellen-Leistungen	8	Kuchen und Gebäck	18
Mikrowelle einstellen	8	Tipps zum Backen	19
Mikrowelle kombiniert mit Backofen	8	Braten und Grillen	20
MikroKombi-Betrieb einstellen	8	Tipps zum Braten und Grillen	22
Programmatematik	9	Aufläufe, Gratins, Toasts	22
Programm einstellen	9	Fertigprodukte, tiefgekühlt	22
Auftauprogramme	9	Prüfgerichte	23
Garprogramme	10		
Kombigarprogramme	10		
Zeitfunktionen einstellen	10		
Wecker einstellen	10		
Dauer einstellen	11		
Uhrzeit einstellen	11		

Weitere Informationen zu Produkten, Zubehör, Ersatzteilen und Services finden Sie im Internet: **www.bosch-home.com** und Online-Shop: **www.bosch-eshop.com**

Für Produktinformationen sowie Anwendungs- und Bedienungsfragen berät Sie unser **Bosch-Infoteam** unter **Tel.: 089 69 339 339** (Mo-Fr: 8.00-18.00 Uhr) Nur für Deutschland gültig.

⚠ Wichtige Sicherheitshinweise

Diese Anleitung sorgfältig lesen. Nur dann können Sie Ihr Gerät sicher und richtig bedienen. Die Gebrauchsanleitung für einen späteren Gebrauch oder für Nachbesitzer aufbewahren.

Dieses Gerät ist nur für den Einbau bestimmt. Spezielle Montageanleitung beachten.

Das Gerät nach dem Auspacken prüfen. Bei einem Transportschaden nicht anschließen.

Nur ein konzessionierter Fachmann darf Geräte ohne Stecker anschließen. Bei Schäden durch falschen Anschluss besteht kein Anspruch auf Garantie.

Dieses Gerät ist nur für den privaten Haushalt und das häusliche Umfeld bestimmt. Das Gerät nur zum Zubereiten von Speisen und Getränken benutzen. Das Gerät während des Betriebes beaufsichtigen. Das Gerät nur in geschlossenen Räumen verwenden.

Dieses Gerät kann von Kindern ab 8 Jahren und Personen mit reduzierten physischen, sensorischen oder mentalen Fähigkeiten oder Mangel an Erfahrung oder Wissen benutzt werden, wenn sie von einer Person, die für ihre Sicherheit verantwortlich ist, beaufsichtigt oder von ihr bezüglich des sicheren Gebrauchs des Gerätes unterwie-

sen wurden und sie die daraus resultierenden Gefahren verstanden haben.

Kinder dürfen nicht mit dem Gerät spielen. Reinigung und Benutzer-Wartung dürfen nicht durch Kinder durchgeführt werden, es sei denn, sie sind 8 Jahre und älter und werden beaufsichtigt.

Kinder jünger als 8 Jahre vom Gerät und der Anschlussleitung fernhalten.

Zubehör immer richtig in den Garraum einsetzen. *Siehe Beschreibung Zubehör* in der Gebrauchsanleitung.

Brandgefahr!

- Im Garraum gelagerte, brennbare Gegenstände können sich entzünden. Nie brennbare Gegenstände im Garraum aufbewahren. Nie die Gerätetür öffnen, wenn Rauch im Gerät auftritt. Das Gerät ausschalten und Netzstecker ziehen oder Sicherung im Sicherungskasten ausschalten.
- Die nicht bestimmungsgemäße Verwendung des Gerätes ist gefährlich und kann Schäden verursachen. Nicht zulässig sind, das Trocknen von Speisen oder Kleidung, das Erwärmen von Pantoffeln, Körner- oder Getreidekissen, Schwämmen, feuchten Putzlappen und Ähnlichem. Zum Beispiel können sich erwärmte Pantoffeln, Körner- oder Getreidekissen auch noch nach Stunden entzünden. Das Gerät nur zum Zubereiten von Speisen und Getränken benutzen.
- Lebensmittel können sich entzünden. Nie Lebensmittel in Warmhalteverpackungen erwärmen. Nie Lebensmittel in Behältern aus Kunststoff, Papier oder anderen brennbaren Materialien unbeaufsichtigt erwärmen. Nie eine viel zu hohe Mikrowellen-Leistung oder -Zeit einstellen. Nach den Angaben in dieser Gebrauchsanleitung richten. Nie Lebensmittel mit Mikrowelle trocknen. Nie Lebensmittel mit geringem Wassergehalt, wie z. B. Brot, mit zu hoher Mikrowellen-Leistung oder -Zeit auftauen oder erwärmen.
- Speiseöl kann sich entzünden. Nie ausschließlich Speiseöl mit Mikrowelle erhitzen.

Explosionsgefahr!

Flüssigkeiten oder andere Nahrungsmittel in fest verschlossenen Gefäßen können explodieren. Nie Flüssigkeiten oder andere

Nahrungsmittel in fest verschlossenen Gefäßen erhitzen.

Gefahr schwerer Gesundheitsschäden!

- Bei mangelhafter Reinigung kann die Oberfläche des Gerätes beschädigt werden. Es kann Mikrowellen-Energie austreten. Gerät regelmäßig reinigen und Nahrungsmittelreste sofort entfernen. Garraum, Türdichtung, Tür und Türanschlag immer sauber halten; siehe auch Kapitel *Pflege und Reinigung*.
- Durch eine beschädigte Garraumtür oder Türdichtung kann Mikrowellen-Energie austreten. Nie das Gerät benutzen, wenn die Garraumtür oder die Türdichtung beschädigt ist. Kundendienst rufen.
- Bei Geräten ohne Gehäuseabdeckung tritt Mikrowellen-Energie aus. Nie die Gehäuseabdeckung entfernen. Bei Wartungs- oder Reparaturarbeit Kundendienst rufen.

Stromschlaggefahr!

- Unsachgemäße Reparaturen sind gefährlich. Nur ein von uns geschulter Kundendienst-Techniker darf Reparaturen durchführen und beschädigte Anschlussleitungen austauschen. Ist das Gerät defekt, Netzstecker ziehen oder Sicherung im Sicherungskasten ausschalten. Kundendienst rufen.
- An heißen Geräteteilen kann die Kabelisolierung von Elektrogeräten schmelzen. Nie Anschlusskabel von Elektrogeräten mit heißen Geräteteilen in Kontakt bringen.
- Eindringende Feuchtigkeit kann einen Stromschlag verursachen. Keinen Hochdruckreiniger oder Dampfreiniger verwenden.
- Eindringende Feuchtigkeit kann einen Stromschlag verursachen. Nie das Gerät großer Hitze und Nässe aussetzen. Das Gerät nur in geschlossenen Räumen verwenden.
- Ein defektes Gerät kann einen Stromschlag verursachen. Nie ein defektes Gerät einschalten. Netzstecker ziehen oder Sicherung im Sicherungskasten ausschalten. Kundendienst rufen.
- Das Gerät arbeitet mit Hochspannung. Nie das Gehäuse entfernen.

Verbrennungsgefahr!

- Das Gerät wird sehr heiß. Nie die heißen Garraum-Innenflächen oder Heizelemente

berühren. Das Gerät immer abkühlen lassen. Kinder fernhalten.

- Zubehör oder Geschirr wird sehr heiß. Heißes Zubehör oder Geschirr immer mit Topflappen aus dem Garraum nehmen.
- Alkoholdämpfe können sich im heißen Garraum entzünden. Nie Speisen mit großen Mengen an hochprozentigen alkoholischen Getränken zubereiten. Nur kleine Mengen hochprozentiger Getränke verwenden. Gerätetür vorsichtig öffnen.
- Lebensmittel mit fester Schale oder Haut können während, aber auch noch nach dem Erwärmen explosionsartig zerplatzen. Nie Eier in der Schale garen oder hartgekochte Eier erwärmen. Nie Schalen- und Krustentiere garen. Bei Spiegeleiern oder Eiern im Glas vorher den Dotter anstechen. Bei Lebensmitteln mit fester Schale oder Haut, wie z. B. Apfel, Tomaten, Kartoffeln oder Würstchen, kann die Schale platzen. Vor dem Erwärmen die Schale oder Haut anstechen.
- Die Hitze in der Babynahrung verteilt sich nicht gleichmäßig. Nie Babynahrung in geschlossenen Gefäßen erwärmen. Immer den Deckel oder den Sauger entfernen. Nach dem Erwärmen gut umrühren oder schütteln. Temperatur überprüfen, bevor Sie dem Kind die Nahrung geben.
- Erhitzte Speisen geben Wärme ab. Das Geschirr kann heiß werden. Geschirr oder Zubehör immer mit einem Topflappen aus dem Garraum nehmen.
- Bei luftdicht verschlossenen Lebensmitteln kann die Verpackung platzen. Immer die Angaben auf der Verpackung beachten. Gerichte immer mit einem Topflappen aus dem Garraum nehmen.

Verbrühungsgefahr!

- Beim Öffnen der Gerätetür kann heißer Dampf entweichen. Gerätetür vorsichtig öffnen. Kinder fernhalten.
- Durch Wasser im heißen Garraum kann heißer Wasserdampf entstehen. Nie Wasser in den heißen Garraum gießen.
- Beim Erhitzen von Flüssigkeiten kann es zu Siedeverzug kommen. Das heißt, die Siedetemperatur wird erreicht, ohne dass die typischen Dampfblasen aufsteigen. Schon bei geringer Erschütterung des Gefäßes kann die heiße Flüssigkeit plötzlich heftig überkochen und verspritzen. Beim Erhitzen immer einen Löffel mit in

das Gefäß geben. So wird der Siedeverzug vermieden.

Verletzungsgefahr!

- Zerkratztes Glas der Gerätetür kann springen. Keinen Glasschaber, scharfe oder scheuernde Reinigungsmittel benutzen.
- Ungeeignetes Geschirr kann bersten. Geschirr aus Porzellan und Keramik kann feine Löcher in Griffen und Deckel haben. Hinter diesen Löchern verbirgt sich ein Hohlraum. In den Hohlraum eingedrungene Feuchtigkeit kann das Geschirr zum Bersten bringen. Nur mikrowellengeeignetes Geschirr verwenden.

Ursachen für Schäden

Achtung!

- Funkenbildung: Metall - z. B. der Löffel im Glas - muss mindestens 2 cm von den Backofenwänden und der Türinnenseite entfernt sein. Funken könnten das innere Türglas zerstören.
- Wasser im heißen Garraum: Nie Wasser in den heißen Garraum gießen. Es entsteht Wasserdampf. Durch den Temperaturwechsel können Schäden entstehen.
- Feuchte Lebensmittel: Keine feuchten Lebensmittel längere Zeit im geschlossenen Garraum aufbewahren. Lagern Sie keine Speisen im Gerät. Dies kann zu Korrosionen führen.
- Auskühlen mit offener Gerätetür: Den Garraum nur geschlossen auskühlen lassen. Nichts in die Gerätetür einklemmen. Auch wenn die Tür nur einen Spalt breit offen ist, können benachbarte Möbelfronten mit der Zeit beschädigt werden.
- Stark verschmutzte Dichtung: Wenn die Dichtung stark verschmutzt ist, schließt die Gerätetür bei Betrieb nicht mehr richtig. Die angrenzenden Möbelfronten können beschädigt werden. Dichtung immer sauber halten.
- Mikrowellenbetrieb ohne Speisen: Der Betrieb des Gerätes ohne Speisen im Garraum führt zur Überlastung. Nie das Gerät ohne Speisen im Garraum einschalten. Ausgenommen ist ein kurzzeitiger Geschirrttest siehe Kapitel Mikrowelle, Geschirr.
- Gerätetür als Sitz- oder Ablagefläche: Nicht auf die offene Gerätetür stellen oder setzen. Kein Geschirr oder Zubehör auf der Gerätetür abstellen.
- Gerät transportieren: Gerät nicht am Türgriff tragen oder halten. Der Türgriff hält das Gewicht des Gerätes nicht aus und kann abbrechen.
- Mikrowellen-Popcorn: Nie eine zu hohe Mikrowellen-Leistung einstellen. Maximal 600 Watt verwenden. Die Popcorntüte immer auf einen Glasteller legen. Die Scheibe kann durch Überbelastung springen.
- Übergekochte Flüssigkeit darf nicht durch den Drehtellerantrieb in das Innere des Gerätes gelangen. Garvorgang beobachten. Zunächst eine kürzere Gardauer verwenden und wenn nötig Gardauer verlängern.
- Nie das Mikrowellengerät ohne Drehteller benutzen.

Aufstellen und Anschließen

Beachten Sie bitte die spezielle Montageanleitung.

Das Gerät ist steckerfertig und darf nur an eine vorschriftsmäßig installierte Schutzkontaktsteckdose angeschlossen werden. Die Absicherung muss 16 Ampere (L- oder B-Automat) betragen. Die Netzspannung muss der auf dem Typenschild angegebenen Spannung entsprechen.

Das Verlegen der Steckdose oder der Austausch der Anschlussleitung darf nur vom Elektrofachmann ausgeführt werden. Wenn der Stecker nach dem Einbau nicht mehr erreichbar ist, muss installationsseitig eine allpolige Trennvorrichtung mit einem Kontaktabstand von mindestens 3 mm vorhanden sein.

Mehrfachstecker, Steckerleisten und Verlängerungen dürfen Sie nicht benutzen. Bei Überlastung besteht Brandgefahr.

Ihr neues Gerät

Hier lernen Sie Ihr neues Gerät kennen. Wir erklären Ihnen das Bedienfeld und die einzelnen Bedienelemente. Sie erhalten Informationen zum Garraum und zum Zubehör.

Bedienfeld



Tasten

Mit den Tasten stellen Sie verschiedene Funktionen ein. In der Anzeige können Sie die eingestellten Werte ablesen.

Symbol	Funktion der Taste
90	Mikrowellen-Leistung 90 Watt wählen
180	Mikrowellen-Leistung 180Watt wählen
360	Mikrowellen-Leistung 360 Watt wählen
600	Mikrowellen-Leistung 600 Watt wählen
900	Mikrowellen-Leistung 900 Watt wählen
»»»	Schnellaufheizung wählen
kg	Gewicht wählen
⌚	Menü Zeitfunktionen öffnen und schließen
🔑	Kindersicherung wählen
– Minus	Einstellwerte verringern
+ Plus	Einstellwerte erhöhen
▶▶	kurz drücken: Betrieb starten/anhalten lang drücken: Betrieb abbrechen

Funktionswähler

Mit dem Funktionswähler stellen Sie die Heizart ein.

Stellung	Verwendung
0 Nullstellung	Der Backofen ist ausgeschaltet.
🔥 Mikrowelle	Mikrowellenbetrieb wählen.
🍞 Heißluft	Zum Backen von Rührkuchen in Formen, Biskuit- und Quarktorte sowie Kuchen, Pizza und Kleingeback auf dem Backblech.

Stellung	Verwendung
🍗 Umluftgrill	Geflügel wird knusprig braun. Aufläufe und Überbackenes gelingen Ihnen damit am besten.
🍕 Pizzastufe	Für Tiefkühl-Fertigprodukte und für Gerichte, die viel Wärme von unten benötigen.
🔥 Grill	Wählen Sie zwischen den Stufen stark, mittel oder schwach. Sie können mehrere Steaks, Würstchen, Fische oder Toasts grillen.
P Programme	4 Auftauprogramme 11 Garprogramme Heizart und Dauer sind je nach Gewicht festgelegt.

Hinweise

- Wenn Sie einstellen, leuchtet die Anzeigelampe über dem Funktionswähler.
- Nach dem Drücken der Taste ▶▶ schaltet sich die Backofenlampe im Garraum ein.

Temperaturwähler

Mit dem Temperaturwähler stellen Sie die Temperatur oder Grillstufe ein.

Stellung	Verwendung
● Nullstellung	Backofen heizt nicht.
50, 100-230	Temperaturbereich Temperatur in °C
1, 2, 3	Grillstufen 1 = schwach 2 = mittel 3 = stark

Kühlgebläse


Ihr Gerät hat ein Kühlgebläse. Das Kühlgebläse schaltet sich bei Betrieb ein. Die warme Luft entweicht über der Tür.

Nach dem Betrieb läuft das Kühlgebläse eine bestimmte Zeit lang nach.

Achtung!

Die Lüftungsschlitze nicht abdecken. Das Gerät überhitzt sonst.

Das Zubehör

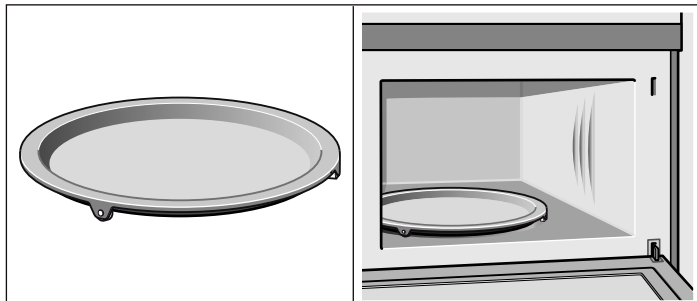

Drehteller

Als Stellfläche für die Roste.
Speisen, die besonders viel Wärme von unten benötigen, können Sie direkt auf dem Drehteller zubereiten.

Der Drehteller dreht sich nach links oder rechts. Er ist schnittfest. Sie können Pizza direkt auf dem Drehteller in Stücke schneiden.

- Benutzen Sie das Gerät nie ohne Drehteller.
- Belasten Sie den Drehteller max. mit 5 kg.
- Der Drehteller muss sich bei allen Heizarten drehen.


Niedriger Rost

Für die Mikrowelle und zum Backen und Braten im Backofen.

Hoher Rost

Zum Grillen von z. B. Steaks, Würstchen und Toast.


Als Stellfläche für flache Auflaufformen.

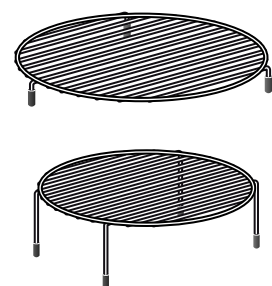

Drehteller einsetzen

Setzen Sie den Drehteller mit den Rollen "A", wie im Bild, auf den Mitnehmer "B" in der Mitte des Garraumbodens.

Der Drehteller muss gerade auf dem Mitnehmer sitzen.

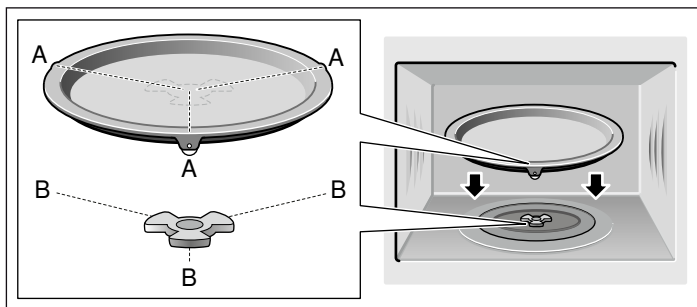

Vor dem ersten Benutzen

Hier erfahren Sie was Sie tun müssen, bevor Sie mit Ihrem Backofen zum ersten Mal Speisen zubereiten. Lesen Sie vorher das Kapitel *Sicherheitshinweise*.

Uhrzeit einstellen

Nach dem Anschluss leuchten in der Anzeige drei Nullen und die Symbole ► ⌚. Stellen Sie die Uhrzeit ein.

1. Taste **+** oder **-** drücken.
Vorschlagswert **+**: 12:00
Vorschlagswert **-**: 23:59
2. Mit Taste **+** oder **-** die Uhrzeit einstellen.
3. Taste **⌚** drücken.
Die Uhrzeit ist eingestellt.

Hinweis: Um den Stand by-Verbrauch Ihres Gerätes zu senken können Sie die Uhrzeit ausblenden. Sehen Sie dazu im Kapitel *Grundeinstellungen ändern* nach.

Backofen aufheizen

Um den Neugeruch zu beseitigen, heizen Sie den leeren, geschlossenen Backofen auf. Ideal dafür ist eine Stunde bei Heißluft mit 180 °C. Achten Sie darauf, dass keine Verpackungsreste im Garraum sind.

1. Mit dem Funktionswähler Heißluft einstellen.
2. Mit dem Temperaturwähler 180 °C einstellen.
3. Taste drücken.

Der Backofen beginnt zu heizen.

Nach einer Stunde den Backofen ausschalten. Dazu den Funktionswähler auf die Nullstellung drehen.

Zubehör reinigen

Bevor Sie das Zubehör das erste Mal benutzen, reinigen Sie es gründlich mit heißer Spüllauge und einem weichen Spültuch.


Backofen einstellen

Sie haben verschiedene Möglichkeiten Ihren Backofen einzustellen. Hier erklären wir Ihnen, wie Sie Ihre gewünschte Heizart und Temperatur oder Grillstufe einstellen. Sie können für Ihr Gericht die Dauer am Backofen einstellen. Sehen Sie dazu bitte im Kapitel *Zeitfunktionen einstellen* nach.


Heizart und Temperatur einstellen

Beispiel im Bild: Heißluft  bei 200 °C.

1. Mit dem Funktionswähler die Heizart einstellen.

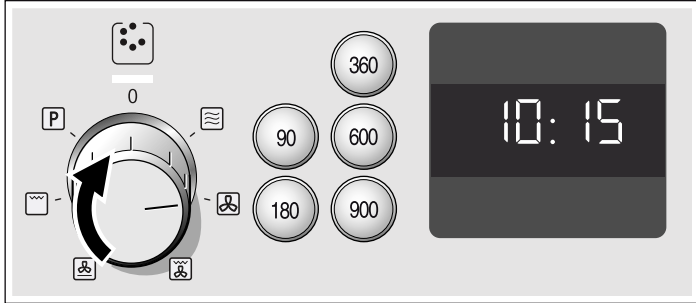

2. Mit dem Temperaturwähler die Temperatur oder Grillstufe einstellen.

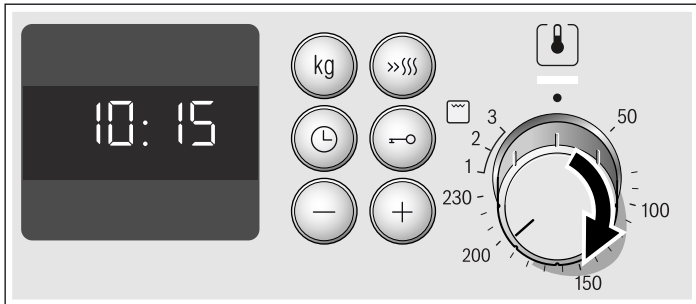

3. Taste  drücken.

Der Backofen beginnt zu heizen.

Backofentür öffnen während der Betrieb abläuft

Der Betrieb wird angehalten. Nach dem Schließen der Tür Taste  drücken. Der Betrieb läuft weiter.

Betrieb anhalten

Taste  drücken der Betrieb ist angehalten. Taste  drücken, der Betrieb läuft weiter.

Backofen ausschalten

Funktionswähler auf die Nullstellung drehen.

Einstellungen ändern

Sie können Heizart und Temperatur oder Grillstufe jederzeit mit dem jeweiligen Wähler ändern.

Schnellaufheizung

Mit der Schnellaufheizung erreicht Ihr Backofen die eingestellte Temperatur besonders schnell.

Verwenden Sie die Schnellaufheizung bei eingestellten Temperaturen über 100 °C. Für folgende Heizarten ist die Schnellaufheizung verfügbar:

-  Heißluft
-  Pizzastufe
-  Umluftgrill

Damit Sie ein gleichmäßiges Garergebnis erhalten, geben Sie Ihr Gericht erst in den Garraum, wenn die Schnellaufheizung beendet ist.

1. Heizart und Temperatur einstellen.

2. Taste  drücken.

In der Anzeige leuchtet das Symbol .

3. Taste  drücken.

Der Backofen beginnt zu heizen.

Schnellaufheizung ist beendet

Ein Signal ertönt. Das Symbol  in der Anzeige erlischt. Geben Sie Ihr Gericht in den Backofen.

Schnellaufheizung abbrechen

Taste  drücken. Das Symbol  in der Anzeige erlischt.

Automatische Sicherheitsabschaltung

Die Automatische Sicherheitsabschaltung wird aktiviert, wenn das Gerät ohne eingestellte Dauer für längere Zeit in Betrieb ist. Wann sich Ihr Gerät abschaltet, ist abhängig von der eingestellten Betriebsart und Temperatur.

Beispiel: Wenn Sie den Backofen mit Heißluft bei 160 °C betreiben, schaltet er sich nach ca. 5 Stunden automatisch ab.

Im Anzeigefeld erscheint **E2**. Das Gerät schaltet ab. Drücken Sie zum Quittieren die Taste .

Die Mikrowelle

Mikrowellen werden in Lebensmitteln in Wärme umgewandelt. Die Mikrowelle können Sie solo, d. h. allein oder kombiniert mit einer anderen Heizart einsetzen. Sie erhalten Informationen zum Geschirr und können nachlesen, wie Sie die Mikrowelle einstellen.

Hinweis:

Im Kapitel *Für Sie in unserem Kochstudio getestet* finden Sie Beispiele zum Auftauen, Erhitzen und Garen mit Mikrowelle.

Hinweise zum Geschirr

Geeignetes Geschirr

Geeignet ist hitzebeständiges Geschirr aus Glas, Glaskeramik, Porzellan, Keramik oder temperaturfestem Kunststoff. Diese Materialien lassen Mikrowellen durch.

Sie können auch Serviergeschirr verwenden. So sparen Sie sich das Umfüllen. Benutzen Sie Geschirr mit Gold- oder Silberdekor nur, wenn der Hersteller garantiert, dass es für Mikrowellen geeignet ist.

Ungeeignetes Geschirr

Ungeeignet ist Metallgeschirr. Metall lässt Mikrowellen nicht durch. Die Speisen bleiben in geschlossenen Metallgefäßen kalt.

Achtung!

Funkenbildung: Metall - z. B. der Löffel im Glas - muss mindestens 2 cm von den Backofenwänden und der Türinnenseite entfernt sein. Funken könnten das innere Türglas zerstören.

Geschirrtest

Nie die Mikrowelle ohne Speisen einschalten. Einzige Ausnahme ist der nachfolgende Geschirrtest.

Wenn Sie unsicher sind, ob Ihr Geschirr mikrowelleneeignet ist, machen Sie diesen Test:

1. Leeres Geschirr für ½ bis 1 Minute bei maximaler Leistung in das Gerät stellen.
2. Zwischendurch die Temperatur prüfen.
Das Geschirr soll kalt oder handwarm sein.
Wird es heiß oder entstehen Funken, ist es ungeeignet.

Mikrowellen-Leistungen

Mit den Tasten stellen Sie die gewünschte Mikrowellen-Leistung ein.

90 W	zum Auftauen empfindlicher Speisen
180 W	zum Auftauen und Weitergaren
360 W	zum Garen von Fleisch und zum Erwärmen empfindlicher Speisen
600 W	zum Erhitzen und Garen von Speisen
900 W	zum Erhitzen von Flüssigkeiten

Hinweise

- Wenn Sie eine Taste drücken, leuchtet die gewählte Leistung.
- Die Mikrowellen-Leistung 900 Watt können Sie für maximal 30 Minuten einstellen. Bei allen anderen Leistungen ist eine Dauer bis 1 Stunde und 30 Minuten möglich.

Mikrowelle einstellen

Beispiel: Mikrowellen-Leistung 600 W, Dauer 17 Minuten.

1. Den Funktionswähler auf stellen.

2. Taste für die gewünschte Mikrowellen-Leistung drücken.
Die Leistung 600 W leuchtet und eine Vorschlagsdauer wird angezeigt.
3. Mit der Taste **+** oder **-** die Dauer einstellen.
4. Taste drücken.
Der Betrieb startet. Die Dauer läuft sichtbar ab.

Die Dauer ist abgelaufen

Ein Signal ertönt. Der Mikrowellenbetrieb ist beendet. Den Funktionswähler auf die Nullstellung drehen. Sie können den Signalton vorzeitig mit Taste löschen.

Backofentür zwischendurch öffnen

Der Betrieb wird angehalten. Nach dem Schließen der Tür Taste kurz drücken. Der Betrieb läuft weiter.

Dauer ändern

Das ist jederzeit möglich. Mit der Taste **+** oder **-** Dauer verändern.

Mikrowellen-Leistung ändern

Taste für die neue Mikrowellen-Leistung drücken. Mit der Taste **+** oder **-** die Dauer einstellen und wieder starten.

Betrieb anhalten

Taste drücken der Betrieb ist angehalten. Taste drücken, der Betrieb läuft weiter.

Betrieb abbrechen

Taste ca. 4 Sekunden lang gedrückt halten und den Funktionswähler auf die Nullstellung drehen.

Hinweise

- Wenn Sie den Funktionswähler auf stellen, leuchtet immer als Vorschlag die höchste Mikrowellen-Leistung.
- Wenn Sie die Gerätetür zwischendurch öffnen, kann das Gebläse weiterlaufen.

Mikrowelle kombiniert mit Backofen

Verwenden Sie die Mikrowelle gleichzeitig mit einer Betriebsart des Backofens. Die Gerichte werden knusprig und braun wie im Backofen, aber es geht schneller.

Sie können alle Leistungsstufen der Mikrowelle bis 600 W mit den Betriebsarten des Backofens kombinieren.

Beachten Sie die Hinweise zum Geschirr im Kapitel: *Mikrowelle*.

MikroKombi-Betrieb einstellen

Beispiel: Mikrowelle 360 W, 17 Minuten und Heißluft 190 °C.

1. Mit dem Funktionswähler die Heizart und dem Temperaturwähler die Temperatur einstellen.
2. Taste für die gewünschte Mikrowellen-Leistung drücken.
Eine Vorschlagsdauer erscheint.
3. Mit der Taste **+** oder **-** die Dauer einstellen.
4. Taste drücken.

Der Betrieb startet. Die Dauer läuft sichtbar ab.

Die Dauer ist abgelaufen

Ein Signal ertönt. Der Kombibetrieb ist beendet. Sie können den Signalton vorzeitig mit Taste löschen.

Backofentür zwischendurch öffnen

Der Betrieb wird angehalten. Nach dem Schließen der Tür Taste kurz drücken. Der Betrieb läuft weiter.

Betrieb anhalten

Taste kurz drücken. Der Backofen ist im Pause-Zustand. Erneut drücken, der Betrieb läuft weiter.

Dauer ändern

Das ist jederzeit möglich. Mit der Taste **+** oder **-** Dauer verändern.

Mikrowellen-Leistung ändern

Taste für die neue Mikrowellen-Leistung drücken. Mit der Taste **+** oder **-** die Dauer einstellen und wieder starten.

Betrieb abbrechen

Taste ca. 4 Sekunden lang gedrückt halten, und den Funktionswähler auf die Nullstellung zurück drehen.

Programmautomatik


Mit der Programmautomatik können Sie ganz einfach Speisen zubereiten. Sie wählen das Programm und geben das Gewicht Ihrer Speise ein. Die optimale Einstellung übernimmt die Programmautomatik. Sie können unter 15 Programmen auswählen.

Stellen Sie die Lebensmittel immer in den kalten Garraum.


Programm einstellen

Wenn Sie ein Programm gewählt haben, stellen Sie den Backofen ein. Der Temperaturwähler muss auf der Nullstellung sein. Beispiel im Bild: Programm 2 mit 1 Kilogramm Gewicht.

1. Den Funktionswähler auf Programmautomatik **P** stellen.
In der Anzeige erscheint die erste Programmnummer.

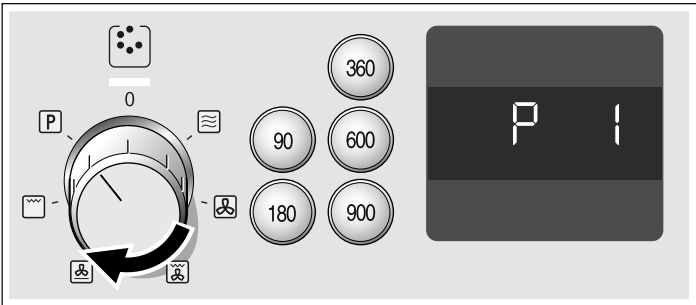

2. Mit Taste **+** oder **-** die Programmnummer wählen.

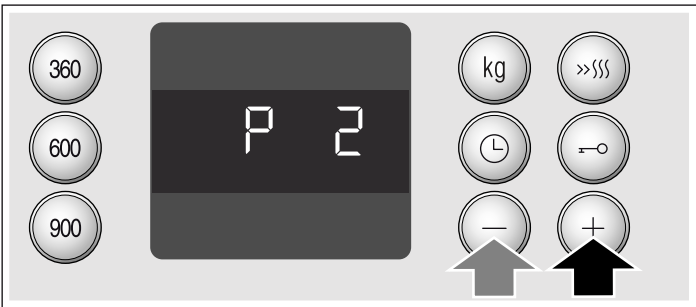

3. Taste **kg** drücken. In der Anzeige erscheint als Gewichtsvorschlag 0,50 Kilogramm.



4. Mit Taste **+** oder **-** das Gewicht einstellen.



5. Taste **▷|||** drücken. Das Programm startet. Die Dauer läuft sichtbar ab und die Symbole **▶** und **I→I** erscheinen.

Programm ist beendet

Ein Signal ertönt. Das Programm ist beendet, der Backofen heizt nicht mehr.
Taste **▷|||** drücken und den Funktionswähler auf die Nullstellung drehen.

Programm ändern

Nach dem Start kann die Programmnummer und das Gewicht nicht mehr geändert werden.

Signal vorzeitig ausschalten

Taste **⌚** drücken.

Backofentür zwischendurch öffnen

Der Betrieb wird angehalten. Nach dem Schließen der Tür Taste **▷|||** kurz drücken. Der Betrieb läuft weiter.

Betrieb anhalten

Taste **▷|||** kurz drücken. Der Backofen ist im Pause-Zustand. Erneut **▷|||** drücken, der Betrieb läuft weiter.

Programm abbrechen

Taste **▷|||** ca. 4 Sekunden lang gedrückt halten und den Funktionswähler auf die Nullstellung drehen. Der Backofen ist ausgeschaltet.

Dauer und Endezeit ändern

Bei der Programmautomatik können Sie Dauer und Endezeit nicht ändern.

Auftauprogramme

Mit den 4 Auftauprogrammen können Sie Fleisch, Geflügel und Brot auftauen.

Hinweise

■ Lebensmittel vorbereiten

Verwenden Sie Lebensmittel, die möglichst flach und portionsgerecht bei -18 °C eingefroren und gelagert wurden. Nehmen Sie das Lebensmittel zum Auftauen grundsätzlich aus der Verpackung und wiegen Sie es ab. Das Gewicht benötigen Sie zum Einstellen des Programmes.

- Beim Auftauen von Fleisch und Geflügel entsteht Flüssigkeit. Diese beim Wenden entfernen und in keinem Fall weiterverwenden oder mit anderen Lebensmitteln in Berührung bringen.

■ Geschirr

Geben Sie das Lebensmittel auf ein mikrowellengeeignetes, flaches Geschirr, z. B. einen Glas- oder Porzellanteller und legen Sie keinen Deckel auf.

- Beim Auftauen von Hähnchen und Hähnchenteilen (P03) ertönt das Signal zum Wenden zweimal.

■ Ruhezeit

Das aufgetaute Lebensmittel sollte zum Temperatúrausgleich noch 10 bis 30 Minuten ruhen. Große Fleischstücke benötigen eine längere Ruhezeit als kleine. Flache Stücke und Hackfleisch sollten Sie vor der Ruhezeit voneinander trennen. Danach können Sie die Lebensmittel weiter verarbeiten, auch wenn dicke Fleischstücke evtl. noch einen gefrorenen Kern haben. Bei Geflügel können Sie jetzt die Innereien herausnehmen.

Programm-Nr.	Gewichtsbereich in kg	
	Auftauen	
P 01	Hackfleisch	0,20 - 1,00
P 02	Fleischstücke	0,20 - 1,00

Programm-Nr.		Gewichtsbereich in kg
P 03	Hähnchen, Hähnchenteile	0,40 - 1,80
P 04	Brot	0,20 - 1,00

Garprogramme

Mit den 3 Garprogrammen können Sie Reis, Kartoffeln oder Gemüse garen.

Hinweise

■ Lebensmittel vorbereiten

Wiegen Sie das Lebensmittel ab. Das Gewicht benötigen Sie zum Einstellen des Programmes.

■ Geschirr

Garen Sie das Lebensmittel in einem mikrowellengeeigneten Geschirr mit Deckel. Für Reis sollten Sie eine große, hohe Form benutzen. Stellen Sie das Geschirr auf den niedrigen Rost.

Reis (P05)

Hinweis: Verwenden Sie keinen Kochbeutel-Reis. Reis schäumt beim Garen stark. Stellen Sie das Rohgewicht (ohne Flüssigkeit) ein. Die zwei- bis zweieinhalbfache Menge Flüssigkeit zum Reis geben.

Kartoffeln (P06)

Hinweis: Salzkartoffeln:

Schneiden Sie diese in gleich große Stücke. Pro 100 g Kartoffeln 1 Esslöffel Wasser und etwas Salz zugeben.

Gemüse (P07)

Hinweise

■ frisches Gemüse:

In gleich große Stücke schneiden. 1 Esslöffel Wasser pro 100 g Gemüse zugeben.

■ Ruhezeit

Wenn das Programm abgelaufen ist, rühren Sie das Lebensmittel noch einmal um. Zum Temperatúrausgleich sollte es noch 5-10 Minuten ruhen.

Die Garergebnisse sind abhängig von Lebensmittelqualität und -beschaffenheit.

Programm-Nr.		Gewichtsbereich in kg
Garen		
05	Reis	0,05 - 0,20
06	Kartoffel	0,15 - 1,00

Programm-Nr.		Gewichtsbereich in kg
07	Gemüse	0,15 - 1,00

Kombigarprogramme

Hinweise

■ Nehmen Sie das Lebensmittel aus der Verpackung und wiegen Sie es ab. Wenn Sie das genaue Gewicht nicht eingeben können, runden Sie es auf bzw. ab.

■ Geschirr

Garen Sie die Lebensmittel in einem nicht zu großen hitzebeständiges Geschirr, das mikrowellengeeignet ist. Stellen Sie das Geschirr auf den niedrigen Rost.

Lamm, medium (P12)

Geeignet ist Lammfleisch aus der Schulter oder Lammkeule ohne Knochen.

Hackbraten (P13)

Das Programm ist geeignet für Hackbraten nicht höher als 7 cm.

Fisch, ganz (P14)

Ritzen Sie die Fischhaut vorher ein. Legen Sie den Fisch in "Schwimmposition" in das Geschirr.

Reiseintopf (P15)

Geben Sie nur das Reisgewicht ein. Geeignet sind Reiseintöpfe mit Gemüse, Fisch oder Geflügelfleisch. Verwenden Sie nur frische Zutaten. Verwenden Sie ein hohes Geschirr mit Deckel.

Ruhezeit

Das Lebensmittel sollte nach Ablauf des Programmes noch ca. 5-10 Minuten zum Temperatúrausgleich ruhen.

Programm-Nr.		Gewichtsbereich in kg
Kombi-Garen		
08	Auflauf, gefroren* (bis 3 cm hoch)	0,40 - 1,20
09	Hähnchen, ganz*	0,50 - 2,00
10	Roastbeef medium*	0,50 - 1,50
11	Schweinenackenbraten	0,50 - 2,00
12	Lamm, medium	0,80 - 2,00
13	Hackbraten*	0,50 - 1,50
14	Fisch, ganz*	0,30 - 1,00
15	Reiseintopf aus frischen Zutaten	0,05 - 0,20

* Verwenden Sie Geschirr ohne Deckel

Zeitfunktionen einstellen

Ihr Backofen hat verschiedene Zeitfunktionen. Mit Taste  rufen Sie das Menü auf und wechseln zwischen den einzelnen Funktionen. Solange Sie einstellen können leuchten alle Zeitsymbole. Der Pfeil ► zeigt Ihnen, bei welcher Zeitfunktion Sie sich befinden. Eine bereits eingestellte Zeitfunktion können Sie direkt mit Taste + oder - ändern, wenn vor dem Zeitsymbol der Pfeil ► steht.

Wecker einstellen

Den Wecker können Sie wie einen Küchenwecker benutzen. Er läuft unabhängig vom Backofen. Der Wecker hat ein eigenes Signal. So hören Sie, ob der Wecker oder eine Dauer abgelaufen ist.

1. Taste  einmal drücken.

In der Anzeige leuchten die Zeitsymbole, der Pfeil ► steht vor .

2. Mit Taste + oder - die Weckerzeit einstellen.

Vorschlagswert Taste + = 10 Minuten

Vorschlagswert Taste - = 5 Minuten

Nach wenigen Sekunden wird die eingestellte Zeit übernommen. Der Wecker startet. In der Anzeige leuchtet das Symbol ►  und die Weckerzeit läuft sichtbar ab. Die anderen Zeitsymbole erlöschen.

Weckerzeit ist abgelaufen

Ein Signal ertönt. In der Anzeige steht 0:00. Mit Taste  den Wecker ausschalten.

Weckerzeit ändern

Mit Taste **+** oder **-** die Weckerzeit ändern. Nach wenigen Sekunden wird die Änderung übernommen.

Weckerzeit löschen

Mit Taste **-** die Weckerzeit zurückstellen bis auf 0:00. Nach wenigen Sekunden wird die Änderung übernommen. Der Wecker ist ausgeschaltet.

Zeiteinstellungen abfragen

Wenn mehrere Zeitfunktionen eingestellt sind, leuchten die entsprechenden Symbole in der Anzeige. Der Wecker läuft im Vordergrund. Vor dem Symbol  steht der Pfeil  und die Weckerzeit läuft sichtbar ab.

Um Wecker , Dauer  oder Uhrzeit  abzufragen, Taste  so oft drücken, bis der Pfeil vor dem jeweiligen Symbol steht. Der Wert dazu erscheint für einigen Sekunden in der Anzeige.

Dauer einstellen

Sie können die Gardauer Ihres Gerichts am Backofen einstellen. Wenn die Dauer abgelaufen ist, schaltet der Backofen automatisch aus. So müssen Sie andere Arbeiten nicht unterbrechen, um den Backofen auszuschalten. Die Garzeit wird nicht ungewollt überschritten.

Beispiel im Bild: Dauer 45 Minuten.

1. Mit dem Funktionswähler die Heizart einstellen.
2. Mit dem Temperaturwähler die Temperatur oder Grillstufe einstellen.
3. Taste  zweimal drücken.
In der Anzeige steht 20:00. Die Zeitsymbole leuchten, der Pfeil  steht vor .



4. Mit Taste **+** oder **-** die Dauer einstellen.



5. Taste  drücken.

Der Backofen startet. In der Anzeige läuft die Dauer sichtbar ab und das Symbol  leuchtet. Die anderen Zeitsymbole erlöschen.

Dauer ist abgelaufen

Ein Signal ertönt. Der Backofen hört auf zu heizen. In der Anzeige steht 0:00. Taste  drücken. Das Signal erlischt. Funktionswähler auf die Nullstellung drehen. Der Backofen ist ausgeschaltet.

Dauer ändern

Mit Taste **+** oder **-** die Dauer ändern. Nach wenigen Sekunden wird die Änderung übernommen. Wenn der Wecker eingestellt ist, drücken Sie vorher Taste .

Dauer löschen

Mit Taste **-** die Dauer bis auf 0:00 zurückstellen. Nach wenigen Sekunden wird die Änderung übernommen. Die Dauer ist gelöscht. Wenn der Wecker eingestellt ist, drücken Sie vorher Taste .

Zeiteinstellungen abfragen

Wenn mehrere Zeitfunktionen eingestellt sind, leuchten die entsprechenden Symbole in der Anzeige. Vor dem Symbol der Zeitfunktion im Vordergrund steht der Pfeil .

Um Wecker , Dauer  oder Uhrzeit  abzufragen, Taste  so oft drücken, bis der Pfeil  vor dem jeweiligen Symbol steht. Der Wert dazu erscheint für einige Sekunden in der Anzeige.

Uhrzeit einstellen

Nach dem Anschluss oder nach einem Stromausfall leuchtet in der Anzeige die Symbole   und drei Nullen. Stellen Sie die Uhrzeit ein.

1. Taste **+** oder **-** drücken.
Vorschlagswert **+**: 12:00
Vorschlagswert **-**: 23:59
2. Mit Taste **+** oder **-** die Uhrzeit einstellen.
3. Taste  drücken. Die Uhrzeit ist eingestellt.

Uhrzeit ändern

Voraussetzung: Ihr Gerät muss ausgeschaltet sein.

1. Taste  zweimal drücken.
In der Anzeige leuchten die Zeitsymbole, der Pfeil  steht vor dem Symbol .
2. Mit Taste **+** oder **-** die Uhrzeit ändern.
Nach wenigen Sekunden wird die eingestellte Uhrzeit übernommen.

Uhrzeit ausblenden

Sie können die Uhrzeit ausblenden. Sehen Sie dazu bitte im Kapitel *Grundeinstellungen ändern* nach.

Kindersicherung

Damit Kinder den Backofen nicht versehentlich einschalten, hat er eine Kindersicherung.

Der Backofen reagiert auf keine Einstellungen. Wecker und Uhrzeit können Sie auch bei eingeschalteter Kindersicherung einstellen.

Kindersicherung einschalten

Voraussetzung: Es darf keine Dauer eingestellt sein und der Funktionswähler steht in der Nullstellung.

Taste  ca. vier Sekunden lang drücken.

In der Anzeige erscheint das Symbol . Die Kindersicherung ist eingeschaltet.

Kindersicherung ausschalten

Taste  ca. vier Sekunden lang drücken.

In der Anzeige erlischt das Symbol . Die Kindersicherung ist ausgeschaltet.

Kindersicherung bei der Programmautomatik

Wenn die Programmautomatik eingestellt ist, funktioniert die Kindersicherung nicht.

Grundeinstellungen ändern

Ihr Gerät hat verschiedene Grundeinstellungen, die Sie jederzeit verändern können.

Grundeinstellungen

In der Tabelle finden Sie alle Grundeinstellungen und die Änderungsmöglichkeiten.

Grundeinstellung	Möglichkeiten	Erklärung
  Uhranzeige  = an	Uhranzeige  = aus	Anzeige der Uhrzeit
  Signalton-Dauer  = mittel = 2 Minuten	 = kurz = 10 Sekunden  = lang = 5 Minuten	Signal nach Ablauf einer Dauer
  Signalton-Lautstärke  = mittel	 = leise  = laut	Lautstärke des Signals
  Wartezeit  = mittel = 5 Sekunden	 = kurz = 2 Sekunden  = lang = 10 Sekunden	Wartezeit zwischen einzelnen Schritten, nach einer Einstellung

Voraussetzung: Ihr Gerät ist ausgeschaltet.

1. Taste  einige Sekunden lang drücken.
In der Anzeige erscheint die erste Grundeinstellung.
2. Mit Taste  oder  die Grundeinstellung ändern.

3. Mit Taste  bestätigen.
In der Anzeige erscheint die nächste Grundeinstellung. Sie können mit Taste  alle Grundeinstellungen durchgehen und mit Taste  oder  ändern.
4. Zum Schluss Taste  einige Sekunden lang drücken.
Alle Einstellungen sind übernommen.
Sie können Ihre Einstellungen jederzeit wieder ändern.

Pflege und Reinigung

Bei sorgfältiger Pflege und Reinigung bleibt Ihr Mikrowellengerät lange schön und intakt. Wie Sie Ihr Gerät richtig pflegen und reinigen, erklären wir Ihnen hier.

Stromschlaggefahr!

Eindringende Feuchtigkeit kann einen Stromschlag verursachen. Keinen Hochdruckreiniger oder Dampfreiniger verwenden.

Verbrennungsgefahr!

Nie das Gerät direkt nach dem Ausschalten reinigen. Gerät auskühlen lassen.

Gefahr schwerer Gesundheitsschäden!

Durch eine beschädigte Garraumtür oder Türdichtung kann Mikrowellen-Energie austreten. Nie das Gerät benutzen, wenn

die Garraumtür oder die Türdichtung beschädigt ist. Kundendienst rufen.

Hinweise

- Kleine Farbunterschiede an der Gerätefront ergeben sich durch verschiedene Materialien, wie Glas, Kunststoff oder Metall.
- Schatten an der Türscheibe, die wie Schlieren wirken, sind Lichtreflexe der Backofenlampe.
- Unangenehme Gerüche, z. B. nach der Zubereitung von Fisch können Sie ganz einfach beseitigen. Geben Sie ein paar Tropfen Zitronensaft in eine Tasse Wasser. Stellen Sie einen Löffel mit in das Gefäß, um Siedeverzug zu vermeiden. Erhitzen Sie das Wasser für 1 bis 2 Minuten mit maximaler Mikrowellen-Leistung.

Reinigungsmittel

Damit die unterschiedlichen Oberflächen nicht durch falsche Reinigungsmittel beschädigt werden, beachten Sie die Angaben in der Tabelle. Verwenden Sie

- keine scharfen oder scheuernden Reinigungsmittel,
- keine Metall-oder Glasschaber zur Reinigung des Glases an der Gerätetür.
- keine Metall-oder Glasschaber zur Reinigung der Türdichtung.
- keine harten Scheuerkissen und Putzschwämme,
- keine stark alkoholhaltigen Reinigungsmittel.

Waschen Sie neue Schwammtücher vor Gebrauch gründlich aus.

Lassen Sie alle Oberflächen gründlich trocknen, bevor Sie das Gerät wieder in Betrieb nehmen.

Bereich	Reinigungsmittel
Gerätefront	Heiße Spüllauge: Mit einem Spüllappen reinigen und einem weichen Tuch nachtrocknen. Keinen Glasreiniger, Metall- oder Glasschaber zur Reinigung verwenden.
Vertiefung im Garraum	Feuchtes Tuch: Es darf kein Wasser durch den Drehtellerantrieb in das Geräte-Innere laufen.
Roste	Heiße Spüllauge: Mit Edelstahlreiniger oder im Geschirrspüler reinigen.

Bereich	Reinigungsmittel
Türscheiben	Glasreiniger: Mit einem Spüllappen reinigen. Keinen Glasschaber benutzen.
Dichtung	Heiße Spüllauge: Mit einem Spüllappen reinigen, nicht scheuern. Keinen Metall- oder Glasschaber zur Reinigung verwenden.
Gerätefront mit Edelstahl	Heiße Spüllauge: Mit einem Spüllappen reinigen und einem weichen Tuch nachtrocknen. Kalk-, Fett-, Stärke- und Eiweißflecken sofort entfernen. Unter solchen Flecken kann sich Korrosion bilden. Beim Kundendienst oder im Fachhandel sind spezielle Edelstahlreiniger erhältlich. Keinen Glasreiniger, Metall- oder Glasschaber zur Reinigung verwenden.
Garraum	Heiße Spüllauge oder Essigwasser: Mit einem Spüllappen reinigen und einem weichen Tuch nachtrocknen. Bei starker Verschmutzung: Benutzen Sie kein Backofenspray und keine anderen aggressiven Backofenreiniger oder Scheuermittel. Auch Scheuerkissen, raue Schwämme und Topfreiniger sind ungeeignet. Diese Mittel verkratzen die Oberfläche. Innenflächen gründlich trocknen lassen.

Störungstabelle

Wenn eine Störung auftritt, liegt es oft nur an einer Kleinigkeit. Bevor Sie den Kundendienst rufen, versuchen Sie bitte, mit Hilfe der Tabelle, die Störung selbst zu beheben.

Wenn einmal ein Gericht nicht optimal gelingt, sehen Sie im Kapitel *Für Sie in unserem Kochstudio getestet* nach. Dort finden Sie viele Tipps und Hinweise zum Kochen.

Stromschlaggefahr!

Unsachgemäße Reparaturen sind gefährlich. Nur ein von uns geschulter Kundendienst-Techniker darf Reparaturen durchführen.

Störungstabelle

Störung	Mögliche Ursache	Abhilfe / Hinweise
Das Gerät funktioniert nicht.	Sicherung defekt.	Im Sicherungskasten nachsehen, ob die Sicherung für das Gerät in Ordnung ist.
	Stecker nicht eingesteckt.	Stecker einstecken.
	Stromausfall	Prüfen, ob die Küchenlampe funktioniert.
Gerät funktioniert nicht. Im Anzeigefeld erscheint  .	Kindersicherung ist aktiv.	Kindersicherung deaktivieren (siehe Kapitel: Kindersicherung).
Im Anzeigefeld steht  und  .	Stromausfall	Uhrzeit neu einstellen.
Mikrowelle schaltet nicht ein.	Tür nicht ganz geschlossen.	Prüfen, ob Speisereste oder ein Fremdkörper in der Tür klemmen.
Speisen in der Mikrowelle werden langsamer heiß als bisher.	Zu niedrige Leistungsstufe für Mikrowelle eingestellt.	Höhere Leistungsstufe wählen.
	Eine größere Menge als sonst wurde in das Gerät gegeben.	Für doppelte Menge fast doppelte Zeit einstellen.
	Speisen waren kälter als sonst.	Speisen zwischendurch umrühren oder wenden.
Drehteller kratzt oder schleift.	Verschmutzung oder Fremdkörper im Bereich des Drehtellerantriebs.	Roller unten am Drehteller und die Vertiefung im Backofenboden gut reinigen.

Störung	Mögliche Ursache	Abhilfe / Hinweise
Eine bestimmte Betriebsart oder Leistungsstufe lässt sich nicht einstellen.	Einstellung für Temperatur, Leistungsstufe oder Kombination ist für diese Betriebsart nicht möglich.	Mögliche Einstellungen wählen.
Im Anzeigefeld erscheint E 1 .	Thermische Sicherheitsabschaltung wurde aktiviert.	Kundendienst rufen.
Im Anzeigefeld erscheint E 2 .	Automatische Sicherheitsabschaltung wurde aktiviert.	Beliebige Taste berühren oder Drehwähler drehen.
Im Anzeigefeld erscheint E 3 .	Backofenfunktion ist gestört.	Kundendienst rufen.
Im Anzeigefeld erscheint E 4 .	Thermische Sicherheitsabschaltung wurde aktiviert.	Kundendienst rufen.
Im Anzeigefeld erscheint E 11 .	Feuchtigkeit im Bedienfeld.	Bedienfeld trocknen lassen.
Im Anzeigefeld erscheint E 17 .	Schnellaufheizung fehlgeschlagen.	Kundendienst rufen.
Gerät lässt sich einstellen, heizt aber nicht. Der Doppelpunkt blinkt.	Demoschaltung wurde aktiviert.	Stromzufuhr für das Gerät unterbrechen und wieder herstellen. Taste  so lange drücken, bis das Symbol  im Display erscheint und der Doppelpunkt aufhört zu blinken. Innerhalb von 4 Sekunden mit Taste  bestätigen.

Kundendienst

Wenn Ihr Gerät repariert werden muss, ist unser Kundendienst für Sie da. Wir finden immer eine passende Lösung, auch um unnötige Technikerbesuche zu vermeiden.

E-Nummer und FD-Nummer

Geben Sie beim Anruf bitte die Erzeugnisnummer (E-Nr.) und die Fertigungsnummer (FD-Nr.) an, damit wir Sie qualifiziert betreuen können. Das Typenschild mit den Nummern finden Sie seitlich an der Backofentür. Damit Sie bei Bedarf nicht lange suchen müssen, können Sie hier die Daten Ihres Gerätes und die Telefonnummer des Kundendienstes eintragen.

E-Nr.	FD-Nr.
Kundendienst 	

Beachten Sie, dass der Besuch des Servicetechnikers im Falle einer Fehlbedienung auch während der Garantiezeit nicht kostenlos ist.

Die Kontaktdaten aller Länder für den nächstgelegenen Kundendienst finden Sie hier bzw. im beiliegenden Kundendienst-Verzeichnis.

Reparaturauftrag und Beratung bei Störungen

A 0810 550 511

D 089 69 339 339

CH 0848 840 040

Vertrauen Sie auf die Kompetenz des Herstellers. Sie stellen somit sicher, dass die Reparatur von geschulten Servicetechnikern durchgeführt wird, die mit den Original-Ersatzteilen für Ihr Gerät ausgerüstet sind.

Technische Daten

Stromversorgung	220-230 V, 50 Hz
Mikrowellenleistung	900 W
Mikrowellen-Frequenz	2450 MHz
Absicherung	16 A
VDE-geprüft	ja
CE-Zeichen	ja

Dieses Gerät entspricht der Norm EN 55011 bzw. CISPR 11. Es ist ein Produkt der Gruppe 2, Klasse B.

Gruppe 2 bedeutet, dass Mikrowellen zum Zweck der Erwärmung von Lebensmitteln erzeugt werden. Klasse B besagt, dass das Gerät für die private Haushaltsumgebung geeignet ist.

Acrylamid in Lebensmitteln

Welche Speisen sind betroffen?

Acrylamid entsteht vor allem bei hochoverhitzt zubereiteten Getreide- und Kartoffelprodukten wie z. B. Kartoffelchips, Pommes frites, Toast, Brötchen, Brot, feinen Backwaren (Kekse, Lebkuchen, Spekulatius).

mes frites, Toast, Brötchen, Brot, feinen Backwaren (Kekse, Lebkuchen, Spekulatius).

Tipps zur acrylamidarmen Zubereitung von Speisen	
Allgemein	Garzeiten möglichst kurz halten. Speisen goldgelb, nicht zu dunkel bräunen. Großes, dickes Gargut enthält weniger Acrylamid.
Backen Plätzchen	Mit Ober-/Unterhitze max. 200 °C, mit 3D-Heißluft oder Heißluft max. 180 °C. Mit Ober-/Unterhitze max. 190 °C, mit 3D-Heißluft oder Heißluft max. 170 °C. Ei oder Eigelb verringert die Bildung von Acrylamid.

Tipps zur acrylamidarmen Zubereitung von Speisen

Backofen-Pommes frites

Gleichmäßig und einlagig auf dem Blech verteilen. Mindestens 400 g pro Blech backen, damit die Pommes nicht austrocknen.

Energie- und Umwelttipps

Hier erhalten Sie Tipps, wie Sie beim Backen und Braten Energie sparen können und wie Sie Ihr Gerät richtig entsorgen.

Energiesparen

- Heizen Sie den Backofen nur dann vor, wenn es im Rezept oder in den Tabellen der Gebrauchsanleitung angegeben ist.
- Verwenden Sie dunkle, schwarz lackierte oder emaillierte Backformen. Sie nehmen die Hitze besonders gut auf.
- Öffnen Sie die Backofentür während Sie Garen, Backen oder Braten möglichst selten.
- Mehrere Kuchen backen Sie am besten nacheinander. Der Backofen ist noch warm. Dadurch verkürzt sich die Backzeit für den zweiten Kuchen. Sie können auch 2 Kastenformen nebeneinander einschieben.

- Bei längeren Garzeiten können Sie den Backofen 10 Minuten vor Ende der Garzeit ausschalten und die Restwärme zum Fertigbaren nutzen.

Umweltgerecht entsorgen

Entsorgen Sie die Verpackung umweltgerecht.



Dieses Gerät ist entsprechend der europäischen Richtlinie 2012/19/EU über Elektro- und Elektronikaltgeräte (waste electrical and electronic equipment - WEEE) gekennzeichnet.

Die Richtlinie gibt den Rahmen für eine EU-weit gültige Rücknahme und Verwertung der Altgeräte vor.

Für Sie in unserem Kochstudio getestet

Hier finden Sie eine Auswahl an Gerichten und die optimalen Einstellungen dazu. Wir zeigen Ihnen, welche Heizart, Temperatur oder Mikrowellen-Leistung für Ihr Gericht am besten geeignet ist. Sie erhalten Angaben zum passenden Zubehör und in welcher Höhe es eingeschoben werden soll. Sie bekommen Tipps zum Geschirr und zur Zubereitung.

Hinweise

- Die Tabellenwerte gelten immer für das Einschieben in den kalten und leeren Garraum. Nur vorheizen, wenn es in den Tabellen angegeben ist. Entfernen Sie vor der Benutzung alles Zubehör aus dem Garraum, das Sie nicht benötigen.
- Belegen Sie das Zubehör erst nach dem Vorheizen mit Backpapier.
- Die Zeitangaben in den Tabellen sind Richtwerte. Sie sind von Qualität und Beschaffenheit der Lebensmittel abhängig.
- Verwenden Sie das mitgelieferte Zubehör. Zusätzliches Zubehör erhalten Sie als Sonderzubehör im Fachhandel oder beim Kundendienst.
- Benutzen Sie immer Topflappen, wenn Sie heißes Zubehör oder Geschirr aus dem Garraum nehmen.

Auftauen, Erhitzen und Garen mit Mikrowelle

In den folgenden Tabellen finden Sie viele Möglichkeiten und Einstellwerte zur Mikrowelle.

Die Zeitangaben in den Tabellen sind Richtwerte. Sie sind abhängig vom Geschirr, von der Qualität, Temperatur und Beschaffenheit der Lebensmittel.

In den Tabellen sind häufig Zeitbereiche angegeben. Stellen Sie zuerst die kürzere Zeit ein und verlängern Sie, wenn es erforderlich ist.

Es kann sein, dass Sie andere Mengen haben, als in den Tabellen angegeben. Dafür gibt es eine Faustregel: Doppelte Menge - fast doppelte Dauer, halbe Menge - halbe Dauer.

Stellen Sie das Geschirr in die Mitte des niedrigen Rostes. Die Mikrowellen können so die Speisen von allen Seiten erreichen.

Auftauen

Hinweise

- Geben Sie die gefrorenen Lebensmittel in einem offenen Gefäß auf den Rost.
- Empfindliche Teile wie z. B. Beine und Flügel von Hähnchen oder fette Randpartien von Braten können Sie mit kleinen Stücken Alufolie abdecken. Die Folie darf die Garraumwände nicht berühren. Nach der Hälfte der Auftauzeit können Sie die Alufolie abnehmen.
- Die Speisen zwischendurch 1 bis 2 mal wenden oder umrühren. Große Stücke sollten Sie mehrmals wenden. Entfernen Sie beim Wenden die entstandene Auftau-Flüssigkeit.
- Lassen Sie das Aufgetaute noch 10 bis 60 Minuten bei Raumtemperatur ruhen, damit sich die Temperatur ausgleicht. Bei Geflügel können Sie dann die Innereien herausnehmen.

Auftauen	Gewicht	Mikrowellen-Leistung in Watt, Dauer in Minuten	Hinweise
Fleisch im Ganzen vom Rind, Kalb oder Schwein (mit und ohne Knochen)	800 g	180 W, 15 Min. + 90 W, 10-20 Min.	mehrmals wenden
	1 kg	180 W, 20 Min. + 90 W, 15-25 Min.	
	1,5 kg	180 W, 30 Min.+ 90 W, 20-30 Min.	
Fleisch in Stücken oder Scheiben vom Rind, Kalb oder Schwein	200 g	180 W, 3 Min. + 90 W, 10-15 Min.	beim Wenden die aufgetauten Teile voneinander trennen
	500 g	180 W, 5 Min. + 90 W, 15-20 Min.	
	800 g	180 W, 8 Min. + 90 W, 15-20 Min.	

Auftauen	Gewicht	Mikrowellen-Leistung in Watt, Dauer in Minuten	Hinweise
Hackfleisch, gemischt	200 g	90 W, 10-15 Min.	möglichst flach einfrieren mehrmals wenden, bereits aufgetautes Fleisch entfernen
	500 g	180 W, 5 Min. + 90 W, 10-15 Min.	
	800 g	180 W, 8 Min. + 90 W, 15-20 Min.	
Geflügel oder Geflügelteile	600 g	180 W, 8 Min. + 90 W, 10-15 Min.	zwischendurch wenden
	1,2 kg	180 W, 15 Min. + 90 W, 25-30 Min.	
Ente	2 kg	180 W, 20Min. + 90 W, 30-40 Min.	mehrmals wenden
Fischfilet, Fischkotelett oder Scheiben	400 g	180 W, 5 Min. + 90 W, 10-15 Min.	aufgetaute Teile voneinander trennen
Fisch im Ganzen	300 g	180 W, 3 Min. + 90 W, 10-15 Min.	-
	600 g	180 W, 8 Min. + 90 W, 10-15 Min.	
Gemüse, z. B. Erbsen	300 g	180 W, 10-15 Min.	zwischendurch vorsichtig umrühren
	600 g	180 W, 10 Min. + 90 W, 10-15 Min.	
Obst, z. B. Himbeeren	300 g	180 W, 7-10 Min.	zwischendurch vorsichtig umrühren, aufgetaute Teile voneinander trennen
	500 g	180 W, 8 Min. + 90 W, 5-10 Min.	
Butter, antauen	125 g	180 W, 1 Min. + 90 W, 2-4 Min.	Verpackung vollständig entfernen
	250 g	360 W, 1Min. + 90 W, 2-4 Min.	
Brot im Ganzen	500 g	180 W, 6 Min. + 90 W, 5-10 Min.	zwischendurch wenden
	1 kg	180 W, 12 Min. + 90 W, 15-25 Min.	
Kuchen, trocken, z. B. Rührkuchen	500 g	90 W, 15-20 Min.	nur für Kuchen ohne Glasur, Sahne oder Creme, Kuchenstücke voneinander trennen
	750 g	180 W, 5 Min. + 90 W, 10-15 Min.	
Kuchen, saftig, z. B. Obstkuchen, Quarkkuchen	500 g	180 W, 5 Min. + 90 W, 10-15 Min.	nur für Kuchen ohne Glasur, Sahne oder Gelatine
	750 g	180 W, 7 Min. + 90 W, 10-15 Min.	

Auftauen, Erhitzen oder Garen tiefgefrorener Speisen

Hinweise

- Nehmen Sie Fertiggerichte aus der Verpackung. Im mikrowellengeeigneten Geschirr erwärmen sie sich schneller und gleichmäßiger. Verschiedene Speisekomponenten können sich unterschiedlich schnell erwärmen.
- Flache Speisen garen schneller als hohe. Verteilen Sie die Speisen daher möglichst flach im Geschirr. Lebensmittel sollten Sie nicht übereinander schichten.
- Decken Sie die Speisen immer zu. Wenn Sie keinen passenden Deckel für ihr Geschirr haben, nehmen Sie einen Teller oder Mikrowellen-Spezialfolie.
- Die Speisen sollten Sie zwischendurch 2 bis 3 mal umrühren bzw. wenden.
- Lassen Sie die Gerichte nach dem Erhitzen noch 2 bis 5 Minuten zum Temperatenausgleich ruhen.
- Benutzen Sie immer Topfhandschuhe oder Topflappen, wenn Sie das Geschirr herausnehmen.
- Der Eigengeschmack der Speisen bleibt weitgehend erhalten. Deshalb können Sie mit Salz und Gewürzen sparsam umgehen.


Auftauen, Erhitzen oder Garen tiefgefrorener Speisen	Gewicht	Mikrowellen-Leistung in Watt, Dauer in Minuten	Hinweise
Menü, Tellergericht, Fertiggericht	300-400 g	600 W, 10-15 Min.	Gericht aus der Verpackung nehmen; zum Erwärmen abdecken
Suppe	400-500 g	600 W, 8-10 Min.	geschlossenes Geschirr
Eintöpfe	500 g	600 W, 10-15 Min.	geschlossenes Geschirr
	1 kg	600 W, 20-25 Min.	
Fleischscheiben oder -stücke in Soße, z. B. Gulasch	500 g	600 W, 15-20 Min.	geschlossenes Geschirr
	1 kg	600 W, 25-30 Min.	
Fisch, z. B. Filetstücke	400 g	600 W, 10-15 Min.	abgedeckt
	800 g	600 W, 18-20 Min.	
Beilagen, z. B. Reis, Nudeln	250 g	600 W, 2-5 Min.	geschlossenes Geschirr; Flüssigkeit zugeben
	500 g	600 W, 8-10 Min.	
Gemüse, z. B. Erbsen, Brokkoli, Möhren	300 g	600 W, 8-10 Min.	geschlossenes Geschirr; 1 EL Wasser zugeben
	600 g	600 W, 15-20 Min.	
Rahmspinat	450 g	600 W, 11-16 Min.	ohne Zugabe von Wasser garen

Speisen erhitzen

 **Verbrühungsgefahr!**

Beim Erhitzen von Flüssigkeiten kann es zu Siedeverzug kommen. Das heißt, die Siedetemperatur wird erreicht, ohne dass die typischen Dampfblasen aufsteigen. Schon bei geringer

Erschütterung des Gefäßes kann die heiße Flüssigkeit plötzlich heftig überkochen und verspritzen. Geben Sie beim Erhitzen von Flüssigkeit immer einen Löffel mit in das Gefäß. So vermeiden Sie Siedeverzug.

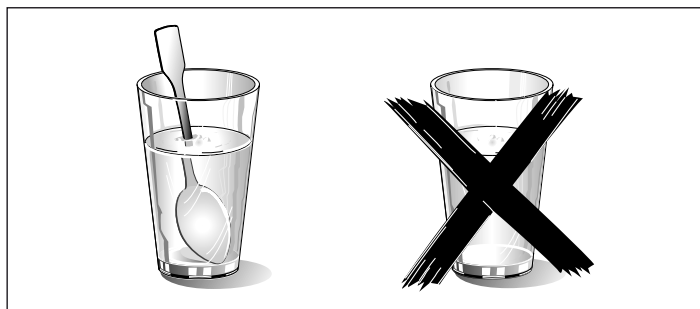

Achtung!

Metall - z. B. der Löffel im Glas - muss mindestens 2 cm von den Backofenwänden und der Türinnenseite entfernt sein. Funken könnten das innere Türglas zerstören.

Hinweise

- Nehmen Sie Fertiggerichte aus der Verpackung. Im mikrowellengeeigneten Geschirr erwärmen sie sich schneller und gleichmäßiger. Verschiedene Speisenkomponenten können sich unterschiedlich schnell erwärmen.
- Decken Sie die Speisen immer zu. Wenn Sie keinen passenden Deckel für ihr Gefäß haben, nehmen Sie einen Teller oder Mikrowellen-Spezialfolie.
- Die Speisen sollten Sie zwischendurch mehrmals umrühren bzw. wenden. Kontrollieren Sie die Temperatur.
- Lassen Sie die Gerichte nach dem Erhitzen noch 2 bis 5 Minuten zum Temperatenausgleich ruhen.
- Benutzen Sie immer Topfhandschuhe bzw. Topflappen, wenn Sie das Geschirr herausnehmen.

Speisen erhitzen	Gewicht	Mikrowellen-Leistung in Watt, Dauer in Minuten	Hinweise
Menü, Tellergericht, Fertiggericht	350-500 g	600 W, 5-10 Min.	Gericht aus der Verpackung nehmen, zum Erwärmen abdecken
Getränke	150 ml	900 W, 1-2 Min.	Achtung! Löffel ins Glas geben, alkoholische Getränke nicht überhitzen, zwischendurch kontrollieren
	300 ml	900 W, 2-3 Min.	
	500 ml	900 W, 3-4 Min.	
Babykost, z. B. Milchfläschchen	50 ml	360 W, ca. 1 Min.	Fläschchen ohne Sauger oder Deckel auf den Garraumboden stellen, nach dem Erhitzen gut schütteln oder umrühren, unbedingt Temperatur kontrollieren
	100 ml	360 W, 1-2 Min.	
	200 ml	360 W, 2-3 Min.	
Suppe			-
1 Tasse	175 g	900 W, 2-3 Min.	
2 Tassen	à 175 g	900 W, 4-5 Min.	
4 Tassen	à 175 g	900 W, 5-6 Min.	
Fleiszscheiben oder -stücke in Soße, z. B. Gulasch	500 g	600 W, 10-15 Min.	abgedeckt
Eintopf	400 g	600 W, 5-10 Min.	geschlossenes Geschirr
	800 g	600 W, 10-15 Min.	
Gemüse	150 g	600 W, 2-3 Min.	etwas Flüssigkeit zugeben
	300 g	600 W, 3-5 Min.	

Speisen garen

Hinweise

- Flache Speisen garen schneller als hohe. Verteilen Sie die Speisen daher möglichst flach im Geschirr. Lebensmittel sollten Sie nicht übereinander schichten.
- Garen Sie die Speisen im geschlossenen Geschirr. Wenn Sie keinen passenden Deckel für Ihr Geschirr haben, nehmen Sie einen Teller oder Mikrowellen-Spezialfolie.

- Der Eigengeschmack der Speisen bleibt weitgehend erhalten. Deshalb können Sie mit Salz und Gewürzen sparsam umgehen.
- Lassen Sie die Gerichte nach dem Garen noch 2 bis 5 Minuten zum Temperatenausgleich ruhen.
- Benutzen Sie immer Topfhandschuhe bzw. Topflappen, wenn Sie das Geschirr herausnehmen.

Speisen garen	Gewicht	Mikrowellen-Leistung in Watt, Dauer in Minuten	Hinweise
Ganzes Hähnchen, frisch, ohne Innereien	1,5 kg	600 W, 30-35 Min.	nach der Hälfte der Zeit wenden
Fischfilet, frisch	400 g	600 W, 5-10 Min.	-
Gemüse, frisch	250 g	600 W, 5-10 Min.	in gleich große Stücke schneiden; je 100 g 1 bis 2 EL Wasser zugeben; zwischendurch umrühren
	500 g	600 W, 10-15 Min.	
Kartoffeln	250 g	600 W, 8-10 Min.	in gleich große Stücke schneiden; je 100 g 1 bis 2 EL Wasser zugeben; zwischendurch umrühren
	500 g	600 W, 11-14 Min.	
	750 g	600 W, 15-22 Min.	

Speisen garen	Gewicht	Mikrowellen-Leistung in Watt, Dauer in Minuten	Hinweise
Reis	125 g	600 W, 7-9 Min. + 180 W, 15-20 Min.	doppelte Menge Flüssigkeit zugeben; ein hohes, geschlossenes Geschirr verwenden
	250 g	600 W, 10-12 Min. + 180 W, 20-25 Min.	
Süßspeisen, z. B. Pudding (Instant)	500 ml	600 W, 7-9 Min.	zwischendurch mit dem Schneebesen 2 bis 3 mal umrühren
Obst, Kompott	500 g	600 W, 9-12 Min.	-

Popcorn für die Mikrowelle

Hinweise

- Verwenden Sie hitzebeständiges, flaches Glasgeschirr, z. B. den Deckel einer Auflaufform, einen Glasteller oder eine Glasschale (Pyrex)
- Stellen Sie das Geschirr immer auf den Rost.
- Keine Porzellan oder stark gewölbte Teller verwenden..
- Einstellen wie in der Tabelle beschrieben. Je nach Produkt und Menge kann eine Zeitanpassung nötig sein.

- Damit das Popcorn nicht anbrennt die Popcorn-Tüte nach 1 Minute und 30 Sekunden kurz entnehmen und schütteln. Vorsicht heiß!



Verbrühungsgefahr!

- Popcorntüte vorsichtig öffnen, heißer Dampf kann entweichen.
- Nie die volle Mikrowellen-Leistung einstellen.

	Gewicht	Zubehör	Mikrowellen-Leistung in Watt, Dauer in Minuten
Popcorn für die Mikrowelle	1 Tüte à 100 g	Geschirr, Rost	600 W, 3-5 Min.

Tipps zur Mikrowelle

Sie finden für die vorbereitete Speisemenge keine Einstellangabe.	Verlängern oder verkürzen Sie die Garzeiten nach folgender Faustregel: Doppelte Menge = fast doppelte Zeit halbe Menge = halbe Zeit
Die Speise ist zu trocken geworden.	Stellen Sie beim nächsten Mal eine kürzere Garzeit ein oder wählen Sie eine niedrigere Mikrowellen-Leistung. Decken Sie die Speise ab und geben Sie mehr Flüssigkeit dazu.
Die Speise ist nach Ablauf der Zeit noch nicht aufgetaut, heiß oder gar.	Stellen Sie eine längere Zeit ein. Größere Mengen und höhere Speisen brauchen länger.
Nach Ablauf der Garzeit ist die Speise am Rand überhitzt, in der Mitte aber noch nicht fertig.	Rühren Sie zwischendurch um und wählen Sie beim nächsten Mal eine niedrigere Leistung und eine längere Dauer.
Nach dem Auftauen ist das Geflügel oder Fleisch außen angest, in der Mitte aber noch nicht aufgetaut.	Wählen Sie beim nächsten Mal eine kleinere Mikrowellen-Leistung. Wenden Sie das Auftaugut bei großen Mengen auch mehrmals.

Kuchen und Gebäck

Zu den Tabellen

Hinweise

- Die Zeitangaben gelten für das Einschieben in den kalten Backofen.
- Temperatur und Backdauer sind von Beschaffenheit und Menge des Teiges abhängig. Deshalb sind in den Tabellen Bereiche angegeben. Beginnen Sie mit dem niedrigeren Wert und stellen Sie, wenn erforderlich, beim nächsten Mal höher

ein. Eine niedrigere Temperatur ergibt eine gleichmäßigere Bräunung.

- Zusätzliche Informationen finden Sie unter *Tipps zum Backen* im Anschluss an die Tabellen.
- Stellen Sie die Kuchenform immer in die Mitte des niedrigen Rostes.

Backformen

Hinweis: Am besten geeignet sind dunkle Backformen aus Metall.

Kuchen in Formen	Zubehör	Heizart	Temperatur °C	Mikrowellen-Leistung in Watt	Dauer in Minuten
Rührkuchen, einfach	Kranz-/ Kastenform		170-180	90	40-50
Rührkuchen, fein (z. B. Sandkuchen)*	Kranz-/ Kastenform		150-170	-	70-90
Tortenboden aus Rührteig	Obstbodenform		160-180	-	30-40
Obstkuchen fein, Rührteig	Spring-/Napfform		170-180	90	35-45
Biskuitboden, 2 Eier	Obstbodenform		160-170	-	20-25
Biskuittorte, 6 Eier	dunkle Springform		170-180	-	35-45
Mürbeteigboden mit Rand	dunkle Springform		170-190	-	30-40

* Kuchen ca. 20 Minuten im Backofen auskühlen lassen.

** Form direkt auf den Drehteller stellen.

Kuchen in Formen	Zubehör	Heizart	Temperatur °C	Mikrowellen-Leistung in Watt	Dauer in Minuten
Obst- oder Quarktorte mit Mürbe-teigboden*	dunkle Springform		170-190	180	35-45
Schweizer Wähe**	dunkle Springform		190-200	-	45-55
Gugelhupf	Gugelhupfform		170-180		40-50
Pizza, dünner Boden, wenig Belag**	rundes Pizzablech		220-230	-	15-25
Pikante Kuchen**	dunkle Springform		200-220	-	50-60
Nusskuchen	dunkle Springform		170-180	90	35-45
Hefeteig mit trockenem Belag	rundes Pizzablech		160-180	-	50-60
Hefeteig mit saftigem Belag	rundes Pizzablech		170-190	-	55-65
Hefezopf mit 500 g Mehl	rundes Pizzablech		170-190	-	35-45
Stollen mit 500 g Mehl	rundes Pizzablech		160-180	-	60-70
Strudel, süß	rundes Pizzablech		190-210	180	35-45

* Kuchen ca. 20 Minuten im Backofen auskühlen lassen.

** Form direkt auf den Drehteller stellen.

Kleingebäck	Zubehör	Heizart	Temperatur in °C	Dauer in Minuten
Plätzchen	rundes Pizzablech		150-170	25-35
Makronen	rundes Pizzablech		110-130	35-45
Baiser	rundes Pizzablech		100	80-100
Muffins	Muffinblech auf Rost		160-180	35-40
Brandteiggebäck	rundes Pizzablech		200-220	35-45
Blätterteiggebäck	rundes Pizzablech		190-200	35-45
Hefeteiggebäck	rundes Pizzablech		200-220	25-35

Brot und Brötchen	Zubehör	Heizart	Temperatur in °C	Dauer in Minuten
Sauerteigbrot mit 1,2 kg Mehl	rundes Pizzablech		210-230	50-60
Fladenbrot*	rundes Pizzablech		220-230	25-35
Brötchen	rundes Pizzablech		210-230	25-35
Brötchen aus Hefeteig, süß	rundes Pizzablech		200-220	15-25

* Form direkt auf den Drehteller stellen.

Tipps zum Backen

Sie wollen nach Ihrem eigenen Rezept backen.	Orientieren Sie sich an ähnlichem Gebäck in den Backtabellen.
Sie wollen eine Backform aus Silikon, Glas, Kunststoff oder Keramik verwenden.	Die Form muss bis 250 °C hitzebeständig sein. In diesen Formen werden die Kuchen weniger braun. Wenn Sie Mikrowelle zuschalten, verkürzt sich eventuell die Dauer gegenüber der Tabellenangabe.
So stellen Sie fest, ob der Rührkuchen durchgebacken ist.	Stechen Sie etwa 10 Minuten vor Ende der angegebenen Backzeit mit einem Holzstäbchen an der höchsten Stelle in den Kuchen. Wenn kein Teig mehr am Holz klebt, ist der Kuchen fertig.
Der Kuchen fällt zusammen.	Verwenden Sie beim nächsten Mal weniger Flüssigkeit oder stellen Sie die Backofentemperatur um 10 Grad niedriger ein und verlängern die Backzeit. Beachten Sie die angegebenen Rührzeiten im Rezept.
Der Kuchen ist in der Mitte hoch aufgegangen und am Rand niedriger.	Fetten Sie nur den Boden der Springform ein. Nach dem Backen lösen Sie den Kuchen vorsichtig mit einem Messer.
Der Kuchen wird zu dunkel.	Wählen Sie eine niedrigere Temperatur und backen Sie den Kuchen etwas länger.
Der Kuchen ist zu trocken.	Stechen Sie mit einem Zahnstocher kleine Löcher in den fertigen Kuchen. Dann träufeln Sie Obstsaft oder Alkoholisches darüber. Wählen Sie beim nächsten Mal die Temperatur um 10 Grad höher und verkürzen Sie die Backzeiten.
Das Brot oder der Kuchen (z.B. Käsekuchen) sieht gut aus, ist aber innen klitschig (spintig, mit Wasserstreifen durchzogen).	Verwenden Sie beim nächsten Mal etwas weniger Flüssigkeit und backen Sie mit niedrigerer Temperatur etwas länger. Bei Kuchen mit saftigem Belag backen Sie erst den Boden vor, bestreuen ihn mit Mandeln oder Semmelbrösel und geben dann den Belag darauf. Beachten Sie bitte Rezepte und Backzeiten.

Der Kuchen löst sich nicht beim Stürzen.	Lassen Sie den Kuchen nach dem Backen noch 5 bis 10 Minuten auskühlen, dann löst er sich leichter aus der Form. Sollte er sich immer noch nicht lösen, lockern Sie den Rand nochmals vorsichtig mit einem Messer. Stürzen Sie den Kuchen erneut und bedecken Sie die Form mehrmals mit einem nassen, kalten Tuch. Fetten Sie beim nächsten Mal die Form gut ein und streuen Sie zusätzlich Semmelbrösel hinein.
Sie haben mit Ihrem eigenen Thermometer die Backofentemperatur nachgemessen und dabei eine Abweichung festgestellt.	Die Backofentemperatur wird vom Hersteller mit einem Prüfstab nach festgelegter Zeit im Mittelpunkt des Garraumes gemessen. Jedes Geschirr und Zubehörteil hat Einfluss auf den gemessenen Wert, sodass Sie bei eigenen Messungen immer eine Abweichung feststellen werden.
Zwischen Form und Rost entstehen Funken.	Prüfen Sie, ob die Form außen sauber ist. Verändern Sie die Position der Form im Garraum. Wenn das nicht hilft, backen Sie ohne Mikrowelle weiter. Die Backdauer verlängert sich dann.

Braten und Grillen

Zu den Tabellen

Temperatur und Bratdauer sind von Beschaffenheit und Menge der Speisen abhängig. Deshalb sind in den Tabellen Bereiche angegeben. Beginnen Sie mit dem niedrigeren Wert und stellen Sie, wenn erforderlich, beim nächsten Mal höher ein.

Zusätzliche Informationen finden Sie unter *Tipps zum Braten und Grillen* im Anschluss an die Tabellen.

Geschirr

Sie können jedes hitzebeständige, mikrowellengeeignete Geschirr verwenden. Bratformen aus Metall sind nur zum Braten ohne Mikrowellen geeignet.

Das Geschirr kann sehr heiß werden. Benutzen Sie Topflappen zum Herausnehmen.

Stellen Sie heißes Glasgeschirr auf einem trockenen Küchentuch ab. Ist die Unterlage nass oder kalt, kann das Glas springen.

Hinweise zum Braten

Hinweise

- Verwenden Sie zum Braten von Fleisch und Geflügel eine hohe Bratform.
- Prüfen Sie, ob Ihr Geschirr in den Garraum passt. Es darf nicht zu groß sein.
- Fleisch:
Bedecken Sie den Boden des Geschirrs knapp mit Flüssigkeit. Für Schmorbraten geben Sie etwas mehr Flüssigkeit zu. Wenden Sie Fleischstücke nach der Hälfte der Zeit. Wenn der Braten fertig ist, sollte er noch 10 Minuten im abgeschalteten,

geschlossenen Backofen ruhen. So kann sich der Fleischsaft besser verteilen.

- Geflügel:
Wenden Sie die Fleischstücke nach $\frac{2}{3}$ der Zeit.

Hinweise zum Grillen

Hinweise

- Grillen Sie immer bei geschlossener Backofentür und heizen Sie nicht vor.
- Nehmen Sie möglichst gleich dicke Grillstücke. Steaks sollten mindestens 2 bis 3 cm dick sein. So bräunen sie gleichmäßig und bleiben schön saftig. Salzen Sie Steaks erst nach dem Grillen.
- Wenden Sie die Grillstücke mit einer Grillzange. Wenn Sie mit einer Gabel ins Fleisch stechen, verliert es Saft und wird trocken.
- Dunkles Fleisch z. B. vom Rind bräunt schneller als helles Fleisch vom Kalb oder Schwein. Grillstücke aus hellem Fleisch oder Fisch sind oft an der Oberfläche nur hellbraun, innen trotzdem gar und saftig.
- Der Grillheizkörper schaltet sich automatisch aus und wieder ein. Das ist normal. Wie oft das geschieht, richtet sich nach der eingestellten Grillstufe.

Rindfleisch

Hinweise

- Wenden Sie Rinderschmorbraten nach $\frac{1}{3}$ und $\frac{2}{3}$ der Zeit. Zum Schluss noch ca. 10 Minuten stehen lassen.
- Wenden Sie Rinderfilet und Roastbeef nach der Hälfte der Zeit. Zum Schluss noch ca. 10 Minuten stehen lassen.
- Wenden Sie Steaks nach $\frac{2}{3}$ der Zeit.

Rindfleisch	Zubehör	Heizart	Temperatur °C, Grillstufe	Mikrowellen-Leistung in Watt	Dauer in Minuten
Rinderschmorbraten, ca. 1 kg	geschlossenes Geschirr		180-200	-	120-143
Rinderfilet, medium, ca. 1 kg	offenes Geschirr		180-200	90	30-40
Rostbeef, medium, ca. 1 kg	offenes Geschirr		210-230	180	30-40
Steak, medium, 3 cm dick	hoher Rost		3	-	jede Seite: 10-15

Kalbfleisch

Hinweis: Wenden Sie Kalbsbraten und -haxe nach der Hälfte der Zeit. Zum Schluss noch ca. 10 Minuten stehen lassen.

Kalbfleisch	Zubehör	Heizart	Temperatur °C	Mikrowellen-Leistung in Watt	Dauer in Minuten
Kalbsbraten, ca. 1 kg	geschlossenes Geschirr		180-200	-	110-130
Kalbshaxe, ca. 1,5 kg	geschlossenes Geschirr		200-220	-	120-130

Schweinefleisch

Hinweise

- Wenden Sie mageren Schweinebraten und Braten ohne Schwarte nach der Hälfte der Zeit. Zum Schluss noch ca. 10 Minuten stehen lassen.

- Legen Sie den Braten mit Schwarte nach oben in das Geschirr. Schwarte einschneiden. Den Braten nicht wenden. Zum Schluss noch ca. 10 Minuten stehen lassen.
- Schweinefilet und Kassler nicht wenden. Zum Schluss noch ca. 5 Minuten stehen lassen.
- Wenden Sie das Nackensteak nach $\frac{2}{3}$ der Zeit.

Schweinefleisch	Zubehör	Heizart	Temperatur °C, Grillstufe	Mikrowellen-Leistung in Watt	Dauer in Minuten
Braten ohne Schwarte (z. B. Nacken), ca. 750 g*	geschlossenes Geschirr		220-230	180	40-50
Braten mit Schwarte (z. B. Schulter) ca. 1,5 kg*	offenes Geschirr		190-210	-	130-150
Schweinefilet, ca. 500 g*	geschlossenes Geschirr		220-230	90	25-30
Schweinebraten mager, ca. 1 kg*	geschlossenes Geschirr		210-230	90	60-80
Kasseler mit Knochen, ca. 1 kg*	offenes Geschirr	-	-	360	45-45
Nackensteak 2 cm dick**			3	-	1. Seite: ca. 15-20 2. Seite: ca. 10-15

* niedriger Rost

** hoher Rost

Lamm

Hinweis: Wenden Sie Lammkeule nach der Hälfte der Zeit.

Lammfleisch	Zubehör	Heizart	Temperatur °C	Mikrowellen-Leistung in Watt	Dauer in Minuten
Lammrücken mit Knochen, ca. 1 kg	offenes Geschirr		210-230	-	40-50
Lammkeule ohne Knochen, medium, ca. 1,5 kg	geschlossenes Geschirr		190-210	-	90-95

Sonstiges

Hinweise

- Lassen Sie den Hackbraten zum Schluss noch ca. 10 Minuten stehen.

- Wenden Sie die Würstchen nach $\frac{2}{3}$ der Zeit.

Sonstiges	Zubehör	Heizart	Temperatur °C, Grillstufe	Mikrowellen-Leistung in Watt	Dauer in Minuten
Hackbraten, ca. 1 kg*	offenes Geschirr		180-200	600 W + 180 W	-
Würstchen zum Grillen, 4 bis 6 Stück Stück à ca. 150 g**	-		3	-	jede Seite: 10-15

* niedriger Rost

** hoher Rost

Geflügel

Hinweise

- Legen Sie ganze Hähnchen und Hähnchenbrust mit der Brustseite nach unten. Nach $\frac{2}{3}$ der Zeit wenden.
- Legen Sie die Poularde mit der Brustseite nach unten. Nach 30 Minuten wenden und Mikrowellen-Leistung auf 180 Watt stellen.

- Legen Sie halbe Hähnchen und Hähnchenteile mit der Hautseite nach oben. Nicht wenden.
- Legen Sie Enten- und Gänsebrust mit der Hautseite nach oben. Nicht wenden.
- Wenden Sie Gänsekeulen nach der Hälfte der Zeit. Die Haut einstechen.
- Legen Sie Putenbrust und -oberkeule mit der Hautseite nach unten. Nach $\frac{2}{3}$ der Zeit wenden.

Geflügel	Zubehör	Heizart	Temperatur °C, Grillstufe	Mikrowellen-Leistungen in Watt	Dauer in Minuten
Hähnchen, ganz, ca. 1,2 kg	geschlossenes Geschirr		220-230	360	35-45
Poularde, ganz, ca. 1,6 kg	geschlossenes Geschirr		220-230	360 180	30 20-30
Hähnchen, halbiert, je 500 g	offenes Geschirr		180-200	360	30-35

Geflügel	Zubehör	Heizart	Temperatur °C, Grillstufe	Mikrowellen-Leistungen in Watt	Dauer in Minuten
Hähnchenteile, ca. 800 g	offenes Geschirr		210-230	360	20-30
Hähnchenbrust mit Haut und Knochen, 2 Stück, ca. 350-450 g	offenes Geschirr		190-210	180	30-40
Entenbrust mit Haut, 2 Stück je 300-400 g	offenes Geschirr		3	90	20-30
Gänsebrust, 2 Stück je 500 g	offenes Geschirr		210-230	90	25-30
Gänsekeulen, 4 Stück ca. 1,5 kg	offenes Geschirr		210-230	180	30-40
Putenbrust, ca. 1 kg	geschlossenes Geschirr		200-220	-	90-100
Putenoberkeule, ca. 1,3 kg	geschlossenes Geschirr		200-220	180	50-60

Fisch

- Fetten Sie den Rost vorher mit Öl ein.

Hinweise

- Legen Sie zum Grillen den ganzen Fisch, z. B. Forelle, mittig auf den hohen Rost.

Fisch	Zubehör	Heizart	Temperatur °C	Dauer in Minuten
Fischkotelett, z. B. Lachs, 3 cm dick, gegrillt	hoher Rost		3	20-25
Fisch ganz, 2-3 Stück à 300 g, gegrillt	hoher Rost		3	20-30

Tipps zum Braten und Grillen

Für das Gewicht des Bratens stehen keine Angaben in der Tabelle.	Wählen Sie für kleine Bratenstücke eine höhere Temperatur und eine kürzere Garzeit. Bei größeren Bratenstücken wählen Sie eine niedrigere Temperatur und eine längere Garzeit.
Wie können Sie feststellen, ob der Braten fertig ist.	Benutzen Sie ein Fleischthermometer (im Fachhandel erhältlich) oder machen Sie die "Löffelprobe". Drücken Sie mit dem Löffel auf den Braten. Fühlt er sich fest an, ist er fertig. Wenn er nachgibt, braucht er noch etwas Zeit.
Der Braten sieht gut aus, aber die Soße ist angebrannt.	Wählen Sie beim nächsten Mal ein kleineres Bratgeschirr oder geben Sie mehr Flüssigkeit zu.
Der Braten sieht gut aus, aber die Soße ist zu hell und wässrig.	Wählen Sie beim nächsten Mal ein größeres Bratgeschirr und geben Sie weniger Flüssigkeit zu.
Der Braten ist nicht durch.	Schneiden Sie den Braten auf. Bereiten Sie die Soße im Bratgeschirr zu und legen Sie die Bratenscheiben in die Soße. Garen Sie das Fleisch nur mit Mikrowelle fertig.

Aufläufe, Gratins, Toasts

Hinweise

- Die Tabellenwerte gelten für das Einschieben in den kalten Backofen.
- Verwenden Sie für Aufläufe, Kartoffelgratins und Lasagne eine 4 bis 5 cm hohe mikrowellen- und hitzebeständige Auflaufform

- Stellen Sie den Auflauf auf den niedrigen Rost.
- Lassen Sie Aufläufe und Gratins noch 5 Minuten im abgeschalteten Backofen nachgaren.
- Überbackene Toasts: Toastscheiben vortoasten.

Aufläufe, Gratins, Toasts	Zubehör	Heizart	Temperatur °C, Grillstufe	Mikrowellen-Leistung in Watt	Dauer in Minuten
Auflauf, süß, ca. 1,5 kg	offenes Geschirr		140-160	360	25-35
Auflauf, pikant aus gegarten Zutaten, ca. 1 kg	offenes Geschirr		150-170	600	20-25
Lasagne, frisch	offenes Geschirr		200-220	360	25-35
Kartoffelgratin aus rohen Zutaten, ca. 1,1 kg	offenes Geschirr		180-200	600	25-30
Toast überbacken, 4 Stück*			3	-	8-10

* hoher Rost

Fertigprodukte, tiefgekühlt

Hinweise

- Beachten Sie die Herstellerangaben auf der Verpackung.
- Die Tabellenwerte gelten für das Einschieben in den kalten Backofen.

- Pommes Frites, Kroketten und Rösti nicht übereinander legen, nach der Hälfte der Zeit wenden.
- Legen Sie die Lebensmittel direkt auf den Drehteller.

Fertigprodukte	Zubehör	Heizart	Temperatur °C	Mikrowellen-Leistung in Watt	Dauer in Minuten
Pizza mit dünnem Boden*	Drehteller		220-230	-	10-15
Pizza mit dickem Boden	Drehteller		- 220-230	600 -	3 13-18
Minipizza*	Drehteller		220-230	-	10-15
Pizza-Baguette*	Drehteller		- 220-230	600 -	2 13-18
Pommes Frites	Drehteller		220-230	-	8-13
Kroketten*	Drehteller		210-220	-	13-18
Rösti, gefüllte Kartoffeltaschen	Drehteller		200-220	-	25-30
Aufbackbrötchen oder -baguette	niedriger Rost		170-180	-	13-18
Fischstäbchen	Drehteller		210-230	-	10-20
Hähnchen Sticks, Nuggets	Drehteller		200-220	-	15-20
Strudel	Drehteller		210-220	180	20-30
Lasagne, ca. 400 g**	niedriger Rost		220-230	600	12-17

* Garraum 5 Minuten vorheizen, dann das Lebensmittel auf den heißen Drehteller legen.

** Lebensmittel in ein passendes, hitzebeständiges Geschirr geben.

Prüfgerichte

Qualität und Funktion von Mikrowellen-Kombinationsgeräten werden von Prüfinstituten anhand dieser Gerichte geprüft.

Nach Norm EN 60705, IEC 60705 bzw. DIN 44547 und EN 60350 (2009)

Auftauen mit Mikrowelle

Gericht	Mikrowellen-Leistung Watt, Dauer in Minuten	Hinweis
Fleisch	180 W, 5 Min. + 90 W, 10-15 Min.	Pyrexform Ø 22 cm auf den niedrigen Rost stellen. Nach ca. 13 Minuten aufgetautes Fleisch entfernen.

Garen mit Mikrowelle

Gericht	Mikrowellen-Leistung Watt, Dauer in Minuten	Hinweis
Eiermilch	600 W, 10-13 Min. + 180 W, 25-30 Min.	Pyrexform 24 x 19 cm auf den niedrigen Rost stellen.
Biskuit	600 W, 9-10 Min.	Pyrexform Ø 22 cm auf den niedrigen Rost stellen.
Hackbraten	600 W, 18-23 Min.	Pyrexform 28 cm auf den niedrigen Rost stellen.

Garen mit Mikrowelle kombiniert

Gericht	Mikrowellen-Leistung Watt, Dauer in Minuten	Heizart	Temperatur °C	Hinweis
Kartoffelgratin	600 W, 25-30 Min.		210-220	Pyrexform Ø 22 cm auf den niedrigen Rost stellen.
Kuchen	180 W, 15-20 Min.		180-200	Pyrexform Ø 22 cm auf den niedrigen Rost stellen.
Hähnchen	360 W, 35-40 Min.		200-220	Nach ⅓ der Zeit wenden.

Backen

Hinweis: Die Tabellenwerte gelten für das Einschieben in den kalten Backofen.

Gericht	Geschirr	Heizart	Temperatur °C	Backdauer, Minuten
Wasserbiskuit	Springform Ø 26 cm, niedriger Rost		160-180	30-40
Gedeckter Apfelkuchen	Springform Ø 20 cm niedriger Rost		190-210	50-60

Grillen

Gericht	Zubehör	Heizart	Grillstufe	Dauer, Minuten
Toast bräunen	hoher Rost		3	4-5
Beefburger 9 Stück	hoher Rost		3	30-35

Important safety information.....	25	Childproof lock.....	35
Causes of damage.....	27	Switching on the childproof lock.....	35
Installation and connection.....	28	Switching off the childproof lock.....	35
Your new appliance.....	28	Childproof lock with automatic programmes.....	35
Control panel.....	28	Changing the basic settings.....	35
Buttons.....	28	Basic settings.....	35
Function selector.....	28	Care and cleaning.....	35
Temperature selector.....	28	Cleaning agents.....	36
Cooling fan.....	29	Malfunction table.....	36
Accessories.....	29	Malfunction table.....	36
Before using the appliance for the first time.....	29	After-sales service.....	37
Setting the clock.....	29	E number and FD number.....	37
Heating up the oven.....	29	Technical data.....	37
Cleaning the accessories.....	29	Acrylamide in foodstuffs.....	37
Setting the oven.....	30	Energy and environment tips.....	38
Setting the type of heating and temperature.....	30	Saving energy.....	38
Rapid heating.....	30	Environmentally-friendly disposal.....	38
Automatic safety switch-off.....	30	Tested for you in our cooking studio.....	38
The microwave.....	30	Defrosting, heating up and cooking with the microwave.....	38
Notes regarding ovenware.....	30	Microwave tips.....	41
Microwave power settings.....	31	Cakes and pastries.....	41
Setting the microwave.....	31	Baking tips.....	42
Combined oven and microwave operation.....	31	Roasting and grilling.....	43
Setting MicroCombi operation.....	31	Tips for roasting and grilling.....	45
Automatic programmes.....	32	Bakes, gratins, toast with toppings.....	45
Setting a programme.....	32	Convenience products, frozen.....	45
Defrosting programmes.....	32	Test dishes.....	46
Cooking programmes.....	33		
Combi cooking programmes.....	33		
Setting the time-setting options.....	33		
Setting the timer.....	33		
Setting the cooking time.....	34		
Setting the clock.....	34		

Additional information on products, accessories, replacement parts and services can be found at www.bosch-home.com and in the online shop www.bosch-eshop.com

Important safety information

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual for future use or for subsequent owners.

This appliance is only intended to be fully fitted in a kitchen. Observe the special installation instructions.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under warranty.

This appliance is intended for domestic use only. The appliance must only be used for

the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

Always insert the accessories into the cooking compartment correctly. See *"Description of accessories"* in the instruction manual.

Risk of fire!

- Combustible items stored in the cooking compartment may catch fire. Never store combustible items in the cooking compartment. Never open the appliance door if there is smoke inside. Switch off the appliance and unplug it from the mains or switch off the circuit breaker in the fuse box.
- Using the appliance for anything other than its intended purpose is dangerous and may cause damage.
The following is not permitted: drying out food or clothing, heating slippers, grain or cereal pillows, sponges, damp cleaning cloths or similar.
For example, heated slippers and grain or cereal pillows may catch fire, even several hours after they have been heated. The appliance must only be used for the preparation of food and drinks.
- Food may catch fire. Never heat food in heat-retaining packages.
Do not leave food heating unattended in containers made of plastic, paper or other combustible materials.
Do not select a microwave power or time setting that is higher than necessary. Follow the information provided in this instruction manual.
Never use the microwave to dry food. Never defrost or heat food with a low water content, e.g. bread, at too high a microwave power or for too long.
- Cooking oil may catch fire. Never use the microwave to heat cooking oil on its own.

Risk of explosion!

Liquids and other food may explode when in containers that have been tightly sealed. Never heat liquids or other food in containers that have been tightly sealed.

Risk of serious damage to health!

- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food residue immediately. Always keep the cooking compartment, door seal,

door and door stop clean; see also section *Care and cleaning*.

- Microwave energy may escape if the cooking compartment door or the door seal is damaged. Never use the appliance if the cooking compartment door or the door seal is damaged. Contact the after-sales service.
- Microwave energy will escape from appliances that do not have any casing. Never remove the casing. For any maintenance or repair work, contact the after-sales service.

Risk of electric shock!

- Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- The cable insulation on electrical appliances may melt when touching hot parts of the appliance. Never bring electrical appliance cables into contact with hot parts of the appliance.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- Penetrating moisture may cause electric shock. Never subject the appliance to intense heat or humidity. Only use this appliance indoors.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- The appliance is a high-voltage appliance. Never remove the casing.

Risk of burns!

- The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance.
- Accessories and ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cooking compartment.
- Alcoholic vapours may catch fire in the hot cooking compartment. Never prepare food

containing large quantities of drinks with a high alcohol content. Only use small quantities of drinks with a high alcohol content. Open the appliance door with care.

- Foods with peel or skin may burst or explode during, or even after, heating. Never cook eggs in their shells or reheat hard-boiled eggs. Never cook shellfish or crustaceans. Always prick the yolk when baking or poaching eggs. The skin of foods that have a peel or skin, such as apples, tomatoes, potatoes and sausages, may burst. Before heating, prick the peel or skin.
- Heat is not distributed evenly through baby food. Never heat baby food in closed containers. Always remove the lid or teat. Stir or shake well after the food has been heated. Check the temperature of the food before it is given to the child.
- Heated food gives off heat. The ovenware may become hot. Always use oven gloves to remove ovenware or accessories from the cooking compartment.
- Airtight packaging may burst when food is heated. Always observe the instructions on the packaging. Always use oven gloves to remove dishes from the cooking compartment.

Risk of scalding!

- When you open the appliance door, hot steam may escape. Open the appliance door with care. Keep children at a safe distance.
- Water in a hot cooking compartment may create hot steam. Never pour water into the hot cooking compartment.
- There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. Even if the container only vibrates a little, the hot liquid may suddenly boil over and spatter. When heating, always place a spoon in the container. This will prevent delayed boiling.

Risk of injury!

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

- Unsuitable ovenware may crack. Porcelain or ceramic ovenware can have small perforations in the handles or lids. These perforations conceal a cavity below. Any moisture that penetrates this cavity could cause the ovenware to crack. Only use microwave-safe ovenware.

Causes of damage

Caution!

- Creation of sparks: Metal - e.g. a spoon in a glass - must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could irreparably damage the glass on the inside of the door.
- Water in the hot cooking compartment: Never pour water into the hot cooking compartment. This will cause steam. The temperature change can cause damage.
- Moist food: Do not store moist food in the closed cooking compartment for long periods. Do not use the appliance to store food. This can lead to corrosion.
- Cooling with the appliance door open: Only leave the cooking compartment to cool with the door closed. Do not trap anything in the appliance door. Even if the door is only slightly ajar, the fronts of adjacent units may be damaged over time.
- Heavily soiled seal: If the seal is very dirty, the appliance door will no longer close properly during operation. The fronts of adjacent units could be damaged. Always keep the seal clean.
- Operating the microwave without food: Operating the appliance without food in the cooking compartment may lead to overloading. Never switch on the appliance unless there is food in the cooking compartment. An exception to this rule is a short crockery test (see the section "Microwave, suitable crockery").
- Using the appliance door for standing on or placing objects on: Do not stand or place anything on the open appliance door. Do not place ovenware or accessories on the appliance door.
- Transporting the appliance: Do not carry or hold the appliance by the door handle. The door handle cannot support the weight of the appliance and could break.
- Microwave popcorn: Never set the microwave power too high. Use a power setting no higher than 600 watts. Always place the popcorn bag on a glass plate. The disc may jump if overloaded.
- Liquid that has boiled over must not be allowed to run through the turntable drive into the interior of the appliance. Monitor the cooking process. Choose a shorter cooking time initially, and increase the cooking time as required.
- Never use the microwave oven without the turntable.

Installation and connection

Please observe the special installation instructions.

The appliance is fitted with a plug and must only be connected to a properly-installed earthed socket. The fuse protection must be rated at 16 amperes (L or B circuit breakers). The mains voltage must correspond to the voltage specified on the rating plate.

The socket must be installed and the power cable replaced by a qualified electrician only. If the plug is no longer accessible following installation, an all-pin disconnecting device must be present on the installation side, with a contact gap of at least 3 mm.

Multiple plugs, plug bars and extension leads must not be used. Overloading can result in a risk of fire.

Your new appliance

Use this section to familiarise yourself with your new appliance. The control panel and the individual operating controls are

explained. You will find information on the cooking compartment and the accessories.

Control panel



Buttons

You can use the buttons to set various functions. On the display, you can read the values that you have set.

Symbol	Button function
90	Selects 90 watt microwave power
180	Selects 180 watt microwave power
360	Selects 360 watt microwave power
600	Selects 600 watt microwave power
900	Selects 900 watt microwave power
>>>>	Selects rapid heating
kg	Selects the weight
⌚	Opens and closes the time-setting options menu
🔑	Selects childproof lock
➖Minus	Decreases the adjustment values
➕Plus	Increases the adjustment values
▶	Press briefly: starts/stops operation Press and hold: cancels operation

Function selector

Use the function selector to set the type of heating.

Setting	Use
0	Off position The oven is switched off.
🔥	Microwave Selects microwave operation.
🍷	Hot air For baking sponge cakes in baking tins, flans and cheesecakes as well as cakes, pizza and small baked items on the baking tray.

Setting	Use
🍷	Hot air grilling Poultry goes brown and crispy. Baked casseroles and grilled dishes work out best using this setting.
🍷	Pizza setting For frozen convenience products and dishes which require a lot of heat from underneath.
🔥	Grill Select between the levels high, medium or low. This is ideal if you wish to grill several steaks, sausages, pieces of fish or slices of bread.
P	Programmes 4 defrosting programmes 11 cooking programmes The type of heating and cooking time are set by weight.

Notes

- When you make settings, the indicator lamp above the function selector lights up.
- When you press the ▶||| button, the oven light switches on in the cooking compartment.

Temperature selector

The temperature selector is used to set the temperature or grill setting.

Setting	Use
●	Off position The oven does not heat up.
50, 100-230	Temperature range Temperature in °C




Setting		Use
1, 2, 3	Grill settings	1 = low 2 = medium 3 = high

Cooling fan

Your appliance has a cooling fan. The cooling fan switches on during operation. The hot air escapes above the door.

The cooling fan continues to run for a certain time after operation.

Accessories

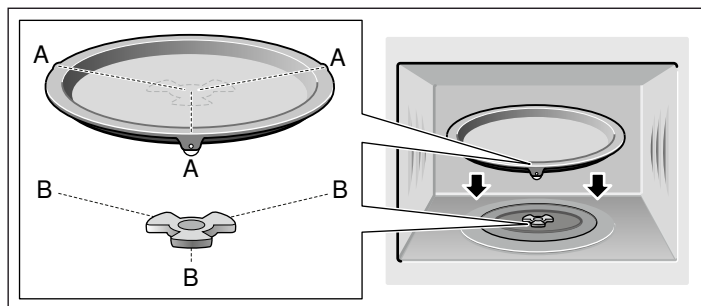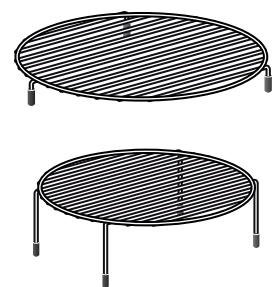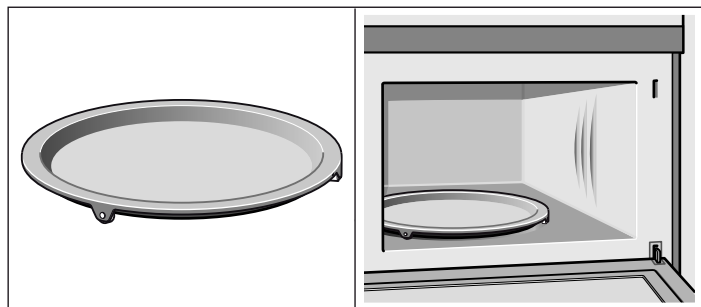

Caution!

Do not cover the ventilation slots. Otherwise, the appliance will overheat.

Notes

- The appliance remains cool during microwave operation. The cooling fan will still switch on. The fan may run on even when microwave operation has ended.
- Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. Wipe away the condensation after cooking.

Turntable

As a surface for the wire rack.

Food which particularly requires a lot of heat from underneath can be prepared directly on the turntable.

The turntable can turn clockwise or anti-clockwise, and is cut resistant. You can cut pizza into slices on the turntable itself.

- Never use the microwave without the turntable.
- The turntable can withstand max. 5 kg.
- The turntable must turn when using all types of heating.

Lower wire rack

For the microwave and for baking and roasting in the oven.

Higher wire rack

For grilling, e.g. steaks, sausages and for toasting bread.

As a support for shallow dishes.

Fitting the turntable

As shown in the figure, place the turntable with rollers "A", onto the turntable drive coupling "B" in the centre of the cooking compartment floor.

The turntable must sit straight on the driver.

Before using the appliance for the first time

Here you will find everything you need to do before using your oven to prepare food for the first time. First read the section on *Safety information*.

Setting the clock

Once the appliance is connected, three zeros and the ► ⌚ symbols light up in the display. Set the clock.

1. Press the + or – button.
Default value +: 12:00
Default value –: 23:59
2. Use the + or – button to set the clock.
3. Press the ⌚ button.
The time is set.

Note: In order to reduce the energy consumption of your appliance in standby, you can hide the clock. Read about this in the *Changing basic settings* section.

Heating up the oven

To remove the new cooker smell, heat up the oven when it is empty and closed. One hour with 🔥 Hot air at 180 °C is ideal. Ensure that no packaging remnants have been left in the cooking compartment.

1. Use the function selector to set 🔥 Hot air.
2. Set the temperature to 180 °C using the temperature selector.
3. Press the ►⏸ button.
The oven begins to heat up.

After an hour, switch off the oven. To switch off, turn the function selector to the off position.

Cleaning the accessories

Before you use the accessories for the first time, clean them thoroughly with hot soapy water and a soft dish cloth.


Setting the oven

There are various ways in which you can set your oven. Here we will explain how you can select the desired type of heating and temperature or grill setting. You can also select the oven cooking time for your dish. Please refer to the section on *Setting the time-setting options*.


Setting the type of heating and temperature

Example in diagram:  Hot air at 200 °C.

1. Use the function selector to set the type of heating.

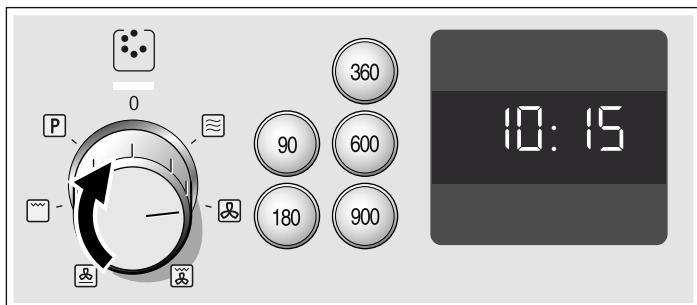

2. Use the temperature selector to set the temperature or grill setting.

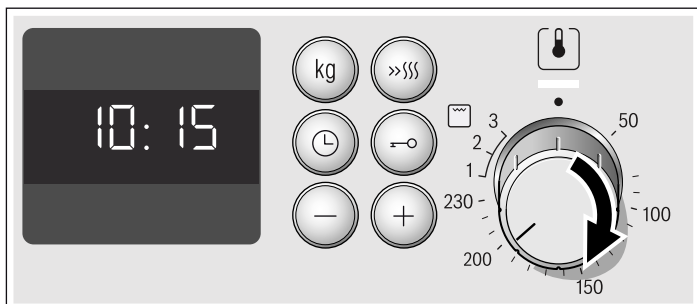

3. Press the  button.

The oven begins to heat up.

Opening the oven door during operation

Operation is suspended. After closing the door, press the  button. Operation will then continue.

Pausing operation

Press the  button to pause operation. Press the  button to continue operation.

Switching off the oven

Turn the function selector to the off position.

Changing the settings

The type of heating and temperature or grill setting can be changed at any time using their respective selectors.

Rapid heating

With rapid heating, your oven reaches the set temperature particularly quickly.

Use the rapid heating function when temperatures above 100 °C are set. Rapid heating is available for the following types of heating:

-  Hot air
-  Pizza setting
-  Hot air grilling

To ensure an even cooking result, only put your food in the cooking compartment when the rapid heating phase is complete.

1. Setting the type of heating and temperature.

2. Press the  button.

The  symbol lights up in the display.

3. Press the  button.

The oven begins to heat up.

The rapid heating process is complete

A signal sounds. The  symbol in the display goes out. Put your dish in the oven.

Cancelling rapid heating

Press the  button. The  symbol in the display goes out.

Automatic safety switch-off

The automatic safety switch-off is activated if your appliance is operating for a long time with no cooking time having been set. The time at which your appliance switches itself off depends on the set operating mode and temperature.

Example: If your oven is operating with Hot air at 160 °C, it will automatically switch off after approx. 5 hours.

 appears in the display panel. The appliance switches off. To acknowledge, press the  button.

The microwave

Microwaves are converted to heat in foodstuffs. The microwave can be used solo, i.e. on its own, or in combination with a different type of heating. You will find information about ovenware and how to set the microwave.

Note:

In the *Tested for you in our cooking studio* section, you will find examples for defrosting, heating and cooking with the microwave oven.

Notes regarding ovenware

Suitable ovenware

Suitable dishes are heat-resistant ovenware made of glass, glass ceramic, porcelain, ceramic or heat-resistant plastic. These materials allow microwaves to pass through.

You can also use serving dishes. This saves you having to transfer food from one dish to another. You should only use ovenware with decorative gold or silver trim if the manufacturer guarantees that they are suitable for use in microwaves.

Unsuitable ovenware

Metal ovenware is unsuitable. Metal does not allow microwaves to pass through. Food in covered metal containers will remain cold.

Caution!

Creation of sparks: metal – e.g. a spoon in a glass – must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could destroy the glass on the inside of the door.

Ovenware test

Do not switch on the microwave unless there is food inside. The following ovenware test is the only exception to this rule.

Perform the following test if you are unsure whether your ovenware is suitable for use in the microwave:

1. Heat the empty ovenware at maximum power for ½ to 1 minute.
2. Check the temperature occasionally during that time.
The ovenware should still be cold or warm to the touch.
The ovenware is unsuitable if it becomes hot or sparks are generated.

Microwave power settings

Use the button to set the desired microwave power.

90 W	for defrosting delicate foods
180 W	for defrosting and continued cooking
360 W	for cooking meat and heating delicate foods
600 W	for heating and cooking food
900 watts	for heating liquids

Notes

- When you press a button, the selected power lights up.
- The microwave power can be set to 900 watts for a maximum of 30 minutes. With all other power settings a maximum cooking time of 1 hour 30 minutes is possible.

Setting the microwave

Example: Microwave power 600W, cooking time 17 minutes.

1. Set the function selector to .
2. Press the button for the microwave power setting you require.
The 600 W power level lights up and a suggested cooking time is displayed.

3. Use the **+** or **–** button to set the cooking time.

4. Press the .

Operation begins. The cooking time starts counting down.

The cooking time has elapsed

A signal sounds. Microwave operation has finished. Turn the function selector to the zero position. You can stop the audible signal by pressing the .

Opening the oven door during cooking

Operation is suspended. After closing the door, press the  button briefly. The programme will then continue.

Changing the cooking time

This can be done at any time. Use the **+** or **–** button to change the cooking time.

Changing the microwave power setting

Press the button for the new microwave power setting. Use the **+** or **–** button to set the cooking time and restart the microwave.

Pausing operation

Press the  button to pause operation. Press the  button to continue operation.

Cancelling operation

Press and hold the  button for approximately 4 seconds and turn the function selector to the off position.

Notes

- When you set the function selector to , the highest microwave power setting always lights up as the suggested setting.
- If you open the appliance door during cooking, the fan may continue to run.

Combined oven and microwave operation

Use the microwave at the same time as an oven operating mode. The food becomes crispy and brown just as in the oven, but more quickly.

You can combine all microwave power settings up to 600 W with the oven operating modes.

Observe the instructions on ovenware in the *Microwave* section.

Setting MicroCombi operation

Example: Microwave 360 W, 17 minutes and  Hot air 190 °C.

1. Set the type of heating using the function selector, and the temperature using the temperature selector.
2. Press the button for the microwave power setting you require.
A suggested cooking time appears.
3. Use the **+** or **–** button to set the cooking time.
4. Press the .

Operation begins. The cooking time starts counting down in the display.

The cooking time has elapsed

A signal sounds. Combination mode has finished. You can stop the audible signal by pressing the .

Opening the oven door during cooking

Operation is suspended. After closing the door, press the  button briefly. The programme will then continue.

Pausing operation

Press the  button briefly. The oven is paused. Press the  button again to continue operation.

Changing the cooking time

This can be done at any time. Use the **+** or **–** button to change the cooking time.

Changing the microwave power setting

Press the button for the new microwave power setting. Use the **+** or **–** button to set the cooking time and restart the microwave.

Cancelling operation

Press and hold the  button for approximately 4 seconds and turn the function selector back to the off position.

Automatic programmes

The automatic programmes enable you to prepare food very easily. You select the programme and enter the weight of your food. The automatic programme makes the optimum setting. You can choose from 15 programmes.


Always place the food in the cold cooking compartment.

Setting a programme

When you have selected a programme, set the oven. The temperature selector must be in the off position.

Example in diagram: Programme 2 with a weight of 1 kilogramme.

1. Set the function selector to automatic programmes . The first programme number appears in the display.

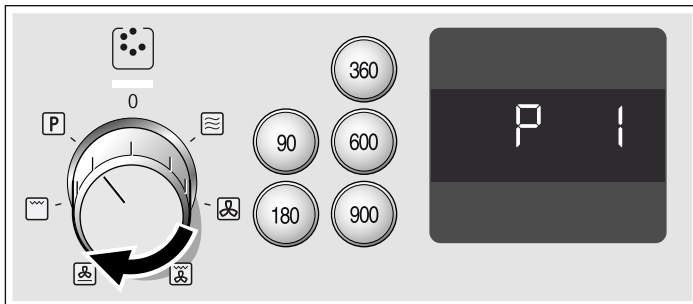

2. Use the + or - button to select the programme number.



3. Press the button. The weight suggestion 0.50 kg appears in the display.



4. Use the + or - button to set the weight.



5. Press the button. The programme starts. You can see the cooking time counting down and the ► and I→I symbols appear.

The programme has finished

An audible signal sounds. The programme has finished and the oven stops heating. Press the button and turn the function selector to the off position.

Changing the programme

Once you have started the programme, the programme number and weight cannot be changed.

Switching off the signal early

Press the button.

Opening the oven door during cooking

Operation is suspended. After closing the door, press the button briefly. The programme will then continue.

Pausing operation

Press the button briefly. The oven is paused. Press the button again to continue operation.

Cancelling the programme

Press and hold the button for approximately 4 seconds and turn the function selector to the zero position. The oven switches off.

Changing the cooking time and end time

If using automatic programmes, you cannot change the cooking time or end time.

Defrosting programmes

You can use the 4 defrosting programmes to defrost meat, poultry and bread.

Notes

■ Preparing food

Use food that has been frozen at -18 °C and stored in portion-sized quantities that are as thin as possible.

Take the food to be defrosted out of all packaging and weigh it. You need to know the weight to set the programme.

- Liquid will be produced when defrosting meat or poultry. Drain off this liquid when turning meat and poultry and under no circumstances use it for other purposes or allow it to come into contact with other foods.

■ Ovenware

Place the food in a microwaveable shallow dish, e.g. a china or glass plate, but do not cover.

- When defrosting chicken and chicken portions (P03), an audible signal will sound on two occasions to indicate that the food should be turned.

■ Resting time

The defrosted food should be left to stand for an additional 10 to 30 minutes until it reaches an even temperature. Large pieces of meat require a longer standing time than smaller pieces. Flat pieces of meat and items made from minced meat should be separated from each other before leaving to stand.

After this time, you can continue to prepare the food, even though thick pieces of meat may still be frozen in the middle. The giblets can be removed from poultry at this point.

Programme no.	Weight range in kg	
	Defrost	
P 01	Minced meat	0.20 - 1.00
P 02	Pieces of meat	0.20 - 1.00
P 03	Chicken, chicken pieces	0.40 - 1.80
P 04	Bread	0.20 - 1.00

Cooking programmes

With the 3 cooking programmes, you can cook rice, potatoes or vegetables.

Notes

■ Preparing food

Weigh out the food. You need to know the weight to set the programme.

■ Ovenware

Generally, the food must be cooked in microwaveable ovenware with a lid. For rice, you should use a large, deep dish. Place the ovenware on the lower wire rack.

Rice (P05)

Note: Do not use boil-in-the-bag rice. Rice foams a lot during cooking. Enter the uncooked weight (without liquid). Add two to two and a half times the amount of liquid to the rice.

Potatoes (P06)

Note: Boiled potatoes:

Cut into pieces of equal size. Add a little salt and 1 tablespoon of water for every 100 g of potatoes.

Vegetables (P07)

Notes

■ Fresh vegetables:

Cut into pieces of equal size. Add 1 tablespoon of water for every 100 g of vegetables.

■ Resting time

Once the programme has finished, stir the food again. You should leave it to stand for another 5-10 minutes until it reaches an even temperature.

The cooking result will depend on the quality and consistency of the food.

Programme no.	Weight range in kg	
	Cooking	
05	Rice	0.05 - 0.20
06	Potato	0.15 - 1.00
07	Vegetables	0.15 - 1.00

Combi cooking programmes

Notes

■ Take the food out of its packaging and weigh it. If it is not possible to enter the exact weight, you should round it up or down.

■ Ovenware

Cook the food in ovenware which is not too big, and is heat-resistant and microwaveable. Place the ovenware on the lower wire rack.

Lamb, medium (P12)

Ideal for a shoulder joint or boned leg of lamb.

Meat loaf (P13)

The programme is suitable for meat loaves not more than 7 cm in height.

Fish, whole (P14)

Scale the fish beforehand. Place the fish in the ovenware in its swimming position.

Rice stew (P15)

Only enter the weight of the rice. Ideal for rice stews with vegetables, fish or poultry. Only use fresh ingredients. Use a high-sided dish with a lid.

Resting time

Once the programme has finished, the food should be allowed to rest for another approx. 5-10 minutes so it reaches an even temperature.

Programme no.	Weight range in kg	
	Combi-cooking	
08	Bake, frozen* (up to 3 cm in height)	0.40 - 1.20
09	Chicken, whole*	0.50 - 2.00
10	Sirloin, medium*	0.50 - 1.50
11	Pork neck joint	0.50 - 2.00
12	Lamb, medium	0.80 - 2.00
13	Meat loaf*	0.50 - 1.50
14	Fish, whole	0.30 - 1.00
15	Rice stew using fresh ingredients	0.05 - 0.20

* Use ovenware without a lid

Setting the time-setting options

Your oven has various time-setting options. You can use the  button to call up the menu and switch between the individual functions. As long as the symbols are lit, you can make settings. The  arrow shows you the time-setting option that is active. A time-setting option that has already been set can be changed directly with the  or  button when the  arrow is next to the relevant time symbol.

Setting the timer

You can use the timer as a kitchen timer. It runs independently of the oven. The timer has its own audible signal. In this way,

you can tell whether it is the timer or a cooking time which has elapsed.

1. Press the  button once.

The time symbols light up in the display and the  arrow is next to .

2. Use the  or  button to set the timer duration.

Default value for  button = 10 minutes

Default value for  button = 5 minutes

After a few seconds, the time setting is adopted. The timer starts. The ►⏰ symbol lights up in the display and the timer duration counts down. The other time symbols go out.

The timer duration has elapsed

A signal sounds. 0:00 is shown in the display. Use the ⏰ button to switch off the timer.

Changing the timer duration

Use the + or – button to change the timer duration. After a few seconds, the change is adopted.

Cancelling the timer duration

Use the – button to reset the timer duration to 0:00. The change will be adopted after a few seconds. The timer is switched off.

Checking the time settings

If several time-setting options are set, the corresponding symbols are illuminated on the display. The timer counts down in the foreground. The ⏰ symbol is preceded by the ► arrow and the timer can be seen counting down.

To check the ⏰ timer, I→I cooking time or ⏰ clock, press the ⏰ button repeatedly until the arrow points to the appropriate symbol. The value is shown for a few seconds on the display.

Setting the cooking time

The cooking time for your meal can be set on the oven. When the cooking time has elapsed, the oven switches itself off automatically. This means that you do not have to interrupt other work to switch off the oven. The cooking time cannot be accidentally exceeded.

Example in the diagram: Cooking time 45 minutes.

1. Use the function selector to set the type of heating.
2. The temperature selector is used to set the temperature or grill setting.
3. Press the ⏰ button twice.
20:00 is shown in the display. The time symbols light up and the arrow ► is next to I→I.



4. Use the + or – button to set the cooking time.



5. Press the ►⏰ button.

The oven starts. The cooking time counts down in the display and the ►⏰ symbol lights up. The other time symbols go out.

The cooking time has elapsed

An audible signal sounds. The oven stops heating. 0:00 is shown in the display. Press the ⏰ button. The audible signal stops. Turn the function selector to the off position. The oven is switched off.

Changing the cooking time

Use the + or – button to change the cooking time. After a few seconds, the change is adopted. If the timer has been set, press the ⏰ button beforehand.

Cancelling the cooking time

Use the – button to reset the cooking time to 0:00. After a few seconds, the change is adopted. The cooking time is cancelled. If the timer has been set, press the ⏰ button beforehand.

Checking the time settings

If several time-setting options are set, the corresponding symbols are illuminated on the display. The ► arrow is next to the symbol for time function which is currently visible on the display.

To check the ⏰ timer, I→I cooking time or ⏰ clock, press the ⏰ button repeatedly until the ► arrow points to the appropriate symbol. The display shows the value for a few seconds.

Setting the clock

When the appliance has been connected to the power supply, or after a power cut, the ►⏰ symbols and three zeros light up in the display. Set the clock.

1. Press the + or – button.
Default value +: 12:00
Default value –: 23:59
2. Use the + or – button to set the clock.
3. Press the ⏰ button. The time is set.

Changing the clock

Prerequisite: your appliance must be switched off.

1. Press the ⏰ button twice.
The time symbols light up in the display, the ► arrow is next to the ⏰ symbol.
2. Use the + or – button to change the clock.
After a few seconds, the time that has been set is adopted.

Hiding the clock

You can hide the clock. For more information, please refer to the section *Changing the basic settings*.

Childproof lock

The oven has a childproof lock to prevent children switching it on accidentally.

The oven will not react to any settings. The timer and clock can also be set when the childproof lock has been switched on.

Switching on the childproof lock

Requirement: No cooking time should be set and the function selector is in the off position.

Press and hold the  button for approx. four seconds.

The  symbol appears in the display. The childproof lock is activated.

Switching off the childproof lock

Press and hold the  button for approx. four seconds. The  symbol on the display goes out. The childproof lock is deactivated.

Childproof lock with automatic programmes

When automatic programmes have been set, the childproof lock is not operational.

Changing the basic settings

Your appliance has various basic settings which you can change at any time.

Basic settings

In the table, you will find all the basic settings and options for changing them.

Basic setting	Options	Explanation
 1 Clock display 1 = on	Clock display 2 = off	Displays the clock
 2 Signal duration 2 = medium = 2 minutes	1 = short = 10 seconds 3 = long = 5 minutes	Audible signal after the cooking time has elapsed
 3 Signal volume 2 = medium	1 = low 3 = high	Volume of the signal
 4 Waiting time 2 = medium = 5 seconds	1 = short = 2 seconds 3 = long = 10 seconds	Waiting time between two separate steps, after setting

- Requirement: Your appliance is switched off.
- Press and hold the  button for several seconds. The first basic setting appears in the display.
 - Use the  or  button to change the basic setting.

- Confirm by pressing the  button. The next basic setting appears in the display. You can go through all of the basic settings using the  button and make changes using the  or  button.
- When finished, press and hold the  button for several seconds. All settings are applied. You can change the settings at any time.

Care and cleaning

With careful care and cleaning your microwave oven will retain its looks and remain good order. We will explain here how you should care for and clean your appliance correctly.

Risk of electric shock!

Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.

Risk of burns!

Never clean the appliance immediately after switching off. Let the appliance cool down.

Risk of serious damage to health!

Microwave energy may escape if the cooking compartment door or the door seal is damaged. Never use the appliance if

the cooking compartment door or the door seal is damaged. Contact the after-sales service.

Notes

- Slight differences in colour on the front of the appliance are caused by the use of different materials, such as glass, plastic and metal.
- Shadows on the door panel which look like streaks, are caused by reflections made by the oven light.
- Unpleasant odours, e.g. after fish has been prepared, can be removed very easily. Add a few drops of lemon juice to a cup of water. Place a spoon into the container as well, to prevent delayed boiling. Heat the water for 1 to 2 minutes at maximum microwave power.

Cleaning agents

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Do not use

- sharp or abrasive cleaning agents,
- metal or glass scrapers to clean the glass in the appliance door.
- metal or glass scrapers to clean the door seal,
- hard scouring pads and sponges,
- cleaning agents with high concentrations of alcohol.

Wash new sponge cloths thoroughly before use.

Allow all surfaces to dry thoroughly before using the appliance again.

Area	Cleaning agents
Appliance front	Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Do not use glass cleaners or metal or glass scrapers for cleaning.
Appliance front with stainless steel	Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such residues. Special stainless steel cleaning agents can be obtained from the after-sales service or from specialist shops. Do not use glass cleaners or metal or glass scrapers for cleaning.

Area	Cleaning agents
Cooking compartment	Hot soapy water or a vinegar solution: Clean with a dish cloth and dry with a soft cloth. If the oven is very dirty: Do not use oven spray or other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry thoroughly.
Recess in cooking compartment	Damp cloth: Ensure that no water seeps through the turntable drive into the appliance interior.
Wire racks	Hot soapy water: Clean using stainless steel cleaning agent or in the dishwasher.
Door panels	Glass cleaner: Clean with a dish cloth. Do not use a glass scraper.
Seal	Hot soapy water: Clean with a dish cloth, do not scour. Do not use a metal or glass scraper for cleaning.

Malfunction table

Malfunctions often have simple explanations. Please refer to the malfunction table before calling the after-sales service.

If a meal does not turn out exactly as you wanted, refer to the *Tested for you in our cooking studio* section, where you will find plenty of cooking tips and tricks.

Risk of electric shock!

Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers.

Malfunction table

Problem	Possible cause	Remedy/information
The appliance does not work.	Faulty circuit breaker.	Look in the fuse box and check that the circuit breaker for the appliance is in working order.
	Plug not plugged in.	Plug in the plug.
	Power cut	Check whether the kitchen light works.
The appliance does not work.  appears in the display panel.	Childproof lock is active.	Deactivate the childproof lock (see section: Childproof lock).
 and  are in the display panel.	Power cut	Reset the clock.
The microwave does not switch on.	Door not fully closed.	Check whether food residue or debris is trapped in the door.

Problem	Possible cause	Remedy/information
It takes longer than before for the food to heat up in the microwave	The selected microwave power level is too low.	Select a higher power level.
	A larger amount than usual has been placed in the appliance.	Double the amount = almost double the cooking time.
	The food was colder than usual.	Stir or turn the food during cooking.
Turntable grates or grinds.	Dirt or debris in the area around the turntable drive.	Clean the rollers under the turntable and the recess in the oven floor thoroughly.
A particular operating mode or power level cannot be set.	The temperature, power level or combined setting is not possible for this operating mode.	Choose permitted settings.
E 1 appears in the display panel.	The thermal safety switch-off function has been activated.	Call the after-sales service.
E 2 appears in the display panel.	The automatic safety switch-off function has been activated.	Touch any button or turn the rotary selector.
E 3 appears in the display panel.	The oven is malfunctioning.	Call the after-sales service.
E 4 appears in the display panel.	The thermal safety switch-off function has been activated.	Call the after-sales service.
E 11 appears in the display panel.	Moisture in the control panel.	Allow the control panel to dry.
E 17 appears in the display panel.	Rapid heating has failed.	Call the after-sales service.
The appliance can be set, but does not heat up. The colon is flashing.	The demo mode has been activated.	Disconnect the appliance from the mains power supply, then reconnect it. Press and hold the  button until the  symbol appears in the display and the colon stops flashing. Confirm within 4 seconds using the  button.

After-sales service

Our after-sales service is there for you if your appliance needs to be repaired. We will always find the right solution in order to avoid unnecessary visits from a service technician.

E number and FD number

When calling us, please give the product number (E no.) and the production number (FD no.) so that we can provide you with the correct advice. The rating plate containing these numbers is found on the side of the oven door. You can make a note of the number of your appliance and the telephone number of the after-sales service in the space below to save time should it be required.

E no.	FD no.
After-sales service 	

Please note that there will be a fee for a visit by a service technician in the event of a malfunction, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

To book an engineer visit and product advice

GB	0344 892 8979 Calls charged at local or mobile rate.
IE	01450 2655 0.03 € per minute at peak. Off peak 0.0088 € per minute.

Rely on the professionalism of the manufacturer. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your appliances.

Technical data

Power supply	220-230 V, 50 Hz
Microwave power setting	900 W
Microwave frequency	2,450 MHz
Fuse	16 A
VDE approved	Yes
CE mark	Yes

This appliance corresponds to the standards EN 55011 and CISPR 11. It is a Group 2, Class B product.

Group 2 means that microwaves are produced for the purpose of heating food. Class B states that the appliance is suitable for private households.

Acrylamide in foodstuffs

Which foods are affected?

Acrylamide is mainly produced in grain and potato products that are heated to high temperatures, such as potato crisps,

chips, toast, bread rolls, bread, fine baked goods (biscuits, gingerbread, cookies).

Tips for keeping acrylamide to a minimum when preparing food	
General	Keep cooking times to a minimum. Cook meals until they are golden brown, but not too dark. Large, thick pieces of food contain less acrylamide.
Baking biscuits	Max. 200 °C in Top/bottom heating or max. 180 °C in 3D hot air or hot air mode. Max. 190° C in Top/bottom heating or max. 170 °C in 3D hot air or hot air mode. Egg white and egg yolk reduce the formation of acrylamide.
Oven chips	Distribute thinly and evenly over the baking tray. Cook at least 400 g at once on a baking tray so that the chips do not dry out.

Energy and environment tips

Here you can find tips on how to save energy when baking and roasting and how to dispose of your appliance properly.

Saving energy

- Only preheat the oven if this is specified in the recipe or in the operating instruction tables.
- Use dark, black lacquered or enamelled baking tins. They absorb the heat particularly well.
- Open the oven door as infrequently as possible while you are cooking, baking or roasting.
- It is best to bake several cakes one after the other. The oven is still warm. This reduces the baking time for the second cake. You can also place two loaf tins next to each other.

- For longer cooking times, you can switch the oven off 10 minutes before the end of the cooking time and use the residual heat to finish cooking.

Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Tested for you in our cooking studio

Here you will find a selection of recipes and the ideal settings for them. We will show you which type of heating and which temperature or microwave power setting is best for your meal. You can find information about suitable accessories and the height at which they should be inserted. There are also tips about ovenware and preparation methods.

Notes

- The values in the table always apply to food placed into the cooking compartment when it is cold and empty. Only preheat the appliance if the table specifies that you should do so. Before using the appliance, remove all accessories from the cooking compartment that you will not be using.
- Do not line the accessories with greaseproof paper until after they have been preheated.
- The times specified in the tables are only guidelines. They will depend on the quality and composition of the food.
- Use the accessories supplied. Additional accessories may be obtained from specialist retailers or from the after-sales service.
- Always use an oven cloth or oven gloves when taking accessories or ovenware out of the cooking compartment.

Defrosting, heating up and cooking with the microwave

The following tables provide you with numerous options and settings for the microwave.

The times specified in the tables are only guidelines. They may vary according to the ovenware used, the quality, temperature and consistency of the food.

Time ranges are often specified in the tables. Set the shortest time first and then extend the time if necessary.

It may be that you have different quantities from those specified in the tables. A rule of thumb can be applied: Double amount - just under double the cooking time, half amount - half the cooking time.

Place the ovenware in the centre of the lower wire rack. The food will then absorb the microwaves from all sides.

Defrosting

Notes

- Place the frozen food in an open container on the wire rack.
- Delicate parts such as the legs and wings of chicken or fatty outer layers of roasts can be covered with small pieces of aluminium foil. The foil must not touch the cooking compartment walls. You can remove the foil half way through the defrosting time.
- Turn or stir the food once or twice during the defrosting time. Large pieces of food should be turned several times. When turning, remove any liquid that has resulted from defrosting.
- Leave defrosted items to stand at room temperature for a further 10 to 60 minutes so that the temperature can stabilise. The giblets can be removed from poultry at this point.

Defrost	Weight	Microwave power setting in watts, cooking time in minutes	Notes
Whole pieces of meat (beef, veal or pork - on the bone or boned)	800 g	180 W, 15 mins + 90 W, 10-20 mins	Turn several times
	1 kg	180 W, 20 mins + 90 W, 15-25 mins	
	1.5 kg	180 W, 30 mins + 90 W, 20-30 mins	

Defrost	Weight	Microwave power setting in watts, cooking time in minutes	Notes
Meat in pieces or slices of beef, veal or pork	200 g	180 W, 3 mins + 90 W, 10-15 mins	Separate any defrosted parts when turning
	500 g	180 W, 5 mins + 90 W, 15-20 mins	
	800 g	180 W, 8 mins + 90 W, 15-20 mins	
Minced meat, mixed	200 g	90 W, 10-15 mins	Freeze food flat if possible Turn several times, remove any defrosted meat
	500 g	180 W, 5 mins + 90 W, 10-15 mins	
	800 g	180 W, 8 mins + 90 W, 15-20 mins	
Poultry or poultry portions	600 g	180 W, 8 mins + 90 W, 10-15 mins	Turn during cooking.
	1.2 kg	180 W, 15 mins + 90 W, 25-30 mins	
Duck	2 kg	180 W, 20 mins + 90 W, 30-40 mins	Turn several times
Fish fillet, fish steak or slices	400 g	180 W, 5 mins + 90 W, 10-15 mins	Separate any defrosted parts
Whole fish	300 g	180 W, 3 mins + 90 W, 10-15 mins	-
	600 g	180 W, 8 mins + 90 W, 10-15 mins	
Vegetables, e.g. peas	300 g	180 W, 10-15 mins	Stir carefully during defrosting.
	600 g	180 W, 10 mins + 90 W, 10-15 mins	
Fruit, e.g. raspberries	300 g	180 W, 7-10 mins	Stir carefully during defrosting and separate any defrosted parts
	500 g	180 W, 8 mins + 90 W, 5-10 mins	
Butter, defrosting	125 g	180 W, 1 mins + 90 W, 2-4 mins	Remove all packaging
	250 g	360 W, 1 min + 90 W, 2-4 mins	
Loaf of bread	500 g	180 W, 6 mins + 90 W, 5-10 mins	Turn during cooking.
	1 kg	180 W, 12 mins + 90 W, 15-25 mins	
Cakes, dry, e.g. sponge cake	500 g	90 W, 15-20 mins	Only for cakes without icing, cream or crème pâtissière, separate the pieces of cake.
	750 g	180 W, 5 mins + 90 W, 10-15 mins	
Cakes, moist, e.g. fruit flan, cheese-cake	500 g	180 W, 5 mins + 90 W, 10-15 mins	Only for cakes without icing, cream or gelatine
	750 g	180 W, 7 mins + 90 W, 10-15 mins	

Defrosting, heating up or cooking frozen food

Notes

- Take ready meals out of the packaging. They will heat up more quickly and evenly in microwaveable ovenware. The different components of the meal may not require the same amount of time to heat up.
- Food which lies flat will cook more quickly than food which is piled high. You should therefore distribute the food so that it is as flat as possible in the ovenware. Different foodstuffs should not be placed in layers on top of one another.


- Always cover the food. If you do not have a suitable cover for your ovenware, use a plate or special microwave foil.
- Stir or turn the food 2 or 3 times during cooking.
- After heating, allow the food to stand for a further 2 to 5 minutes so that it can achieve an even temperature.
- Always use an oven cloth or oven gloves when removing plates from the oven.
- This will help the food retain its own distinct taste, so it will require less seasoning.

Defrosting, heating up or cooking frozen food	Weight	Microwave power setting in watts, cooking time in minutes	Notes
Menu, plated meal, ready meal	300-400 g	600 W, 10-15 mins	Take meal out of packaging; cover food to heat
Soup	400-500 g	600 W, 8-10 mins	Ovenware with lid
Stews	500 g	600 W, 10-15 mins	Ovenware with lid
	1 kg	600 W, 20-25 mins	
Slices or pieces of meat in sauce, e.g. goulash	500 g	600 W, 15-20 mins	Ovenware with lid
	1 kg	600 W, 25-30 mins	
Fish, e.g. fillet steaks	400 g	600 W, 10-15 mins	Covered
	800 g	600 W, 18-20 mins	
Side dishes, e.g. rice, pasta	250 g	600 W, 2-5 mins	Ovenware with lid; add liquid
	500 g	600 W, 8-10 mins	
Vegetables, e.g. peas, broccoli, carrots	300 g	600 W, 8-10 mins	Ovenware with lid; add 1 tbsp of water
	600 g	600 W, 15-20 mins	
Creamed spinach	450 g	600 W, 11-16 mins	Cook without additional water

Heating food

Risk of scalding!

There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. Even if the container only moves a little, the hot liquid can suddenly boil over and spatter. When heating liquids, always place a spoon in the container. This will prevent delayed boiling.

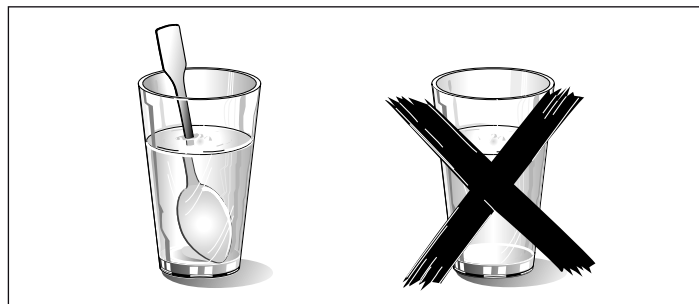

Caution!

Metal - e.g. a spoon in a glass - must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could irreparably damage the glass on the inside of the door.

Notes

- Take ready meals out of the packaging. They will heat up more quickly and evenly in microwaveable ovenware. The different components of the meal may not require the same amount of time to heat up.
- Always cover the food. If you do not have a suitable cover for your container, use a plate or special microwave foil.
- Stir or turn the food several times during the heating time. Check the temperature.
- After heating, allow the food to stand for a further 2 to 5 minutes so that it can achieve an even temperature.
- Always use an oven cloth or oven gloves when removing plates from the oven.

Heating food	Weight	Microwave power setting in watts, cooking time in minutes	Notes
Menu, plated meal, ready meal	350-500 g	600 W, 5-10 mins	Take meal out of packaging, cover food to heat
Drinks	150 ml	900 W, 1-2 mins	Caution! Place a spoon in the glass. Do not over-heat alcoholic drinks. Check during heating
	300 ml	900 W, 2-3 mins	
	500 ml	900 W, 3-4 mins	
Baby food, e.g. baby bottle	50 ml	360 W, approx. 1 min	Place baby bottles on the cooking compartment floor without the teat or lid. Shake or stir well after heating. You must check the temperature
	100 ml	360 W, 1-2 mins	
	200 ml	360 W, 2-3 mins	
Soup			-
1 cup	175 g	900 W, 2-3 mins	
2 cups	175 g each	900 W, 4-5 mins	
4 cups	175 g each	900 W, 5-6 mins	
Slices or pieces of meat in sauce, e.g. goulash	500 g	600 W, 10-15 mins	Covered
Stew	400 g	600 W, 5-10 mins	Ovenware with lid
	800 g	600 W, 10-15 mins	
Vegetables	150 g	600 W, 2-3 mins	Add a little liquid
	300 g	600 W, 3-5 mins	

Cooking food

Notes

- Food which lies flat will cook more quickly than food which is piled high. You should therefore distribute the food so that it is as flat as possible in the ovenware. Different foodstuffs should not be placed in layers on top of one another.
- Cook the food in ovenware with a lid. If you do not have a suitable lid for your ovenware, use a plate or special microwave foil.

- This will help the food retain its own distinct taste, so it will require less seasoning.
- After cooking, allow the food to stand for a further 2 to 5 minutes so that it can achieve an even temperature.
- Always use an oven cloth or oven gloves when removing plates from the oven.

Cooking food	Weight	Microwave power in watts, Cooking time in minutes	Notes
Whole chicken, fresh, no giblets	1.5 kg	600 W, 30-35 mins	Turn halfway through the cooking time
Fish fillet, fresh	400 g	600 W, 5-10 mins	-
Fresh vegetables	250 g	600 W, 5-10 mins	Cut into equal-sized pieces; add 1 to 2 tbsp water per 100 g; stir during cooking
	500 g	600 W, 10-15 mins	
Potatoes	250 g	600 W, 8-10 mins	Cut into equal-sized pieces; add 1 to 2 tbsp water per 100 g; stir during cooking
	500 g	600 W, 11-14 mins	
	750 g	600 W, 15-22 mins	

Cooking food	Weight	Microwave power in watts, Cooking time in minutes	Notes
Rice	125 g	600 W, 7-9 mins+ 180 W, 15-20 mins	Add double the quantity of liquid and use deep ovenware with a lid
	250 g	600 W, 10-12 mins + 180 W, 20-25 mins	
Sweet foods, e.g. blancmange (instant)	500 ml	600 W, 7-9 mins	Stir 2 to 3 times with an egg whisk while heating
Fruit, compote	500 g	600 W, 9-12 mins	-

Popcorn for the microwave

Notes

- Use heat-resistant, flat glass ovenware, e.g. the lid of an ovenproof dish, a glass plate or a glass tray (Pyrex)
- Always place the ovenware on the wire rack.
- Do not use porcelain or overly curved plates.
- Make the settings as described in the table. You can adjust the timings according to product and amount.

- So that the popcorn doesn't burn, briefly take the popcorn bag out of the oven after 1 minute and 30 seconds and shake it. Take care as the bag will be hot!



Risk of scalding!

- Open the popcorn bag carefully as hot steam may be released.
- Never set the microwave to full power.

	Weight	Accessories	Microwave power in watts, Cooking time in minutes
Popcorn for the microwave	1 bag, 100 g	Ovenware, wire rack	600 W, 3-5 mins

Microwave tips

You cannot find any information about the settings for the quantity of food you have prepared.	Increase or reduce the cooking times using the following rule of thumb: Double the amount = almost double the cooking time Half the amount = half the cooking time
The food has become too dry.	Next time, set a shorter cooking time or select a lower microwave power setting. Cover the food and add more liquid.
When the time has elapsed, the food is not defrosted, hot or cooked.	Set a longer time. Large quantities and food which is piled high require longer times.
When the time has elapsed, the food is overheated at the edge but not done in the middle.	Stir it during the cooking time and next time, select a lower microwave power setting and a longer cooking time.
After defrosting, the poultry or meat is defrosted on the outside but not defrosted in the middle.	Next time, select a lower microwave power setting. If you are defrosting a large quantity, turn it several times.

Cakes and pastries

About the tables

Notes

- The times given apply to food placed in a cold oven.
- The temperature and baking time depend on the consistency and amount of the mixture. This is why temperature ranges are given in the tables. Begin with the lower temperature and,

if necessary, use a higher setting the next time, since a lower temperature results in more even browning.

- Additional information can be found in the *Baking tips* section following the tables.
- Always place the cake tin in the centre of the lower wire rack.

Baking tins

Note: It is best to use dark-coloured metal baking tins.

Baking in tins	Accessories	Type of heating	Temperature °C	Microwave power in watts	Cooking time in minutes
Sponge cake, simple	Ring tin/cake tin		170-180	90	40-50
Sponge cake, delicate (e.g. sandcake)*	Ring tin/cake tin		150-170	-	70-90
Sponge flan base	Flan-base cake tin		160-180	-	30-40
Delicate fruit flan, sponge	Springform/ring tin		170-180	90	35-45
Sponge base, 2 eggs	Flan-base cake tin		160-170	-	20-25
Sponge flan, 6 eggs	Dark springform cake tin		170-180	-	35-45
Shortcrust pastry base with crust	Dark springform cake tin		170-190	-	30-40
Fruit tart/cheesecake with pastry base*	Dark springform cake tin		170-190	180	35-45
Swiss flan**	Dark springform cake tin		190-200	-	45-55

* Allow cake to cool in the oven for approx. 20 minutes.

** Place the tin directly on the turntable.

Baking in tins	Accessories	Type of heating	Temperature °C	Microwave power in watts	Cooking time in minutes
Ring cake	Ring cake tin		170-180		40-50
Pizza, thin base, light topping**	Round pizza tray		220-230	-	15-25
Savoury cakes**	Dark springform cake tin		200-220	-	50-60
Nut cake	Dark springform cake tin		170-180	90	35-45
Yeast dough with dry topping	Round pizza tray		160-180	-	50-60
Yeast dough with moist topping	Round pizza tray		170-190	-	55-65
Plaited loaf with 500 g flour	Round pizza tray		170-190	-	35-45
Stollen with 500 g flour	Round pizza tray		160-180	-	60-70
Strudel, sweet	Round pizza tray		190-210	180	35-45

* Allow cake to cool in the oven for approx. 20 minutes.

** Place the tin directly on the turntable.

Small baked items	Accessories	Type of heating	Temperature in °C	Cooking time in minutes
Biscuits	Round pizza tray		150-170	25-35
Macaroons	Round pizza tray		110-130	35-45
Meringue	Round pizza tray		100	80-100
Muffins	Muffin tray on wire rack		160-180	35-40
Choux pastry	Round pizza tray		200-220	35-45
Puff pastry	Round pizza tray		190-200	35-45
Leavened cake	Round pizza tray		200-220	25-35

Bread and bread rolls	Accessories	Type of heating	Temperature in °C	Cooking time in minutes
Sourdough bread with 1.2 kg flour	Round pizza tray		210-230	50-60
Flatbread*	Round pizza tray		220-230	25-35
Bread rolls	Round pizza tray		210-230	25-35
Rolls made with sweet yeast dough	Round pizza tray		200-220	15-25

* Place the tin directly on the turntable.

Baking tips

You want to bake according to your own recipe.	Use similar items in the baking tables as a guide.
Use baking tins made of silicone, glass, plastic or ceramic materials.	The baking tin must be heat-resistant up to 250 °C. Cakes in these baking tins will be less brown. When using the microwave, the cooking time will be shorter than the time shown in the table.
How to establish whether sponge cake is baked through.	Approximately 10 minutes before the end of the baking time specified in the recipe, poke the cake with a cocktail stick at its highest point. If the cocktail stick comes out clean, the cake is ready.
The cake collapses.	Use less liquid next time or set the oven temperature 10 degrees lower and extend the baking time. Observe the specified mixing times in the recipe.
The cake has risen in the middle but is lower around the edge.	Only grease the base of the springform cake tin. After baking, loosen the cake carefully with a knife.
The cake is too dark.	Select a lower temperature and bake the cake for a little longer.
The cake is too dry.	When it is done, make small holes in the cake using a toothpick. Then drizzle fruit juice or an alcoholic beverage over it. Next time, select a temperature 10 degrees higher and reduce the baking time.
The bread or cake (e.g. cheesecake) looks good, but is soggy on the inside (sticky, streaked with water).	Use slightly less fluid next time and bake for slightly longer at a lower temperature. When baking cakes with a moist topping, bake the base first, cover with almonds or bread crumbs and then add the topping. Please follow the recipe and follow the baking times.
The cake cannot be turned out of the dish when it is turned upside down.	After baking, allow the cake to cool for a further 5 to 10 minutes, then it will be easier to turn out of the tin. If it still sticks, carefully loosen the cake around the edges using a knife. Turn the cake tin upside down again and cover it several times with a cold, wet cloth. Next time, grease the tin well and sprinkle some bread crumbs into it.

You have measured the temperature of the oven using your own meat thermometer and found there is a discrepancy.	The oven temperature is measured by the manufacturer after a specified period of time using a test rack in the centre of the cooking compartment. Ovenware and accessories affect the temperature measurement, so there will always be some discrepancy when you measure the temperature yourself.
Sparks are generated between the tin and the wire rack.	Check that the tin is clean on the outside. Change the position of the tin in the cooking compartment. If this does not help, continue baking but without the microwave. The baking time will then be longer.

Roasting and grilling

About the tables

The temperature and roasting time depend on the type and amount of food being cooked. This is why temperature ranges are given in the tables. Begin with the lower temperature and, if necessary, use a higher setting the next time,

For more information, see the section entitled *Tips for grilling and roasting* which follows the tables.

Ovenware

You may use any heat-resistant ovenware which is suitable for use in a microwave. Metal roasting dishes are not suitable for roasting with microwaves.

The ovenware can become very hot. Use oven gloves to take the ovenware out of the oven.

Place hot glass ovenware on a dry kitchen towel after they have been removed from the oven. The glass could crack if placed on a cold or wet surface.

Tips for roasting

Notes

- Use a deep roasting dish for roasting meat and poultry.
- Check that your ovenware fits in the cooking compartment. It should not be too big.
- Meat:
Cover approx. two thirds of the ovenware base with liquid. Add slightly more liquid for pot roasts. Turn pieces of meat halfway through the cooking time. When the roast is ready,

turn off the oven and allow it to rest for an additional 10 minutes. This allows better distribution of the meat juices.

- Poultry:
Turn the pieces of meat after $\frac{2}{3}$ of the cooking time has elapsed.

Tips for grilling

Notes

- Always keep the oven door closed when grilling and do not preheat.
- As far as possible, the pieces of food you are grilling should be of equal thickness. Steaks should be at least 2 to 3 cm thick. This will allow them to brown evenly and remain succulent and juicy. Do not add salt to steaks until they have been grilled.
- Use tongs to turn the pieces of food you are grilling. If you pierce the meat with a fork, the juices will run out and it will become dry.
- Dark meat, e.g. beef, browns more quickly than lighter-coloured meat such as veal or pork. When grilling light-coloured meat or fish, these often only brown slightly on the surface, although they are cooked and juicy on the inside.
- The grill element switches off and on again automatically. This is normal. The grill setting determines how frequently this will happen.

Beef

Notes

- Turn pot-roasted beef after $\frac{1}{3}$ and $\frac{2}{3}$ of the cooking time. Finally, allow to stand for approx. a further 10 minutes.
- Turn tenderloins and sirloins halfway through the cooking time. Finally, allow to stand for approx. a further 10 minutes.
- Turn steaks after $\frac{2}{3}$ of the cooking time.

Beef	Accessories	Type of heating	Temperature in °C, grill setting	Microwave power in watts	Cooking time in minutes
Pot-roasted beef, approx. 1 kg	Ovenware with lid		180-200	-	120-143
Fillet of beef, medium, approx. 1 kg	Ovenware without lid		180-200	90	30-40
Sirloin, medium, approx. 1 kg	Ovenware without lid		210-230	180	30-40
Steak, medium, 3 cm thick	Higher wire rack		3	-	each side: 10-15

Veal

Note: Turn joints and knuckle of veal halfway through the cooking time. Finally, allow to stand for approx. a further 10 minutes.

Veal	Accessories	Type of heating	Temperature °C	Microwave power in watts	Cooking time in minutes
Joint of veal, approx. 1 kg	Ovenware with lid		180-200	-	110-130
Knuckle of veal, approx. 1.5 kg	Ovenware with lid		200-220	-	120-130

Pork

Notes

- Turn lean joints of pork and rindless joints halfway through

the cooking time. Finally, allow to stand for approx. a further 10 minutes.

- Place the joint in the ovenware rind-side up. Score the rind. Do not turn the joint. Finally, allow to stand for approx. a further 10 minutes.

- Do not turn pork fillets or pork chops. Finally, allow to stand for approx. a further 5 minutes.
- Turn the neck of pork after $\frac{2}{3}$ of the cooking time.

Pork	Accessories	Type of heating	Temperature in °C, grill setting	Microwave power in watts	Cooking time in minutes
Joint without rind (e.g. neck), approx. 750 g*	Ovenware with lid		220-230	180	40-50
Joint with rind (e.g. shoulder) approx. 1.5 kg*	Ovenware without lid		190-210	-	130-150
Fillet of pork, approx. 500 g*	Ovenware with lid		220-230	90	25-30
Joint of pork, lean, approx. 1 kg*	Ovenware with lid		210-230	90	60-80
Smoked pork on the bone, approx. 1 kg*	Ovenware without lid	-	-	360	45-45
Neck of pork, 2 cm thick**			3	-	1st side: approx. 15-20 2nd side: approx. 10-15

* Lower wire rack

** Higher wire rack

Lamb

Note: Turn the leg of lamb halfway through the cooking time.

Lamb	Accessories	Type of heating	Temperature °C	Microwave power in watts	Cooking time in minutes
Saddle of lamb on the bone, approx. 1 kg	Ovenware without lid		210-230	-	40-50
Leg of lamb, boned, medium, approx. 1.5 kg	Ovenware with lid		190-210	-	90-95

Miscellaneous

Notes

- Finally, allow the meat loaf to stand for approx. a further 10 minutes.

- Turn the sausages after $\frac{2}{3}$ of the cooking time.

Miscellaneous	Accessories	Type of heating	Temperature in °C, grill setting	Microwave power in watts	Cooking time in minutes
Meat loaf, approx. 1 kg*	Ovenware without lid		180-200	600 W + 180 W	-
4 to 6 sausages for grilling approx. 150 g each**	-		3	-	each side: 10-15

* lower wire rack

** higher wire rack

Poultry

Notes

- Place whole chickens and chicken breasts breast-side down. Turn after $\frac{2}{3}$ of the cooking time.
- Place poulard breast-side down. Turn after 30 minutes and set the microwave power to 180 watts.

- Place half chickens and chicken portions skin-side up. Do not turn.
- Turn the duck and goose breast skin-side up. Do not turn.
- Turn goose thighs halfway through the cooking time. Prick the skin.
- Place turkey breast and thighs skin-side down. Turn after $\frac{2}{3}$ of the cooking time.

Poultry	Accessories	Type of heating	Temperature in °C, grill setting	Microwave power in watts	Cooking time in minutes
Chicken, whole, approx. 1.2 kg	Ovenware with lid		220-230	360	35-45
Poulard, whole, approx. 1.6 kg	Ovenware with lid		220-230	360 180	30 20-30
Chicken, halves, 500 g each	Ovenware without lid		180-200	360	30-35
Chicken portions, approx. 800 g	Ovenware without lid		210-230	360	20-30
Chicken breast with skin and bones, 2 pieces, approx. 350-450 g	Ovenware without lid		190-210	180	30-40

Poultry	Accessories	Type of heating	Temperature in °C, grill setting	Microwave power in watts	Cooking time in minutes
Duck breast with skin, 2 pieces, 300-400 g each	Ovenware without lid		3	90	20-30
Goose breast, 2 pieces, 500 g each	Ovenware without lid		210-230	90	25-30
Goose legs, 4 pieces, approx. 1.5 kg	Ovenware without lid		210-230	180	30-40
Turkey breast, approx. 1 kg	Ovenware with lid		200-220	-	90-100
Turkey drumsticks, approx. 1.3 kg	Ovenware with lid		200-220	180	50-60

Fish

- Grease the wire rack with oil beforehand.

Notes

- For grilling, place the whole fish, e.g. trout, onto the middle of the higher wire rack.

Fish	Accessories	Type of heating	Temperature °C	Cooking time in minutes
Fish steak, e.g. salmon, 3 cm thick, grilled	Higher wire rack		3	20-25
Whole fish, 2-3 pieces, 300 g each, grilled	Higher wire rack		3	20-30

Tips for roasting and grilling

The table does not contain information for the weight of the joint.	For small roasts, select a higher temperature and a shorter cooking time. For larger roasts, select a lower temperature and a longer cooking time.
How to tell when the roast is ready.	Use a meat thermometer (available from specialist shops) or carry out a "spoon test". Press down on the roast with a spoon. If it feels firm, it is ready. If the spoon can be pressed in, it needs to be cooked for a little longer.
The roast looks good but the juices are burnt.	Next time, use a smaller roasting dish or add more liquid.
The roast looks good but the juices are too clear and watery.	Next time, use a larger roasting dish and add less liquid.
The roast is not well-done enough.	Carve the roast. Prepare the gravy in the roasting dish and place the slices of roast meat in the gravy. Finish cooking the meat using the microwave only.

Bakes, gratins, toast with toppings

Notes

- The values in the table apply to food placed in a cold oven.
- For bakes, potato gratins and lasagne, use a microwaveable, heat-resistant ovenproof dish 4 to 5 cm deep.

- Place the bake on the lower wire rack.
- Leave bakes and gratins to cook in the oven for a further 5 minutes after switching off.
- Cheese on toast: Pre-toast slices of bread.

Bakes, gratins, toasts	Accessories	Type of heating	Temperature in °C, grill setting	Microwave power in watts	Cooking time in minutes
Bake, sweet, approx. 1.5 kg	Ovenware without lid		140-160	360	25-35
Savoury bake, made with cooked ingredients, approx. 1 kg	Ovenware without lid		150-170	600	20-25
Lasagne, fresh	Ovenware without lid		200-220	360	25-35
Potato gratin made from raw ingredients, approx. 1.1 kg	Ovenware without lid		180-200	600	25-30
Toast with topping, 4 slices*			3	-	8-10

* higher wire rack

Convenience products, frozen

Notes

- Observe the instructions on the packaging.

- The values in the table apply to food placed in a cold oven.
- Do not lay chips, croquettes or potato rösti on top of each other. Turn half way through the cooking time.
- Place the food directly on the turntable.

Convenience products	Accessories	Type of heating	Temperature °C	Microwave power in watts	Cooking time in minutes
Pizza with thin base*	Turntable		220-230	-	10-15

* Preheat the cooking compartment for 5 minutes, then place the food on the hot turntable.

** Place the food in suitable, heat-resistant ovenware.

Convenience products	Accessories	Type of heating	Temperature °C	Microwave power in watts	Cooking time in minutes
Pizza with deep-pan base	Turntable		- 220-230	600 -	3 13-18
Mini pizza*	Turntable		220-230	-	10-15
Pizza baguette*	Turntable		- 220-230	600 -	2 13-18
Chips	Turntable		220-230	-	8-13
Croquettes*	Turntable		210-220	-	13-18
Rösti, stuffed potato pockets	Turntable		200-220	-	25-30
Part-cooked rolls or baguette	Lower wire rack		170-180	-	13-18
Fish fingers	Turntable		210-230	-	10-20
Chicken goujons, nuggets	Turntable		200-220	-	15-20
Strudel	Turntable		210-220	180	20-30
Lasagne, approx. 400 g**	Lower wire rack		220-230	600	12-17

* Preheat the cooking compartment for 5 minutes, then place the food on the hot turntable.

** Place the food in suitable, heat-resistant ovenware.

Test dishes

The quality and function of microwave combination appliances are tested by testing institutes using the following dishes.

In accordance with the standards EN 60705, IEC 60705 or DIN 44547 and EN 60350 (2009)

Defrosting with the microwave

Dish	Microwave power setting in watts, cooking time in minutes	Note
Meat	180 W, 5 mins + 90 W, 10-15 mins	Place the Pyrex dish with a 22 cm diameter on the lower wire rack. After approx. 13 minutes, remove the defrosted meat.

Microwave cooking

Dish	Microwave power setting in watts, cooking time in minutes	Note
Custard	600 W, 10-13 mins + 180 W, 25-30 mins	Place the Pyrex dish with dimensions 24 x 19 cm on the lower wire rack.
Sponge flan	600 W, 9-10 mins	Place the Pyrex dish with a 22 cm diameter on the lower wire rack.
Meat loaf	600 W, 18-23 mins	Place the 28 cm Pyrex dish on the lower wire rack.

Combined microwave cooking

Dish	Microwave power setting in watts, cooking time in minutes	Type of heating	Temperature °C	Note
Potato gratin	600 W, 25-30 mins		210-220	Place the Pyrex dish with a 22 cm diameter on the lower wire rack.
Cake	180 W, 15-20 mins		180-200	Place the Pyrex dish with a 22 cm diameter on the lower wire rack.
Chicken	360 W, 35-40 mins		200-220	Turn after 2/3 of the cooking time.


Baking

Note: The values in the table apply to food placed in a cold oven.

Dish	Ovenware	Type of heating	Temperature °C	Baking time in minutes
Hot water sponge cake	Springform cake tin, dia. 26 cm, lower wire rack		160-180	30-40
German apple pie	Springform cake tin, dia. 20 cm, lower wire rack		190-210	50-60

Grilling

Dish	Accessories	Type of heating	Grill setting	Cooking time in minutes
Browning toast	Higher wire rack		3	4-5
Beefburgers, x 9	Higher wire rack		3	30-35



Robert Bosch Hausgeräte GmbH

Carl-Wery-Straße 34

81739 München

Germany

www.bosch-home.com



9000725036

940923