

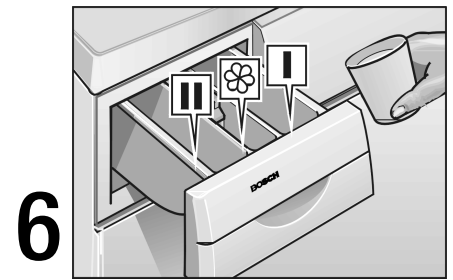
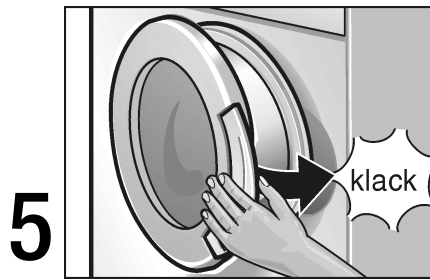
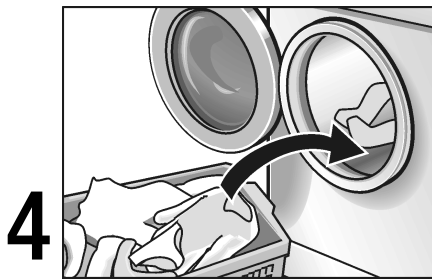
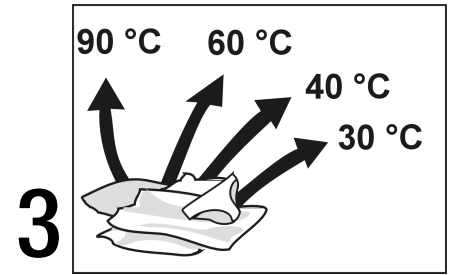


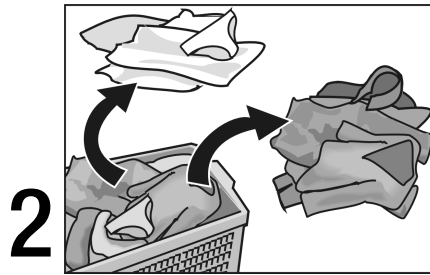



## Quick-reference instructions

Please read and observe these operating and installation instructions carefully before using the washing machine for the first time.

# BOSCH


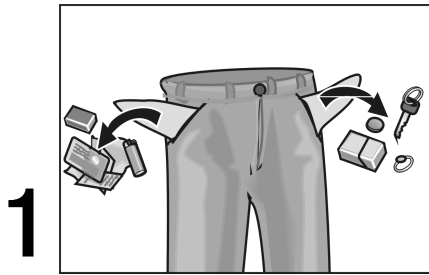


As required

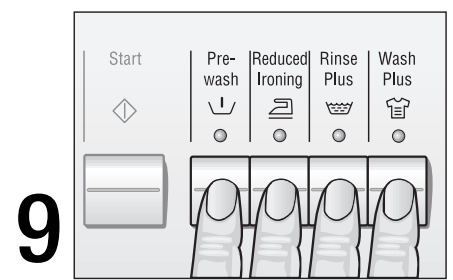
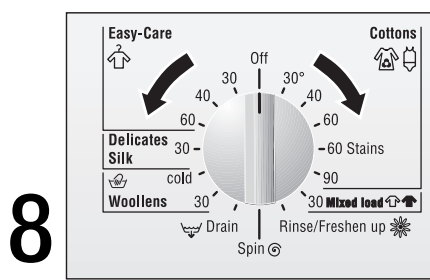


Symbols on the display panel

- Prewash
- Washing
- Rinse
- Final spin/Drain
- Overdosage
- Childproof lock

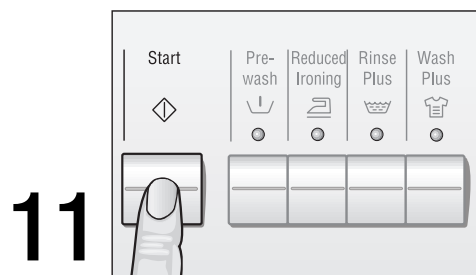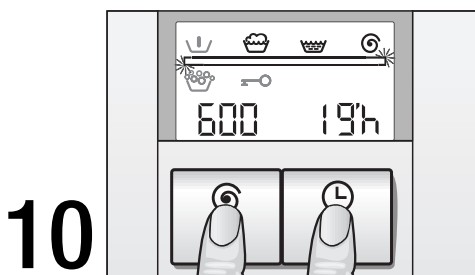

## At the end of the programme

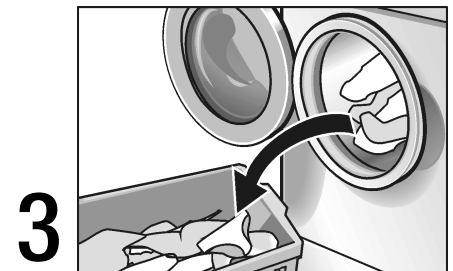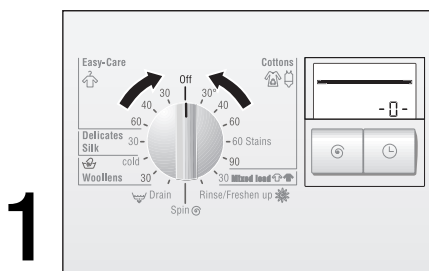






WFX2867GB/WFX2467GB  
0204 en  
5050 003 428

## Overview of programmes

You can change the programme with the following **settings in the display field and/or additional functions**:

– Can be set in the display panel: **Spin speeds or "----"** (No final spin, the washing remains in the final rinsing water).  
**Select start time,**

– Additional function/buttons: **Prewash:** Actuate Prewash, **Reduced Ironing:** Gentle spin,  
**Rinse Plus:** Extra rinse cycle, **Wash Plus:** Intensive wash.

Type of laundry Comply with care labels!	Amount of laundry	Programme*	Degree of soiling	Required additional option button
<b>Hard-wearing textiles, heat-resistant textiles</b> e.g. made from cotton or linen, 	6 kg 13.2 lb	<b>Cottons 30, 40**, 60 °C</b>	lightly to normally soiled	Wash Plus
		<b>Cottons 60 °C Stains**</b>	normally soiled with stains	Wash Plus
	up to 5 kg /11 lb	<b>Cottons 90 °C</b>	normally soiled	Wash Plus
		<b>Cottons 30, 40, 60 °C</b>	lightly soiled	–
		<b>Cottons 30, 40, 60 °C</b>	normally to heavily soiled	Wash Plus
		<b>Cottons 60 °C Stains</b>	normally to heavily soiled with stains	Wash Plus
<b>For easy-care textiles,</b> e.g. cotton, linen, synthetic materials or blended fabrics (Also suitable as a <b>short programme</b> ) 	up to 3 kg /6.6 lb (or 8 shirts)	<b>Easy-Care 30, 40, 60 °C</b>	lightly soiled	–
		<b>Easy-Care 30, 40**, 60 °C</b>	normally to heavily soiled	Wash Plus
<b>For cotton washing and easy-care textiles –</b> different types of washing can be washed together 	up to 3 kg /6.6 lb	<b>Mixed load 30 °C</b>	lightly soiled	–
		<b>Mixed load 30 °C</b>	normally to heavily soiled	Wash Plus
<b>For easy-care, washable textiles,</b> e.g. silk, satin, synthetic materials or blended fabrics without wool (e.g. curtains) 	up to 2 kg /4.4 lb	<b>Delicates/Silk 30 °C</b>	lightly soiled	–
		<b>Delicates/Silk 30 °C</b>	normally to heavily soiled	Wash Plus
<b>For hand and machine washable wool or wool-rich textiles,</b> e.g. cashmere, mohair or angora, also suited for hand washable silk 	up to 2 kg /4.4 lb	<b>Woolens cold, 30 °C</b>	lightly soiled	–
		<b>Woolens cold, 30 °C**</b>	normally to heavily soiled	Wash Plus

## Programme options

Programme selector	Notes/Application
<b>Rinse/Freshen up</b>	Rinse cycle with subsequent spin cycle for rinsing hand-washed laundry or for starching. Please comply with the spin speeds as specified in the operating and installation manuals. Also suited to "Freshen up" items, that have been tucked away or stored for a period of time, to remove creases caused by folding and storage and to eliminate odours. Use fabric conditioner for "fresh" smell. Do not use detergent (this is not a wash programme).
<b>Spin</b>	Spin cycle after a programme with setting "----" (without final spin) or for spinning hand-washed washing. Washing water or rinsing water is drained before the spin cycle. Please comply with the spin speeds as specified in the operating and installation manuals.
<b>Drain</b>	Water is drained after a washing programme with the "----" (Without final spin) setting. For gentle treatment of delicate laundry.

\* Pour detergent into dispenser **II** (on left) for programmes without prewash; distribute detergent between dispensers **I** and **II** for programmes with prewash.

\*\* Programme setting for test in accordance or in conformity with EN 60 456 and IEC 60 456

WFX2867GB/WFX2467GB

Further information can be found in the operating and installation instructions.  
Please read the manual carefully and comply with the safety instructions.

0204 en  
5050 003 428