



## Overview of programmes

Program/type of laundry/information	Settings
Name of the program: Brief explanation of the program and for which textiles it is suitable.	max. load*; temperature spin speed*
	additional settings that can be selected
<b>Cotton</b> : Hard-wearing textiles, heat-resistant textiles made of cotton or linen	7kg/ 4kg**;- -- 90 °C - --, 400 - 1200* rpm
	<b>Speed Eco , Rinse Plus</b>
<b>Cottons Eco</b> : Energy saving washing programme. For heavily soiled hard-wearing textiles made from cotton or linen	7kg;- -- 90 °C - --, 400 - 1200* rpm
	<b>Rinse Plus</b>
<b>Easy-Care</b> : Easy-care textiles made of fine cotton, linen, synthetic fibres or blended fabrics	4 kg;- -- 60 °C - --, 0 - 1200* rpm
	<b>Speed Eco , Rinse Plus</b>
<b>Delicates</b> : For delicate, machine washable textiles, e.g. silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf)	2 kg;- -- 40 °C - --, 0 - 800 rpm
	<b>Speed Eco , Rinse Plus</b>
<b>Wool</b> : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).	2 kg;- -- 40 °C - --, 0 - 800 rpm
<b>Note</b> : Use a detergent that is suitable for machine-washing wool.	-
<b>Mix</b> : Textiles made of cotton and synthetic.	4 kg;- -- 40 °C - --, 0 - 1200* rpm
	<b>Speed Eco , Rinse Plus</b>
<b>Easy-Care Dark</b> : For jeans and dark textiles made of cotton, synthetic or blended fabrics. Advise to turn the laundry inside out for washing.	3.5 kg;- -- 40 °C - --, 0 - 1200* rpm
	<b>Speed Eco , Rinse Plus</b>
* the maximum spin speed and max. load depends on the program and model	
** reduced load for the <b>Speed</b> setting	

Program/type of laundry/information	Settings
<b>Name of the program:</b> Brief explanation of the program and for which textiles it is suitable.	max. load*; temperature spin speed* additional settings that can be selected
<b>Rinse/Spin/Drain</b> : Combined extra program for rinsing and spinning the laundry, and draining the rinsing water	;- - --, 0 - 1200* rpm
<b>Notes</b> <ul style="list-style-type: none"> <li>■ The <b>Rinse Plus</b> setting is preset by default.</li> <li>■ Only to be rinsed, set the <b>rpm</b>  to 0.</li> <li>■ Only to be spun, deactivate <b>Rinse Plus</b> and, if required, adjust the spin speed.</li> <li>■ Only to be emptied, set the <b>rpm</b>  to 0 and deactivate <b>Rinse Plus</b> .</li> </ul>	<b>Rinse Plus</b>
<b>Duvet:</b> Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down	2 kg; - - 60 °C - --, 0 - 1200* rpm
<b>Note:</b> No softener is allowed. Wash large items separately.	<b>Speed Eco , Rinse Plus</b>
<b>Shirts:</b> Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics	2 kg; - - 60 °C - --, 0 - 800 rpm
	<b>Speed Eco , Rinse Plus</b>
<b>Drum Clean</b> : Program for cleaning and caring for the drum and the outer tub.	0 kg; - 1200* rpm
<b>Note:</b> Run the Drum clean program without any laundry.	-
<b>Sportswear</b> : All-weather, sports and outdoor textiles with membrane technology. Not for water-repellent membrane textiles.	1 kg; - - 40 °C 0 - 800 rpm
	<b>Speed Eco , Rinse Plus</b>
<b>Super 60:</b> Extra short program of approx. 60 minutes; suitable for small items of lightly soiled laundry	4 kg; - - 60 °C - --, 400 - 1200* rpm
	<b>Rinse Plus</b>
<b>Super 15'/30'</b> : Extra short program, suitable for small items of lightly soiled laundry	3.5kg/2 kg**; - - 40 °C - --, 0 - 1200* rpm
<b>Note:</b> When selecting the <b>Speed</b> setting, the program <b>Super15'</b> is run.	<b>Speed</b>
<b>Allergy+</b> : Hard-wearing fabrics made of cotton or linen	6.5 kg; - - 60 °C - --, 400 - 1200* rpm
<b>Note:</b> Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	<b>Speed Eco , Rinse Plus</b>
* the maximum spin speed and max. load depends on the program and model	
** reduced load for the <b>Speed</b> setting	



## Consumption values table

Programme	Additional function	Load	Energy consumption**	Water consumption**	Programme duration**
Cotton 20 °C	-	7 kg	0.29 kWh	76 l	2 1/2 h
Cotton 40 °C	-	7 kg	1.01 kWh	76 l	3 h
Cotton 60 °C	-	7 kg	1.20 kWh	76 l	2 1/2 h
Cottons Eco 60 °C*	-	7 kg	0.79 kWh	51 l	4 1/4 h
Cotton 90 °C	-	7 kg	2.25 kWh	87 l	2 1/2 h
Easy-Care 40 °C	-	4 kg	0.79 kWh	69 l	2 h
Mix 40 °C	-	4 kg	0.63 kWh	46 l	1 1/4 h
Delicates 30 °C	-	2 kg	0.22 kWh	38 l	3/4 h
Wool 30 °C	-	2 kg	0.19 kWh	44 l	3/4 h


Values determined according to the valid version of IEC60456.

\* Program setting with maximum spin speed for testing according to the valid version of IEC60456 with cold water (15°C).

\*\* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.




## Technical data

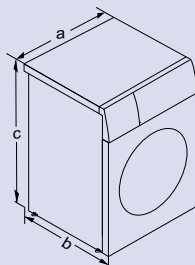

Dimensions  
a = 598 mm  
b = 550 mm  
c = 848 mm

Weight 68 kg

Mains connection  
Nominal voltage 220V, 50 Hz  
Minimum installation protection  
() 10 A  
Nominal power 2300 W

Water pressure 0.1–1 MPa (1–10 bar)

**WAN24160TH**

**9001332106 (9812)**

