24" Recessed Handle Dishwasher

Ascenta DLX - White SHE3ARL2UC





SHE3ARL2UC White

Also available in: Stainless Steel SHE3ARL5UC Black SHE3ARL6UC

Bosch dishwashers incorporate 18 unique sound-reducing technologies, to make Bosch the quietest dishwasher brand in the US.

Features & Benefits

50 dBA: Quietest dishwasher brand.

Stainless steel tall tub with polypropylene bottom delivers durability.

Sanitize option eliminates bacteria and enhances drying results.

24/7 Overflow Protection System® helps prevent water leaks.

| General Properties | |
|---------------------------------------|-----------------------------------|
| Number of wash cycles | 5 |
| Number of options | 2 |
| dBA | 50 |
| Third rack | N/A |
| Rack adjustability | N/A |
| Tub material | Stainless steel/ polypropylene |
| Control type | Buttons |
| Concealed heating element | Yes |
| Leak protection system | 24/7 Overflow Protection |
| Water softener | No |
| Five-level wash | Yes |
| ChildLock | Yes |
| Special features | N/A |
| Efficiency | |
| Water usage per cycle | 2.95 |
| Energy efficiency class | Tier 1 |
| ENERGY STAR® qualified | Yes |
| Total annual energy consumption (kWh) | 279 |
| Total annual water consumption (g) | 634 |
| Capacity | |





Number of place settings 14



| Technical Details | | |
|---|----------------------------------|--|
| Watts (W) | 1400 W | |
| Current (A) | 12 Amps | |
| Volts (V) | 120 V | |
| Frequency (Hz) | 60 Hz | |
| Power cord length | N/A | |
| Minimum water pressure (lb/sin) | 15 | |
| Length inlet hose (in) | N/A | |
| Length outlet hose (in) | 91 3/4" | |
| Dimensions & Weight | | |
| Overall appliance dimensions (HxWxD) (in) | 33 7/8" x 23 9/16" x 22 9/16" | |
| Required cutout size (HxWxD) (in) | 33 7/8" x 24" x 24" | |
| Adjustable feet | Yes | |
| Net weight (lbs) | 68 lbs | |
| Accessories-Optional | | |
| Dishwasher Supply and Drainage Hose Extension 76 3/4" | SGZ1010UC | |
| Dishwasher 3-Prong Power Cord 55 1/4" | SGZPC001UC | |
| Dishwasher Accessory Kit | SGZ1052UC | |
| Duo-Flex Silverware Basket | SMZ4000UC | |



For help and assistance with Bosch accessories please visit: www.bosch-eshop.com/eshop/bosch/us or call 1-800-944-2904 Mon-Fri 5am to 6pm PST Sat 6am to 3pm PST

Notes: All height, width and depth dimensions are shown in inches. Please refer to installation instructions prior to making cutout. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details. Applicable product warranty can be found in accompanying product literature or you may contact your account manager for further details.

Warranties: Bosch warrants that the Product is free from defects in materials and workmanship for a period of three hundred and sixty-five (365) days from the date of purchase. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever. This Product is also warranted to be free from cosmetic defects in material and workmanship (such as scratches of stainless steel, paint/porcelain blemishes, chip, dents, or other damage to the finish of the Product, for a period of thirty (30) days from the date of purchase or closing date for new construction. This cosmetic warranty excludes slight color variations due to inherent differences in painted and porcelain parts, as well as differences caused by kitchen lighting, product location, or other similar factors. This cosmetic warranty specifically excludes any display, floor, "As Is", or "B" stock appliances.


For more information on our entire line of products, go to www.bosch-home.com/us or call 1-800-944-2904


24" Recessed Handle Dishwasher


Ascenta DLX - White SHE3ARL2UC





Installation Details

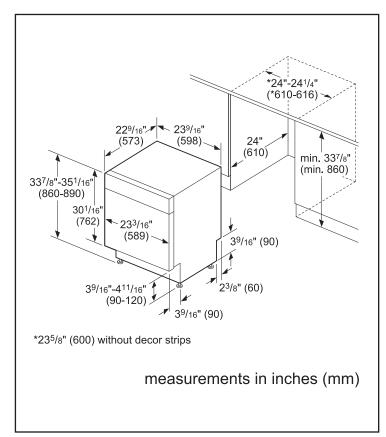

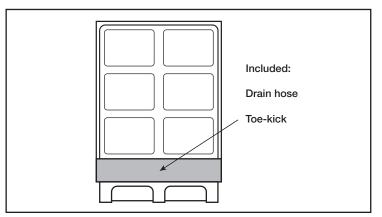

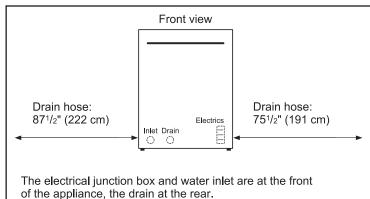

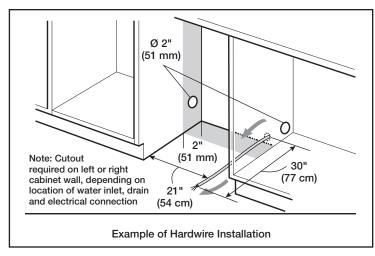

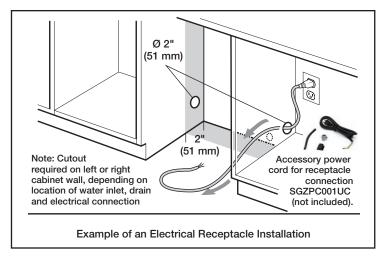

For help and assistance with Bosch accessories please visit: www.bosch-eshop.com/eshop/bosch/us or call 1-800-944-2904 Mon-Fri 5am to 6pm PST Sat 6am to 3pm PST

Notes: All height, width and depth dimensions are shown in inches. Please refer to installation instructions prior to making cutout. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details. Applicable product warranty can be found in accompanying product literature or you may contact your account manager for further details.

Warranties: Bosch warrants that the Product is free from defects in materials and workmanship for a period of three hundred and sixty-five (365) days from the date of purchase. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever. This Product is also warranted to be free from cosmetic defects in material and workmanship (such as scratches of stainless steel, paint/porcelain blemishes, chip, dents, or other damage to the finish of the Product, for a period of thirty (30) days from the date of purchase or closing date for new construction. This cosmetic warranty excludes slight color variations due to inherent differences in painted and porcelain parts, as well as differences caused by kitchen lighting, product location, or other similar factors. This cosmetic warranty specifically excludes any display, floor, "As Is", or "B" stock appliances.


For more information on our entire line of products, go to www.bosch-home.com/us or call 1-800-944-2904


24" Recessed Handle Dishwasher

Ascenta DLX - White SHE3ARL2UC



Installation Details

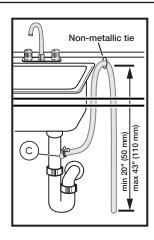

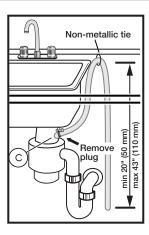

Note: Plumbing installations will vary - refer to local codes. Drain hose included is 91 3/4" (233 cm) and can be extended to a maximum of 168 1/2" (428 cm).

Always use the approved drain hose extension kit (SGZ1010UC).

Ensure a portion of the drain hose is raised between min. 20" (50 cm) and max. 43" (110 cm) above the cabinet floor.

For help and assistance with Bosch accessories please visit: www.bosch-eshop.com/eshop/bosch/us or call 1-800-944-2904 Mon-Fri 5am to 6pm PST Sat 6am to 3pm PST

Notes: All height, width and depth dimensions are shown in inches. Please refer to installation instructions prior to making cutout. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details. Applicable product warranty can be found in accompanying product literature or you may contact your account manager for further details.

Warranties: Bosch warrants that the Product is free from defects in materials and workmanship for a period of three hundred and sixty-five (365) days from the date of purchase. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever. This Product is also warranted to be free from cosmetic defects in material and workmanship (such as scratches of stainless steel, paint/porcelain blemishes, chip, dents, or other damage to the finish of the Product, for a period of thirty (30) days from the date of purchase or closing date for new construction. This cosmetic warranty excludes slight color variations due to inherent differences in painted and porcelain parts, as well as differences caused by kitchen lighting, product location, or other similar factors. This cosmetic warranty specifically excludes any display, floor, "As Is", or "B" stock appliances.