

Series 6, Flex induction cooktop, 60 cm, surface mount without frame PIX631HC1E









Optional accessories

 ${\sf HEZ32WA00}: Wireless\ food\ thermometer$

HEZ390011 : Stainless Steel roaster with glas lid

HEZ390522 : Griddle Plate

HEZ9FE280 : Iron pan \emptyset 18 / 28 cm HEZ9SE030 : Set of 2 pots and 1 pan

HEZ9SE060 : 6 pieces Set

The DirectSelect cooktop with PerfectFry Plus: direct and simple control with temperature sensor technology to prevent burning.

- **DirectSelect:** easy selection of cooking zone, power level and additional functions.
- **FlexInduction:** combines two cooking zones into one large, even heating area for flexible cooking.
- **PerfectFry Plus:** intelligently controls pan temperature for optimal frying and consistent results.
- Power Boost: up to 35% faster heating compared to highest power level.
- Favourite button: personalise your cooktop with the Home Connect app.

Technical Data

Product name/family: Cooking zone ceramic

Built-in / Free-standing : Built-in

Energy input : Electric

Total number of positions that can be used at the same time :

4

Required niche size for installation (HxWxD) : 51 x 560-560 x

490-500 mm

Width of the appliance : 592 mm Dimensions (HxWxD) : 51x592x522 mm

Dimensions of the packed product (HxWxD): 130x750x600

mm

Net weight: 13.5 kg Gross weight: 14.6 kg

Residual heat indicator : separate Location of control panel : Front Basic surface material : Ceramic

Color of surface : Black

Length electrical supply cord: 110 cm

EAN code : 4242005394111 Voltage : 220-240 V Frequency : 50; 60 Hz





Series 6, Flex induction cooktop, 60 cm, surface mount without frame PIX631HC1E

The DirectSelect cooktop with PerfectFry Plus: direct and simple control with temperature sensor technology to prevent burning.

- 60 cm cooktop: space for 4 pots or pans

Flexibility of cooking zones

- FlexInduction Zone: use cookware of any shape or size anywhere within the 40cm long zone.
- Cooking zone front left: 190 mm, 230 mm, 2.2 KW (max. power 3.7 KW)
- Cooking zone rear left: 190 mm, 230 mm, 2.2 KW (max. power 3.7 KW)
- Cooking zone rear right: 145 mm , 1.6 KW (max power 2.2 KW)
- Cooking zone front right: 210 mm, 2.5 KW (max. power 3.7 KW)

Comfort & Convenience

- DirectSelect: effortlessly change the power with the imprinted touch bar.
- Favourite Button: directly access favourite functions with a configurable button (available with connected Home Connect account).
- 17 power levels for each cooking zone: precisely adapt the heat with 17 power levels (9 main levels and 8 intermediate levels)
- Switch-off timer: switches off the cooking zone at the end of the time set (e.g. for boiled eggs).
- Count-down-timer (can be chosen instead of switch-off timer): an alarm sounds at the end of the time set (e.g. for pasta).
- Sound volume adaptable to personal preference and needs.

Cooking assistance

- PerfectFry Plus sensor: choose from 11 predefined temperatures in a range from 70°C up to 220°C: prevents scorching with the automatic temperature regulation of the integrated sensor.
- Cooktop Cooking Assistant (only via Home Connect App): easily find the right temperature setting for a certain dish via the Home Connect app.

Time saving & efficiency

- Power Boost for all zones: boil water faster with up to 50% more power than at the highest standard level.
- Cooking zones will automatically join and separate based on the shape and size of the cookware placed.
- Automatic Setting Transfer: when moving a pot to a different cooking zone, transfer all previous settings to the new zone at the touch of a button.
- Automatic zone selection: when switched on, the cooktop automatically selects the cooking zone on which a new cookware is placed.
- When moving a pot on the Flex zone, the settings adjust instantly and the cooking zone adapts to the size of the cookware
- QuickStart: Quick and automatic first pot detection: when switching on, the cooktop automatically selects the cooking zone with cookware on it.
- ReStart Quickly reinstates previous settings: in case of unintentional switch-off, restore all previous settings by switching on the cooktop again within 4 seconds.

Connectivity

- Remote Monitoring and Control: check if the cooktop is switched off even when not at home, and find recipes or additional functions in the Home Connect app.
- Cook2Hood control (with matching rangehood): automatically activates the rangehood when cooking, thanks to the WiFi connection of cooktop and suitable rangehood.
- Smart home trigger, via Favourite button (available with connected Home Connect account): open up the smart universe from your cooktop (partner service required).
- Updateable appliance (available with connected Home Connect account): easily keep your appliance up to date with the latest software.

Design

- Bevelled front edge

Safety

- Digital 2-stage residual heat indicator: indicates which cooking zones are still hot or warm.
- Childproof lock: prevent unintended activation of the cooktop.
- Pause function: pause the heating process (e.g to answer the door).
- Main switch: switch off all cooking zones at the touch of a button.
- Automatic safety switch-off: for safety reasons, heating stops after a preset time without interaction.




Installation

- Dimensions of the product (HxWxD mm): $51 \times 592 \times 522$
- Required niche size for installation (HxWxD mm) : 51 x 560 x (490 500)
- Min. worktop thickness: 16 mm
- Connected load: 7.4 KW





Series 6, Flex induction cooktop, 60 cm, surface mount without frame PIX631HC1E


Measurements in mm 522 592



A: Recessed depth

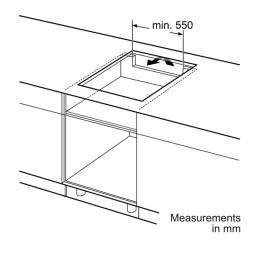

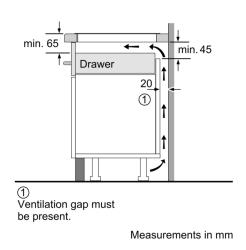

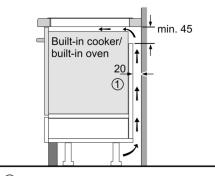

① Ventilation gap must be present