# **30" Speed Combination Oven**

800 Series - Black Stainless Steel HBL8742UC





**HBL8742UC** Black Stainless Steel

Also available in: Stainless Steel HBL8752UC

**Bosch black stainless** steel helps guard against scratches and fingerprints.

#### **Features & Benefits**

Cooks faster than a traditional oven and can be used as a microwave.

Dampened hinges softly and quietly guide the QuietClose® door shut.

A full-extension telescopic rack offers safe access to the oven cavity.

The wall oven is designed to be installed flush with cabinetry.

General Properties			
Cooking modes – upper cavity	Speed oven; 12 Auto Programs (including Auto Defrost, Melt Butter, Soften Ice Cream, Pizza), 9 Sensor Cook Programs, 9 SpeedChef® Programs, Hi & Lo Broil, European Convection, Keep Warm, Frozen Foods		
Cooking modes – lower cavity	Bake, Variable Broil (hi & low), Roast, Warm, Sabbath, Proof Dough, Convection Bake, Convection Broil, Convection Roast, Pizza, Multi Rack Genuine European Convection, Convection Conversion, Temperature Probe, Fast Preheat		
Cleaning type – lower		Self Clean	
Telescopic rack		1	
Illumination type		Halogen (Upper and Lower)	
Interior lights		1 Upper / 2 Lower	
Oven Performance			
Microwave power – upper cavity		1000 W	
Bake / broil element wattages – upper cavity		600 / 1,750 W	
Convection element wattages – upper cavity		1,700 W	
Bake / broil element wattages – lower cavity		2,400 / 3,800 W	
Convection element wattages – lower cavity		2,000 W	
Technical De	etails		
Watts (W)		9,600 W	
Circuit breaker (A)		40 A	
Volts (V); Frequency (Hz)		240 / 208 V; 60 Hz	
Power cord length (in)		50"	
Plug type		Fixed Connection, No Plug	
Energy source		Electric	

Dimensions & Weight		
Overall appliance dimensions (HxWxD)(in)	49" x 29 3/4" x 24 1/2"	
Required cutout size - Standard (HxWxD) (in)	48 5/8" x 28 1/2" x 23 1/2"	
Required cutout size – Flush (HxWxD) (in)	49 1/8" x 30" x 24 1/2"	
Oven cavity size - upper	1.6 cu. ft.	
Overall upper oven interior dimensions (HxWxD) (in.)	9 7/8" x 16 1/2" x 16 1/2"	
Turntable – Metal Max. Cookware – upper	12 3/4" dia.	
Turntable – Ceramic Max. Cookware – upper	12 1/2" dia.	
Rack – Rectangular Cookware Max. – upper	15" x 12"	
Oven cavity size – lower	4.6 cu. ft.	
Overall lower oven interior dimensions (HxWxD) (in)	17 13/16" x 24 1/8" x 18"	
Usable lower oven interior dimensions (HxWxD) (in)	12 5/16" x 23 1/4" x 15 1/4"	
Net weight (lbs)	259 lbs	
Accessories-Included		

Upper Oven: Metal Turntable, Square rack, Ceramic Cooking Tray

Lower Oven: 1 Telescopic and 2 Standard Oven Racks, Meat Probe

Accessories—Optional







Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST). Sat 6 am to 3 pm PST). Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.


# 30" Speed Combination Oven

800 Series - Black Stainless Steel HBL8742UC



### **Installation Details**

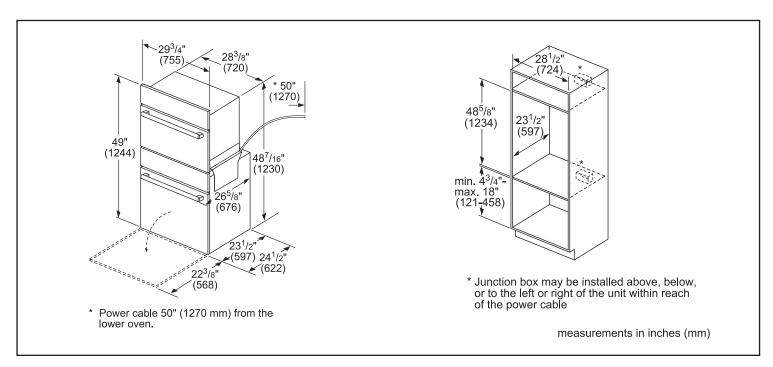

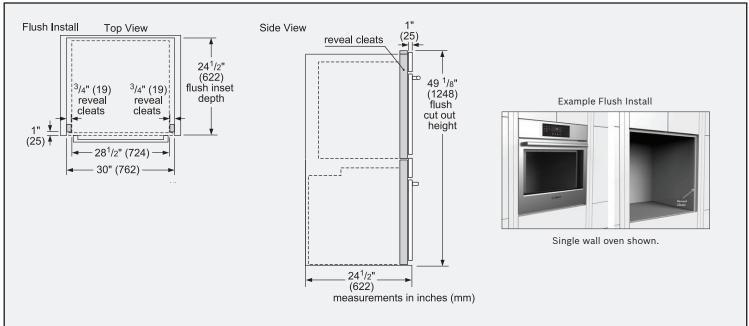

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

# **30" Speed Combination Oven**

800 Series - Black Stainless Steel HBL8742UC



#### **Installation Details**

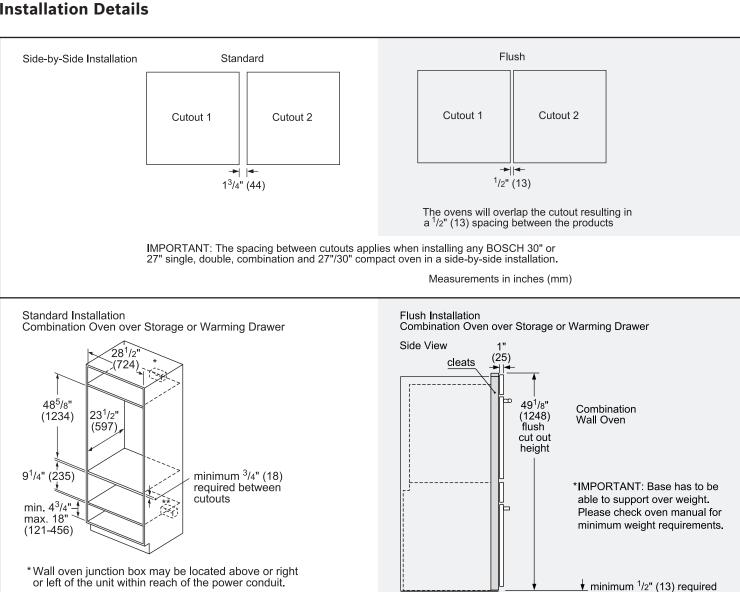

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST). Sat 6 am to 3 pm PST). Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

\*\*Electrical hook up may be located below

within the reach of the power cord.

(depending on space) or next to the drawer

→ between cutouts\*

Warming Drawer

Measurements in inches (mm)

99/16"

(243)

flush

cut out height

cleats

24<sup>1</sup>/2" (622)

Measurements in inches (mm)