

### Series 2, Fully-integrated dishwasher, 60 cm SMV40C20GB







## The ActiveWater dishwasher with height-adjustable top basket: Gives you extra space for large and bulky items.

- Height Adjustable Top Basket: offers extra space, especially for tall dishes.
- InfoLight: a red light on the floor indicates whether the dishwasher is switched on or off.
- AquaStop: Bosch's warranty in case of water damage throughout the lifetime of the appliance.\*
- $\bullet \ \textbf{Active Water} : \ less \ water, \ less \ energy, \ better \ performance.$
- Child lock on door: prevents accidental door opening during operation.

Maximum number of place settings:
The water consumption of the eco programme in liters per cycle:11.7
l
Built-in / Free-standing: Built-in
Height of removable worktop: 0 mm
Dimensions of the product (HxWxD):815 x 598 x 550 mm
Required niche size for installation (HxWxD):815-875 x 600 x 550
mm
Depth with open door 90 degree: 1150 mm
Adjustable feet:
Maximum adjustability feet:
Adjustable plinth: Both horizontal and vertical
Net weight:31.0 kg
Gross weight:
Connection rating:
Fuse protection:13 A
Voltage:
Frequency: 50; 60 Hz
Length electrical supply cord:
Plug type:GB plug
Length inlet hose:
Length outlet hose:
EAN code:
Installation typology: Integrated





### Series 2, Fully-integrated dishwasher, 60 cm SMV40C20GB

### The ActiveWater dishwasher with height-adjustable top basket: Gives you extra space for large and bulky items.

#### Performance

- Energy Efficiency Class: A+
- Heat exchanger.
- Capacity: 12 place settings
- Energy consumption in programme Eco 50 °C: 290 kWhper year, based on 280 standard cleaning cycles using cold water fill and the consumption of the low power modes. Actual energy consumption will depend on how the appliance is used.
- Water consumption in Eco50 programme: 3300 litres per year, based on 280 standard cleaning cycles
- Programme time in Eco 50 programme: 210 minutes
- A rated performance for washing and A for drying
- Noise level dB (A) re 1pW: 52 dB
- Energy consumption in Eco 50 programme: 1.02 kWh
- Water consumption in Eco 50 programme: 11.7 litres

#### Programmes/functions

- 4programmes:
- Intensive 70 °C, Normal 65 °C, Eco 50 °C, Quick wash 45 °C
- 1 Special option: VarioSpeed
- 4 temperatures

### Flexible design elements

- Vario baskets
- Lower rack handle: no handle
- Height adjustable top basket when empty
- Cutlery basket in lower rack

#### Innovations and technology

- EcoSilence BLDC drive
- Curved spray arms Optimum water distribution
- ActiveWater hydraulic water system
- DosageAssist detergent dispenser
- Automatic detergent detection
- Load Sensor
- AquaMix Glass protection system
- incl. Steam protection for worktop
- AquaStop: Bosch's warranty in case of water damage for the lifetime of the appliance. Please find warranty terms under https://www.bosch-home.co.uk/customer-service/care-protection-and-part s/additional-warranties


#### **Design features**

- Stainless steel/Polinox interior
- Red Info light, Acoustic end of cycle indicator, Washing + drying LEDs, water inlet indicator
- Push button top edge controls
- Display colour: Red LED indicators
- LED salt refill indicator, LED rinse aid refill indicator
- Self cleaning filter system with 3 piece corrugated filter

- Child safety Childproof door lock
- Dimensions (HxWxD): 81.5 x 59.8 x 55cm
- Efficiency information relates to the Eco50 programme. This programme is suitable for cleaning normally soiled tableware and is the most efficient programme in terms of combined energy and water consumption.



# Series 2, Fully-integrated dishwasher, 60 cm SMV40C20GB

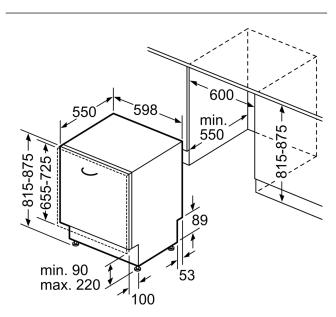

measurements in mm