



BOSCH



רישמו כעת את
המכשיר החדש אצל
MyBosch ותבטיחו יתרונות
חינם:


www.bosch-home.co.il

Fridge-freezer combination


KGN86..

6	שילוב של מקרר ומקפיא	מדריך למשתמש	[he]
26	Fridge-freezer combination	Information for Use	[en]




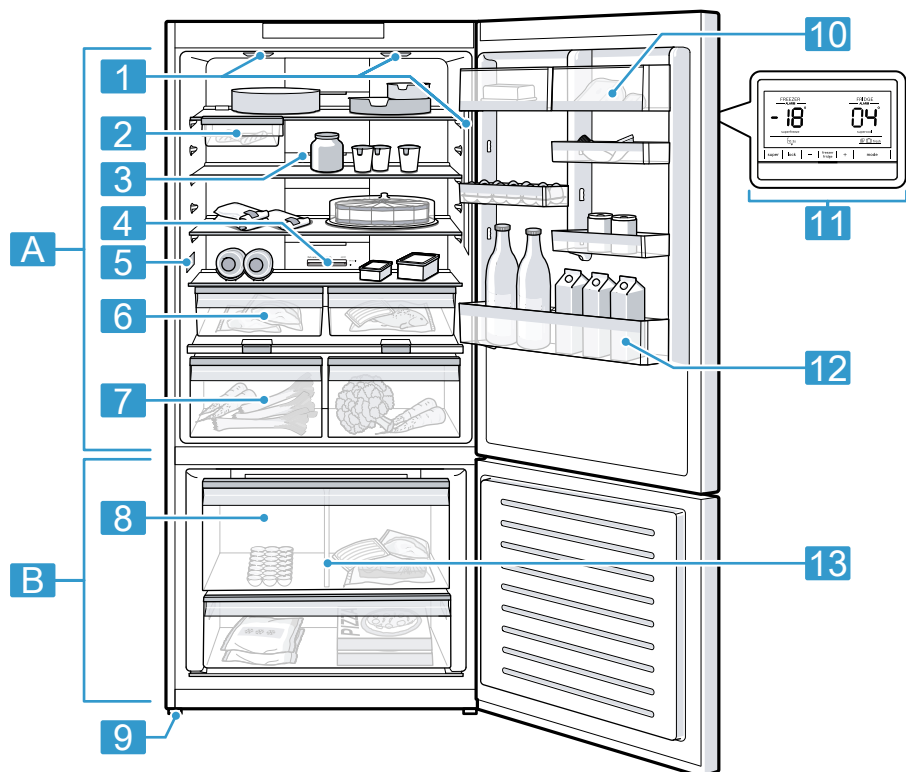


1

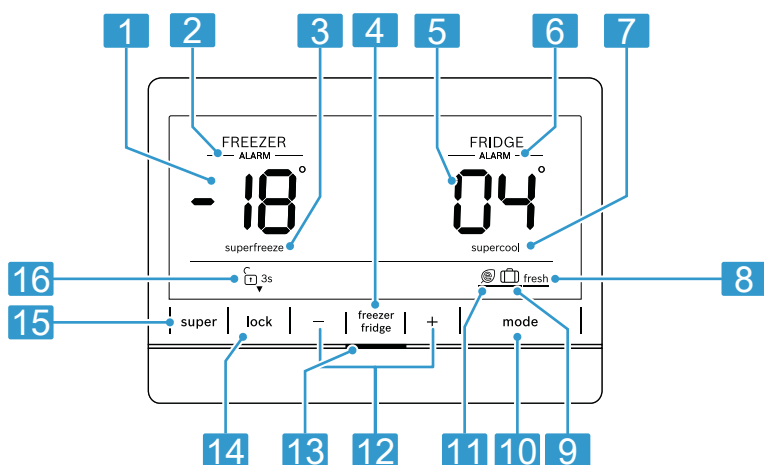


2

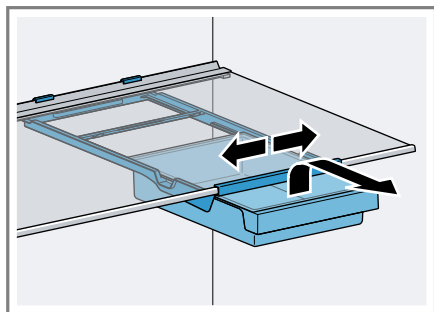


3

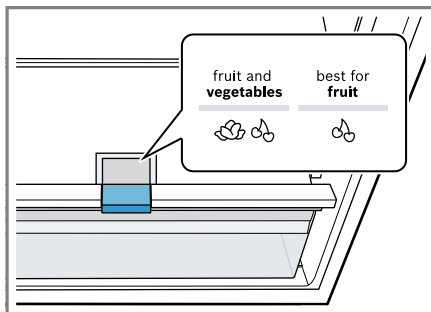


4

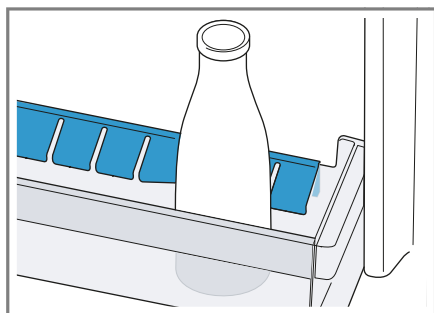


5

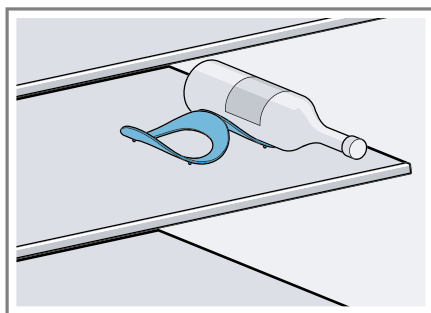


6

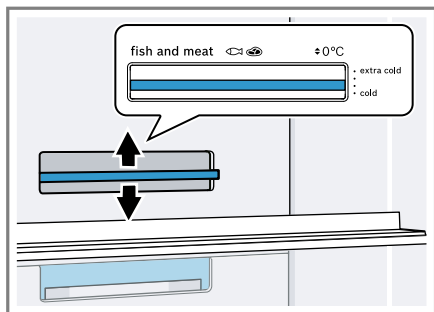


7

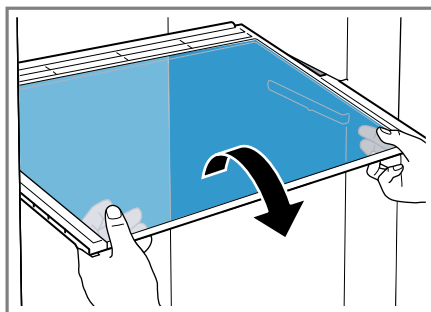


8

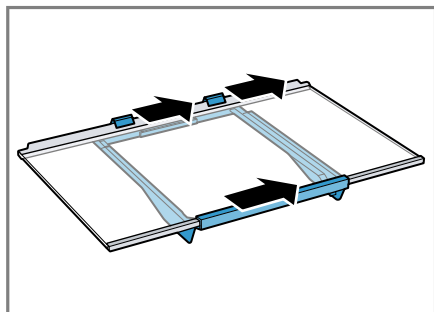


9

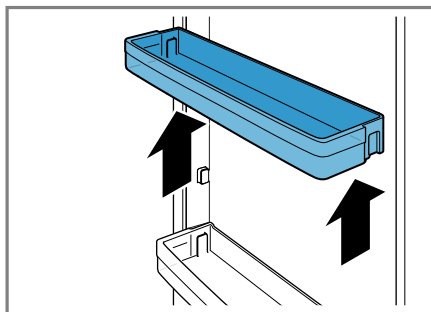


10

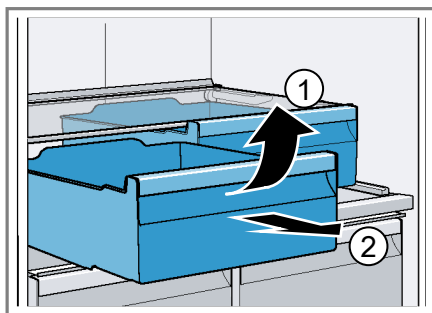


11

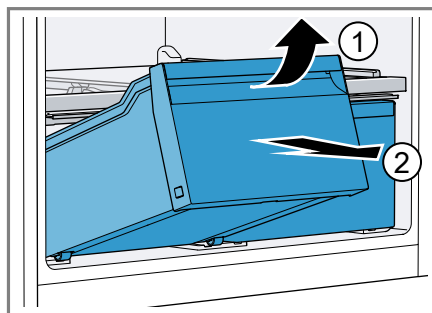



12

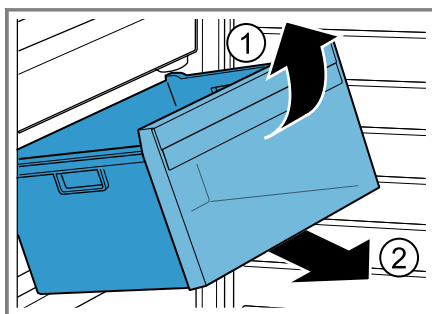


13

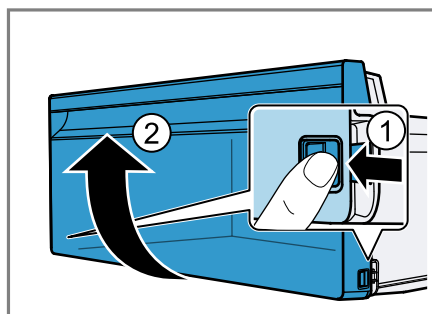


14

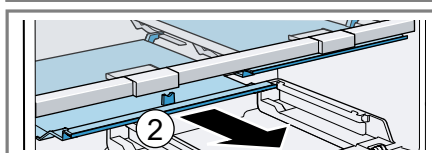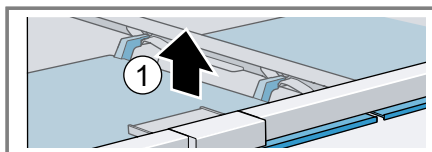


15

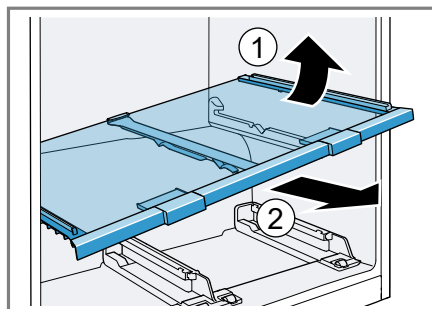



16

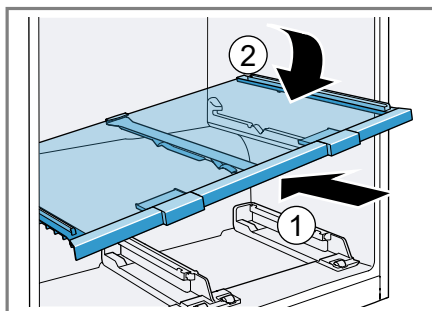


17

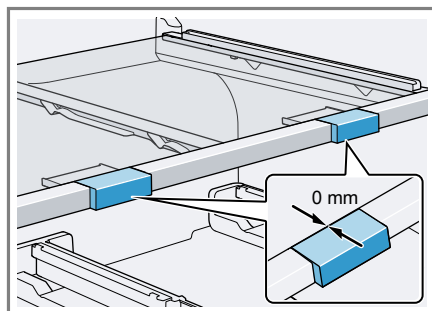


18

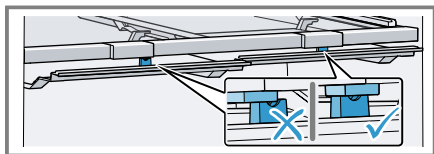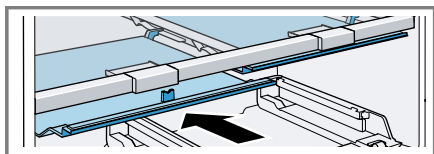

19

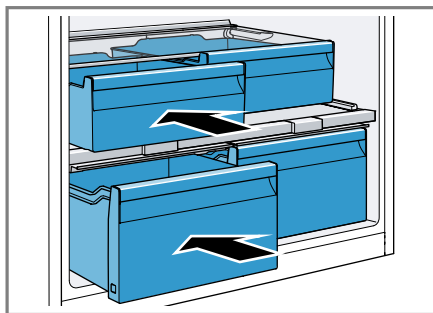

20

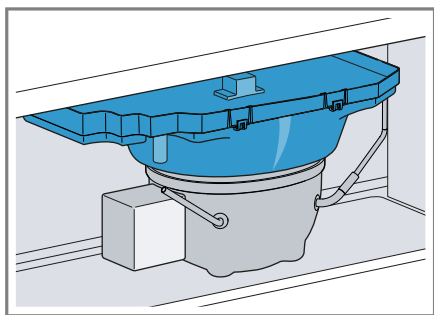

21



תוכלו למצוא מידע והסברים נוספים באינטרנט. סרקו את קוד ה-QR בעמוד השער.

תוכן העניינים

16	7.5 נעילת לחצנים	7	1 בטיחות
16	8 פונקציות נוספות	7	1.1 הנחיות כלליות
16	8.1 קירור מוגבר	7	1.2 שימוש בהתאם ליעוד
16	8.2 הקפאה מוגברת	7	1.3 הגבלות על קבוצת המשתמשים
16	8.3 מצב חופשה	7	1.4 הובלה בטוחה
16	8.4 מצב חיסכון באנרגיה	8	1.5 התקנה בטוחה
17	8.5 מצב טריות	8	1.6 שימוש בטוח
17	9 התראה	10	1.7 מכשיר שניזוק
17	9.1 התראת דלת	11	2 מניעת נזקי רכוש
17	9.2 התראת טמפרטורה	11	3 שמירה על הסביבה וחסכון
17	10 תא קירור	11	באנרגיה
	10.1 עצות לאחסון מוצרי מזון בתא הקירור	11	3.1 השלכת האריזה
18	10.2 אזורי קור בתא הקירור	11	3.2 חיסכון בחשמל
18	11 תא הקפאה	11	4 התקנה וחיבור
18	11.1 יכולת הקפאה	11	4.1 תכולת האריזה
18	11.2 ניצול מרבי של נפח תא ההקפאה	12	4.2 קריטריונים למקום ההצבה
	11.3 עצות לאחסון מוצרי מזון בתא ההקפאה	12	4.3 התקנת המכשיר
18	11.4 עצות להקפאת מוצרי מזון טריים ..	12	4.4 הכנת המכשיר לשימוש הראשון
	11.5 עמידות המזון כשהוא מוקפא ב-18°C ..	12	4.5 חיבור המכשיר לחשמל
19	11.6 שיטות להפשרת מזון קפוא	12	5 הכרת המכשיר שלכם
19	12 הפשרה	12	5.1 המכשיר
19	12.1 הפשרה בתא הקירור	13	5.2 לוח הבקרה
19	12.2 הפשרה בתא ההקפאה	13	6 אביזרים פנימיים
19	13 ניקוי ותחזוקה	13	6.1 מדף
19	13.1 הכנת המכשיר לניקוי	13	6.2 מיכל לחטיפים
19	13.2 ניקוי המכשיר	13	6.3 תא אחסון
20	13.3 הסרת אביזרים	14	6.4 מגירת פירות וירקות עם וסת לחות ..
20	13.4 פירוק חלקי המכשיר	14	6.5 מחלק המיכל
21	14 תיקון תקלות	14	6.6 תא לחמאה ולגבינה
24	14.1 הפסקת חשמל	14	6.7 מדף דלת
24	14.2 ביצוע בדיקה עצמית של המכשיר ..	14	6.8 אביזרים
24	15 אחסון והשלכה לאשפה	15	7 הפעלה בסיסית
24	15.1 הוצאת המכשיר משימוש	15	7.1 הדלקת המכשיר
		15	7.2 עצות להפעלה
		15	7.3 כיבוי המכשיר
		15	7.4 קביעת הטמפרטורה

16.1 מספר המוצר (E-Nr) ומספר הייצור	24	15.2 השלכת מכשיר הישן	24
25 (FD)	24	16 שירות לקוחות	24
25 מפרטים טכניים			

1 בטיחות

שימו לב להוראות הבטיחות להלן.

1.1 הנחיות כלליות

- קראו בקפידה את הוראות ההפעלה.
- שמרו על הוראות ההפעלה וכן על מסמכי המוצר במקום בטוח לעיון עתידי או עבור הבעלים הבאים.
- אל תחברו את המכשיר אם התגלו נזקי הובלה.

1.2 שימוש בהתאם לייעוד

- מכשיר זה אינו מיועד לשימוש כמכשיר מובנה.
- יש להשתמש במכשיר רק:
- לצינון ולהקפאת מזון ולניפוק קוביות קרח.
 - במשק בית פרטי ובחדרים סגורים בסביבה הביתית.
 - עד לגובה של 2000 מטר מעל פני הים.

1.3 הגבלות על קבוצת המשתמשים

מכשיר זה יכול להיות מופעל ע"י ילדים מעל מגיל 8 וע"י אנשים בעלי מגבלות פיסיקות, חושיות או מנטליות או אנשים חסרי בסיון ו/או ידע, כאשר הם נמצאים תחת פיקוח או אם עברו הדרכה בקשר להפעלה בטוחה של המכשיר והבינו את הסכנות הנובעות ממנה.

אין לאפשר לילדים לשחק במכשיר.

אסור לילדים לבצע ניקיון ותחזוקה ללא השגחה.

לילדים החל מגיל 3 ומתחת לגיל 8 מותר להכניס ולהוציא מוצרים מן המקרר / המקפיא.

1.4 הובלה בטוחה

אזהרה – סכנת פציעה!

משקלו הגבוה של המכשיר עלול לגרום לפציעות בזמן ההרמה.

אסור להרים את המכשיר לבד.

1.5 התקנה בטוחה

⚠ אזהרה – סכנת התחשמלות!

התקנה לא מקצועית היא מסוכנת.

- ◀ חברו והפעילו את המכשיר רק בהתאם למפרט המצוין בלוחית הדירוג.
- ◀ חברו את המכשיר לאספקת חשמל עם זרם חלופי רק דרך שקע המותקן כהלכה עם הארקה.
- ◀ יש להתקין כהלכה את מערכת מוליך ההגנה של ההתקנה החשמלית הביתית.
- ◀ אין לצייד את המכשיר בהתקן כיבוי חיצוני, לדוגמה, טיימר או שלט רחוק.
- ◀ כאשר המכשיר הורכב, על התקע של כבל החשמל להיות נגיש, או אם גישה חופשית בלתי אפשרית, יש לשלב בהתקנה החשמלית הקבועה מפסק בידוד בהתאם לכללי ההתקנה.
- ◀ בעת התקנת המכשיר, בדקו שכבל החשמל לא נתפס או לא ניזוק.
- ◀ בידוד פגום של הכבל החשמלי מהווה סכנה.
- ◀ אין להביא את הכבל החשמלי במגע עם מקורות חום.

⚠ אזהרה – סכנת פיצוץ!

- כשפתחי האוורור של המכשיר סגורים, עלולה להיווצר תערובת גז-אוויר דליקה אם קיימת דליפה במעגל הקירור.
- ◀ אין לסגור את פתחי האוורור בגוף המכשיר או בגומחת ההתקנה.

⚠ אזהרה – סכנת דליקה!

- כבל חשמלי מוארך ומתאם לא מורשים מהווים סכנה.
- ◀ אין להשתמש בכבל מאריך או במפצל שקעים.
 - ◀ מותר להשתמש רק במתאם ובכבלי חשמל המורשים ע"י היצרן.
 - ◀ כאשר כבל החשמל קצר מדי ואין כבל חשמל ארוך יותר, צרו קשר עם חשמלאי כדי להתאים את ההתקנה בבית.
- מפצל שקעים או יחידות ניידות לאספקת חשמל עלולים להתחמם ולגרום לדליקה.
- ◀ אין למקם מפצל שקעים או יחידות ניידות לאספקת חשמל בגב המכשיר.

1.6 שימוש בטוח

⚠ אזהרה – סכנת התחשמלות!

- חדירת לחות עלולה לגרום להתחשמלות.
- ◀ מותר להשתמש במכשיר רק בחדרים סגורים.
 - ◀ אין לחשוף את המכשיר לחום וללחות גבוהים.
 - ◀ אין לנקות את המכשיר במכשיר ניקוי בקיטור או בלחץ גבוה.

⚠ אזהרה – סכנת חנק!

- ילדים עלולים לכסות את הראש באריזות ולהילכד ולהיחנק בהן.
- ◀ הריחקו את האריזות מהילדים.

- ◀ אין להתיר לילדים לשחק בחומרי האריזה.
- ילדים עלולים לשאוף או לבלוע חלקים קטנים ולהיחנק.
- ◀ יש להרחיק חלקים קטנים מילדים.
- ◀ אין להתיר לילדים לשחק בחלקים קטנים.

⚠ **אזהרה – סכנת פיצוץ!**

- נדק למעגל הקירור עלול לגרום לדליפת חומר קירור דליק ולפיצוץ.
- ◀ אין להשתמש במכשירים מכניים או באמצעים אחרים מאלה המומלצים בידי היצרן כדי להאיץ את תהליך ההפשרה.
- ◀ חילוץ של מזון שקפא ונתקע ייעשה בעזרת מכשיר קהה כמו כף עץ.
- מוצרים המכילים חומרים דליקים או נפיצים עלולים להתפוצץ, למשל מיכלי תרסיס.
- ◀ אין לאחסן במכשיר מוצרים המכילים גזים דליקים וחומרים נפיצים.

⚠ **אזהרה – סכנת דליקה!**

- מכשירי חשמל בתוך המכשיר עלולים לגרום לדליקה, למשל תנורי חימום או מייצרי קרח חשמליים.
- ◀ אין להפעיל מכשירי חשמל בתוך המכשיר.

⚠ **אזהרה – סכנת פציעה!**

- מיכלים שבהם משקאות מוגזים עלולים להתפוצץ.
- ◀ אין לאחסן בתא ההקפאה מיכלים עם משקאות מוגזים.
- סכנת לפציעות עיניים עקב דליפה של חומר קירור דליק וגזים רעילים.
- ◀ אין לפגוע בצינורות מעגל הקירור והבידוד.
- המכשיר עלול להתהפך.
- ◀ אין לדרוך או להישען על הבסיס, המגירות או הדלתות.

⚠ **אזהרה – סכנת כוויות!**

- רכיבים מסוימים בגב המכשיר מתחממים במהלך ההפעלה.
- ◀ אין לגעת ברכיבים חמים.

⚠ **אזהרה – סכנת כוויות קור!**

- מגע עם מזון קפוא ומשטחים קפואים עלול לגרום לכוויות קור.
- ◀ אין להכניס לפה מזון קפוא מיד לאחר שהוצא מתא ההקפאה.
- ◀ הימנעו ממגע ממושך של העור במזון הקפוא, בקרח ובמשטחים בתא ההקפאה.

⚠ **זהירות – סכנה לנזק בריאותי!**

- כדי להימנע מזיהום המזון, פעלו לפי ההוראות שלהלן.
- ◀ אם הדלת נשארת פתוחה זמן רב, הטמפרטורה בתאי המכשיר עלולה לעלות משמעותית.

- ◀ נקו באופן קבוע את המשטחים ומערכות הניקוז הנגישות העלולים לבוא במגע עם מזון.
- ◀ אחסנו במקרר בשר ודגים בכלים מתאימים כך שהם לא יגעו במוצרי מזון אחרים או יטפטפו עליהם.
- ◀ אם המקרר/המקפיא עומד ריק במשך זמן רב, כבו את המכשיר, הפשירו אותו, נקו אותו והשאירו את הדלת פתוחה כדי למנוע היווצרות עובש.
- ◀ חלקים במכשיר העשויים מתכת או בעלי מראה מתכתי עשויים להכיל אלומיניום. כאשר מזונות חומציים באים במגע עם אלומיניום, יוני אלומיניום עלולים לחדור למזון.
- ◀ אין לצרוך מזון מזוהם.

1.7 מכשיר שניזוק

⚠ אזהרה – סכנת התחשמלות!

- ◀ מכשיר פגום או חיבור חשמלי פגום מהווים סכנה.
- ◀ לעולם אין להפעיל מכשיר שניזוק.
- ◀ אין למשוך את הכבל החשמלי, כדי לנתק את המכשיר מהחשמל. שלפו תמיד את התקע של כבל החיבור לחשמל.
- ◀ שלפו מיד את התקע של הכבל החשמלי אם המכשיר או הכבל החשמלי נזקקו או נתקו את הנתיק בתיבת הנתיכים.
- ◀ פנו לשירות הלקוחות. ← עמוד 24
- ◀ תיקונים לא מקצועיים עלולים להיות מסוכנים.
- ◀ רק בעלי מקצוע מיומנים רשאים לבצע תיקונים במכשיר.
- ◀ מותר להשתמש רק בחלקי חילוף מקוריים לצורך תיקון המכשיר.
- ◀ במידה והכבל החשמלי של מכשיר זה פגום, יש להחליפו ע"י היצרן או ע"י שירות הלקוחות של היצרן או אדם מיומן דומה על מנת למנוע סכנות.

⚠ אזהרה – סכנת דליקה!



- ◀ במקרה של נזק לצינורות, נזל קירור דליק וגדים מזיקים עלולים להיפלט ולהתלקח.
- ◀ הרחיקו מקורות אש והצתה מהמכשיר.
- ◀ אווררו את החדר.
- ◀ כבו את המכשיר. ← עמוד 15
- ◀ נתקו את המכשיר מרשת החשמל או כבו את הנתיק בתיבת הנתיכים.
- ◀ התקשרו לשירות הלקוחות. ← עמוד 24

בחירת מקום ההצבה

- הגנו על המכשיר מפני קרינת שמש ישירה.
- הציבו את המכשיר במרחק גדול ככל האפשר מגופי חימום, כיריים ומקורות חום אחרים:
 - שמרו על מרחק של 30 מ"מ מכיריים חשמליים או מכיריים גז.
 - שמרו על מרחק של 300 מ"מ מתנורי כפס או פחם.
- שמרו על מרווח קל בין המכשיר לקירות הצדדיים.
- לעולם אין לכסות או לחסום את פתחי האוורור החיצוניים.

שימוש חסכוני באנרגיה

הערה: סידור אביזרי המכשיר אינו משפיע על צריכת האנרגיה שלו.

- פתחו את המכשיר לדמן קצר בלבד, וסגרו אותו היטב.
- לעולם אין לכסות או לחסום את פתחי האוורור הפנימיים או את פתחי האוורור החיצוניים.
- הובילו את מוצרי המזון שרכשתם בצינור והכניסו אותם במהירות למכשיר.
- הכינו למוצרי מזון ומשקאות חמים להתקרר לפני שאתם מכניסים אותם למכשיר.
- כדי לנצל את הקור של פריטי מזון קפואים, הפשירו אותם בתא הקירור.
- השאירו תמיד מעט רווח בין מוצרי המזון והדופן האחורית.

לוח הבקרה של מצב חיסכון באנרגיה

כאשר המכשיר אינו בשימוש לוח הבקרה עובר אוטומטית למצב חיסכון באנרגיה. במצב חיסכון באנרגיה בהירות לוח הבקרה מופחתת ותצוגת המצב מאירה בלבן.

4 התקנה וחיבור

4.1 תכולת האריזה

לאחר הוצאת כל החלקים מהאריזה בדקו שלא נגרם נזק כלשהו בעת ההובלה ושכל החלקים נמצאים.

2 מניעת נזקי רכוש

שימו לב

- הטיית גלגלי המכשיר עלולה להזיק לרצפה בעת הזזת המכשיר.
- ▲ יש להוביל את המכשיר באמצעות עגלת יד להובלת מטען.
- ▲ בעת הזזת המכשיר הגנו על הרצפה ואל תובילו אותו בתנועת זיגזג.
- שימוש במכשיר, בבסיס, במגירות או בדלתות כמשטח ישיבה או טיפוס עלול לגרום נזק למכשיר.
- ▲ אין לדרוך או להישען על המכשיר, הבסיס, המגירות או הדלתות.
- לכלוך של שמן או שומן על חלקי פלסטיק ואטמי דלתות עלול לגרום להם להתייבש ולהתפורר.
- ▲ שמרו על חלקי הפלסטיק ואטמי הדלת בקיים משמן ומשומן.
- חלקים במכשיר העשויים מתכת או הנראים מתכתיים עשויים להכיל אלומיניום. במגע עם מזונות חומציים, האלומיניום מחליד ומשנה את צבעו.
- ▲ יש לאחסן במכשיר מוצרי מזון ארוזים בלבד.
- ניקוי אביזרים וחלקים של המכשיר במדיח הכלים עלול לגרום להם להתעוות או לשנות את צבעם.
- ▲ לעולם אין לנקות חלקים ואביזרים במדיח הכלים.

3 שמירה על הסביבה וחסכון באנרגיה

3.1 השלכת האריזה

- כל חומרי האריזה יידודתיים לסביבה וניתנים למחזור.
- ▲ מיינו את הרכיבים השונים בנפרד לפי סוג.

3.2 חיסכון בחשמל

אם תקפידו על הנחיות אלה, המכשיר יצרוך פחות חשמל.

במקרה של תלונות, פנו אל הסוכן או אל שירות הלקוחות ← עמוד 24.

המשלוח כולל את החלקים הבאים:

- מכשיר העומד עצמאי
- ציוד ואביזרים¹
- הוראות התקנה
- הוראות הפעלה
- רשימת מוקדי שירות לקוחות
- כתב אחריות²
- תווית אנרגיה
- מידע לגבי צריכת החשמל והרעשים

4.2 קריטריונים למקום ההצבה

⚠ אזהרה

סכנת פיצוץ!

אם המכשיר עומד בחדר קטן, ייתכן שבמקרה של דליפת חומר קירור תיווצר תערובת גז-אוויר נפיצה.

- הציבו את המכשיר רק בחדר בגודל של לפחות 1 מ"ק לכול 8 גרם חומר קירור. כמות חומר הקירור מצוינת על לוחית הנתונים.

← "המכשיר", איור 1 5 עמוד 13

משקל המכשיר יכול להגיע בהתאם לדגם עד ל-115 ק"ג.

הרצפה שעליה ניצב המכשיר צריכה להיות יציבה מספיק כדי לשאת את משקלו. המשטח חייב להיות מפולס. מכשיר קירור זה מיועד לשימוש בטמפרטורות סביבה של 10°C עד 43°C. המכשיר מסוגל לפעול באופן תקין בטווח הטמפרטורות המותרות בחדר. אם מפעילים המכשיר בחדר שהטמפרטורה בו נמוכה יותר, לא ייגרמו נזקים למכשיר עד לטמפרטורת חדר של 5°C.

הצבה זה מעל זה והצבה זה לצד זה

אם ברצונכם להציב 2 מכשירי קירור אחד על השני או אחד לצד השני, יש לשמור על מרחק של לפחות 150 מ"מ בין המכשירים. ניתן לבצע התקנה ללא שמירה על המרווח

המינימלי בדגמי מכשירים נבחרים. שאלו את הספק המורשה או מתכנן המטבח שלכם על כך.

4.3 התקנת המכשיר

- התקינו את המכשיר על פי הוראות ההתקנה המצורפות.

4.4 הכנת המכשיר לשימוש הראשון

1. הוציאו את דפי המידע.
2. הסירו את יריעות ההגנה ומגני ההובלה, לדוגמה פסי הדבקה וקרטונים.
3. נקו את המכשיר בפעם הראשונה. ← עמוד 19

4.5 חיבור המכשיר לחשמל

1. יש להכניס את תקע של כבל חשמל של המכשיר לשקע בקרבת המכשיר. נתוני החיבור של המכשיר מצוינים בלוחית הדגם.
- ← "המכשיר", איור 1 5 עמוד 13
2. בדקו שהתקע הוכנס במלואו.
- ✓ המכשיר מוכן כעת לפעולה.

5 הכרת המכשיר שלכם

5.1 המכשיר

כאן תוכלו למצוא סקירה של רכיבי המכשיר. ← איור 1

A	תא קירור ← עמוד 17
B	תא הקפאה ← עמוד 18
1	תאורה
2	מיכל לחטיפים ← עמוד 13 ³
3	פתחי אוורור פנימיים
4	בקר טמפרטורה (מיכל אחסון) ← עמוד 15

¹ בהתאם לאבזור המכשיר

² לא בכל המדינות

³ בהתאם לאבזור המכשיר

10	mode משמש לבחירת מצב.
11	☺ מודגש כאשר מצב חיסכון בחשמל מופעל.
12	+/- קובע את הטמפרטורה בתא שנבחר.
13	נורית חייווי המצב מציגה את מצב הפעולה של המכשיר.
14	super מפעיל או מכבה את נעילת הלחצנים של לוח הבקרה.
15	super מפעיל או מכבה את supercool ו-superfreeze בתא שנבחר.
16	☺ 3s/☺ 3s מאיר כאשר נעילת הלחצנים פעילה או כבויה.

6 אביזרים פנימיים

האבזור של מכשירכם תלוי בדגם שרכשתם.

6.1 מדף

כדי לשנות את מיקום המדף לפי הצורך אתם יכולים להוציא את המדף ולהכניס אותו במקום אחר.
← "הוצאת מדף", עמוד 20

6.2 מיכל לחטיפים

אחסנו במיכל החטיפים מוצרי מזון ארוזים או חטיפים קטנים.
ניתן להסיר את מיכל החטיפים. לשם כך הרימו ומשכו החוצה את מיכל החטיפים.
תוכלו להדז את תפס מיכל החטיפים.
← איור 3

6.3 תא אחסון

הטמפרטורות בתא האחסון נמוכות מאלו שבתא הקירור. מדי פעם יכולות להתפתח טמפרטורות הנמוכות מ-0°C.
כדי להגיע לטמפרטורות קרובות ל-0°C בתא האחסון, כוונו טמפרטורה של 2°C, במכל האחסון. ← עמוד 15

5	תווית נתונים ← עמוד 25
6	תא אחסון ← עמוד 13
7	מגירת פירות וירקות עם וסת לחות ← עמוד 14
8	מיכל מזון קפוא ← עמוד 20
9	רגלית מתברגת
10	תא לחמאה ולגבינה ← עמוד 14 ¹
11	לוח בקרה ← עמוד 13
12	מתלה דלת לבקבוקים גדולים ← עמוד 14
13	מחלק המיכל ← עמוד 14

5.2 לוח הבקרה

השתמשו בלוח הבקרה כדי לקבוע את כל הפונקציות של המכשיר ולקבל מידע על מצב הפעולה שלו.
← איור 2

1	מציג את הטמפרטורה שנקבעה עבור תא ההקפאה ב-°C.
2	ALARM מאיר כאשר התראת הטמפרטורה מופעלת.
3	superfreeze מופיע כאשר הקפאה מוגברת מופעל.
4	freezer fridge משמש לבחירת תא, כדי לשנות את הטמפרטורה או להפעיל פונקציות נוספות מסוימות.
5	מציג את הטמפרטורה שנקבעה עבור תא הקירור ב-°C.
6	ALARM מופיע כאשר התראת הדלת מופעלת.
7	supercool מופיע כאשר קירור מוגבר מופעל.
8	fresh מודגש כאשר מצב טריות מופעל.
9	☺ מודגש כאשר מצב חופשה מופעל.

¹ בהתאם לאבזור המכשיר

השתמש בטמפרטורות הנמוכות יותר בתא האחסון לצורך שמירה של מזון מתכלה כגון דגים, בשר ונקניק.

6.4 מגירת פירות וירקות עם וסת לחות

אחסנו פירות וירקות טריים ללא אריזה במיכל הפירות והירקות. פירות וירקות חתוכים יש לאחסן כשהם מכוסים או ארזים באריזה אטומה. אפשר להתאים את לחות האוויר במגירת הפירות והירקות באמצעות וסת הלחות ואיטום מיוחד. באופן זה אפשר לאחסן פירות וירקות טריים למשך זמן כמעט כפול מאשר באחסון רגיל.

← א"ור 4

לחצו על וסת הלחות כדי לכוון את לחות האוויר במיכל הפירות והירקות לפי הסוג והכמות של מוצרי המזון המאוחסנים שם:

- נעילה ללחות אוויר נמוכה ☹ באחסון פירות בעיקר, אחסון מעורב או כאשר המכשיר עמוס.
- שחרור נעילה ללחות אוויר גבוהה ☺ בעת אחסון של ירקות בעיקר או בעומס מועט.

יתכן שייוצרו מי עיבוי בתא הפירות והירקות, תלוי בכמות המוצרים המאוחסנים ובסוג המזון. נגבו את מי העיבוי במטלית יבשה והגדירו רמת לחות אוויר נמוכה באמצעות בקר הלחות. כדי לשמור על האיכות והארומה אחסנו פירות וירקות רגישים לקור מחוץ למכשיר, בטמפרטורה של כ-8°C עד 12°C, לדוגמה אננס, בננות, פירות הדר, מלפפונים, קישואים, פלפלים, עגבניות ותפוחי אדמה.

6.5 מחלק המיכל

⚠ אזהרה סכנת חנק!

ילדים עלולים לטפס לתוך המכשיר ולהיחנק שם. לעולם אין להוציא את המחיצה ממיכל המזון קפוא.

שימו לב

המחיצה של מיכל המזון הקפוא תינזק בעת הסרתה. לעולם אין להוציא את המחיצה ממיכל המזון קפוא.

המחיצה מחלקת את מיכל המזון הקפוא, כדי שתוכלו לארגן את המזון באופן טוב יותר.

6.6 תא לחמאה ולגבינה

אחסנו חמאה וגבינות צהובות בתא לחמאה ולגבינה.

6.7 מדף דלת

כדי לכוון את מדף הדלת לפי הצורך, ניתן להסיר אותו ולהתקין במקום אחר. ← "הסרת מדף הדלת", עמוד 20

6.8 אביזרים

השתמשו באביזרים מקוריים. הם מותאמים למכשיר שלכם. אביזרי המכשיר משתנים בהתאם לדגם.

מגש לביצים

אחסנו את הביצים בבטחה במגש לביצים.

מחזיק בקבוקים

מחזיק הבקבוקים מונע נפילה של בקבוקים כאשר פותחים וסוגרים את דלת המכשיר.

← א"ור 5

מדף בקבוקים מתכווץ

אחסנו בקבוקים בבטחה על מדף הבקבוקים המתכווץ.

← א"ור 6

מגש קוביות קרח

השתמשו במגש קוביות הקרח כדי להכין קוביות קרח.

הכנת קוביות קרח

השתמשו במי שתייה בלבד כדי להכין קוביות קרח.

- הטמפרטורה במכשיר משתנה כתלות בתנאים הבאים:
 - תדירות פתיחת המכשיר
 - קיבולת
 - טמפרטורת המזון הטרי המאוחסן
 - טמפרטורת הסביבה
 - חשיפה לקרינת שמש ישירה

7.3 כיבוי המכשיר

◀ לחצו על + למשך 10 שניות.

7.4 קביעת הטמפרטורה

קביעת הטמפרטורה בתא הקירור

1. בחרו את תא הקירור באמצעות **freezer fridge**.
 2. לחצו על +/- כמה פעמים עד שתצוגת הטמפרטורה (תא הקירור) תראה את הטמפרטורה המבוקשת.
 - כדי להגיע לטמפרטורה שהוגדרה, יש להעביר את בקר הטמפרטורה של מכל האחסון למצב של שליש גובה מלמטה.
- ← עמוד 15
- הטמפרטורה המומלצת לתא הקירור היא 4°C.

הגדרת הטמפרטורה בתא האחסון

- ◀ בחרו באחת מהאפשרויות הבאות:
 - ◀ כדי להנמיך את הטמפרטורה, הדיזו את בקר הטמפרטורה כלפי מעלה לכיוון "קר מאוד".
 - ◀ כדי להעלות את הטמפרטורה, הדיזו את בקר הטמפרטורה כלפי מטה לכיוון "קר".
- 7 איור ←

קביעת הטמפרטורה בתא ההקפאה

1. בחרו את תא ההקפאה באמצעות **freezer fridge**.
2. לחצו על +/- כמה פעמים עד שתצוגת הטמפרטורה (תא ההקפאה) תראה את הטמפרטורה המבוקשת.
 - הטמפרטורה המומלצת בתא ההקפאה היא -18°C.

1. מלאו את מגש קוביות הקרח במי שתייה עד שלושה רבעים מתכולתו והכניסו אותו לתא ההקפאה.
 - חילוף של מגש קוביות קרח שקפא ונתקע ייעשה רק בעזרת חפץ קשה כמו ידידת של כף עץ.
2. כדי לשחרר קוביות קרח ממגש קוביות הקרח החדיקו אותו זמן קצר תחת מים זורמים או פתלו אותו מעט.

7 הפעלה בסיסית

7.1 הדלקת המכשיר

1. חברו את המכשיר לחשמל. ← עמוד 12
 - הערה:** אם המכשיר כובה קודם לכן באמצעות לוח הבקרה, לחצו על + למשך 10 שניות.
 - ✓ המכשיר מוכן כעת לפעולה.
 - ✓ המכשיר יתחיל לקרר.
 - ✓ צליל אזהרה נשמע, צג הטמפרטורה (תא ההקפאה) מהבהב, ה-"ALARM" מאיר וצג המצב מאיר באדום כאשר תא ההקפאה עדיין חם מדי.
2. כבו את צליל האזהרה בעזרת **freezer fridge**.
 - ✓ "ALARM" כבה ברגע שהמכשיר מגיע לטמפרטורה שנקבעה.
3. הגדירו את הטמפרטורה המבוקשת.
 - ← עמוד 15

7.2 עצות להפעלה

- לאחר הפעלת המכשיר, יחלפו מספר שעות עד שהוא יגיע לטמפרטורה שנקבעה מראש.
 - אין להכניס מוצרי מזון לפני הגעה לטמפרטורה שכווננה מראש.
- ייתכן שדפנות הצד של המכשיר יתחממו מעט לעתים. זה מונע היווצרות מי עיבוי באזור אטמי הדלתות.
- שימו לב שבזמן סגירת הדלת, אין מוצרים שחוסמים את הדלת.
- לאחר סגירת הדלת עשוי להיווצר ואקום. במקרה כזה, ייתכן קושי בפתיחת הדלת לאחר מכן. המתינו רגע עד שהוואקום יתפוגג.

7.5 נעילת לחצנים

נעילת הלחצנים מונעת הפעלה לא רצויה או שגויה של המכשיר.

הפעלת נעילת הלחצנים

- ◀ לחצו על **super** למשך 3 שניות.
- ✓  "3s" מאיר.

ביטול נעילת הלחצנים

- ◀ לחצו על **super** למשך 3 שניות.
- ✓  "3s" מאיר.

הערה: כאשר הקפאה מוגברת מופעלת ייתכנו רעשים רבים מהרגיל.

הפעלת הקפאה מוגברת

- ◀ לחצו שוב ושוב על **super** עד ש-"superfreeze" מאיר.

הערה: לאחר כ-54 שעות המכשיר יעבור לפעולה רגילה.

כיבוי הקפאה מוגברת

- ◀ לחצו שוב ושוב על **super** עד ש-"superfreeze" יכבה.

8.3 מצב חופשה

לפני היעדרות ממושכת, ניתן להפעיל במכשיר מצב חופשה, החסכוני בחשמל.

זהירות

סכנה לנזק בריאותי!

כאשר מצב החופשה מופעל, תא הקירור מתחמם. טמפרטורה גבוהה עלולה להוביל להתרבות חיידקים וכך לקלקול מזון.

- ◀ כאשר מצב החופשה מופעל, אין לאחסן מוצרי מזון בתא הקירור.

המכשיר משנה אוטומטית את הטמפרטורות.

תא קירור	14 °C
תא הקפאה	טמפרטורה ללא שינוי

הפעלת מצב חופשה

- ◀ לחצו שוב ושוב על **mode** עד ש- מודגש.

כיבוי מצב חופשה

- ◀ לחצו שוב ושוב על **mode** עד שאין מצב מודגש.

8.4 מצב חיסכון באנרגיה

ניתן להעביר את המכשיר למצב חיסכון בחשמל.

המכשיר משנה אוטומטית את הטמפרטורות.

תא קירור	8 °C
תא הקפאה	-16 °C

8 פונקציות נוספות

מידע נוסף על הפונקציות הנוספות שאתם יכולים להשתמש בהן במכשיר שלכם.

8.1 קירור מוגבר

האפשרות קירור מוגבר מביאה את תא הקירור לרמת הקור הכי גבוהה שאפשר. הפעילו את קירור מוגבר לפני הכנסת כמות גדולה של מוצרי מזון לתא הקירור.

הערה: כאשר האפשרות קירור מוגבר מופעלת ייתכנו רעשים רבים מהרגיל.

הפעלת קירור מוגבר

- ◀ לחצו שוב ושוב על **super** עד ש-"supercool" מאיר.

הערה: לאחר כ-6 שעות המכשיר יעבור לפעולה רגילה.

כיבוי קירור מוגבר

- ◀ לחצו על **super**.
- ✓ הטמפרטורה שנקבעה קודם לכן תוצג.

8.2 הקפאה מוגברת

הקפאה מוגברת ידנית מקררת את תא ההקפאה ככל האפשר. הפעילו את הקפאה מוגברת 4 עד 6 שעות לפני הכנסת מוצרי מזון במשקל כולל גדול מ-2 ק"ג לתא ההקפאה. כדי לבצל את מלוא יכולת ההקפאה, השתמשו בהקפאה מוגברת.

←"תנאים מקדימים ליכולת ההקפאה",

עמוד 18

⚠️ זהירות

סכנה לנזק בריאותי!

חיידיקים מתרבים בתהליך ההפשרה ועלולים לקלקל את המזון הקפוא.

- ❖ אל תקפיאו מחדש מזון שהפשיר או מזון מופשר.
- ❖ הקפיאו רק לאחר הבישול או הטיגון.
- ❖ אל תאחסנו מזון קפוא מעבר לתאריך התפוגה שלו.

במקרים הבאים ייתכן שתופעל התראת טמפרטורה:

- ❖ המכשיר נכנס לפעולה.
 - ❖ הכניסו מוצרי מזון למכשיר רק לאחר הגעה לטמפרטורה שנקבעה.
 - ❖ הוכנסו כמויות גדולות של מזון טרי.
 - ❖ לפני הכנסת כמויות מזון גדולות הפעילו את הקפאה מוגברת.
 - ❖ דלת תא ההקפאה פתוחה זמן רב מדי.
- בדקו אם המזון הקפוא התחיל להפשיר או הפשיר לגמרי.

כיבוי התראת הטמפרטורה

- ❖ לחצו על **freezer fridge**.
- ❖ צליל האזהרה כבוי.
- ✓ בתצוגת הטמפרטורה (תא הקפאה) מוצגת לזמן קצר הטמפרטורה הגבוהה ביותר שהייתה בתא ההקפאה. לאחר מכן מוצגת בתצוגת הטמפרטורה (תא הקפאה) הטמפרטורה שנקבעה.
- ✓ מנקודת זמן זו ואילך המכשיר ימדוד מחדש וישמור את הטמפרטורה הגבוהה ביותר.

10 תא קירור

בתא הקירור אפשר לאחסן בשר, נקניקים, דגים, מוצרי חלב, ביצים, אוכל מבושל ומאפים.

אפשר לכוון טמפרטורה בין 2°C עד 8°C . בתא הקירור ניתן לאחסן לזמן קצר עד בינוני גם מוצרי מזון המתקלקלים בקלות. ככל שתבחרו טמפרטורה נמוכה יותר, כך יישמרו מוצרי המזון טריים לזמן ארוך יותר.

הפעלת מצב החיסכון באנרגיה

- ❖ לחצו שוב ושוב על **mode** עד ש-Ⓢ מודגש.

כיבוי מצב החיסכון באנרגיה

- ❖ לחצו שוב ושוב על **mode** עד שאין מצב מודגש.

8.5 מצב טריות

כדי שמוצרי המזון יישמרו טריים למשך זמן ארוך יותר אפשר להפעיל את מצב הטריות במכשיר.

המכשיר משנה אוטומטית את הטמפרטורות.

תא קירור	2°C
תא הקפאה	טמפרטורה ללא שינוי

הפעלת מצב הטריות

- ❖ לחצו שוב ושוב על **mode** עד ש-"fresh" מודגש.

כיבוי מצב הטריות

- ❖ לחצו שוב ושוב על **mode** עד שאין מצב מודגש.

9 התראה

9.1 התראת דלת

אם דלת המכשיר נותרת פתוחה למשך זמן מה, תופעל התראת דלת. נשמע צליל אזהרה, תצוגת המצב מאירה באדום ו-"ALARM" מופיע בתא הרלוונטי.

כיבוי התראת הדלת

- ❖ סגרו את דלת המכשיר או לחצו על **freezer fridge**.
- ✓ צליל האזהרה כבוי.

9.2 התראת טמפרטורה

כאשר תא ההקפאה חם מדי התראת הטמפרטורה תופעל. נשמע צליל אזהרה, תצוגת הטמפרטורה (תא ההקפאה) מהבהבת, "ALARM" מופיע ותצוגת המצב מאירה באדום.

10.1 עצות לאחסון מוצרי מזון בתא הקירור

- הכניסו רק מוצרי מזון טריים ולא פגומים.
- אחסנו את מוצרי המזון כשהם ארוזים או מכוסים בצורה אטומה.
- כדי שלא להפריע לזרימת האוויר וכדי למנוע קפיאת מזון, אין להניח את המזון לפני פתחי האווור הפנימיים או בצמוד לדופן האחורית הפנימית.
- הניחו למזונות ולמשקאות חמים להתקרר, לפני הכנסתם למכשיר.
- שימו לב לתאריך התפוגה שצוין היצרן.

10.2 אזורי קור בתא הקירור

סחרור האוויר בתא הקירור יוצר אזורי קור שונים.

האזור הקר ביותר

האזור הקר ביותר נמצא בתא האחסון.

עצה: אחסנו מוצרי מזון המתקלקלים בקלות באזור הקר ביותר, לדוגמה דגים, נקניק ובשר.

האזור החם ביותר

האזור החם ביותר נמצא למעלה בדלת.

עצה: אחסנו מוצרי מזון לא רגישים באזור החם ביותר, לדוגמה גבינה קשה וחמאה. כך הגבינה תוכל להמשיך ולפתח את הארומה שלה, והחמאה תהיה רכה למריחה.

11 תא הקפאה

בתא ההקפאה אפשר לאחסן מזון קפוא, להקפיא מוצרי מזון ולהכין קוביות קרח. אפשר לכוון טמפרטורה בין -16°C – עד -24°C .

מוצרי מזון המאוחסנים לטווח ארוך יש לאחסון בטמפרטורה של -18°C ומטה. תא ההקפאה מאפשר אחסון לטווח ארוך של מוצרי מזון הנוטים להתקלקל. הטמפרטורות הנמוכות מאטות או עוצרות את הקלקול.

11.1 יכולת הקפאה

יכולת ההקפאה מציינת אידו כמות של מוצרי מזון אפשר להקפיא לחלוטין בתוך כמה שעות.

הנתונים על יכולת ההקפאה מצוינים בתווית הנתונים.

← "המכשיר", איור 1/5 עמוד 13

תנאים מקדימים ליכולת ההקפאה

1. הפעילו את הקפאה מוגברת כ-24 שעות לפני הכנסת מוצרי מזון טריים.
← "הפעלת הקפאה מוגברת", עמוד 16
2. הניחו תחילה את מוצרי המזון במגירת תא ההקפאה התחתונה.

11.2 ניצול מרבי של נפח תא ההקפאה

גלו כיצד תוכלו לאחסן את כמות המזון הקפוא המרבית בתא ההקפאה.

1. הוציאו את כל האבזרים מתא ההקפאה.
← עמוד 20
2. אחסנו את המזון ישירות על המדפים ועל רצפת תא ההקפאה.

11.3 עצות לאחסון מוצרי מזון בתא ההקפאה

- אחסנו את מוצרי המזון כשהם ארוזים או מכוסים בצורה אטומה.
- הרחיקו מזון המיועד להקפאה ממזון קפוא.
- פזרו את מוצרי המזון על פני השטח כולו של מיכלי ההקפאה.
- כדי שתתאפשר זרימת אוויר רציפה במכשיר, יש לדחוף את מיכל ההקפאה פנימה עד הסוף.

11.4 עצות להקפאת מוצרי מזון טריים

- הקפיאו רק מוצרי מזון טריים ולא פגומים.
- הקפיאו את מוצרי המזון במנות.
- מוצרי מזון מבושלים מתאימים טוב יותר להקפאה ממוצרי מזון גולמיים.
- יקוּת יש לשטוף, לחתוך ולחלוט לפני ההקפאה.
- פירות יש לשטוף, לגלען ולפי הצורך לקלף אותם ואולי להוסיף סוכר או תמיסת חומצה אסקורבית, לפני ההקפאה.
- מוצרים המתאימים להקפאה הם לדוגמה מאפים, דגים, בשר, עוף, ביצים ללא

- הכינו במיקרוגל, בתנור או על הכיריים מוצרי מזון המיועדים לצריכה מידית.

12 הפשרה

12.1 הפשרה בתא הקירור

תא הקירור של מכשירכם מפשיר אוטומטית.

12.2 הפשרה בתא ההקפאה

דככות מערכת NoFrost האוטומטית תא ההקפאה נותר ללא קרח. לא נדרשת הפשרה.

13 ניקוי ותחזוקה

ניקוי המקומות הלא נגישים חייב להתבצע ע"י שירות הלקוחות. הניקוי ע"י שירות הלקוחות עלול לעלות כסף.

13.1 הכנת המכשיר לניקוי

1. כבו את המכשיר. ← עמוד 15
2. נתקו את המכשיר מהחשמל. נתקו את המכשיר מרשת החשמל או כבו את הנתיך בתיבת הנתיכים.
3. הוציאו את כל מוצרי המזון ואחסנו אותם במקום קר.
4. הניחו אוגרי קור על מוצרי המזון, אם יש ברשותכם.
4. הוציאו את כל האביזרים מהמכשיר. ← עמוד 20
5. פרקו את המדף מעל מגירת הפירות והירקות. ← עמוד 20

13.2 ניקוי המכשיר

⚠ אזהרה

סכנת התחשמלות!

- חזירת לחות עלולה לגרום להתחשמלות.
- אין לנקות את המכשיר במכשיר ניקוי בקיטור או בלחץ גבוה.
- קיומם של נוזלים בתוך התאורה, הבקרים או פתחי האוורור הפנימיים עלול להיות מסוכן.
- אסור שמי השטיפה יחדרו לתוך התאורה, הבקרים או פתחי האוורור הפנימיים.

קליפה, גבינה, חמאה, גבינה לבנה, מזון מוכן ושאריות מזון.

- מוצרי מזון שאינם מתאימים להקפאה הם לדוגמה חסה, צבניות, ביצים בקליפתן, ענבים, תפוחים ואגסים לא מבושלים, יוגורט, שמנת חמוצה, קרם פרש ומיונד.

אריזת מזון קפוא

חומרי אריזה מתאימים וסוג אריזה נכון משפיעים מאוד על איכות המוצר ומונעים כוויות קור.

1. הניחו את מוצרי המזון באריזה.
2. דחקו החוצה את כל האוויר.
3. סגרו את האריזה בצורה אטומה לאוויר כדי שמוצרי המזון לא יאבדו את טעמם ולא יתייבשו.
4. רשמו על האריזה את תכולתה ואת תאריך ההקפאה.

11.5 עמידות המזון כשהוא מוקפא ב-18°C-

מוצרי מזון	זמן אחסון
דגים, נקניק, אוכל מבושל, מאפים	עד 6 חודשים
עוף, בשר	עד 8 חודשים
ירקות, פירות	עד 12 חודשים

לוח ההקפאה המוטבע מציין את משך האחסון המרבי בחודשים בטמפרטורה קבועה של 18°C-.

11.6 שיטות להפשרת מזון קפוא

⚠ זהירות

סכנה לנזק בריאותי!

חיידקים מתרבים בתהליך ההפשרה ועלולים לקלקל את המזון הקפוא.

- ◀ אל תקפאו מחדש מזון שהפשיר או מזון מופשר.
- ◀ הקפאו רק לאחר הבישול או הטיגון.
- ◀ אל תאחסנו מזון קפוא מעבר לתאריך התפוגה שלו.

- ניתן להפשיר בתא הקירור מוצרי מזון מן החי, כמו דגים, בשר, גבינה וגבינה לבנה.
- לחם יש להפשיר בטמפרטורת החדר.

שימו לב

חומרי ביקוי לא מתאימים עלולים לפגוע במשטחי המכשיר.

אין להשתמש בכריות קרצוף קשות או בספוגי ביקוי שוחקים.

אין להשתמש בתכשירי ביקוי חריפים או שורטים.

אין להשתמש בתכשירי ביקוי שמכילים אחוז גבוה של אלכוהול.

ביקוי אבזרים וחלקים של המכשיר במדיח הכלים עלול לגרום להם להתעוות או לשנות את צבעם.

לעולם אין לנקות חלקים ואבזרים במדיח הכלים.

1. הכינו את המכשיר לביקוי. ← עמוד 19

2. נקו את המכשיר, האבזרים וחלקי המכשיר כמו גם את אטמי הדלתות בספוג כלים עדין, מים פושרים ונודל ביקוי כלים בערך חומציות ניטרלי.

3. נגבו ויבשו ביסודיות במטלית רכה ויבשה.

4. הכניסו את האבזרים והתקינו את חלקי המכשיר שניתנים לפירוק.

5. חברו את המכשיר לחשמל. ← עמוד 12

6. הכניסו את מוצרי המזון.

13.3 הסרת אבזרים

אם אתם רוצים לנקות את האבזרים ביסודיות, הוציאו אותם מהמכשיר.

הוצאת מדף

משכו החוצה את המדף והסירו אותו.

← איור 8

הוצאת מיכל החטיפים עם המחזיק

1. הוציאו את מיכל החטיפים.

2. הוציאו את המדף עם המחזיק.

3. דחפו את המחזיק הצדה מהמדף.

← איור 9

הסרת מדף הדלת

הרימו והוציאו את מדף הדלת.

← איור 10

הוצאת מיכל האחסון

1. שלפו את מיכל האחסון עד למעצור.

2. הרימו את מיכל האחסון מלפנים ① והסירו אותו. ②

← איור 11

הוצאת מגירת הפירות והירקות

1. משכו החוצה את מגירת הפירות והירקות, עד למעצור.

2. הרימו את מגירת הפירות והירקות מלפנים ① והוציאו אותה. ②

← איור 12

הוצאת מיכל המזון הקפוא

1. משכו את מיכל המזון הקפוא החוצה עד למעצור.

2. הרימו מעט מלפנים את מיכל המזון הקפוא ① והוציאו אותו. ②

← איור 13

הסרת חזית המיכל

ניתן לפרק את חזית מיכל הפירות והירקות לצורך ביקוי טוב יותר.

← לחצו על התפסים הקפיציים בצידי המיכל ① והסירו את החזית מהמיכל בתנועה סיבובית. ②

← איור 14

13.4 פירוק חלקי המכשיר

תוכלו לפרק חלקים אחדים מהמכשיר, אם תרצו לנקות את מכשירכם ביסודיות.

המדף שמעל מיכל הפירות והירקות

כדי לנקות ביסודיות את המכסה של מגירת הפירות והירקות, ניתן לפרק אותו.

הסרת המדף שמעל למיכל הפירות והירקות

1. הוציאו את מגירת הפירות והירקות. ← עמוד 20

2. הוצאת מיכל האחסון. ← עמוד 20

3. הרימו את המכסים של מגירת הפירות והירקות ① והוציאו אותם. ②

← איור 15

4. הטו את המדף שמעל למיכל הפירות והירקות הצידה ① והוציאו אותו. ②

← איור 16

התקנת המדף מעל למיכל הפירות והירקות

1. הטו את המדף שמעל למיכל הפירות והירקות הצידה ① ולחצו אותו כלפי מטה. ②

← איור 17

2. הדיזו את בקרי הלחות למיקום הקדמי.

← איור 18

3. תלו את המכסים של מגירת הפירות והירקות במקומם.

← איור 19

ודאו שהמכסים של מגירת הפירות והירקות יושבים בפתחים מתחת לבקרי הלחות.

4. הרכיבו את מיכל האחסון ואת מגירת הפירות והירקות.

← איור 20

14 תיקון תקלות

תקלות קלות במכשיר תוכלו לתקן בעצמכם. קראו את ההנחיות לתיקון תקלות לפני שאתם יוצרים קשר עם שירות הלקוחות. כך תימנעו מעלויות מיותרות.

⚠ אזהרה

סכנת התחשמלות!

תיקונים לא מקצועיים עלולים להיות מסוכנים.

- ◀ רק בעלי מקצוע מיומנים רשאים לבצע תיקונים במכשיר.
- ◀ מותר להשתמש רק בחלקי חילוף מקוריים לצורך תיקון המכשיר.
- ◀ במידה והכבל החשמלי של מכשיר זה פגום, יש להחליפו ע"י היצרן או ע"י שירות הלקוחות של היצרן או אדם מיומן דומה על מנת למנוע סכנות.

תקלה	גורם ופתרון תקלות
תאורת ה-LED אינה פועלת.	סיבות שונות אפשריות. ◀ התקשרו לשירות הלקוחות. מספר הטלפון של שירות הלקוחות מופיע ברשימה המצורפת של מרכזי שירות הלקוחות.
יחידת הקירור נדלקת לעיתים קרובות יותר ולמשך זמן רב יותר.	המכשיר נפתח לעיתים קרובות. ◀ אל תפתחו את דלת המכשיר ללא צורך. פתחי האוורור החיצוניים מכוסים. ◀ הרחיקו חסמים מול פתחי האוורור החיצוניים. זו אינה תקלה. מכשירי קירור מודרניים מופעלים בתדירות גבוהה יותר והם בעלי רמות הספק שונות כדי לקרר בצורה יעילה יותר.
	 ◀ הרחיקו חסמים מול פתחי האוורור החיצוניים. ◀ מקמו את המכשיר במרחק גדול ככל האפשר מגופי חימום, כיריים ומקורות חום אחרים. מנעו חשיפה של המכשיר לקרינת שמש ישירה. ◀ פתחו את המכשיר לזמן קצר ככל האפשר. ◀ אפשרו למדונות ולמשקאות חמים להתקרר, לפני הכנסתם למכשיר.

גורם ופתרון תקלות	תקלה
זו אינה תקלה. מכשירי קירור מודרניים מבטיחים טמפרטורה אחידה יותר בתא הקירור. הקיר האחורי הפנימי של תא הקירור מופשר אוטומטית באופן קבוע.	שכבת כפור נוצרת על הקיר האחורי הפנימי של תא הקירור.
◀ פתחו את המכשיר לדמן קצר ככל האפשר. ◀ ארזו את המזון בצורה אטומה לאוויר או כסו אותו. ◀ אפשרו למזונות ולמשקאות חמים להתקרר, לפני הכנסתם למכשיר. ◀ השאירו תמיד מרווח בין מוצרי המזון לקירות הפנימיים.	
לא תקלה. בתהליך הקירור הצינורות בדפנות הצדדיות מתחממים. ריהוט הנמצא במגע עם המכשיר אינו נפגע מהחום. אין צורך בנקיטת פעולה כלשהי.	הדפנות הצדדיות של המכשיר חמות.
הרכיבים האלקטרוניים זיהו תקלה. 1. כבו את המכשיר. ← עמוד 15 2. נתקו את המכשיר מהחשמל. - נתקו את תקע החשמל מהשקע או כבו את המפסק בתיבת הנתיכים. 3. חברו את המכשיר בחזרה לאחר 5 דקות. 4. הדליקו את המכשיר. ← עמוד 15 5. אם ההודעה עדיין מופיעה, התקשרו לשירות הלקוחות. מספר הטלפון של שירות הלקוחות מופיע ברשימה המצורפת של מרכזי שירות הלקוחות.	בתצוגת הטמפרטורה מופיע "E" או "d".
סיבות שונות אפשריות. ◀ לחצו על freezer fridge. ✓ בתצוגת הטמפרטורה (תא הקפאה) מוצגת לדמן קצר - הטמפרטורה הגבוהה ביותר שהייתה בתא ההקפאה. לאחר מכן מוצגת בתצוגת הטמפרטורה (תא הקפאה) הטמפרטורה שנקבעה. ✓ האזעקה תכובה. ✓ "ALARM" מאיר עד להגעה לטמפרטורה שנקבעה.	נשמע צליל אזהרה, תצוגת הטמפרטורה (תא ההקפאה) מהבהבת, "ALARM" מופיע ותצוגת המצב מאירה באדום.
דלת המכשיר פתוחה. ◀ סגרו את דלת המכשיר.	
הוכנסו כמויות גדולות של מזון טרי. ◀ אל תחרגו מיכולת ההקפאה המרבית. ← "יכולת הקפאה", עמוד 18	
דלת תא ההקפאה הייתה פתוחה זמן רב מדי. המאייד (יחידת הקירור) במערכת NoFrost מכוסה קרח רב. דרישה: אחסנו מזון קפוא במקום קריר, מבודד היטב. 1. כבו את המכשיר. ← עמוד 15	המכשיר לא הגיע לטמפרטורה שנקבעה. ההפשרה האוטומטית המלאה אינה פועלת עוד.

תקלה	גורם ופתרון תקלות
המכשיר לא הגיע לטמפרטורה שנקבעה. ההפשרה האוטומטית המלאה אינה פועלת עוד.	2. נתקו את המכשיר מהחשמל. נתקו את תקע החשמל מהשקע או כבו את המפסק בתיבת הבתים. 3. הרחיקו את המכשיר מהקיר. 4. פתחו את דלת המכשיר והשאירו אותה פתוחה. ✓ לאחר כ-20 דקות מי העיבוי יתחילו לזרום לתוך קערת האידוי בחלקו האחורי של המכשיר. ← איור 21 5. שאבו את מי העיבוי באמצעות ספוג כדי למנוע מילוי יתר של קערת האידוי. כאשר מים מפסיקים לזרום לקערת האידוי אז המאייד הופשר. 6. נקו את החלל הפנימי של המכשיר. ← <i>עמוד 19</i> 7. הדליקו בחזרה את המכשיר. ← <i>עמוד 15</i>
הטמפרטורה שונה מאוד מהערך שהוגדר.	סיבות שונות אפשריות. 1. כבו את המכשיר. ← <i>עמוד 15</i> 2. הדליקו את המכשיר בחזרה לאחר 5 דקות. ← <i>עמוד 15</i> ◀ אם הטמפרטורה גבוהה מדי, בדקו את הטמפרטורה שוב לאחר כמה שעות. ◀ אם הטמפרטורה נמוכה מדי, בדקו את הטמפרטורה שוב ביום הבא.
נוצר עיבוי על פני המכשיר ועל המדפים שבתוכו.	המים הנמצאים באוויר חם ולח מתעבים על המשטחים הקרים של המכשיר. 1. נגבו את מי ההפשרה במטלית רכה ויבשה. 2. פתחו את המכשיר לזמן מועט ככל האפשר. 3. וודאו תמיד כי המכשיר סגור כראוי.
המכשיר מפיק רעשי טרטור, זמזום, גרגור, נקישות או פקפוק.	לא תקלה. המנוע פועל, לדוגמה יחידת הקירור, המאוורר, גז קירור זורם בצנרת. המנוע, המפסק או השסתומים המגנטיים נדלקים או כבים. ההפשרה האוטומטית מופעלת. אין צורך בנקיטת פעולה כלשהי.
המכשיר עושה רעשים.	המכשיר לא מאוזן. ◀ ישרו את המכשיר בעזרת פלס והרגליים המתברגות.
	המכשיר לא עומד עצמאית. ◀ שמרו על מרווחי המינימום של המכשיר.
	אביזרים רועדים או נתקעים. ◀ בדקו את האביזרים המתפרקים, ובמקרה הצורך חברו אותם מחדש.
	בקבוקים או כלים נוגעים אלה באלה. ◀ הרחיקו את הבקבוקים או הכלים מעט אלה מאלה.
	הקפאה מוגברת מופעלת. אין צורך בנקיטת פעולה כלשהי.

14.1 הפסקת חשמל

במהלך הפסקת חשמל הטמפרטורה במכשיר עולה, עקב כך מתקצר זמן האחסון ואיכות המזון המוקפא יורדת.

במקרה של תקלה תוכלו למצוא באתר שלנו את זמני האחסון של המזון הקפוא בנתונים הטכניים של המכשיר שלכם.

הערות

- בזמן הפסקת חשמל יש לפתוח את המכשיר מעט ככול האפשר ואין לאחסן בתוכו מוצרי מזון נוספים.
- בדקו את איכות מוצרי המזון מיד בתום הפסקת החשמל.
- השליכו לפח מוצרי מזון קפואים שהפשירו והגיעו לטמפרטורה מעל 5°C.
- מוצרי מזון קפואים שהתחילו להפשיר יש לבשל או לטגן, ואז לצרוך או להקפיא אותם.

14.2 ביצוע בדיקה עצמית של המכשיר

המכשיר שלכם מצויד בבדיקה עצמית שמציגה תקלות ששירות הלקוחות שלכם יכול לתקן.

1. כבו את המכשיר. ←עמוד 15
2. נתקו את המכשיר מהחשמל.
3. נתקו את המכשיר מרשת החשמל או כבו את הנתיך בתיבת הנתיכים.
3. חברו את המכשיר לחשמל כעבור 5 דקות. ←עמוד 12
4. הדליקו את המכשיר. ←עמוד 15
5. בתוך 2 דקות מההדלקה לחצו על **freezer fridge** למשך 3 שניות, עד שנשמע צליל איתות.
- ✓ הבדיקה העצמית של המכשיר מתחילה.
- ✓ אם בסיום הבדיקה העצמית של המכשיר יישמעו שני אותות קוליים ובתצוגת הטמפרטורה תופיע הטמפרטורה שנקבעה, פירוש הדבר שחיישני הטמפרטורה במכשיר שלך תקינים. המכשיר חוזר לעבוד כרגיל.

✓ אם בתום הבדיקה העצמית של המכשיר נשמעים 5 אותות צליליים, הודיעו לשירות הלקוחות.

15 אחסון והשלכה לאשפה

15.1 הוצאת המכשיר משימוש

1. כבו את המכשיר. ←עמוד 15
2. נתקו את המכשיר מהחשמל.
- נתקו את המכשיר מרשת החשמל או כבו את הנתיך בתיבת הנתיכים.
3. הוציאו את כל מוצרי המזון.
4. נקו את המכשיר. ←עמוד 19
5. השאירו את דלת המכשיר פתוחה כדי שחלל הפנים יתאוויר.

15.2 השלכת מכשיר הישן

השלכה ידידותית לסביבה יכולה לסייע למחזר חומרי גלם יקרי ערך.

⚠ אזהרה

סכנה לנזק בריאותי!

ילדים עלולים להילכד במכשיר ולהיקלע לסכנת חיים.

- ◀ אל תוציאו את המגירות ואת תאי האחסון מהמכשיר על מנת להקשות על הילדים את הטיפוס לתוכו.
- ◀ הרחיקו את הילדים מהמכשיר שיצא משימוש.

⚠ אזהרה

סכנת דליקה!

במקרה של נזק לצינורות חומר קירור וגזים רעילים עלולים להיפלט ולהידלק.

◀ אין לפגוע בצינורות מעגל הקירור והבידוד.

1. נתקו את המכשיר מהחשמל.
 2. חתכו את כבל החשמל.
 3. השליכו את המכשיר לאשפה באופן ידידותי לסביבה.
- מידע לגבי אופני פינוי האשפה העדכניים ניתן לקבל אצל הסוחר, במועצה המקומית או בעירייה.

16 שירות לקוחות

חלקי חילוף מקוריים רלוונטיים לפעולה ניתן לקבל בהתאם לתקנת הדגם האקולוגי אצל שירות הלקוחות למשך לפחות 10 שנים החל

ההנחיות לחיפוש הדגם. סימון הדגם מתקבל מהתווים שלפני הלוכסן של מספר המוצר (E-Nr). שעל לוחית הדגם. לחלופין תוכלו למצוא את סימון הדגם גם בשורה הראשונה של תווית האנרגיה.

בהכנסת המכשיר לפעולה בתוך האזור הכלכלי האירופי. מידע מפורט על תקופת האחריות ותנאי האחריות בארצכם ניתן לקבל באמצעות קוד ה-QR שמופיע במסמך המצורף של פרטי ההתקשרות עם שירות הלקוחות ותנאי האחריות, דרך שירות הלקוחות שלנו, אצל הסוכן שלכם או באתר האינטרנט שלנו. ניתן למצוא את פרטי ההתקשרות של שירות הלקוחות באמצעות קוד ה-QR שמופיע במסמך המצורף של פרטי ההתקשרות ותנאי השירות או באתר האינטרנט שלנו.

16.1 מספר המוצר (E-Nr) ומספר הייצור (FD)

בפניה לשירות הלקוחות, יהיה צורך במספר המוצר (E-Nr) ומספר הייצור (FD), אותם ניתן למצוא בלוחית הדגם של המכשיר. ← "המכשיר", איור 1, עמוד 13 רשמו מספרים אלה כדי שתוכלו למצוא במהירות את נתוני המכשיר ואת מספר הטלפון של שירות הלקוחות.

17 מפרטים טכניים

מידע על חומר הקירור, נפח הקיבולת ונתונים טכניים נוספים תמצאו בלוחית הדירוג. ← "המכשיר", איור 1, עמוד 13 מוצר זה כולל מקור אור של דרגת יעילות אנרגיה F. מקור האור זמין כחלק חילוף ורק אנשי מקצוע מיומנים רשאים להחליף אותו. מוצר זה כולל מקור אור שני של דרגת יעילות אנרגיה F. מקור האור זמין כחלק חילוף ורק אנשי מקצוע מיומנים רשאים להחליף אותו. מוצר זה כולל מקור אור שלישי של דרגת יעילות אנרגיה F. מקור האור זמין כחלק חילוף ורק אנשי מקצוע מיומנים רשאים להחליף אותו. מידע נוסף על הדגם שלכם תוכלו למצוא באתר האינטרנט <https://eprel.ec.europa.eu/>¹ אתר אינטרנט זה מחובר למאגר נתוני המוצרים הרשמי של האיחוד האירופי EPREL. אנא מלאו אחר

¹ תקף עבור האיזור הכלכלי האירופי בלבד

**You can find additional information and explanations online.
Scan the QR code on the title page.**



Table of contents

1 Safety	27	7 Basic operation	37
1.1 General information	27	7.1 Switching on the appliance	37
1.2 Intended use	27	7.2 Operating tips	37
1.3 Restriction on user group	27	7.3 Switching off the appliance	37
1.4 Safe transport	28	7.4 Setting the temperature	37
1.5 Safe installation	28	7.5 Keylock	38
1.6 Safe use	29	8 Additional functions	38
1.7 Damaged appliance	31	8.1 Super cooling	38
2 Preventing material damage	32	8.2 Super freezing	38
3 Environmental protection and saving energy	32	8.3 Holiday mode	38
3.1 Disposing of packaging	32	8.4 Energy-saving mode	39
3.2 Saving energy	32	8.5 Freshness mode	39
4 Installation and connection	33	9 Alarm	39
4.1 Scope of delivery	33	9.1 Door alarm	39
4.2 Criteria for the installation location	33	9.2 Temperature alarm	39
4.3 Installing the appliance	34	10 Refrigerator compartment	40
4.4 Preparing the appliance for the first time	34	10.1 Tips for storing food in the refrigerator compartment	40
4.5 Connecting the appliance to the electricity supply	34	10.2 Chill zones in the refrigerator compartment	40
5 Familiarising yourself with your appliance	34	11 Freezer compartment	41
5.1 Appliance	34	11.1 Freezing capacity	41
5.2 Control panel	34	11.2 Fully utilising the freezer compartment volume	41
6 Features	35	11.3 Tips for storing food in the freezer compartment	41
6.1 Shelf	35	11.4 Tips for freezing fresh food ...	41
6.2 Snack container	35	11.5 Shelf life of frozen food at -18 °C	42
6.3 Storage container	35	11.6 Defrosting methods for frozen food	42
6.4 Fruit and vegetable container with humidity control	35	12 Defrosting	42
6.5 Container divider	36	12.1 Defrosting in the refrigerator compartment	42
6.6 Butter and cheese compartment	36	12.2 Defrosting in the freezer compartment	42
6.7 Door tray	36	13 Cleaning and servicing	42
6.8 Accessories	36		

13.1 Preparing the appliance for cleaning	42	15 Storage and disposal	48
13.2 Cleaning the appliance	43	15.1 Taking the appliance out of operation	48
13.3 Removing the fittings	43	15.2 Disposing of old appliance ...	49
13.4 Removing appliance components	44	16 Customer Service	49
14 Troubleshooting	44	16.1 Product number (E-Nr.) and production number (FD)	49
14.1 Power failure	48	17 Technical data	49
14.2 Conducting an appliance self-test	48		



1 Safety

Observe the following safety instructions.

1.1 General information

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

This appliance is not intended to be used as a built-in appliance.

Only use this appliance:

- for chilling and freezing food and for making ice cubes.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 2000 m above sea level.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Children above the age of three years old and younger than eight years old may load and unload the refrigerating appliance.

1.4 Safe transport

WARNING – Risk of injury!

The heavy weight of the appliance may result in injury when lifted.

- ▶ Do not lift the appliance on your own.

1.5 Safe installation

WARNING – Risk of electric shock!

Incorrect installation is dangerous.

- ▶ Connect and operate the appliance only in accordance with the specifications on the rating plate.
- ▶ Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ▶ The protective conductor system of the domestic electrical installation must be properly installed.
- ▶ Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.
- ▶ When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with heat sources.

WARNING – Risk of explosion!

If the appliance's ventilation openings are closed off, a leak in the refrigeration circuit may result in a flammable mixture of gas and air.

- ▶ Keep ventilation openings in the appliance casing or in the integrated casing clear of obstruction.

WARNING – Risk of fire!

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.

- ▶ Only use adapters and power cords approved by the manufacturer.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

Portable multiple socket strips or portable power supply units may overheat and cause a fire.

- ▶ Do not place portable multiple socket strips or power supply units on the back of the appliance.

1.6 Safe use

WARNING – Risk of electric shock!

An ingress of moisture can cause an electric shock.

- ▶ Only use the appliance in enclosed spaces.
- ▶ Never expose the appliance to intense heat or humidity.
- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

WARNING – Risk of explosion!

If the cooling circuit is damaged, flammable refrigerant may escape and explode.

- ▶ To accelerate the defrosting process, do not use any other mechanical devices or means other than those recommended by the manufacturer.
- ▶ If food is stuck to the freezer compartment, loosen it with a blunt object such as the handle of a wooden spoon.

Products which contain flammable propellants and explosive substances may explode, e.g. spray cans.

- ▶ Do not store products which contain flammable propellants (e.g. spray cans) or explosive substances in the appliance.

⚠ WARNING – Risk of fire!

Electrical devices within the appliance may cause a fire, e.g. heaters or electric ice makers.

- ▶ Do not operate electrical devices within the appliance.

⚠ WARNING – Risk of injury!

Containers that contain carbonated drinks may burst.

- ▶ Do not store containers that contain carbonated drinks in the freezer compartment.

Injury to the eyes caused by escaping flammable refrigerant and hazardous gases.

- ▶ Do not damage the tubes of the refrigerant circuit or the insulation.

The appliance may tip.

- ▶ Do not stand or support yourself on the base, runners or doors.

⚠ WARNING – Risk of burns!

Individual parts on the back of the appliance become hot during operation.

- ▶ Never touch these hot parts.

⚠ WARNING – Risk of cold burns!

Contact with frozen food and cold surfaces may cause burns by refrigeration.

- ▶ Never put frozen food straight from the freezer compartment into your mouth.
- ▶ Avoid prolonged contact of the skin with frozen food, ice and surfaces in the freezer compartment.

⚠ CAUTION – Risk of harm to health!

To prevent food from being contaminated, you must observe the following instructions.

- ▶ If the door is open for an extended period of time, this may lead to a considerable temperature increase in the compartments of the appliance.

- ▶ Regularly clean the surfaces that may come into contact with food and accessible drain systems.
- ▶ Store raw meat and fish in suitable containers in the refrigerating appliance so that they do not touch or drip on other food.
- ▶ If the fridge/freezer is empty for an extended period of time, switch off the appliance, defrost it, clean it and leave the door open to prevent the formation of mould.

Metal or metal-style parts in the appliance may contain aluminium. If acidic food comes into contact with aluminium in the appliance, aluminium foil ions may pass into the food.

- ▶ Do not consume soiled food.

1.7 Damaged appliance

WARNING – Risk of electric shock!

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ▶ Call customer service. → *Page 49*

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

WARNING – Risk of fire!



If the tubes are damaged, flammable refrigerant and harmful gases may escape and ignite.

- ▶ Keep naked flames and ignition sources away from the appliance.
- ▶ Ventilate the room.
- ▶ Switch off the appliance. → *Page 37*

- ▶ Unplug the mains plug from the mains or switch off the circuit breaker in the fuse box.
- ▶ Call customer service. → *Page 49*

2 Preventing material damage

ATTENTION

If not rolling freely, the appliance's castors may damage the floor when the appliance is moved.

- ▶ Transport the appliance using a sack truck.
- ▶ Use floor protection when moving the appliance, and do not move it in a zigzag fashion.

Using the appliance, base, runners or doors as a seat or climbing surface may damage the appliance.

- ▶ Do not stand or lean on the appliance, base, runners or doors.

Contamination with oil or fat may cause plastic parts and door seals to become porous.

- ▶ Keep plastic parts and door seals free of oil and grease.

Metal or metal-style parts in the appliance may contain aluminium. When aluminium comes into contact with acidic foods, it corrodes and discolours.

- ▶ Only store packaged food in the appliance.

If you clean fittings and accessories in the dishwasher, this may cause them to become deformed or discoloured.

- ▶ Never clean fittings and accessory in the dishwasher.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

Selecting the installation location

- Keep the appliance out of direct sunlight.
- Install the appliance as far away as possible from heating elements, cookers and other heat sources:
 - Maintain a 30 mm clearance to electric or gas cookers.
 - Maintain a 300 mm clearance to oil or solid-fuel cookers.
- Make sure there is a small gap between the side wall and the appliance.
- Never cover or block the external ventilation openings.

Saving energy during use

Note: The arrangement of the fittings does not affect the energy consumption of the appliance.

- Open the appliance only briefly and then close it carefully.
- Never cover or block the interior ventilation openings or the exterior ventilation openings.

en Installation and connection

- Transport purchased food in a cool bag and place in the appliance quickly.
- Allow warm food and drinks to cool down before storing them.
- Thaw frozen food in the refrigerator compartment to utilise the low temperature of the food.
- Always leave some space between the food and to the back panel.

Control panel energy-saving mode

If the appliance is not being used, the control panel automatically switches to control panel energy-saving mode.

In control panel energy-saving mode, the control panel brightness is reduced and the status display lights up white.

4 Installation and connection

4.1 Scope of delivery

After unpacking all parts, check for any transport damage and for completeness of delivery.

If you have any complaints, contact your dealer or our after-sales service → *Page 49*.

The delivery consists of the following:

- Free-standing appliance
- Equipment and accessories¹
- Installation instructions
- User manual
- Customer service directory
- Warranty enclosure²
- Energy label

- Information on energy consumption and noises

4.2 Criteria for the installation location

WARNING

Risk of explosion!

If the appliance is in a space that is too small, a leak in the refrigeration circuit may result in a flammable mixture of gas and air.

- Only install the appliance in a space with a volume of at least 1 m³ per 8 g refrigerant. The volume of refrigerant is indicated on the rating plate.

→ "Appliance", Fig. **1** / **5**

Page 34

The weight of the appliance ex works may be up to 115 kg depending on the model.

The subfloor must be sufficiently stable to bear the weight of the appliance.

The surface must be level.

This refrigerator is intended for use at ambient temperatures of 10 °C to 43 °C.

The appliance is fully functional within the permitted room temperature.

If the appliance is operated at colder room temperatures, the appliance will not be damaged up to a room temperature of 5 °C.

Over-and-under and side-by-side installation

If you want to install 2 refrigerating appliances one over the other or side by side, you must maintain a clearance of at least 150 mm between the appliances. Selected appliances can

¹ Depending on the appliance specifications

² Not in all countries

be installed without a minimum clearance. Ask your dealer or kitchen planner about this.

4.3 Installing the appliance

- ▶ Install the appliance in accordance with the enclosed installation instructions.

4.4 Preparing the appliance for the first time

1. Remove the informative material.
2. Remove the protective foil and transit bolts, e.g. remove the adhesive strips and carton.
3. Clean the appliance for the first time. → *Page 43*

4.5 Connecting the appliance to the electricity supply

1. Insert the mains plug of the appliance's power cable in a socket nearby.
The connection data of the appliance can be found on the rating plate.
→ *"Appliance", Fig. 1/5*
Page 34
2. Check the mains plug is inserted properly.
- ✓ The appliance is now ready for use.

5 Familiarising yourself with your appliance

5.1 Appliance

You can find an overview of the parts of your appliance here.
→ *Fig. 1*

A	Refrigerator compartment → <i>Page 40</i>
B	Freezer compartment → <i>Page 41</i>
1	Lighting
2	Snack container → <i>Page 35</i> ¹
3	Inner ventilation openings
4	Temperature controller (storage container) → <i>Page 37</i>
5	Rating plate → <i>Page 49</i>
6	Storage container → <i>Page 35</i>
7	Fruit and vegetable container with humidity control → <i>Page 35</i>
8	Frozen food container → <i>Page 43</i>
9	Screw foot
10	Butter and cheese compartment → <i>Page 36</i> ¹
11	Control panel → <i>Page 34</i>
12	Door tray for large bottles → <i>Page 36</i>
13	Container divider → <i>Page 36</i>

5.2 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.
→ *Fig. 2*

1	Displays the set temperature for the freezer compartment in °C.
2	ALARM lights up when the temperature alarm is switched on.

¹ Depending on the appliance specifications

3	superfreeze appears when Super freezing is switched on.
4	freezer fridge is used to select a compartment in order to change the temperature or switch on certain additional functions.
5	Displays the set temperature for the refrigerator compartment in °C.
6	ALARM appears when the door alarm is switched on.
7	supercool appears when Super cooling is switched on.
8	fresh is highlighted when the freshness mode is switched on.
9	 is highlighted when holiday mode is switched on.
10	mode is used to select a mode.
11	 is highlighted when the energy-saving mode is switched on.
12	+/- sets the temperature of the selected compartment.
13	The status indicator shows the operating status of the appliance.
14	super switches the button lock for the control panel on or off.
15	super switches supercool and superfreeze on or off in the selected compartment.
16	 3s/  3s lights up if the button lock is switched on or off.

6 Features

The features of your appliance depend on the model.

6.1 Shelf

To vary the shelf as required, you can remove the shelf and re-insert it elsewhere.

→ "Removing the shelf", Page 43

6.2 Snack container

Store packaged food or small snacks in the snack container.

You can remove the snack container. To do this, pull out and remove the snack container. You can move the holder for the snack container.

→ Fig. 3

6.3 Storage container

The temperatures in the storage container are lower than in the refrigerator compartment. Temperatures below 0 °C may occur occasionally.

In order to reach temperatures close to 0 °C in the storage container, set the refrigerator compartment temperature to 2 °C. → Page 37

Use the lower temperatures in the storage container to store highly perishable food, e.g. fish, meat and sausages.

6.4 Fruit and vegetable container with humidity control

Store fresh fruit and vegetables loose in the fruit and vegetable container. Cover any chopped fruit and vegetables, or store in air-tight packaging. You can adjust the humidity in the fruit and vegetable container using the humidity controller and a special seal. This allows fresh fruit and vegetables to be stored for up to twice as long as with conventional storage.

→ Fig. 4

The air humidity in the fruit and vegetable container can be set according to the type and amount of food to be

stored by pressing the humidity controller:

- Push in and engage for low humidity  when primarily storing fruit or mixed items, or if the appliance is very full.
- Release for high humidity  when primarily storing vegetables or when the appliance is not very full.

Condensation may form in the fruit and vegetable container depending on the food and quantity stored.

Remove the condensation with a dry cloth and adjust the air humidity to a lower setting using the humidity controller.

To ensure that the quality and aroma are retained, store fruit and vegetables that are sensitive to cold outside of the appliance at temperatures of approx. 8 °C to 12 °C, e.g. pineapple, bananas, citrus fruits, cucumbers, courgettes, peppers, tomatoes and potatoes.

6.5 Container divider

WARNING

Risk of suffocation!

Children may climb into the appliance and suffocate.

- Never remove the container divider from the frozen food container.

ATTENTION

The container divider for the frozen food container will be damaged if removed.

- Never remove the container divider from the frozen food container.

The container divider splits the frozen food container so that you can organise food better.

6.6 Butter and cheese compartment

Store butter and hard cheese in the butter and cheese compartment.

6.7 Door tray

To adjust the door tray as required, you can remove the door tray and re-insert elsewhere.

→ "Removing door tray", Page 43

6.8 Accessories

Use original accessories. These have been made especially for your appliance.

The accessories for your appliance depend on the model.

Egg tray

Store eggs safely on the egg tray.

Bottle holder

The bottle holder prevents bottles from falling over when the appliance door is opened and closed.

→ Fig. **5**

Variable bottle shelf

Store bottles securely on the variable bottle shelf.

→ Fig. **6**

Ice cube tray

Use the ice cube tray to make ice cubes.

Making ice cubes

Use only drinking water to make ice cubes.

1. Fill the ice cube tray with drinking water up to $\frac{3}{4}$ and place in the freezer compartment.
If the ice cube tray is stuck to the freezer compartment, loosen it with a blunt object such as the handle of a wooden spoon.

2. To loosen the ice cubes, twist the ice cube tray slightly or hold it briefly under flowing water.

7 Basic operation

7.1 Switching on the appliance

1. Electrically connect the appliance.
→ *Page 34*

Note: If the appliance has been previously switched off using the control panel, press and hold + for ten seconds.

- ✓ The appliance is now ready for use.
 - ✓ The appliance begins to cool.
 - ✓ A warning tone sounds, the temperature display (freezer compartment) flashes, "ALARM" lights up and the status display lights up red because the freezer compartment is still too warm.
2. Switch off the warning tone using **freezer fridge**.
- ✓ "ALARM" goes out as soon as the set temperature has been reached.
3. Set the required temperature.
→ *Page 37*

7.2 Operating tips

- Once you have switched on the appliance, the set temperature is only reached after several hours. Do not put any food in the appliance until the set temperature has been reached.
- The front panels of the housing are temporarily heated slightly. This prevents condensation in the area of the door seal.
- When closing the door, make sure that the door is not blocked by stored items.
- When you close the door, a vacuum may be created. The door is

then difficult to open again. Wait a moment until the vacuum is offset.

- The temperature in the appliance varies due to the following conditions:
 - How often the appliance is opened
 - Load capacity
 - Temperature of newly stored food
 - Ambient temperature
 - Direct sunlight

7.3 Switching off the appliance

- ▶ Press and hold + for 10 seconds.

7.4 Setting the temperature

Setting the refrigerator compartment temperature

1. Select the refrigerator compartment using **freezer fridge**.
2. Press +/- repeatedly until the temperature display (refrigerator compartment) shows the required temperature setting.
To reach the set temperature, slide the temperature controller for the storage container to a position that is one third from the bottom.
→ *Page 37*
The recommended temperature in the refrigerator compartment is 4 °C.

Setting the storage container temperature

- ▶ Select one of the options:
 - ▶ To reduce the temperature, move the temperature controller up towards "extra cold".
 - ▶ To increase the temperature, move the temperature controller down towards "cold".
- *Fig. 7*

Setting the freezer compartment temperature

1. Select the freezer compartment with **freezer fridge**.
2. Press **+/-** repeatedly until the temperature display (freezer compartment) shows the required temperature setting.
The recommended temperature in the freezer compartment is **-18 °C**.

7.5 Keylock

The keylock prevents the appliance from being operated accidentally or incorrectly while running.

Switching on the keylock

- ▶ Press and hold **super** for three seconds.
- ✓  "3s" lights up.

Switching off the keylock

- ▶ Press and hold **super** for three seconds.
- ✓  "3s" lights up.

8 Additional functions

Find out which additional functions can be used for your appliance.

8.1 Super cooling

With Super cooling, the refrigerator compartment cools as cold as possible.
Switch on Super cooling before placing large quantities of food in the refrigerator compartment.

Note: When Super cooling is switched on, increased noise may occur.

Switching on Super cooling

- ▶ Press **super** repeatedly until "supercool" lights up.

Note: After approx. 6 hours, the appliance switches to normal operation.

Switching off Super cooling

- ▶ Press **super**.
- ✓ The previously set temperature is displayed.

8.2 Super freezing

With Super freezing, the freezer compartment cools as cold as possible. Switch on Super freezing four to six hours before placing food weighing 2 kg or more into the freezer compartment.

In order to utilise the freezer capacity, use Super freezing.

→ "Prerequisites for freezing capacity", Page 41

Note: When Super freezing is switched on, increased noise may occur.

Switching on Super freezing

- ▶ Press **super** repeatedly until "superfreeze" lights up.

Note: After approx. 54 hours, the appliance switches to normal operation.

Switching off Super freezing

- ▶ Press **super** repeatedly until "superfreeze" goes out.

8.3 Holiday mode

If you are going to be away for a long time, you can switch on energy-saving holiday mode on the appliance.

CAUTION

Risk of harm to health!

The refrigerator compartment heats up while the holiday mode is switched on. The increased temperature

ure may cause bacteria to increase and spoil the food.

- ▶ When the holiday mode is switched on, do not store any food in the refrigerator compartment.

The appliance automatically sets the temperatures.

Refrigerator com- partment	14 °C
-------------------------------	-------

Freezer compart- ment	Temperature re- mains unchanged
--------------------------	------------------------------------

Switching on holiday mode

- ▶ Press **mode** repeatedly until is  highlighted.

Switching off holiday mode

- ▶ Press **mode** repeatedly until no mode is highlighted.

8.4 Energy-saving mode

You can set the appliance to save energy with the energy-saving mode. The appliance automatically sets the temperatures.

Refrigerator com- partment	8 °C
-------------------------------	------

Freezer compart- ment	-16 °C
--------------------------	--------

Switching on energy-saving mode

- ▶ Press **mode** repeatedly until is  highlighted.

Switching off energy-saving mode

- ▶ Press **mode** repeatedly until no mode is highlighted.

8.5 Freshness mode

In order to keep the food fresh for longer, you can switch on the freshness mode on the appliance. The appliance automatically sets the temperatures.

Refrigerator com- partment	2 °C
-------------------------------	------

Freezer compart- ment	Temperature re- mains unchanged
--------------------------	------------------------------------

Switching freshness mode on

- ▶ Press **mode** repeatedly until is "fresh" highlighted.

Switching off freshness mode

- ▶ Press **mode** repeatedly until no mode is highlighted.

9 Alarm

9.1 Door alarm

If the appliance door is open for a while, the door alarm switches on. A warning tone sounds, the status display lights up red and "ALARM" appears for the affected compartment.

Switching off the door alarm

- ▶ Close the appliance door or press **freezer fridge**.
- ✓ The warning tone is switched off.

9.2 Temperature alarm

If the freezer compartment becomes too warm, the temperature alarm is switched on. A warning tone sounds, the temperature display (freezer compartment) flashes, "ALARM" appears and the status display lights up red.

CAUTION

Risk of harm to health!

During the thawing process, bacteria may multiply and spoil the frozen food.

- ▶ Do not refreeze food after it has been defrosted or started to defrost.
- ▶ Refreeze food only after cooking.

- ▶ These items should no longer be stored for the maximum storage period.

The temperature alarm can be switched on in the following cases:

- The appliance is switched on.
Do not store any food until the appliance has reached the set temperature.
- Large quantities of fresh food are being placed inside.
Switch on Super freezing before placing large quantities of food in the appliance.
- The freezer compartment door is open for too long.
Check whether the frozen food has defrosted or thawed.

Switching off the temperature alarm

- ▶ Press **freezer fridge**.
- ✓ The warning tone is switched off.
- ✓ The temperature display (freezer compartment) briefly indicates the warmest temperature reached in the freezer compartment. The temperature display (freezer compartment) then indicates the set temperature again.
- ✓ From this time on, the warmest temperature is measured again and saved.

10 Refrigerator compartment

You can keep meat, sausage, fish, dairy products, eggs, prepared meals and pastries in the refrigerator compartment.

The temperature can be set from 2 °C to 8 °C.

The refrigerator compartment can also be used to store highly perish-

able foods in the short to medium term. The lower the selected temperature, the longer the food remains fresh.

10.1 Tips for storing food in the refrigerator compartment

- Only store food when fresh and undamaged.
- Store food covered or in air-tight packaging.
- To avoid impeding the circulation of air and to prevent food from freezing, do not place food in front of the inner ventilation openings or in direct contact with the back wall.
- Allow hot food and drinks to cool down first before placing in the appliance.
- Observe the best-before date or use-by date specified by the manufacturer.

10.2 Chill zones in the refrigerator compartment

The air circulation in the refrigerator compartment creates different chill zones.

Coldest zone

The coldest zone is in the storage container.

Tip: Store highly perishable food such as fish, sausages and meat in the coldest zone.

Warmest zone

The warmest zone is at the very top of the door.

Tip: Store food that does not spoil easily in the warmest zone, e.g. hard cheese and butter. Cheese can then continue to release its aroma and the butter will still be easy to spread.

11 Freezer compartment

You can store frozen food, freeze food and make ice cubes in the freezer compartment.

The temperature can be set from -16°C to -24°C .

Long-term storage of food should be at -18°C or lower.

The freezer compartment can be used to store perishable food long-term. The low temperatures slow down or stop the spoilage.

11.1 Freezing capacity

The freezing capacity indicates the quantity of food that can be frozen right through to the centre within a specific period of time.

Information on freezing capacity can be found on the rating plate.

→ "Appliance", Fig. **1**/**5** Page 34

Prerequisites for freezing capacity

1. Approx. 24 hours before storing fresh food in the appliance, switch on Super freezing.

→ "Switching on Super freezing", Page 38

2. Store the food in the bottom frozen food container first.

11.2 Fully utilising the freezer compartment volume

Learn how to store the maximum amount of frozen food in the freezer compartment.

1. Remove all fittings from the freezer compartment. → Page 43
2. Stack the food directly on the shelves and on the floor of the freezer compartment.

11.3 Tips for storing food in the freezer compartment

- Store food in air-tight packaging.
- Do not bring food which is to be frozen into contact with frozen food.
- Place the food over the whole area of the frozen food containers.
- To ensure that the air can circulate freely in the appliance, push the frozen food containers in as far as they will go.

11.4 Tips for freezing fresh food

- Freeze fresh and undamaged food only.
- Freeze food in portions.
- Cooked food is more suitable than food that can be eaten raw.
- Vegetables: Wash, chop up and blanch before freezing.
- Fruit: Wash, pit and perhaps peel, possibly add sugar or ascorbic acid solution.
- Food that is suitable for freezing includes baked items, fish and seafood, meat, game, poultry, eggs without shells, cheese, butter and quark, ready meals and leftovers.
- Food that is unsuitable for freezing includes lettuce, radishes, eggs in shells, grapes, raw apples and pears, yoghurt, sour cream, crème fraîche and mayonnaise.

Packing frozen food

If you select suitable packaging material and the correct type of packaging, you can determine the product quality and prevent freezer burn.

1. Place the food in the packaging.
2. Squeeze out the air.

3. Pack food airtight to prevent it from losing flavour and drying out.
4. Label the packaging with the contents and the date of freezing.

11.5 Shelf life of frozen food at -18 °C

Food	Storage time
Fish, sausages, prepared meals and baked goods	up to 6 months
Poultry, meat	up to 8 months
Vegetables, fruit	up to 12 months

The imprinted freezer calendar indicates the maximum storage duration in months at a constant temperature of -18 °C.

11.6 Defrosting methods for frozen food

CAUTION

Risk of harm to health!

During the thawing process, bacteria may multiply and spoil the frozen food.

- ▶ Do not refreeze food after it has been defrosted or started to defrost.
- ▶ Refreeze food only after cooking.
- ▶ These items should no longer be stored for the maximum storage period.
- Defrost animal-based food, such as fish, meat, cheese, quark, in the refrigerator compartment.
- Defrost bread at room temperature.
- Prepare food for immediate consumption in the microwave, in the oven, or on the hob.

12 Defrosting

12.1 Defrosting in the refrigerator compartment

The refrigerator compartment in your appliance defrosts automatically.

12.2 Defrosting in the freezer compartment

The fully automatic NoFrost system ensures that the freezer compartment remains frost-free. Defrosting is not required.

13 Cleaning and servicing

Customer Service must clean inaccessible points. Cleaning by customer service can give rise to costs.

13.1 Preparing the appliance for cleaning

1. Switch off the appliance.
→ *Page 37*
2. Disconnect the appliance from the power supply.
Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
3. Take out all of the food and store it in a cool place.
Place ice packs (if available) onto the food.
4. Remove all fittings and accessories from the appliance.
→ *Page 43*
5. Remove the shelf above the fruit and vegetable container.
→ *Page 44*

13.2 Cleaning the appliance

WARNING

Risk of electric shock!

An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

Liquid in the lighting, controls or inner ventilation openings can be dangerous.

- ▶ The rinsing water must not drip into the lighting, controls or inner ventilation openings.

ATTENTION

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Do not use harsh or abrasive detergents.
- ▶ Do not use cleaning products with a high alcohol content.

If you clean fittings and accessories in the dishwasher, this may cause them to become deformed or discoloured.

- ▶ Never clean fittings and accessory in the dishwasher.

1. Prepare the appliance for cleaning.
→ *Page 42*
2. Clean the appliance, the fittings, the accessories and the door seals with a dish cloth, lukewarm water and a little pH-neutral washing-up liquid.
3. Dry thoroughly with a soft, dry cloth.
4. Insert the fittings and install the removable appliance parts.
5. Electrically connect the appliance.
→ *Page 12*
6. Putting the food into the appliance.

13.3 Removing the fittings

If you want to clean the fittings thoroughly, remove these from your appliance.

Removing the shelf

- ▶ Pull out and remove the shelf.
→ *Fig. 8*

Removing the snack container with holder

1. Remove the snack container.
2. Remove the shelf with the holder.
3. Slide the holder sideways off the shelf.
→ *Fig. 9*

Removing door tray

- ▶ Lift the door tray and remove it.
→ *Fig. 10*

Removing the storage container

1. Pull out the storage container as far as it will go.
2. Lift the storage container at the front ① and remove it ②.
→ *Fig. 11*

Removing the fruit and vegetable container

1. Pull out the fruit and vegetable containers as far as they will go.
2. Lift the fruit and vegetable containers at the front ① and remove them ②.
→ *Fig. 12*

Removing the frozen food container

1. Take out the frozen food container as far as it will go.
2. Lift the frozen food container at the front ① and remove it ②.
→ *Fig. 13*

Removing the front of the container

You can remove the front of the fruit and vegetable container to facilitate cleaning.

- ▶ Press in the snap-in hooks on the side of the container ① and remove the front from the container in a turning motion ②.
→ Fig. **14**

13.4 Removing appliance components

If you want to clean your appliance thoroughly, you can remove certain components from your appliance.

Shelf above the fruit and vegetable container

You can remove the cover of the fruit and vegetable container in order to clean it thoroughly.

Removing the shelf above the fruit and vegetable container

1. Remove the fruit and vegetable containers. → Page 43
2. Remove the storage container.
→ Page 43

3. Lift the fruit and vegetable container covers ① and remove them ②.
→ Fig. **15**
4. Tilt the shelf above the fruit and vegetable container to the side ① and remove it ②.
→ Fig. **16**

Fitting the shelf above the fruit and vegetable container

1. Tilt the shelf above the fruit and vegetable container to one side to insert it ① and then lower ②.
→ Fig. **17**
2. Move the humidity controllers to the front.
→ Fig. **18**
3. Clip the fruit and vegetable container covers in place.
→ Fig. **19**
Make sure that the fruit and vegetable container covers sit in the openings under the humidity controllers.
4. Insert the storage containers and the fruit and vegetable containers.
→ Fig. **20**

14 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

WARNING

Risk of electric shock!

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

Fault	Cause and troubleshooting
The LED lighting does not work.	Different causes are possible. ▶ Call customer service. The customer service number can be found in the enclosed customer service directory.
The refrigeration unit is switching on more frequently and for longer.	The appliance has been opened frequently. ▶ Do not open appliance door unnecessarily. External ventilation openings are covered up. ▶ Remove any obstructions from in front of the external ventilation openings. Not a fault. Modern refrigeration machines switch on more frequently and have different power levels to cool more efficiently.  ▶ Remove any obstructions from in front of the external ventilation openings. ▶ Install the appliance as far away as possible from heating elements, cookers and other heat sources. Avoid prolonged exposure of the appliance to direct sunlight. ▶ Only open the appliance door as briefly as necessary. ▶ Allow hot food and drinks to cool down first before storing in the appliance.
A layer of frost forms on the back wall of the refrigerator compartment.	Not a fault. Modern refrigeration machines ensure a more even temperature in the refrigerator compartment. The back wall of the refrigerator compartment is defrosted automatically at regular intervals.  ▶ Only open the appliance door as briefly as necessary. ▶ Pack the food airtight or cover it. ▶ Allow hot food and drinks to cool down first before storing in the appliance. ▶ Always leave some space between the food and the interior walls.

Fault	Cause and troubleshooting
Side panels of the appliance are warm.	Not a fault. The side panels contain pipes which heat up during the cooling process. Units touching the appliance will not be damaged by the heat. No action required.
"E" or "d" appears on the temperature display.	The electronics have detected a fault. 1. Switch off the appliance. → <i>Page 37</i> 2. Disconnect the appliance from the mains. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. 3. Reconnect the appliance after five minutes. 4. Switch on the appliance. → <i>Page 37</i> 5. If the message still appears on the display, call Customer Service. The customer service number can be found in the enclosed customer service directory.
A warning tone sounds, the temperature display (freezer compartment) flashes, "ALARM" appears and the status display lights up red.	Different causes are possible. ▶ Press freezer fridge. ✓ The temperature display (freezer compartment) briefly indicates the warmest temperature reached in the freezer compartment. The temperature display (freezer compartment) then indicates the set temperature again. ✓ The alarm is switched off. ✓ "ALARM" lights up until the set temperature is reached. The appliance door is open. ▶ Close the appliance door. Larger quantities of fresh food have been put in. ▶ Do not exceed the max. freezing capacity. → <i>"Freezing capacity", Page 41</i>
The set temperature is not reached. Fully automatic defrosting no longer works.	The freezer compartment door was open for a long time. The evaporator (refrigeration unit) in the noFrost system is heavily iced up. Requirement: Store the frozen food well insulated in a cool place. 1. Switch off the appliance. → <i>Page 37</i> 2. Disconnect the appliance from the mains. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. 3. Move the appliance away from the wall.

Fault	Cause and troubleshooting
The set temperature is not reached. Fully automatic defrosting no longer works.	4. Leave the appliance door open. ✓ After approx. 20 minutes, the condensation starts to run into the evaporation pan at the rear of the appliance. → Fig. 21 5. To prevent the evaporation pan from overflowing, mop up the condensation water with a sponge. The evaporator is defrosted if no more condensation water runs into the evaporation pan. 6. Clean the interior of the appliance. → <i>Page 43</i> 7. Switch the appliance back on. → <i>Page 37</i>
The temperature differs greatly from the setting.	Different causes are possible. 1. Switch off the appliance. → <i>Page 37</i> 2. Switch the appliance back on after five minutes. → <i>Page 37</i> ► If the temperature is too warm, check the temperature again after a couple of hours. ► If the temperature is too cold, check the temperature again on the following day.
Condensation accumulates on the surface of the appliance and on the shelves inside.	The water contained in warm and humid air condenses on the colder surfaces of the appliance. 1. Wipe away the condensation water with a soft, dry cloth. 2. Open the appliance as briefly as possible. 3. Ensure that the appliance is always closed properly.
The appliance hums, bubbles, buzzes, gargles, clicks or crackles.	Not a fault. A motor is running, e.g. refrigerating unit, fan. Refrigerant flows through the pipes. The motor, switches or solenoid valves are switching on or off. Automatic defrosting is running. No action required.
The appliance makes noises. 	The appliance is not level. ► Align the appliance using a spirit level and the screw feet. The appliance is not free-standing. ► Observe the minimum clearances for the appliance. Fittings wobble or stick. ► Check the removable fittings and, if required, replace these. Bottles or containers are touching. ► Move the bottles or containers away from each other.

Fault	Cause and troubleshooting
The appliance makes noises.	Super freezing is switched on. No action required.
	

14.1 Power failure

During a power failure, the temperature in the appliance rises; this reduces the storage time and the quality of the frozen food.

On the website for your appliance, the technical data provides you with the storage times for frozen food in the event of a fault.

Notes

- Open the appliance as little as possible during a power failure and do not place any other food in the appliance.
- Check the quality of the food immediately after a power failure.
 - Dispose of any frozen food that has defrosted and is hotter than 5 °C.
 - Cook or fry slightly thawed frozen food, and then either consume it or freeze it again.

14.2 Conducting an appliance self-test

Your appliance has an appliance self-test which displays faults that can be eliminated by your customer service.

1. Switch off the appliance.
→ *Page 37*
2. Disconnect the appliance from the power supply.
Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
3. Electrically reconnect the appliance after 5 minutes. → *Page 12*

4. Switch on the appliance.
→ *Page 37*
5. Within the first two minutes after switching on, press and hold **freezer fridge** for 3 seconds until an audible signal sounds.
 - ✓ The appliance self-test starts.
 - ✓ If, at the end of the appliance self-test, 2 audible signals sound and the temperature display indicates the set temperature, the temperature sensors on your appliance are OK. The appliance switches to normal operation.
 - ✓ If, at the end of the appliance self-test, 5 audible signals sound, inform customer service.

15 Storage and disposal

15.1 Taking the appliance out of operation

1. Switch off the appliance.
→ *Page 37*
2. Disconnect the appliance from the power supply.
Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
3. Remove all of the food.
4. Clean the appliance. → *Page 43*
5. To guarantee the ventilation inside the appliance, leave the appliance open.

15.2 Disposing of old appliance

Valuable raw materials can be re-used by recycling.

WARNING

Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ▶ Leave shelves and containers inside the appliance to prevent children from climbing in.
- ▶ Keep children away from the redundant appliance.

WARNING

Risk of fire!

If the tubes are damaged, flammable refrigerant and harmful gases may escape and ignite.

- ▶ Do not damage the tubes of the refrigerant circuit or the insulation.

1. Unplug the appliance from the mains.
2. Cut through the power cord.
3. Dispose of the appliance in an environmentally friendly manner.
Information about current disposal methods are available from your specialist dealer or local authority.

16 Customer Service

Function-relevant genuine spare parts according to the corresponding Eco-design Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed docu-

ment on service contacts and warranty conditions, from our customer service or on our website. You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website.

16.1 Product number (E-Nr.) and production number (FD)

If you contact Customer Service, you will require the product number (E-Nr.) and the production number (FD), which you can find on the appliance's rating plate.

→ "Appliance", Fig.   Page 34
Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

17 Technical data

Refrigerant, cubic capacity and further technical specifications can be found on the rating plate.

→ "Appliance", Fig.   Page 34
This product contains a light source from energy efficiency class F. The light source is available as a spare part and should only be replaced by trained specialist staff.

This product contains a second light source from energy efficiency class F. The light source is available as a spare part and should only be replaced by trained specialist staff.

This product contains a third light source from energy efficiency class F. The light source is available as a spare part and should only be replaced by trained specialist staff.

You can find more information about your model online at <https://eprel.ec.europa.eu/>¹. This web address is linked to the official EU EPREL product database. Please then follow the instructions on searching for the model. The model identifier is made up of the characters before the slash in the product number (E-Nr.) on the rating plate. Alternatively, you can also find the model identifier in the first line of the EU energy label.

¹ Only applies to countries in the European Economic Area

[illegible]

תודה שרכשתם מכשיר חשמל ביתי מתוצרת Bosch!



רישמו כעת את המכשיר החדש אצל MyBosch, ותיהנו מהדברים הבאים:

- המלצות מקצועיות וטיפים עבור המכשיר
- אפשרויות להארכת תוקף האחריות
- הנחות על אביזרים ועל חלקי חילוף
- הוראות הפעלה דיגיטליות ונגישות מידית לכל נתוני המכשיר
- גישה קלה לשירות מכשירי החשמל הביתיים של Bosch

הרשמה ללא תשלום ובקלות – גם באמצעות הנייד:

www.bosch-home.co.il

זקוקים לעזרה? כאן תוכלו למצוא אותה.

BOSCH
HOME APPLIANCES
SERVICE

ייעוץ מקצועי עבור מכשירי החשמל הביתיים Bosch שלכם, סיוע בבעיות או בתיקונים באמצעות מומחי Bosch.

לימוד אודות האפשרויות המגוונות, כיצד Bosch יוכלו למתוך בכם:

www.bosch-home.co.il

פרטי הקשר לכל המדינות מופיעים בתיקיית השירות המצורפת.

BSH Hausgeräte GmbH

Carl-Wery-Straße 34

81739 München, GERMANY

www.bosch-home.com

A Bosch Company



8001262253 (051119)

he, en