



# Fridge-freezer

KIL52.. KIL42.. KIL32.. KIL22..

[en] User manual

## **Table of contents**

Safety4General information4Intended use4	Operating tip Switching off Setting the te
Restriction on user group	Additional fu Super function
Safe use	Alarm
Preventing material damage 11  Environmental protection and saving energy 11	Refrigerator Tips for storingerator comp
Disposing of packaging 11 Saving energy 11	Chill zones in compartmen "OK" sticker
Installation and connection	Freezer com Freezer com Freezing cap Tips for buyin Tips for storing freezer comp Tips for freeze Shelf life of freezes.
Familiarising yourself with your appliance	Defrosting m food  Defrosting  Defrosting in
<b>Features</b>	compartmen Defrosting in partment
Variable shelf	Cleaning and Preparing the cleaning Cleaning the Cleaning the channel and Removing th
Basic operation	<b>Troubleshoo</b> Malfunctions

Operating tips Switching off the appliance Setting the temperature	. 18
Additional functions	
<b>Alarm</b> Door alarm	
Refrigerator compartment	
Chill zones in the refrigerator compartment	20
Freezer compartment Freezer compartment door Freezing capacity Freezing capacity Freezing frozen food Fips for storing food in the Freezer compartment Fips for freezing fresh food Fips for freezing methods for frezen food Fips for freezing in the refrigerator compartment Fips for storing freezing fr	. 21 . 21 . 21 . 21 . 22 . 23 . 23
Cleaning and servicing	24
Preparing the appliance for cleaning	. 24
Troubleshooting	

Information on display panel Temperature problem	
Noise	28
test	30
Storage and disposal	30
Switching off the appliance	
Disposing of old appliance	30
Customer Service Product number (E-Nr.) and pro-	30
duction number (FD)	31
Technical data	31



## **⚠** Safety

Please read the safety information to ensure that you use the appliance safely.

This appliance complies with the relevant safety regulations for electrical appliances and is fitted with noise suppression.

#### General information

You can find general information about this instruction manual here.

- Read this instruction manual carefully. Only this will ensure you use the appliance safely and efficiently.
- This manual is intended for the user of the appliance.
- Follow the safety instructions and warnings.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Check the appliance after unpacking it. Do not connect the appliance if it has been damaged in transit.

#### Intended use

Read the information on intended use to ensure that you use the appliance correctly and safely.

This appliance is only intended to be fully fitted in a kitchen. Observe the special installation instructions.

Only use this appliance:

- As specified in this instruction manual.
- For chilling and freezing food and making ice.
- In private households and in enclosed spaces in a domestic environment.
- Up to an altitude of max. 2000 m above sea level.

#### Restriction on user group

Avoid risks to children and vulnerable persons.

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Children must not play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Keep children under the age of 8 years away from the appliance and power cable.

Children above the age of three years old and younger than eight years old may load and unload the the fridge-freezer.

#### Safe transport

Follow these safety instructions when transporting the appliance.

#### ⚠ WARNING – Risk of injury!

The high weight of the appliance may result in injury when lifted.

▶ Do not lift the appliance on your own.

#### Safe installation

Follow these safety instructions when installing the appliance.

#### ⚠ WARNING – Risk of electric shock!

Improper installation is dangerous.

- ► Connect and operate the appliance only in accordance with the specifications on the rating plate.
- Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ► The protective conductor system of the domestic electrical installation must be properly installed.
- ▶ Never equip the appliance with an external switching device, e.g. a timer or remote control.

#### en Safety

- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an all-pole isolating switch must be installed in the permanent electrical installation according to the installation regulations.
- ► When installing the appliance, check that the power cable is not trapped or damaged.

### 

- It is dangerous to use an extended power cord and non-approved adapters.
  - ▶ Do not use extension cables or multiple socket strips.
  - ▶ If the power cord is too short, contact Customer Service.
  - ▶ Only use adapters approved by the manufacturer.



Portable multiple socket strips or portable power supply units may overheat and cause a fire.

▶ Do not position portable multiple socket strips or portable power supply units behind the appliance.

#### Safe use

Follow these safety instructions when using the appliance.

### ★ WARNING – Risk of electric shock!

- If the insulation of the power cord is damaged, this is dangerous.
  - Never let the power cord come into contact with hot appliance parts or heat sources.
  - ► Never let the power cord come into contact with sharp points or edges.
  - ▶ Never kink, crush or modify the power cord.
- An ingress of moisture can cause an electric shock.
  - ▶ Only use the appliance in enclosed spaces.
  - ▶ Never expose the appliance to intense heat or humidity.
  - ► Do not use steam- or high-pressure cleaners to clean the appliance.

#### MARNING – Risk of suffocation!

- Children may put packaging material over their heads or wrap themselves up in it and suffocate.
  - ► Keep packaging material away from children.
  - ▶ Do not let children play with packaging material.
- Children may breathe in or swallow small parts, causing them to suffocate.
  - ► Keep small parts away from children.
  - ▶ Do not let children play with small parts.

## **⚠** WARNING – Risk of explosion!

- Electrical devices within the appliance may explode (e.g. heaters or electric ice makers).
  - ▶ Do not operate electrical devices within the appliance.
- Mechanical devices or other devices may damage the refrigeration circuit; flammable refrigerant may escape and explode.
  - ► To accelerate the defrosting process, do not use any other mechanical devices or devices other than those recommended by the manufacturer.
- Products which contain flammable propellants and explosive substances may explode, e.g. spray cans.
  - ▶ Do not store products which contain flammable propellants (e.g. spray cans) or explosive substances in the appliance.

#### 

The vapours from flammable liquids may catch fire (explosion).

► Store high-percentage alcohol tightly closed and standing up.

## **⚠** WARNING – Risk of injury!

- Containers that contain carbonated drinks may burst.
  - Do not store containers that contain carbonated drinks in the freezer compartment.

#### en Safety

- Injury to the eyes caused by escaping flammable refrigerant and hazardous gases.
  - ▶ Do not damage the pipes of the refrigerant circuit or the insulation.
- The appliance may tip.
  - Do not stand or support yourself on the base, runners or doors.

#### 

Individual parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
- ► Keep children at a safe distance.

### 

Contact with frozen food and cold surfaces may cause burns by refrigeration.

- ► Never put frozen food straight from the freezer compartment into your mouth.
- Avoid prolonged contact of skin with frozen food, ice and the tubes in the freezer compartment.

### **△** CAUTION – Risk of harm to health!

To prevent food from being contaminated, you must observe the following instructions.

- ▶ If the door is open for an extended period of time, this may lead to a considerable temperature increase in the compartments of the appliance.
- ► Regularly clean the surfaces that may come into contact with food and accessible drain systems.
- ► Store raw meat and fish in suitable containers in the refrigerator so that they do not touch or drip on other food.
- ▶ If the fridge/freezer is empty for an extended period of time, switch off the appliance, defrost it, clean it and leave the door open to prevent the formation of mould.

### **Damaged appliance**

Follow the safety instructions if your appliance is damaged.

#### **△** WARNING – Risk of electric shock!

- If the appliance or the power cord is damaged, this is dangerous.
  - ▶ Never operate a damaged appliance.
  - ► Never operate an appliance with a cracked or fractured surface.
  - ► Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
  - ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
  - ► Call Customer Service. → Page 30
  - Repairs to the appliance should only be carried out by trained specialist staff.
- Improper repairs are dangerous.
  - ► Repairs to the appliance should only be carried out by trained specialist staff.
  - ▶ Only use genuine spare parts when repairing the appliance.
  - ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

## **⚠** WARNING – Risk of fire!



If the tubes are damaged, flammable refrigerant and harmful gases may escape and ignite.

- ► Keep naked flames and ignition sources away from the appliance.
- ▶ Ventilate the room.
- ► Switch off the appliance. → Page 18
- Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

#### **en** Safety

► Call after-sales service. → Page 30

## Preventing material damage

Follow these instructions to prevent material damage to your appliance, accessories or other objects in your kitchen.

#### **ATTENTION!**

- Contamination with oil or fat may cause plastic parts and door seals to become porous.
  - Keep plastic parts and door seals free of oil and grease.
- Using the base, runners or appliance doors as a seat surface or climbing surface may damage the appliance.
  - Do not stand or support yourself on the base, runners or doors.

## **Environmental protection** and saving energy

Help protect the environment by using your appliance in a way that conserves resources and by disposing of reusable materials properly.

#### Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

 Sort the individual components by type and dispose of them separately.

Information about current disposal methods are available from your specialist dealer or local authority.

#### Saving energy

If you follow these instructions, your appliance will use less power.

#### Selecting the installation location

Follow these instructions when installing your appliance.

- Keep the appliance out of direct sunliaht.
- Install the appliance as far away as possible from heating elements, cookers and other heat sources:
  - Maintain a 30 mm clearance to electric or gas cookers.
  - Maintain a 30 cm clearance to oil or solid-fuel cookers.
- + The appliance needs to cool less frequently at low ambient temperatures.
- Use a niche depth of 560 mm.
- Do not cover or block ventilation openings.
- Ventilate the room daily.
- + The air on the back wall of the appliance does not warm up so intenselv.

The appliance must cool less frequently.

#### Saving energy during use

Follow these instructions when using your appliance.

**Note:** The arrangement of the fittings does not affect the energy consumption of the appliance.

- Do not cover or block ventilation openings.
- + The air on the back wall of the appliance does not warm up so intensely.

- Open the appliance door only briefly.
- Transport purchased food in a cool bag and place in the appliance quickly.
- Allow warm food and drinks to cool down before placing them in the appliance.
- Thaw frozen food in the refrigerator compartment to utilise the low temperature of the food.
- + The air in the appliance does not warm up so intensely.
  The appliance must cool less frequently.
- Always leave some space between the food and to the back panel.
- Pack the food airtight.
- + The air can circulate and the air humidity remains constant.
- Defrost the freezer compartment regularly.
- + A frost-free freezer compartment is power-saving and cools the frozen food optimally.
- Only open the freezer compartment door briefly and then carefully close it.
- + A closed freezer compartment door protects the freezer compartment against severe icing.

# Installation and connection

You can find out where and how best to install your appliance here. You will also learn how to connect your appliance to the power supply.

### Scope of delivery

After unpacking all parts, check for any transport damage and check the completeness of the delivery. If you have any complaints, contact your dealer or our after-sales service → Page 30.

The delivery consists of the following:

- Built-in appliance
- Equipment and accessories<sup>1</sup>
- Installation material
- Installation instructions
- Operating instructions
- Customer service booklet
- Warranty enclosure<sup>2</sup>
- Energy label
- Product data sheet
- Information on the energy consumption and noises

## Installing and connecting the appliance

**Requirement:** The scope of delivery of the appliance is checked.

- → Page 12
- 1. Observe the criteria for the appliance's installation location.
  - → Page 13
- 2. Install the appliance in accordance with the enclosed installation instructions.
- Prepare the appliance for first use.
   → Page 13

<sup>&</sup>lt;sup>1</sup> Depending on the appliance specifications

Not in all countries

4. Electrically connect the appliance. → Page 13

#### Criteria for the installation location

Follow these instructions when installing your appliance.

### ⚠ WARNING Risk of explosion!

If the appliance is in a space that is too small, a leak in the refrigeration circuit may result in a flammable mixture of gas and air.

 Only install the appliance in a space with a volume of at least 1 m<sup>3</sup> per 8 a refrigerant. The volume of refrigerant is indicated on the rating plate. → "Appliance",

Fig. 1 / 5 Page 16

The weight of the appliance ex works may be up to 55 kg depending on the model.

The subfloor must be of sufficient stability to bear the weight of the appliance.

#### Permitted room temperature

The permitted room temperature depends on the appliance's climate class.

The climate class can be found on the rating plate.  $\rightarrow$  "Appliance", Fig.

1 / 5, Page 16

Climate class	Permitted room temperature
SN	10 °C to 32 °C
N	16 °C to 32 °C
ST	16 °C to 38 °C
T	16 °C to 43 °C

The appliance is fully functional within the permitted room temperature.

If an appliance with climate class SN is operated at colder room temperatures, the appliance will not be damaged up to a room temperature of

#### Niche dimensions

Observe the niche dimensions if you install your appliance in the furniture recess. If this is not the case, problems may occur when installing the appliance.

#### Niche depth

Install the appliance in the recommended niche depth of 560 mm. If the niche depth is smaller, the energy consumption increases slightly. The niche depth must be a minimum 550 mm.

#### Niche width

An inside niche width of at least 560 mm is required for the appliance.

#### Preparing the appliance for the first time

- 1. Remove the informative material.
- 2. Remove the protective foil and transit bolts, e.g. remove the adhesive strips and carton.
- 3. Clean the appliance for the first time. → Page 24

### Connecting the appliance to the electricity supply

1. Insert the mains plug of the appliance's power cable in a socket nearby.

The connection data of the appliance can be found on the rating plate.  $\rightarrow$  "Appliance", Fig. 1/5, Page 16

#### en Installation and connection


- 2. Check the mains plug is inserted properly.The appliance is now ready for
- use.

## Familiarising yourself with your appliance

Familiarise yourself with the parts of your appliance.

#### **Appliance**

You can find an overview of the parts of your appliance here.

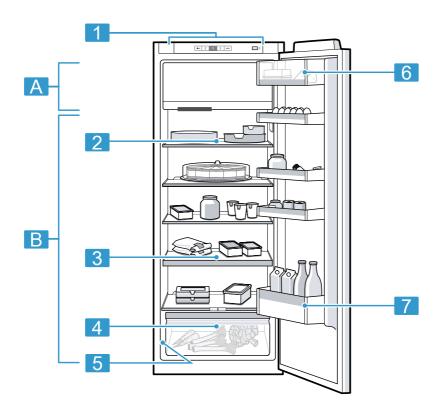

- Freezer compartment
- Refrigerator compartment

- Controls
- Variable shelf → Page 17

#### en Features

3	Extendable shelf → Page 17
4	Fruit and vegetable container with humidity control → Page 17
5	Rating plate


6	Butter and cheese compartment
	→ Page 18

7 Door storage compartment for large bottles

**Note:** Deviations between your appliance and the diagrams may differ with regard to their features and size.

#### **Controls**

The controls are used to configure all functions of your appliance and to obtain information about the operating status.

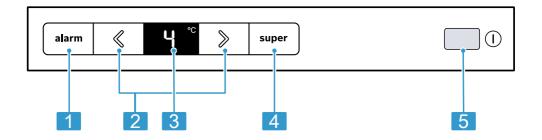

2

1 alarm switches the warning signal off.

Displays the set temperature for the refrigerator compartment in °C.

4 super switches the Super function on or off.

5 • Switches the appliance on or off.

#### **Features**

Here you can see an overview of the features of your appliance and their use.

The features of your appliance depend on the model.


#### Shelf

To vary the shelves as required, remove the shelf and re-insert it elsewhere.

→ "Removing the shelf", Page 25

#### Variable shelf

Use the variable shelf to the store tall items, e.g. cans or bottles, on the shelf below. You can remove the front section of the variable shelf and slide it below the rear part of the shelf.

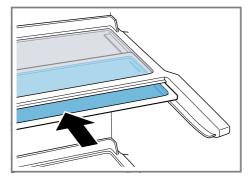


#### Extendable shelf

In order to achieve an improved overview and to remove food more quickly, remove the shelf.

#### Fruit and vegetable container with humidity control

Store fresh fruit and vegetables in the fruit and vegetable container. You can adjust the humidity in the fruit and vegetable container via the humidity controller and a special seal. This allows fresh fruit and vegetables to be stored for twice as long as with conventional storage.

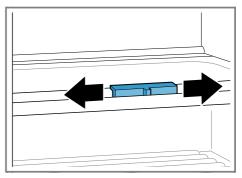

The air humidity in the fruit and vegetable container can be set according to the type and amount of food to be stored:

- Low humidity required when primarily storing fruit or if the appliance is very full.
- Higher humidity required when primarily storing vegetables as well as when the appliance is filled with mixed items or is not very full.

Condensation may form in the fruit and vegetable container depending on the food and quantity stored. Remove the condensation with a dry cloth and adjust the air humidity in the vegetable container using the humidity controller.

To ensure that the quality and aroma are retained, store fruit and vegetables that are sensitive to cold outside of the appliance at temperatures of approx. 8 °C to 12 °C.

Pineapples

o cold	<ul><li>Bananas</li><li>Mangoes</li><li>Papayas</li><li>Citrus fruits</li></ul>
egetables that are ensitive to cold	<ul><li>Aubergines</li><li>Gherkins</li><li>Courgettes</li><li>Peppers</li><li>Tomatoes</li><li>Potatoes</li></ul>

Fruit that is sensitive

## Butter and cheese compartment

Store butter and hard cheese in the butter and cheese compartment.

#### **Door racks**

To adjust the door racks as required, remove the door rack and re-insert elsewhere.

→ "Removing door racks", Page 25

#### **Accessories**

Only use original accessories. These have been made especially for your appliance. Here you can find an overview of your appliance's accessories and how to use them.


The accessories for your appliance depend on the model.

#### Egg tray

Store eggs safely on the egg tray.

#### **Bottle holder**

The bottle holder prevents bottles from falling over when the appliance door is opened and closed.

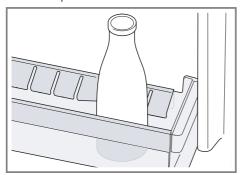

#### Ice cube tray

Use the ice cube tray to make ice cubes.

#### Making ice cubes

- Fill the ice cube tray with water up to <sup>3</sup>/<sub>4</sub> and place in the freezer compartment.
  - If the ice cube tray is stuck to the freezer compartment, loosen with a blunt implement only (e.g. spoon handle).
- To loosen the ice cubes, twist the ice cube tray slightly or hold briefly under flowing water.

## **Basic operation**

You can find out everything you need to know about operating your appliance here.

### Switching on the appliance

- 1. Press ①.
- The appliance begins to cool.
- Set the required temperature.
   → Page 19

#### Operating tips

 Once you have switched on the appliance, the set temperature is only reached after several hours.
 Do not put in any food in the appliance until the temperature is reached.

## Switching off the appliance

- ▶ Press ①.
- The appliance stops cooling.

#### Setting the temperature

After you have switched on the appliance, you can set the temperature.

#### Setting the refrigerator compartment temperature

▶ Press 《/》 repeatedly until the temperature display shows the required temperature.

The recommended temperature in the refrigerator compartment is 4 °C.

→ ""OK" sticker", Page 20

#### Setting the freezer compartment temperature

▶ In order to set the freezer compartment temperature, change the refrigerator compartment temperature  $\rightarrow$  Page 19.

The refrigerator compartment temperature influences freezer compartment temperature. Refrigerator compartment temperatures that are set to warm generate warmer freezer compartment temperatures.

#### Additional functions

Find out which additional functions which can be used for your appliance.

#### Super function

With the Super function, the refrigerator compartment and the freezer compartment cool more intensively. This refrigerates or freezes food quickly right through to the centre. Switch on the Super function 4 to 6 hours before placing food weighing 2 kg or more.

In order to utilise the freezer capacity, use the Super function.

→ "Freezing capacity", Page 21

**Note:** When the Super function is switched on, increased noise may occur.

#### Switching on Super function

- Press super.
- ✓ super lights up.

Note: After approx. 36 hours, the appliance switches to normal operation.

#### Switching off Super function

- ▶ Press super
- ✓ The previously set temperature is displayed.

#### **Alarm**

Your appliance is equipped with alarm functions

#### Door alarm

If the appliance door is open for a longer period, the door alarm switches on.

#### Switching off the warning signal (door alarm)

- ► Close the appliance door or press
- The warning tone is switched off.

## Refrigerator compartment

You can keep meat, sausage, fish, dairy products, eggs, ready meals and pastries in the refrigerator compartment.

You can set the temperature in the refrigerator compartment from 2 °C to 8 °C.

The recommended temperature in the refrigerator compartment is 4 °C. → ""OK" sticker", Page 20

The refrigerator compartment can also be used to store highly perishable foods in the short to medium term. The lower the selected temperature, the longer the food remains fresh.

#### Tips for storing food in the refrigerator compartment

Follow the tips if you store food in your refrigerator compartment.

- To ensure that the freshness and quality of the food is retained for longer, only store fresh and unspoiled food.
- In the case of ready-made products and bottled goods, do not exceed the best-before date or use-by date specified by the manufacturer.
- To retain aroma, colour and freshness or to prevent taste transfer and discolouration of the plastic parts, store food well wrapped or covered.
- Leave warm food and beverages to cool down before placing them in the refrigerator compartment.

## Chill zones in the refrigerator compartment

The air circulation in the refrigerator compartment creates different chill zones.

#### Coldest zone

The coldest zone is between the arrow stamped on the side and the shelf underneath.

**Tip:** Store perishable food (e.g. fish, sausage, meat) in the coldest zone.

#### Warmest zone

The warmest zone is at the very top of the door.

**Tip:** Store food that does not spoil easily in the warmest zone, e.g. hard cheese and butter. Cheese can then continue to release its aroma and the butter will still be easy to spread.

#### "OK" sticker

The "OK" sticker lets you check whether the refrigerator compartment reaches the safe temperature ranges of +4 °C or colder recommended for food.

The "OK" sticker is not included with all models.

If the sticker does not indicate "OK", gradually reduce the temperature.

→ "Setting the refrigerator compartment temperature", Page 19

Once the appliance is switched on, it may take up to 12 hours until the set temperature is reached.



Correct setting

## Freezer compartment

You can store frozen food, freeze food and make ice cubes in the freezer compartment.

The temperature in the freezer compartment depends on the temperature in the refrigerator compartment. Long-term storage of food should be at –18 °C or lower.

The freezer compartment can be used to store perishable food long-term. The low temperatures slow down or stop the spoilage.

The time between putting fresh food in the freezer compartment and it freezing solid depends on various factors:


- Set temperature
- Food (size and type)
- Quantity and type of storage
- Quantity and type of food already stored

### Freezer compartment door

The position of the handle on the freezer compartment door indicates whether or not the freezer compartment is correctly closed.

To ensure that the frozen food that is stored does not thaw and the freezer compartment is not covered in too much ice, always close the freezer compartment door.

**Note:** When you close the freezer compartment door, you can hear it engaging.

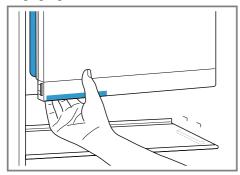

#### Freezing capacity

The maximum freezing capacity indicates the quantity of food that can be frozen right through to the centre within a specific period of time. Information on the maximum freezing capacity can be found on the rating plate. → "Appliance", Fig. 1/5, Page 16

#### Prerequisites for freezing capacity

- 1. Approx. 6 hours before placing fresh food in the appliance, switch on Super function.
  - → "Switching on Super function", Page 19
- **2.** Freeze fresh food at the rear, as close as possible to the side panels.

#### Tips for buying frozen food

Follow the tips when you are buying frozen food.

- Check the packaging is not damaged.
- Check the best-before date.
- The temperature in the supermarket freezer must be -18 °C or lower.
- Do not interrupt the deep-freeze chain. If possible, transport frozen food in a cool bag and quickly place it in the freezer compartment.

#### Tips for storing food in the freezer compartment

Follow the tips if you are storing food in the freezer compartment.

- Spread out the food over a wide area in the freezer compartment.
- Do not bring food which is to be frozen into contact with frozen food.

If necessary, redistribute frozen food in the freezer compartment.

#### Tips for freezing fresh food

Follow the tips when you freeze fresh food.

- Freeze fresh and undamaged food only.
- Cooked, roasted or baked food is more suitable for consumption than food that can be eaten raw.

#### en Freezer compartment

- In order to retain the nutritional value, flavour and colour, you should prepare certain food for freezing.
  - Vegetables: Wash, chop up, blanch.
  - Fruit: Wash, pit and perhaps peel, possibly add sugar or ascorbic acid solution.

Additional information on how to do this can be found in the relevant literature.

#### Food suitable for freezing

- Baked goods
- Fish and seafood
- Meat
- Poultry and game
- Vegetables, fruit and herbs
- Eggs without shells
- Dairy products, e.g. cheese, butter and guark
- Ready meals and leftovers, e.g. soups, stews, cooked meat and fish, potato dishes, bakes and desserts

#### Food that is unsuitable for freezing

- Types of vegetables that are usually eaten raw, e.g. lettuce or radishes
- Unpeeled or hard-boiled eggs
- Grapes
- Whole apples, pears and peaches
- Yoghurt, soured milk, sour cream, crème fraîche and mayonnaise

#### Packing frozen food

If you select suitable packaging material the correct type of packaging, you can determine the product quality and prevent freezer burn.

- **1.** Place the food in the packaging. Suitable packaging:
  - Plastic film made of polyethylene

- Tubular film made of polyethylene
- Freezer bags made from polyethylene
- Freezer containers
   Unsuitable packaging:
- Wrapping paper
- Greaseproof paper
- Cellophane
- Aluminium foil
- Rubbish bags and used shopping bags
- 2. Squeeze out the air.
- Pack food airtight to prevent it from losing flavour and drying out. Suitable seals:
  - Rubber bands
  - Plastic clips
  - Cold-resistant adhesive tape
- **4.** Label the packaging with the contents and the date of freezing.

## Shelf life of frozen food at -18 °C

Observe the storage times when you freeze food.

Food	Storage time
Fish, sausages, ready meals and baked goods	Up to 6 months
Poultry, meat	Up to 8 months
Vegetables, fruit	Up to 12 months

#### **Defrosting methods for frozen** food

To retain the best-possible product quality, the defrosting method must be adjusted to the food and application.

#### ⚠ CAUTION Risk of harm to health!

During the thawing process, bacteria may develop and spoil the frozen food.

- Do not refreeze food after it has been defrosted or started to defrost
- Refreeze food only after cooking.
- ► The frozen items should no longer be stored for the maximum storage period.

Defrosting method	Food
Refrigerator compartment	Animal-based food such as fish, meat, cheese, quark
Room temperature	Bread
Microwave	Food for immediate consumption or immediate preparation
Oven or cooker	Food for immediate consumption or immediate preparation

## **Defrosting**

Observe the information when you want to defrost your appliance.

### **Defrosting in the refrigerator** compartment

When the appliance is operating, condensation droplets or frost form on the rear panel of the refrigerator

compartment due to functional reasons. The back panel in the refrigerator compartment defrosts automatic-

Condensation or frost run through the condensation channel into the drainage hole to the evaporation pan and do not have to be wiped away. To ensure that the condensation can drain and odours do not form, observe the following information:

→ "Cleaning the condensation channel and drainage hole", Page 25.

#### Defrosting in the freezer compartment

As the frozen food must not start thawing, the freezer compartment does not defrost automatically. A layer of hoarfrost in the freezer compartment impairs refrigeration of the frozen food and increases power consumption.

#### Defrosting the freezer compartment

Regularly defrost the freezer compartment.

- 1. Switch on the Super function approx. four hours before defrosting. → "Switching on Super function". Page 19
  - This means that the food reaches very low temperatures and it can be stored for longer at room temperature.
- 2. Remove the frozen food and temporarily place it in a cool location. Place ice packs (if available) on the frozen food.
- 3. Switch off the appliance. → Page 18
- 4. Disconnect the appliance from the power supply.
  - Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

- To accelerate the defrosting process, place a pan of hot water on a trivet in the freezer compartment.
- **6.** Wipe up the condensation water with a soft cloth or sponge.
- **7.** Rub the freezer compartment dry with a soft, dry cloth.
- 8. Electrically connect the appliance.→ Page 13
- Switch on the appliance.
   → Page 18
- **10.** Put the frozen food in the appliance. → *Page 21*

## Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

## Preparing the appliance for cleaning

Find out how to prepare your appliance for cleaning.

- 1. Switch off the appliance.
  - → Page 18
- 2. Disconnect the appliance from the power supply.
  - Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
- **3.** Take out all of the food and store it in a cool location.
  - Place ice packs (if available) onto the food.
- If there is a layer of hoarfrost, allow this to defrost.
- 5. Remove all fittings from the appliance. → Page 25

### Cleaning the appliance

Clean the appliance as specified to ensure that it is not damaged by incorrect cleaning or unsuitable cleaning products.

## ⚠ WARNING Risk of electric shock!

- An ingress of moisture can cause an electric shock.
  - Do not use steam- or high-pressure cleaners to clean the appliance.
- Liquid in the lighting can be dangerous.
  - ► The rinsing water must not run into the light.

#### **ATTENTION!**

- Unsuitable cleaning products may damage the surfaces of the appliance.
  - ► Do not use hard scouring pads or cleaning sponges.
  - ▶ Do not use harsh or abrasive detergents.
  - ► Do not use cleaning products with a high alcohol content.
- If you clean fittings and accessories in the dishwasher, this may cause them to become deformed or discolour.
  - Never clean shelves or containers in the dishwasher.
- Prepare the appliance for cleaning.
   → Page 24
- 2 Clean the appliance, the fittings and the door seals clean with a dish cloth, lukewarm water and a little pH-neutral washing-up liquid.
- **3.** Dry thoroughly with a soft, dry cloth.
- 4. Insert the fittings.
- 5. Electrically connect the appliance.


  → Page 13

- 6. Switch on the appliance.
  - → Page 18
- **7.** Putting the food into the appliance.

#### Cleaning the condensation channel and drainage hole

Regularly clean the condensation channel and drainage hole to ensure that the condensation can drain.

 Carefully clean the condensation channel and the drainage hole, e.g. using a moistened cotton bud.

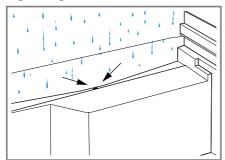

### Removing the fittings


If you want to clean the fittings thoroughly, remove these from your appliance.

#### Removing the shelf

Pull out and remove the shelf.

#### Removing the extendable shelf


1. Pull out the extendable shelf until the locking catch is released.

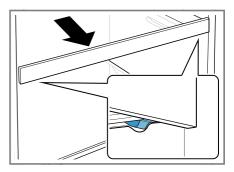

2. Lower the shelf and swing it out to the side.


#### Removing door racks

► Lift the door rack upwards and remove it.

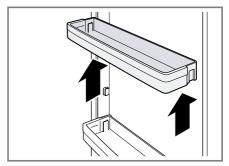


#### Removing the fruit and vegetable container

- **1.** Pull the container out all the way.
- 2. Lift the container at the front 10 and remove it 2.

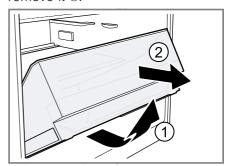


## Removing the shelf above the vegetable container


- **1.** Pull out the fruit and vegetable container.
- 2. Remove the shelf 1 and rotate 2.

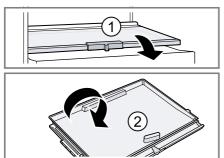

**3.** Press the fastenings for the lower glass plate outwards.

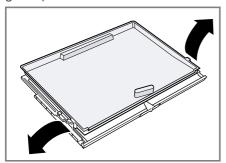

**4.** Lift the glass plate at the front ① and pull it out at the rear ②.

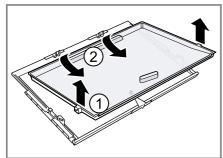

## **Troubleshooting**

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.



#### WARNING

#### Risk of electric shock!

Improper repairs are dangerous.

- ► Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

#### **Malfunctions**

Errors	Cause	Troubleshooting
The appliance is not working.	The mains plug has not been inserted properly.	► Connect the mains plug.
No displays light up.	Fuse has been tripped.	► Check the fuses.
	The power has failed.	<ol> <li>Check whether the power is on.</li> <li>Place ice packs (if available) on the frozen food.</li> </ol>
The appliance is not cooling, the displays and lighting light up.	Showroom mode is switched on.	<ul> <li>Carry out the appliance self-test.         → Page 30</li> <li>Once the appliance self-test has ended, the appliance switches to normal operation.</li> </ul>
The LED lamp is defective.	Different causes are possible.	► Call the after-sales service.  → "Customer Service", Page 30
The refrigeration unit is switching on more fre-	The appliance door was opened frequently.	<ul> <li>Do not open appliance door unnecessarily.</li> </ul>
quently and for longer.	The ventilation openings are covered up.	Remove any obstructions from in front of the ventilation openings.
The base of the refrigerator compartment is wet.	The condensation channel or drainage hole are blocked.	► Clean the condensation channel and the drainage hole. → Page 25

## Information on display panel

Errors	Cause	Troubleshooting
Message showing "D" or "E" appears in the display.	The electronics have detected a fault.	► Call the after-sales service.  → "Customer Service", Page 30

## Temperature problem

Errors	Cause	Troubleshooting
The temperature differs greatly from the setting.	Different causes are possible.	<ol> <li>Switch off the appliance.</li> <li>→ Page 18</li> </ol>
		<ol> <li>Switch the appliance back on after five minutes. → Page 18</li> </ol>
		<ul> <li>If the temperature is too warm, check the temperature again after a couple of hours.</li> <li>If the temperature is too cold, check the temperature again on the following day.</li> </ul>

### Noise

Errors	Cause	Troubleshooting
Appliance has a humming sound.	Not a fault. A motor is running, e.g. refrigerating unit, fan.	No action required.
The appliance bubbles, buzzes or gargles.	Not a fault. Refrigerant flows through the pipes.	No action required.
The appliance clicks.	Not a fault. Motor, switches or solenoid valves are switching on or off.	No action required.
The appliance makes noises.	The appliance is not level.	<ul> <li>Align the appliance using a spirit level. If required, place something underneath it.</li> </ul>
	Fittings wobble or stick.	Check the removable fittings and, if required, replace these.
	Bottles or containers are touching.	Move the bottles or containers away from each other.
	Super function is switched on.	No action required.

## **Odours**

Errors	Cause	Troubleshooting
The appliance has an unpleasant smell.	Different causes are possible.	<ol> <li>Prepare the appliance for cleaning.         → Page 24</li> </ol>
		2 Clean the appliance. → Page 24
		3. Clean all food packaging.
		<ol> <li>To prevent odours from forming, store strong smelling food in air- tight containers.</li> </ol>
		<ol><li>After 24 hours, check whether odours are still forming.</li></ol>

#### Conducting an appliance selftest

- 1. Switch off the appliance.
  - → Page 18
- 2. Switch the appliance back on after approx. five minutes. → Page 18
- Within the first 10 seconds after switching on, press and hold super 3 to 5 seconds.
- The appliance self-test starts.
- While the appliance self-test is running, a long audible signal sounds.
- If, at the end of the appliance selftest, two audible signals sound and the temperature display indicates the set temperature, your appliance is OK. The appliance then switches to normal operation.
- If, at the end of the appliance selftest, five audible signals sound and super flashes for 10 seconds, inform the after-sales service.

## Storage and disposal

You can find out here how to prepare your appliance for storage. You will also find out how to dispose of old appliances.

### Switching off the appliance

- Switch off the appliance.
   → Page 18
- 2. Disconnect the appliance from the power supply.
  - Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
- 3. Defrost the appliance. → Page 23
- 4. Clean the appliance. → Page 24
- **5.** Leave the appliance door open.

## Disposing of old appliance

Valuable raw materials can be reclaimed by recycling.

# ⚠ WARNING Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- Leave shelves and containers inside the appliance to prevent children from climbing in.
- Keep children away from the redundant appliance.
- **1.** Unplug the appliance from the mains.
- 2. Cut through the power cord.
- **3.** Dispose of the appliance in an environmentally friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

## **Customer Service**

If you have any queries, are unable to rectify faults on the appliance yourself or if your appliance needs to be repaired, contact Customer Service. You can solve many problems yourself by consulting the information on troubleshooting in these instructions or on our website. If this is not the case, contact our Customer Service.

We will always find an appropriate solution and try to avoid unnecessary visits being made by a Customer Service technician.

With any warranty claims we will make sure that your appliance is repaired by trained Customer Service technicians using genuine spare parts, including after the manufacturer's warranty has expired. For safety reasons repairs to the appliance should only be carried out by trained specialist staff. The warranty claim becomes void if repairs or interventions have been carried out by persons not authorised by us for that purpose or if our appliances have been fitted with spare, supplementary or accessory parts that were not genuine parts and then resulted in a defect.

Function-relevant genuine spare parts according to the corresponding Ecodesign Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area

Note: Under the terms of the manufacturer's warranty applicable to the location the use of Customer Service is free of charge. The minimum duration of the warranty (manufacturer's warranty for private consumers) in the European Economic Area is 2 years (except for Denmark and Sweden, where it is 1 year) according to the terms of warranty applicable to the location. The terms of warranty do not affect other rights or claims held by yourself under local leaislation.

Detailed information about the warranty period and terms of warranty in your country are available from Customer Service, your dealer or our website.

When contacting Customer Service, you will need the product number (E-Nr.) and the production number (FD) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

### Product number (E-Nr.) and production number (FD)

The product number (E-Nr. ) and the production number (FD) can be found on the rating plate of the appliance.

→ "Appliance", Fig. 1/5, Page 16 Make a note of your appliance's details and the Customer Service telephone number to find them again auickly.

#### Technical data

Refrigerant, cubic capacity and further technical specifications can be found on the rating plate.

→ "Appliance", Fig. 1 / 5 , Page 16 More information about your model can be found online at https:// www.bsh-group.com/energylabel<sup>1</sup>. This web address is linked to the official EU EPREL product database. At the time of printing its web address had not vet been published. Please then follow the instructions on searching for models. The model identifier is made up of the characters before the slash in the product number (E-Nr. ) on the rating plate.

Only applies to countries in the European Economic Area

#### en Technical data

Alternatively you can also find the model identifier in the first line of the EU energy label.









## Thank you for buying a **Bosch Home Appliance!**

Register your new device on MyBosch now and profit directly from:

- · Expert tips & tricks for your appliance
- Warranty extension options
- Discounts for accessories & spare-parts
- Digital manual and all appliance data at hand
- Easy access to Bosch Home Appliances Service

Free and easy registration – also on mobile phones: www.bosch-home.com/welcome



## Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you: www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

#### Robert Bosch Hausgeräte GmbH

Carl-Werv-Straße 34 81739 München **GFRMANY** www.bosch-home.com



9001503157 (991011)