

243834, 246270, 436459, 445193, 471561, 476132, 603537, 603538, 667487, 667489

EN Replacing WFCM/WFXD US washer door gaskets

Use door gasket **667487** for washers FD8710 & later (FD8709 & later for WFCM1001 washers). Use door gasket kit **667489** instead of door gasket **445193** for washers FD8505 – FD8709 (FD8505 - FD8708 for WFCM1001 washers). Use door gasket kit (w/ holder) **246270** instead of door gasket kit **243834** (all FD), door gasket **445193** (washers FD8502 - FD8504) & door gasket **436459** w/ flushing hose nipple (washers FD8501 & earlier). Gasket holder **471561** has a slot for the gasket clamp spring to insure the gasket won't come off. Attach kit warning and advice labels to replacement gasket holder.

Door Gasket Kit 246270




Kit 246270 contains door gasket 667487, gasket holder 471561, front/rear gasket clamps, U.S. warning label & advice label.

Installing Spring Clamps (all FD #'s)




Kit gasket holder has a slot for gasket clamp spring. Older gasket holders don't have this slot.


Stowing Flushing Hose (FD8501 & earlier)

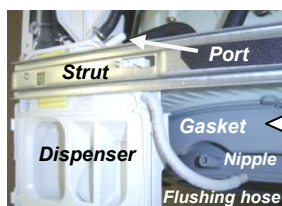

Loosen / remove flushing hose clamp & remove hose from gasket (seal / boot).

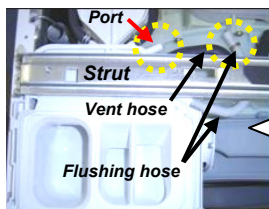

Route flushing hose under strut & black tub vent hose. Note spare dispenser port (for hose end taken from gasket).

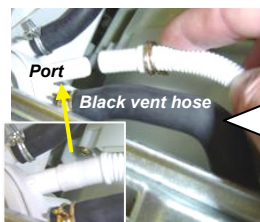

Push flushing hose onto spare dispenser port. Hose has little water pressure and shouldn't leak -- install hose clamp if desired (175764).

Make sure spring portion of clamp rests in gasket holder slot to make sure gasket doesn't slide off.



So clamp doesn't pull gasket off gasket holder, hold clamp next to gasket holder.

To install spring clamp, carefully pull spring to right & put clamp into right side gasket notch.




All gasket holder kits (246270 / 471561 / 476132) include labels to be attached.



Locating WFCM-WFXD Warning & Advice Labels (all FD #'s)



Attach orange warning label on gasket holder directly underneath door (at 6:00 position). Don't place label into spring clamp slot.

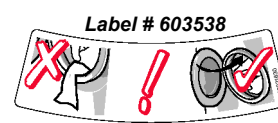

Attach advice label on gasket holder to right of warning label.

243834, 246270, 436459, 445193, 471561, 476132, 603537, 603538, 667487, 667489

EN Replacing WBB World Washer door gaskets

Use door gasket **667487** for washers FD8710 & later. Use door gasket kit **667489** instead of door gasket **445193** for washers FD8505 – FD8709. Use door gasket kit (with holder) **246270** instead of door gasket **445193** for washers FD8504 & earlier. Gasket holder **471561** has a slot for the gasket clamp spring to insure the gasket won't come off. Attach kit advice label to replacement gasket holder.

Door Gasket Kit



Kit 246270 contains door gasket 667487, gasket holder 471561, front/rear gasket clamps, U.S. warning label & advice label.

Washers needing 246270 kit:

- WBB24750 (FD8504 & earlier)
- WBB24750EE (FD8504 & earlier)
- WBB24750EU (FD8504 & earlier)
- WBB24750FF (FD8504 & earlier)
- WBB24759GB (FD8504 & earlier)

Washers not needing 246270 kit:

- Any WBB2475x (FD8505 & later)
- WBB24750AU
- WBB24750IT
- WBB24750NL
- WBB24750TI

Locating WBB Advice Label (all FD #'s)



Attach advice label on gasket holder directly underneath door (at 6:00 position). Don't place label into spring clamp slot.

Installing Spring Clamps (all FD #'s)



Kit gasket holder has a slot for gasket clamp spring. Older gasket holders don't have this slot.


Make sure spring portion of clamp rests in gasket holder slot to make sure gasket doesn't slide off.



Orange warning label shown is for U.S. variants.

So clamp doesn't pull gasket off gasket holder, hold clamp next to gasket holder.

To install spring clamp, carefully pull spring to right & put clamp into right side gasket notch.

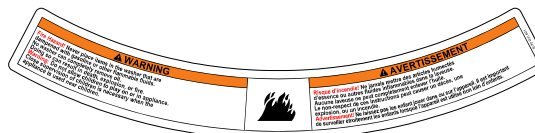

All gasket holder kits (246270 / 471561) include labels to be attached.

Orange warning label is for U.S. variants. For WBB washers, discard orange warning label.