

Your new dryer


Congratulations - You have chosen to buy a modern, high-quality Bosch domestic appliance.
A distinctive feature of your dryer is its low energy consumption.


Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.
Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com

 Observe the safety instructions on page 11.


 Read these instructions and the separate **Energy-saving mode** instructions before operating the dryer.

Contents

	Page
■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Notes on laundry	5
■ Care and cleaning	6
■ Overview of programmes	7
■ Installation	8
■ Frost protection / Transport	8
■ Technical data	9
■ Optional accessories	9
■ What to do if... / After-sales service	10
■ Safety instructions	11


Intended use

- exclusively for domestic use,
- only for drying fabrics which have been washed using water.

 **Keep children younger than 3 years old away from the dryer.**
Do not let children make the cleaning and maintenance work on the dryer without supervision.
Do not leave children unsupervised near the dryer.
Keep pets away from the dryer.
The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.
This appliance is intended for use up to a maximum height of 4000 metres above sea level.


Preparing for installation, see page 8


Before using the dryer for the first time
run the drying cycle without any laundry → see page 7.

 **Never operate the dryer if it is damaged.**
Inform your after-sales service.


Inspecting the dryer

Connecting the mains plug

 **Only if your hands are dry.**
Only hold the plug by the plug casing.

 **Remove all objects from pockets.**
Pay particular attention to cigarette lighters.
The drum must be empty before filling.

Sorting and loading laundry

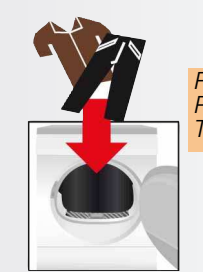

Selecting and adjusting the programme


Select the drying programme ...


... and adapt to individual requirements


Additional functions/status and service indicators




Programme selector

For a detailed programme overview, → see page 7.

Press the  Start/Stop button

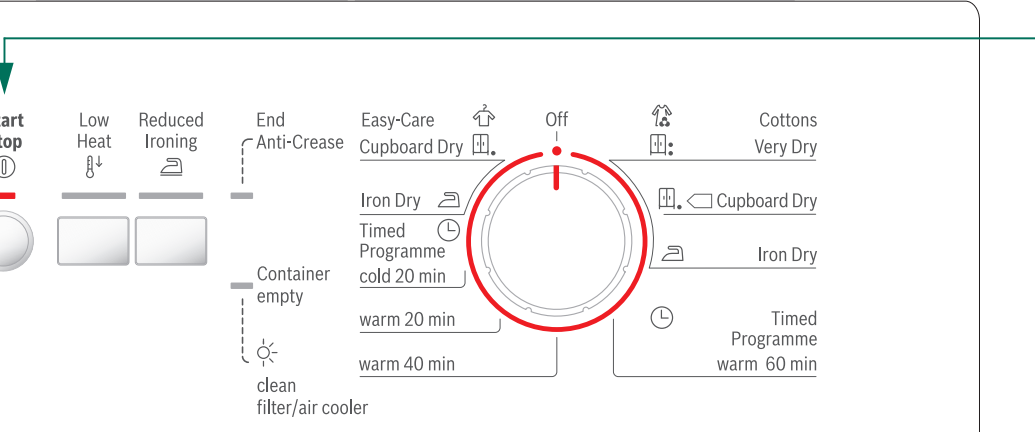 **Only operate the dryer with the fluff filter inserted.**



End/Anti-Crease	<i>finished/fluffing</i>
Container empty/	<i>Lit → empty the container for condensation.</i>
clean filter/air cooler	<i>Flashes → clean the fluff filter and/or air cooler.</i>
 Low Heat	<i>Reduced temperature for delicate fabrics  e.g. polyacrylic, polyamide, elastane or acetate; for longer drying times.</i>
 Reduced Ironing	<i>Reduces creasing and prolongs the anti-creasing phase after the programme has finished.</i>

1

2

Drying



Drying

Emptying condensation

Empty the container **after** every use.

1. Remove the condensate container and hold it level.
2. Open the locking cap.
3. Pour out the condensation.




Check the valve in the condensate container for dirt:

If there are fluff deposits on the valve → rinse the valve under running water. Also pour some tap water into the empty condensate container then pour it out again through the valve.
To do this, press the valve in and allow all the water to drain out.

4. Regularly remove any deposits in the locking cap hole using a pointed object.
5. Close the locking cap.
6. Always push the tank fully back in until it locks in place.


If the **Container empty / clean filter/air cooler** indicator light comes on after emptying the container → see page 10.

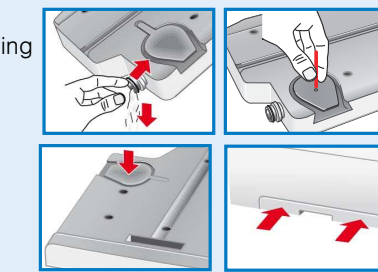

Cleaning the fluff filter

Clean the fluff filter after every use.


1. Open the door. Remove any fluff from the door/around the door and pull out the fluff filter.
2. Remove the fluff from the shaft of the fluff filter. Ensure that no fluff falls into the open shaft.
3. Open the fluff filter and remove the fluff (sweep your hand over the fluff filter). If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.
4. Close and reinsert the fluff filter.

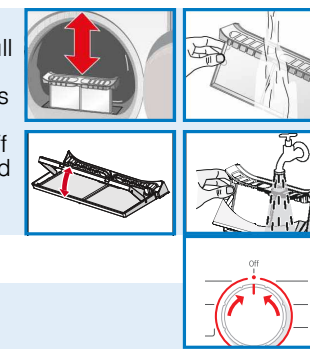

Switching off the dryer

Set the programme selector to **Off**.
Do not leave laundry in the dryer.

Removing the laundry


Your dryer has an automatic anti-crease function. The drum is moved at set intervals for 30 minutes after the programme has ended. Laundry remains loose and fluffy (for 90 minutes, if additional  **Reduced Ironing** function is selected - depending on model).




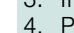
End of programme

as soon as **End/Anti-Crease** indicator light flashes

Adding or removing laundry

 The drying cycle can be interrupted in order to add or remove laundry. The programme must then be continued or ended.

 **The drum and the door may be hot!**



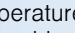
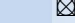
1. Open the door. The drying process is interrupted.
2. Load or remove laundry and close the door.
3. If required, select a new programme and additional functions.
4. Press the  **Start/Stop** button.


3

Information on laundry ...

Labelling of fabrics

Follow the manufacturer's care information.

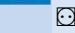-  Drying at normal temperature.
-  Low-temperature drying → in addition, select  **Low Heat**.
-  Do not machine dry.


 Be sure to follow the safety instructions → see page 11!
For example, do not use the dryer for the following fabrics:

- Airtight fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk, curtains made from synthetic material) → they may crease.
- Laundry contaminated with oil.

Before drying for the first time

- Do not put any laundry in the dryer. Set the programme selector to a timed programme (→ see page 7) and select **Start/Stop**. When the programme has finished, set the programme selector to **Off**.

Drying tips


- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. hand towels).
- Fasten zips, hooks and eyelets, button covers and tie together cloth belts, strips, etc.
- Do not overdry easy-care laundry → risk of creasing. Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying, fold items up and leave for a while → the remaining moisture will then be distributed evenly.
- Knitted fabrics (e.g. T shirts, knitwear) often shrink when tumble dried for the first time → do not use the  **Very Dry** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried subsequently.
- Using a timed programme with a small laundry load → optimisation of the drying result.

Environmental protection / Energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Use the maximum recommended fill level but do not overload laundry → *overview of programmes, see page 7*.
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying cycle → see page 4.
- Do not block or seal the air inlet.

4

Care and cleaning

 **Only when the appliance is switched off.**

Dryer cabinet, control panel, air cooler, moisture sensors

- Wipe off with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Remove detergent and cleaning agent residue immediately.


Clean the air cooler 5 to 6 times a year

or if **Container empty / clean filter/air cooler** flashes after cleaning the fluff filter.


Air cooler

In order to clean it, the air cooler must be removed.


- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.

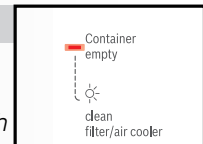


1. Unlock the maintenance door (1).
2. Fully open the maintenance door (2).

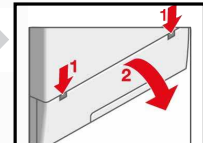


3. Turn both locking levers outwards (1).
4. Pull out the front insert (2).

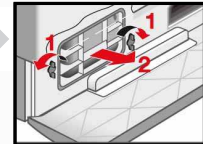


5. Remove the air cooler.

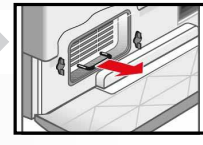

 **Take care not to damage the air cooler.**
When cleaning, use warm water only. Do not use hard or sharp-edged objects.

6. Clean the air cooler thoroughly and allow the water to drain off. Clean the seals.

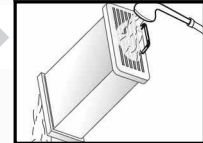


7. First insert the air cooler (handle at the bottom) and then the front insert.
8. Turn back both locking levers.
9. Lock the maintenance door.

Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

1. Open the door.
2. Clean the moisture sensors using a slightly damp sponge with a rough surface.



 Do not use steel wool or abrasive materials.

5

6

Your new dryer

Congratulations - You have chosen to buy a modern, high-quality Bosch domestic appliance.
A distinctive feature of your dryer is its low energy consumption.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.
Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com



Observe the safety instructions on page 11.



Read these instructions and the separate **Energy-saving mode** instructions before operating the dryer.

Contents

	Page
■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Notes on laundry	5
■ Care and cleaning	6
■ Overview of programmes	7
■ Installation	8
■ Frost protection / Transport	8
■ Technical data	9
■ Optional accessories	9
■ What to do if... / After-sales service	10
■ Safety instructions	11

Intended use

- exclusively for domestic use,
- only for drying fabrics which have been washed using water.



*Keep children younger than 3 years old away from the dryer.
Do not let children make the cleaning and maintenance work on the dryer without supervision.
Do not leave children unsupervised near the dryer.
Keep pets away from the dryer.
The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.
This appliance is intended for use up to a maximum height of 4000 metres above sea level.*

Preparing for installation, see page 8


Before using
run the drying



Never operate the dryer if it is damaged.
Inform your after-sales service.



Only if your hands are dry.
Only hold the plug by the plug casing.

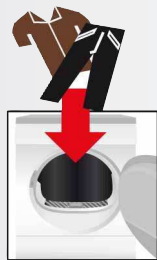

Sorting and loading

Remove all objects from pockets.
Pay particular attention to cigarette lighters.
The drum must be empty before filling.

Selecting and adjusting the programme

Select the d

... and adapt to individ

For a detailed programme over


Press the



On
with

Additional functions/status and service indicators

Programme selector

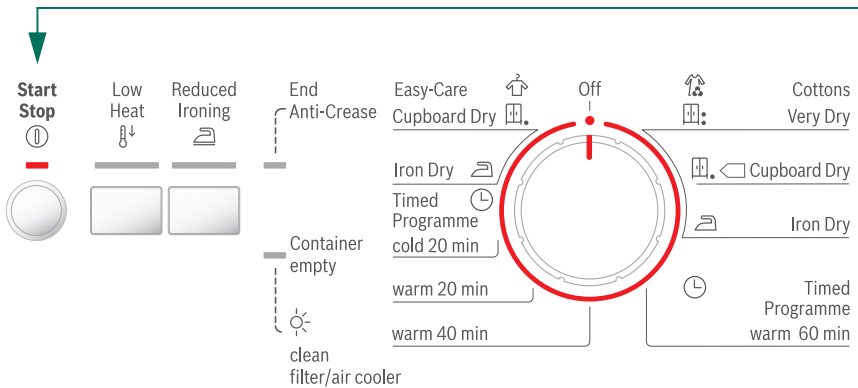

End/Anti-Crease	finished/fluffing
Container empty/	Lit → empty the container for condensation.
clean filter/air cooler	Flashes → clean the fluff filter and/or air cooler.
Low Heat	Reduced temperature for delicate fabrics, e.g. polyacrylic, polyamide, elastane or acetate; for longer drying times.
Reduced Ironing	Reduces creasing and prolongs the anti-creasing phase after the programme has finished.

the dryer for the first time
cycle without any laundry → see page 7.

**Inspecting
the dryer**

**Connecting the
mains plug**

Loading laundry

the programme

rying programme ...

idual requirements

view, → see page 7.

Start/Stop button

ly operate the dryer
h the fluff filter inserted.

Drying




Drying



Emptying condensation

Empty the container **after** every use.


1. Remove the condensate container and hold it level.
2. Open the locking cap.
3. Pour out the condensation.

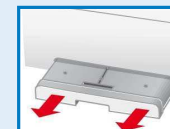

Check the valve in the condensate container for dirt:
If there are fluff deposits on the valve → rinse the valve under running water. Also pour some tap water into the empty condensate container then pour it out again through the valve.
To do this, press the valve in and allow all the water to drain out.






4. Regularly remove any deposits in the locking cap hole using a pointed object.
 5. Close the locking cap.
 6. Always push the tank fully back in until it locks in place.
- If the **Container empty / clean filter/air cooler** indicator light comes on after emptying the container → see page 10.

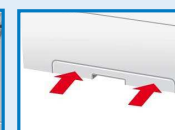

Cleaning the fluff filter


Clean the fluff filter after every use.

1. Open the door. Remove any fluff from the door/around the door and pull out the fluff filter.
2. Remove the fluff from the shaft of the fluff filter. Ensure that no fluff falls into the open shaft.
3. Open the fluff filter and remove the fluff (sweep your hand over the fluff filter). If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.
4. Close and reinsert the fluff filter.

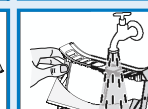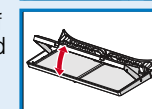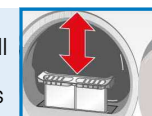

Switching off the dryer


Set the programme selector to **Off**.
Do not leave laundry in the dryer.

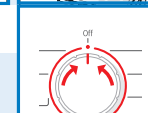

Removing the laundry

Your dryer has an automatic anti-crease function. The drum is moved at set intervals for 30 minutes after the programme has ended. Laundry remains loose and fluffy (for 90 minutes, if additional **Reduced Ironing** function is selected - depending on model).

End of programme as soon as **End/Anti-Crease** indicator light flashes

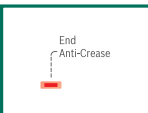

Adding or removing laundry

The drying cycle can be interrupted in order to add or remove laundry.
The programme must then be continued or ended.



The drum and the door may be hot!

1. Open the door. The drying process is interrupted.
2. Load or remove laundry and close the door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button.

Information on laundry ...



Labelling of fabrics

Follow the manufacturer's care information.

- ☑ Drying at normal temperature.
- ☑ Low-temperature drying → in addition, select **Low Heat**.
- ☑ Do not machine dry.



Be sure to follow the safety instructions → see page 11!
For example, do not use the dryer for the following fabrics:

- Airtight fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk, curtains made from synthetic material) → they may crease.
- Laundry contaminated with oil.



Before drying for the first time

- Do not put any laundry in the dryer. Set the programme selector to a timed programme (→ see page 7) and select **Start/Stop**. When the programme has finished, set the programme selector to **Off**.



Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. hand towels).
- Fasten zips, hooks and eyelets, button covers and tie together cloth belts, strips, etc.
- Do not overdry easy-care laundry → risk of creasing. Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying, fold items up and leave for a while → the remaining moisture will then be distributed evenly.
- Knitted fabrics (e.g. T shirts, knitwear) often shrink when tumble dried for the first time → do not use the **Very Dry** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried subsequently.
- Using a timed programme with a small laundry load → optimisation of the drying result.

Environmental protection / Energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Use the maximum recommended fill level but do not overload laundry → overview of programmes, see page 7.
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying cycle → see page 4.
- Do not block or seal the air inlet.

Care and cleaning



Only when the appliance is switched off.



Dryer cabinet, control panel, air cooler, moisture sensors

- Wipe off with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Remove detergent and cleaning agent residue immediately.

Clean the air cooler 5 to 6 times a year
or if **Container empty** / **clean filter/air cooler** flashes after cleaning the fluff filter.





Air cooler


In order to clean it, the air cooler must be removed.

- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.


1. Unlock the maintenance door (1).
2. Fully open the maintenance door (2).

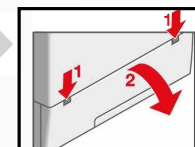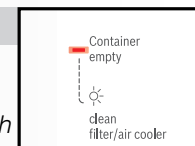

3. Turn both locking levers outwards (1).
4. Pull out the front insert (2).

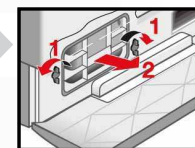


5. Remove the air cooler.

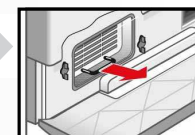

Take care not to damage the air cooler.

When cleaning, use warm water only. Do not use hard or sharp-edged objects.

6. Clean the air cooler thoroughly and allow the water to drain off. Clean the seals.
7. First insert the air cooler (handle at the bottom) and then the front insert.
8. Turn back both locking levers.
9. Lock the maintenance door.

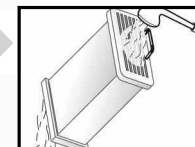


Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

1. Open the door.
2. Clean the moisture sensors using a slightly damp sponge with a rough surface.



Do not use steel wool or abrasive materials.

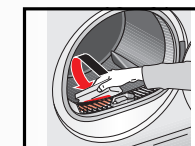

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying...	iron laundry	lightly iron laundry	do not iron laundry	mangle laundry
TEXTILE TYPE AND INFORMATION				
PROGRAMMES				
**Cottons	max. 6 kg	Hard-wearing fabrics, boil-resistant fabrics made of cotton or linen.		
**Easy-Care	max. 3 kg	Non-iron laundry made of synthetic fibres and blended fabric, easy-care cotton.		
Iron Dry		Fabrics suitable for ironing (iron fabrics in order to avoid creasing).		
Cupboard Dry		Single-layer fabrics.		
*Very Dry		Fabrics made of thick, multilayered items of clothing.		
Timed Programme				
warm 60 min		Pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry.		
warm 40 min	max. 3 kg	Also for subsequent drying.		
warm 20 min				
Timed Programme cold 20 min				
	max. 3 kg	All types of fabrics. For freshening up or airing of items of laundry that have been worn for a short period of time.		

* only for the programme **Cottons**

**Dryness levels can be selected individually → Vey Dry, Easy-Care Dry and Iron Dry (depending on the model).

Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

9503 / 9000964492

Robert Bosch Hausgeräte GmbH
Carl-Wery-Str. 34
81739 München/Deutschland

WTC84101GB

Installation

- Delivery includes: dryer, installation and instruction manual.
- Check dryer for transport damage.
- The dryer is very heavy. Do not lift without assistance.
- Be careful to avoid sharp edges.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.
- Do not install in a room which is susceptible to frost. Water may cause damage once it starts to freeze.
- If in doubt, have the appliance connected by a specialist.

1.

Setting up the dryer



- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Level the dryer using the front threaded feet.
On no account remove the threaded feet.



Remove all accessories from the drum. The drum must be empty.



Do not install the dryer behind a door or a sliding door which could obstruct the door of the dryer or prevent it from being opened. Children can then not be trapped inside and their life endangered.

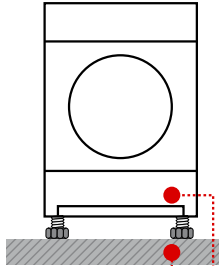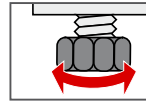

Clean and level
Make sure that the air inlet remains unobstructed

2.

Mains connection For safety instructions, → see page 11.

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage must be the same as the voltage specified on the rating plate (→ see page 9).
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection / Transport



Do not operate the dryer if there is a danger of frost.



Preparation

Empty the container for condensation → see page 4.



i

There may be residual water in the dryer.
This can leak out if the dryer is at an angle.

Technical data

●	Dimensions (DxWxH)	60 x 60 x 85 cm
	Weight	approximately 35 kg
	Max. capacity	6 kg
	Condensate container	approx. 4.2 l
	Ambient temperature	5 - 35 °C
	Connection voltage	220 - 240 V
	Connected load	2600 W
	Fuse protection	13 A
	Product number	
	Production number	→ Rating plate or inside of the door
	You can find the rating plate on the back of the dryer.	
	Power consumption when switched off	0.10 W
	Power consumption when ready for use (left-on mode)	1.00 W

Consumption values table

Programme	Spin speed which is used for spinning the laundry	Duration**		Energy consumption**	
		6 kg	3 kg	6 kg	3 kg
Cottons	1400 rpm	108 min	64 min	3.28 kWh	1.86 kWh
	1000 rpm	129 min	77 min	3.94 kWh	2.24 kWh
	800 rpm	151 min	90 min	4.60 kWh	2.62 kWh
Iron Dry*	1400 rpm	83 min	50 min	2.50 kWh	1.42 kWh
	1000 rpm	100 min	60 min	3.00 kWh	1.71 kWh
	800 rpm	117 min	70 min	3.50 kWh	1.99 kWh
Easy-Care		3.5 kg		3.5 kg	
Cupboard Dry*	800 rpm	47 min		1.28 kWh	
	600 rpm	59 min		1.60 kWh	

* Programme setting for testing in accordance with the applicable EN61121 standard.
** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

Most efficient programme for cotton fabrics

The following "standard cottons programme" (identified with ☐) is suitable for drying normal, wet cotton laundry and is most efficient in terms of its combined energy consumption for drying wet cotton laundry.

Standard programme for cottons in accordance with current EU regulation 932/2012

Programme	Load	Energy consumption	Programme duration
☐ Cottons Cupboard Dry	6 kg/3 kg	3.94 kWh/2.24 kWh	129 min/77 min

Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Optional accessories (from after-sales service using order number, depending on model)

WTZ 11311	Washer-dryer stack connection set The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer must be fastened on the washing machine with this connection set. If the worktop of the washing machine is less than 544 mm deep, please consult the after-sales service or your specialist retailer.
WMZ 20500	Platform For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

What to do if ...




If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed **after-sales service** directory, or by calling one of these numbers:
– **GB** 0344 892 8979 (Calls charged at local or mobile rate.)
– **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)
When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door).
Set the programme selector to **Off** and remove the appliance plug from the socket.

- ① **Start/Stop** indicator lamp does not light up. Mains plug plugged in? Programme selected? Check the socket fuse.
- The display panel light and indicator lights (*depending on model*) go out and the ① **Start/Stop** indicator light flashes. Energy-saving mode is activated → see the separate *Energy-saving mode instructions*.
- **Container empty / clean filter/air cooler** indicator lights up. Empty container for condensation → see page 4.
- **Container empty / clean filter/air cooler** indicator light flashes. Clean the fluff filter under running water → see page 4. Clean the air cooler, if required → see page 6.
- Dryer does not start. Has the ① **Start/Stop** button been pressed? Door closed? Programme set?
- Programme terminated shortly after the start. Ambient temperature greater than 5 °C?
- Water is leaking out. Make sure the dryer is level.
- The door opens by itself. Push the door closed until you hear it engage.
- The required degree of dryness was not achieved or the drying time was too long. Clean the fluff filter → see page 4. Empty the container for condensation. Ambient temperature higher than 35 °C → ventilate the room. Air inlet may be blocked → clear obstruction. Unsuitable programme selected? → see page 7. Dryer installed too closely to other objects? Provide adequate air circulation. Mains failure → Restart the dryer. Fine layer of limescale on the moisture sensors. Clean the sensors → see page 6.
- Laundry damp. Use the next drying programme up or use the timed programme as a supplement → see page 7. Warm laundry feels damper than it really is!
- The humidity in the room has increased significantly. Make sure the room is sufficiently ventilated. Air inlet blocked? → Clear obstruction. Make sure that the air cooler is inserted.
- One or more indicator lights are flashing. Clean the fluff filter and air cooler under running water → see page 4/6. Check the installation conditions → see page 8. Switch off, allow to cool, switch back on and restart the programme.
- Power failure. Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.

Safety instructions



- Emergency** – Pull the appliance plug out of the socket immediately or disconnect the fuse.
- ONLY use the dryer...** – in rooms inside the house.
– use for drying fabrics.
- The dryer must NEVER...** – be used for other purposes than those described above.
– be modified in terms of its technology or attributes.
- Dangers** – The dryer must not be used by children or persons who have not been instructed in its use.
– Do not leave children unsupervised near the dryer.
– Keep pets away from the dryer.
– Remove all objects from the pockets of garments.
Pay particular attention to cigarette lighters → **risk of explosion.**
– Do not lean or sit on the door → **risk of tipping.**
– Open the door with care. Hot steam may escape.
- Installation** – Fasten down loose leads → **risk of tripping.**
– Do not operate the dryer where there is a risk of frost.
- Mains connection** – Connect the dryer according to specifications to an AC earthed socket, as otherwise it cannot be guaranteed that the appliance is completely safe.
– The cable cross-section must be sufficient.

– Only use earth-leakage circuit breakers with the following symbol: 
– The appliance plug and socket must be compatible.
– Do not use multiple plugs/couplings and/or extension cables.
– Do not touch or hold the appliance plug with wet hands → **risk of electric shock.**
– Never pull the appliance plug out of the socket by its cable.
– Do not damage the mains lead → **risk of electric shock.**
- Operation** – Only load the drum with items of laundry.
Check what has been loaded before switching the dryer on.
– Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) → **fire/explosion hazard.**
– The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
– Hazard due to dust (e.g. coal dust, flour): do not use the dryer → **risk of explosion.**
– Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate.
– Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material.
– Light things, such as long hair, may be sucked into the air inlet of the dryer → **Risk of injury.**
– Final part of a tumble dryer cycle occurs without heat (cool down cycle), to ensure that the items are left at a temperature that ensures that the items will not be damaged
– Switch off the dryer once the programme has ended.
– The exterior of the appliance's rear panel becomes very hot during operation. Never touch the hot surface of the appliance's rear panel. Keep children away from the appliance → **Risk of burns!**
– The water from condensation is not drinking water and may be contaminated with fluff.
- Defect** – Do not use the dryer if it is defective or if you suspect that it is.
Repairs must only be carried out by the after-sales service.
– Do not use the dryer with a faulty mains cable. In order to avoid risk, have the mains lead replaced only by our after-sales service.
- Spare parts** – Only use genuine spare parts and accessories for safety reasons.
- Disposal** – Dryer: pull out the mains plug, **then** cut the mains cable from the appliance.
Dispose of the appliance at a public disposal facility.
– Packaging: Do not allow children access to items of packaging → **risk of suffocation.**
– All materials are environmentally friendly and reusable. Dispose of in an environmentally responsible manner.



Register your new Bosch now:
www.bosch-home.com/welcome



Dryer
WTC84101GB



BOSCH

en Instruction manual